



Service Hints**I11 Ignition SW**

5-6 : Closed with the ignition SW at ON or ST position

 : **Parts Location**

Code	See Page	Code	See Page	Code	See Page
E3	38	I4	35 (2ZZ-GE)	J5	B
I2	35 (2ZZ-GE)		37 (1ZZ-FE)	J6	A
	37 (1ZZ-FE)	I5	35 (2ZZ-GE)	N1	35 (2ZZ-GE)
I3	35 (2ZZ-GE)		37 (1ZZ-FE)		37 (1ZZ-FE)
	37 (1ZZ-FE)	I11	39		

 : **Relay Blocks**

Code	See Page	Relay Blocks (Relay Block Location)
1	23	Engine Room R/B (Engine Compartment Left)

 : **Junction Block and Wire Harness Connector**

Code	See Page	Junction Block and Wire Harness (Connector Location)
IC	25	Engine Room Main Wire and Instrument Panel J/B (Lower Finish Panel)
IL	24	Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)
IM		
1A	23	Engine Wire and Engine Room J/B (Engine Compartment Left)

 : **Connector Joining Wire Harness and Wire Harness**

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
EA1	42 (2ZZ-GE)	Engine Wire and Engine Room Main Wire (Inside of the Engine Room R/B)
	44 (1ZZ-FE)	
IA5	46	Engine Room Main Wire and Instrument Panel Wire (Instrument Panel Reinforcement LH)

 : **Ground Points**

Code	See Page	Ground Points Location
ED	42 (2ZZ-GE)	Left Side of the Cylinder Head
	44 (1ZZ-FE)	

 : **Splice Points**

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
E2	42 (2ZZ-GE)	Engine Wire	E3	42 (2ZZ-GE)	Engine Wire
	44 (1ZZ-FE)			44 (1ZZ-FE)	