


GMC Terrain 2017+ fuse box diagram

Engine Compartment Fuse Block

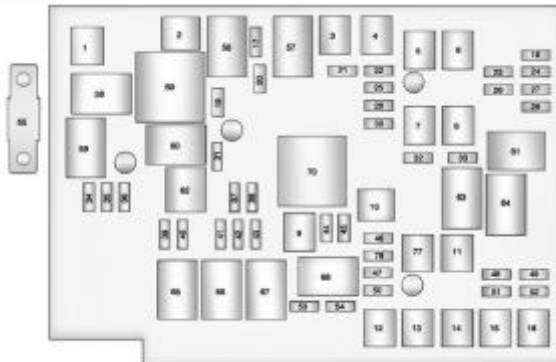

GMC Terrain – fuse box – engine compartment


Fuses	Usage
1	Cooling fan 1
2	Cooling fan 2
3	Brake Booster
4	Right power windows
5	Memory Seat Module
6	Left power seat
7	Instrument panel fuse block 1
8	Rear Defogger
9	Starter
10	AIR Pump Motor
11	Instrument panel fuse block 2
12	Sunroof
13	ABS pump
14	Instrument panel fuse block 3
15	Left power windows
16	ABS module
17	Transmission control module battery
18	Trailer parking light
19	AIR pump solenoid
20	Engine control module battery
21	Canister vent
22	Left trailer side (if equipped)
23	Liftgate module
24	Power lumbar

25	Right trailer side (if equipped)
26	Rear accessory power outlet
27	Memory mirror module
28	Regulated voltage control battery sensor
29	Front wiper
30	Rear wiper
31	A/C
32	Rear latch
33	Heated mirrors
34	Horn
35	Right high-beam headlamp
36	Left high-beam headlamp
37	Ignition coil – even
38	Ignition coil – odd
39	Windshield washer
40	Front fog lamps (if equipped)
41	Post catalytic converter O2 sensor
42	Engine control module
43	Pre-catalytic converter O2 sensor
44	Transmission control module
45	Mirror
46	Fuel system control module/ignition
47	—
48	Rear drive module
49	Lift gate module logic
50	Instrument panel fuse block/ignition
51	Front heated seat
52	Fuel system control module
53	Engine control module
54	Rear vision camera
55	Electric power steering
56	AIR pump solenoid
57	Brake booster
58	Cooling fan – low
59	High-beam headlamps

60	Cooling fan control
61	Wiper On/Off control
62	A/C
63	Rear defogger
64	Wiper speed
65	Fog lamps
66	Engine control
67	Starter
68	Run/Crank
69	Cooling fan – high
70	AIR pump motor
77	Right power seat
78	Passenger power lumbar

Instrument Panel Fuse Block

The instrument panel fuse block is located on the passenger side panel of the center console. To access the fuses, open the fuse panel door from the passenger side by pulling it out.

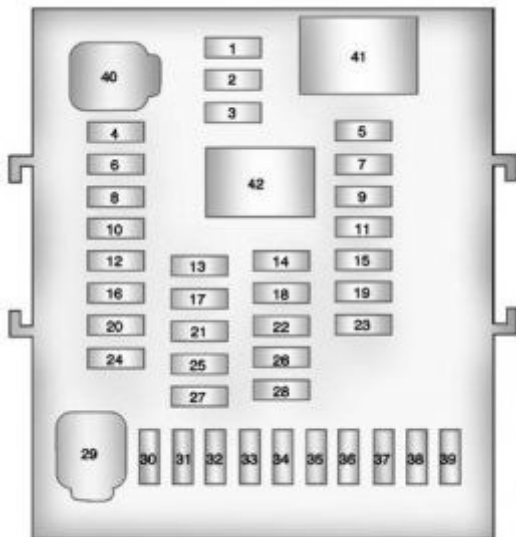

GMC Terrain – fuse box – instrument panel

Mini Fuses	Usage
1	Steering Wheel Dimming
2	—
3	—
4	Body Control Module 1

5	Infotainment
6	Body Control Module 7
7	Noise Control Module
8	Body Control Module 4
9	Radio
10	—
11	Rear parking assist module
12	HVAC/Battery
13	Front auxiliary power
14	HVAC/Ignition
15	Display
16	Body Control Module 5
17	Rear auxiliary power
18	Instrument panel/Ignition
19	Universal Garage Door Opener
20	Body Control Module 6
21	—
22	Sensing/Diagnostic module/Ignition
23	Front vision camera
24	—
25	Transmission gear shift position indicator
26	—
27	—
28	—
29	Front blower motor
30	Body Control Module 3
31	Amplifier
32	Discrete Logic Ignition Switch
33	Communications Integration Module
34	Body Control Module 2
35	Sensing and Diagnostic Module Battery
36	Data Link Connection
37	Instrument Panel Cluster Battery
38	Passenger Sensing System modul
39	—

40	Body control module 8
41	Logistic relay (if equipped)
42	Retained accessory power relay