


# Fog Light

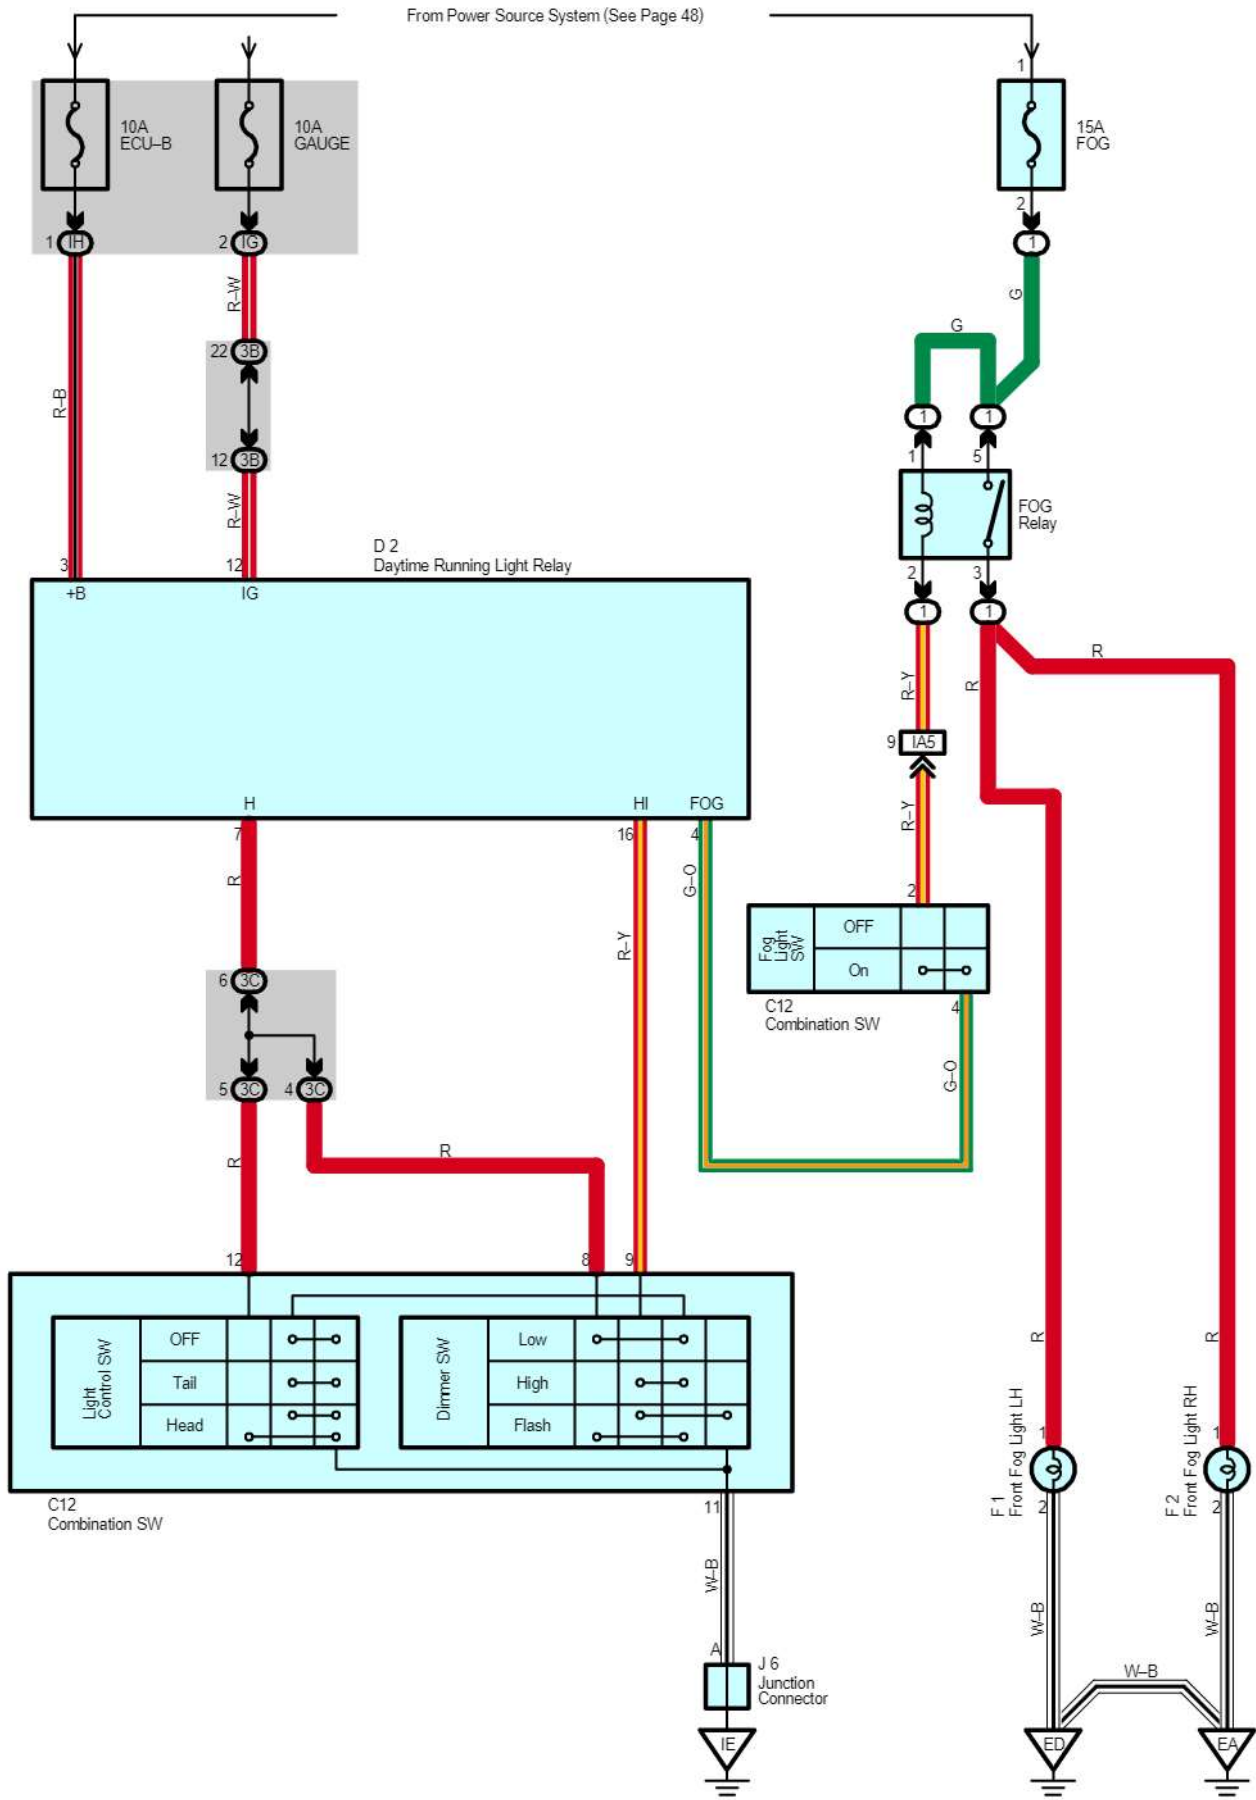

## Service Hints

### FOG Relay

3-5 : Closed with light control SW at Head position, dimmer SW at Low position and fog light SW at On position

### : Parts Location

| Code | See Page | Code | See Page | Code | See Page |
|------|----------|------|----------|------|----------|
| C12  | 34       | F1   | 32       | J6   | 35       |
| D2   | 34       | F2   | 32       |      |          |

### : Relay Blocks

| Code | See Page | Relay Blocks (Relay Block Location)       |
|------|----------|-------------------------------------------|
| 1    | 22       | Engine Room R/B (Engine Compartment Left) |

### : Junction Block and Wire Harness Connector

| Code | See Page | Junction Block and Wire Harness (Connector Location)                                |
|------|----------|-------------------------------------------------------------------------------------|
| IG   | 25       | Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)                 |
| IH   |          |                                                                                     |
| 3B   | 28       | Instrument Panel Wire and RH J/B (Right Side of the Instrument Panel Reinforcement) |
| 3C   |          |                                                                                     |

### : Connector Joining Wire Harness and Wire Harness

| Code | See Page | Joining Wire Harness and Wire Harness (Connector Location)                                        |
|------|----------|---------------------------------------------------------------------------------------------------|
| IA5  | 40       | Engine Room Main Wire and Instrument Panel Wire (Left Side of the Instrument Panel Reinforcement) |

### : Ground Points

| Code | See Page | Ground Points Location       |
|------|----------|------------------------------|
| EA   | 38       | Front Right Fender           |
| ED   | 38       | Front Left Suspension Tower  |
| IE   | 40       | Behind the Combination Meter |