


# Chevrolet Colorado 2005 fuse box diagram

## Engine compartment fuse block

The engine compartment fuse block is located on the driver side of the engine compartment.

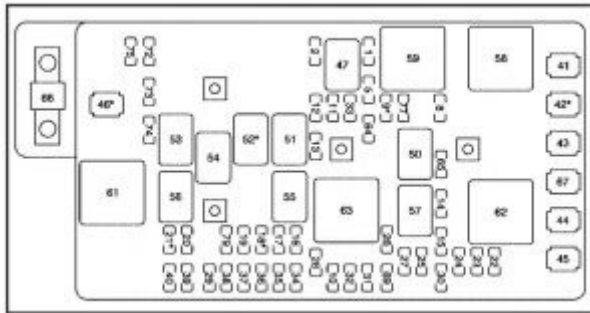

Chevrolet Colorado – fuse box diagram – engine compartment

## Fuses

| Fuses | Usage                                                                                                      |
|-------|------------------------------------------------------------------------------------------------------------|
| 1     | Brake Switch, Stoplamps                                                                                    |
| 2     | Auxiliary Power 1                                                                                          |
| 5     | Air Conditioning Control Head                                                                              |
| 8     | Wiper/Washer Switch                                                                                        |
| 9     | Fog Lamps (If Equipped)                                                                                    |
| 10    | Ignition Transducers                                                                                       |
| 11    | Driver's Side Headlamp                                                                                     |
| 12    | Passenger's Side Headlamp                                                                                  |
| 13    | Fuel Pump                                                                                                  |
| 14    | Wiper                                                                                                      |
| 15    | Front Axle Actuator                                                                                        |
| 16    | Antilock Brake System (ABS), ABS module, Four-Wheel Drive, Gravity Sensor                                  |
| 17    | Supplemental Inflatable Restraint System, Sensing and Diagnostic Module, Air Bag Off Switch                |
| 18    | Heated Seat (If Equipped)                                                                                  |
| 19    | Cruise Control Switch, Inside Rearview Mirror, Transfer Case Control Module, Brake Switch, Clutch Disable  |
| 20    | Electronic Throttle Control (ETC)                                                                          |
| 21    | Power Door Locks (If Equipped)                                                                             |
| 22    | Injectors                                                                                                  |
| 23    | Ignition, Clutch Starter Switch, Neutral Safety Back-Up Switch, Ignition Coils 1-5, Air Conditioning Relay |
| 24    | Transmission Solenoid                                                                                      |
| 25    | Powertrain Control Module (PCM)                                                                            |
| 26    | Back-up Lights                                                                                             |

|    |                                                                                                                                 |
|----|---------------------------------------------------------------------------------------------------------------------------------|
| 27 | ERLS, Map Sensor, Can Purge Solenoid                                                                                            |
| 28 | Rear Turn/Hazard Lights                                                                                                         |
| 29 | Driver's Side RearTaillamp, Passenger Side Air Bag Indicator Lighting, Instrument Panel Dimming Power (2WD/4WD switch lighting) |
| 30 | Powertrain Control Module (PCM) B                                                                                               |
| 31 | OnStar                                                                                                                          |
| 32 | Radio                                                                                                                           |
| 33 | Auxiliary Power 2                                                                                                               |
| 34 | Truck Body Controller                                                                                                           |
| 35 | Horn                                                                                                                            |
| 36 | Transfer Case Control Module                                                                                                    |
| 37 | Turn/Hazard/Courtesy/Cargo Lamps/Mirrors                                                                                        |
| 38 | Cluster                                                                                                                         |
| 39 | Rear Parking Lamp 1, Passenger's Side Taillamp, License Plate Lamps                                                             |
| 40 | Front Park/Turn Lamps, Driver and Passenger's Side Power Window Switches Lighting                                               |
| 41 | Climate Control Fan                                                                                                             |
| 42 | Power Windows (If Equipped)                                                                                                     |
| 43 | Starter Solenoid Relay                                                                                                          |
| 44 | Antilock Brake System 2 (ABS Pump)                                                                                              |
| 45 | Antilock Brake System 1 (ABS Logic)                                                                                             |
| 46 | Power Seat Circuit Breaker/POA Seat (If Equipped)                                                                               |
| 69 | Fuel Canister Vent Solenoid                                                                                                     |
| 77 | Air Conditioning Compressor                                                                                                     |
| 79 | Oxygen Sensors                                                                                                                  |
| 80 | Sunroof (If Equipped)                                                                                                           |

| Relays | Usage                                                                             |
|--------|-----------------------------------------------------------------------------------|
| 47     | Beam Selection                                                                    |
| 50     | Air Conditioning Compressor                                                       |
| 51     | Fuel Pump, Fuel Pump Fuse                                                         |
| 52     | Fog Lamps (If Equipped)                                                           |
| 53     | Front Parking Lamp Fuse, Driver and Passenger's Taillamp Fuse, Rear Parking Lamps |
| 54     | Headlamps                                                                         |
| 55     | Horn                                                                              |
| 56     | Electronic Throttle Control Fuse, Oxygen Sensor Fuse                              |
| 57     | Wipers (On/Off)                                                                   |
| 58     | Retained Accessory Power (Power Window Fuse, Wiper/Washer Switch Fuse)            |

|    |                                                                                                                                      |
|----|--------------------------------------------------------------------------------------------------------------------------------------|
| 59 | Ignition 3, Climate Control, Climate Control Head Fuse                                                                               |
| 61 | Run/Crank, Air Bag System Fuse, Cruise Control Fuse, Ignition Fuse, Back-Up Lamps, ABS Fuse, ERLS, Front Axle, PCM-1, Injectors Fuse |
| 62 | Starter Relay (PCM Relay)                                                                                                            |
| 63 | Wiper 2 (High/Low)                                                                                                                   |

|               |                                  |
|---------------|----------------------------------|
| Miscellaneous | Usage                            |
| 64            | Diode — Wiper                    |
| 65            | Diode — Air Conditioning, Clutch |
| 66            | Mega Fuse                        |