


Infiniti J30 1993 – 1997 fuse box diagram

Passenger Compartment

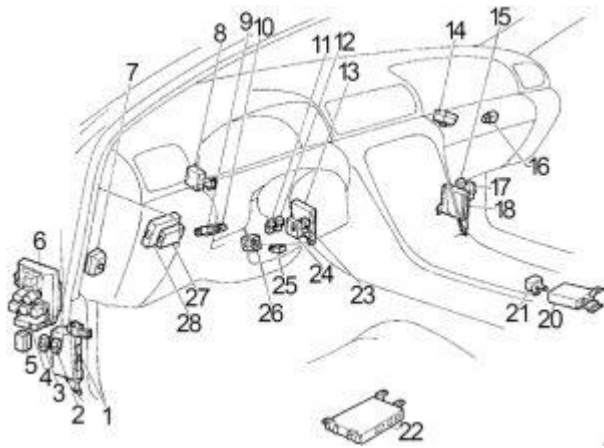


Infiniti J30 – fuse box diagram –

passenger compartment

1. Transmission Control Module (TCM)
2. Fuel Pump Relay
3. Tail Lamp Relay
4. Time Control Unit
5. Super Multiple Junction (SMJ)
6. Fuse Box
7. Super Multiple Junction (SMJ)
8. Door Lock Timer
9. Stop Lamp Switch
10. Automatic Speed Control Device (ASCD) Cancel Switch
11. Theft Warning Relay
12. Rear Door Switch Relay
13. Auto-Air Conditioner Amplifier
14. Super Multiple Junction (SMJ)
15. Ignition Coil Relay
16. Blower Relay (High Speed)
17. Engine Control Module Relay (ECCS)
18. Engine Control Module (ECCS)
19. –
20. Air Bag Control Unit
21. Tunnel Sensor and Safing Sensor
22. Power Seat Control Unit
23. Combination Flasher Unit
24. Theft Warning Control Unit
25. Kickdown Switch

- 26. Shift Lock Control Unit
- 27. Automatic Speed Control Device (ASCD) Control Unit
- 28. Power Steering Control Unit

Passenger Compartment Fuse Box

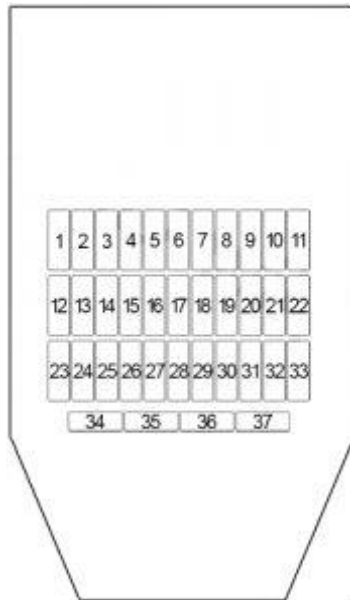


Infiniti J30 – fuse box diagram – passenger compartment fuse box

No.	A	Circuit Protected
1	10	Hazard Switch (Combination Flasher Unit), Combination Switch (Turn Signal), Multi-Remote Control Relay No.1, Multi-Remote Control Relay No.2, Multi-Remote Control Unit
2	15	Audio Amplifier Relay
3	10	Telephone, Transceiver Unit
4	15	Stop Lamp Switch, Stop and Tail Lamp Sensor, Stop Lamps, Automatic Speed Control Device (ASCD) Control Unit, Shift Lock Control Unit
5	20	Front Wiper Motor, Time Control Unit, Wiper Relay, Front Wiper Switch, Front Washer Motor
6	15	Cigarette Lighter, Clock

7	7. 5	Time Control Unit, Wiper Relay, Front Wiper Switch
8	10	Door Mirror Remote Control Switch, Theft Warning Control Unit
9	10	CD Player and Radio, Power Antenna Timer and Motor, Telephone (Receiver Control Unit)
10	15	Blower Motor
11	15	Blower Motor
12	10	Key Switch, Door Lock Timer, Multi-Remote Control Unit, Time Control Unit
13	7. 5	Combination Meter, Theft Warning Control Unit, Clock, CD Player and Radio, Power Antenna Timer and Motor, Multi-Remote Control Unit, Warning Chime, Time Control Unit
14	15	Audio Amplifier Relay
15	20	Power Window Amplifier (Passenger Side)
16	20	Rear Power Window Amplifier (Right)
17	–	–
18	–	–
19	7. 5	'93-'95: Data Link Connector, Engine Control Module (ECM), Automatic Speed Control Device (ASCD) Control Unit, Heated Oxygen Sensors, Idle Air Control Valve (IACV-ACC) Valve, Idle Air Control Valve (IACV-FICD) Valve, Variable Timing Control (VTC) Solenoid Valve, Pressure Regulator Vacuum Relief (PRVR) Solenoid Valve


	15	'96-'97: Data Link Connector, Engine Control Module (ECM), Automatic Speed Control Device (ASCD) Control Unit, Air Fuel Ratio Sensors, Heated Oxygen Sensors, Idle Air Control Valve (IACV-ACC) Valve, Idle Air Control Valve (IACV-FICD) Valve, Variable Timing Control (VTC) Solenoid Valve, Pressure Regulator Vacuum Relief (PRVR) Solenoid Valve
20	7. 5	Theft Warning Control Unit, Theft Warning Starter Relay, Daytime Light Control Unit, Sunroof Relay, Power Window Main Switch
21	7. 5	Hazard Switch (Combination Flasher Unit)
22	7. 5	Auto-Air Conditioner Amplifier
23	7. 5	Interior Lamp, Trunk Room Lamp, Spot Lamp, Foot-Well Lamps, Step Lamps, Door Switches, Multi-Remote Control Unit, Vanity Mirror Lamps, Lighting Switch, Rear Door Switch Relay, Trunk Room Lamp Switch, Time Control Unit, Ignition Key Hole Illumination, Theft Warning Control Unit
24	7. 5	Starter Relay, Engine Control Module (ECM), Theft Warning Starter Relay, Daytime Light Relay, Daytime Light Control Unit, Parking Brake Switch
25	7. 5	Lighting Switch, Daytime Light Control Unit, Stop and Tail Lamp Sensor, Tail Lamps, Stop Lamps, Side Marker Lamps, License Plate Lamps, Clearance Lamps, Time Control Unit
26	7. 5	Glove Box Lamp, Illumination Control Switch, <i>Illumination:</i> (Combination Meter, Cigarette Lighter, Push Control Unit, Hazard Switch, Clock, CD Player, and Radio, Power Window Main Switch, Power Window Switch (Passenger Side), Automatic Speed Control Device (ASCD) Main Switch, A/T Indicator, Auto Anti-Dazzling Inside Mirror, Rear Power Window Switch)
27	20	Rear Power Window Amplifier (Left)
28	3	Telephone, Transceiver Unit, Hand Set
29	10	Air Bag Control Unit

30	7. 5	Inhibitor Switch (Back-Up Lamps, Transmission Control Module (TCM), Park/Neutral Position Relay), Automatic Speed Control Device (ASCD) Main Switch, ASCD Hold Relay, ASCD Cancel Switch, ASCD Control Unit, Fuel Pump Relay
31	7. 5	Combination Meter, Door Switch, Rear Door Switch Relay, Auto Anti-Dazzling Inside Mirror
32	7. 5	High Capacity Actively Controlled Steering (HICAS), Time Control Unit, Auto Air Conditioner Amplifier, Rear Window Defogger Relay
33	15	Heated Seat
34	15	Trunk Lid Opener Actuator, Fuel Lid Opener Actuator
35	–	–
36	20	Door Mirror Defogger Relay, Rear Window Defogger Relay, Time Control Unit, Auto Air Conditioner Amplifier
37	10	Shift Lock Control Unit

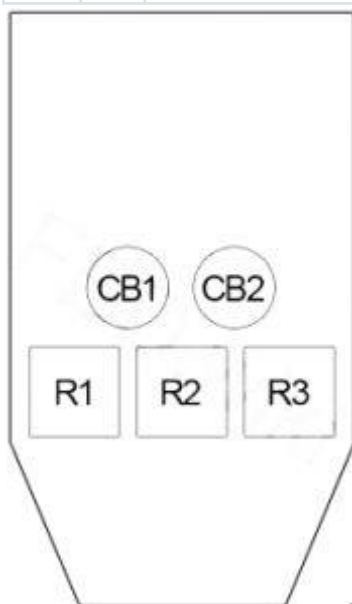

Infiniti J30 – fuse box diagram – passenger compartment relay box

No.	Relay
R1	Accessory (No.2)
R2	Accessory (No.1)
R3	Ignition
Circuit Breaker	
CB1	Power Seat
CB2	Power Window, Sunroof, Power Seat, Power Door Lock

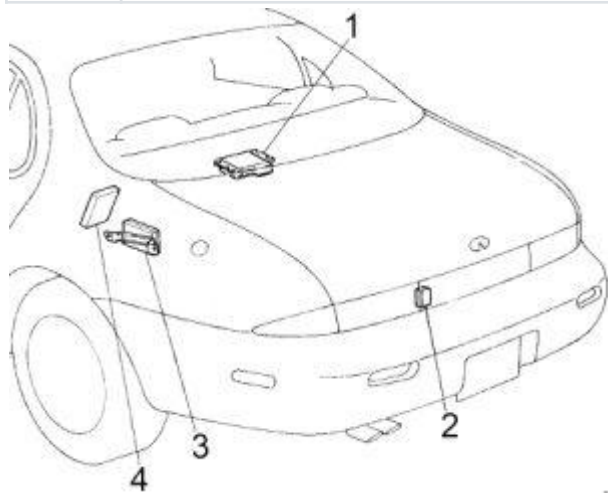


. Infiniti J30 – fuse box diagram –

passenger compartment

1. ABS Control Unit
2. Stop and Tail Lamp Sensor
3. Remote Control Unit
4. High Capacity Actively Controlled Steering (HICAS) Control Unit

Engine Compartment

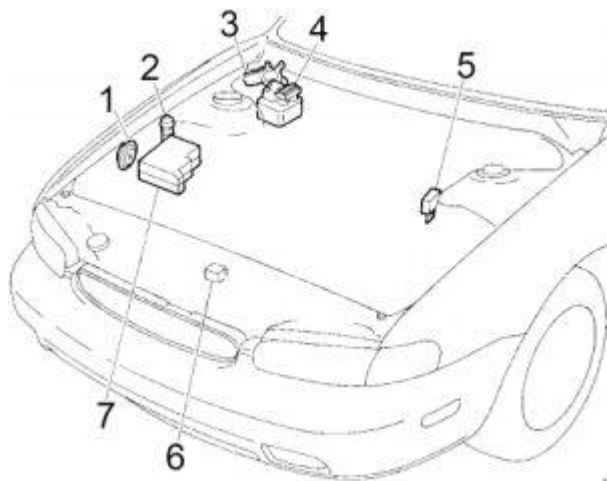


Infiniti J30 – fuse box diagram – engine

compartment

1. Theft Warning Horn
2. Hood Switch
3. Wiper Motor
4. ABS Actuator
5. Daytime Light Control Unit
6. Front Crash Zone Sensor
7. Fuse Box

Engine Compartment Fuse Box

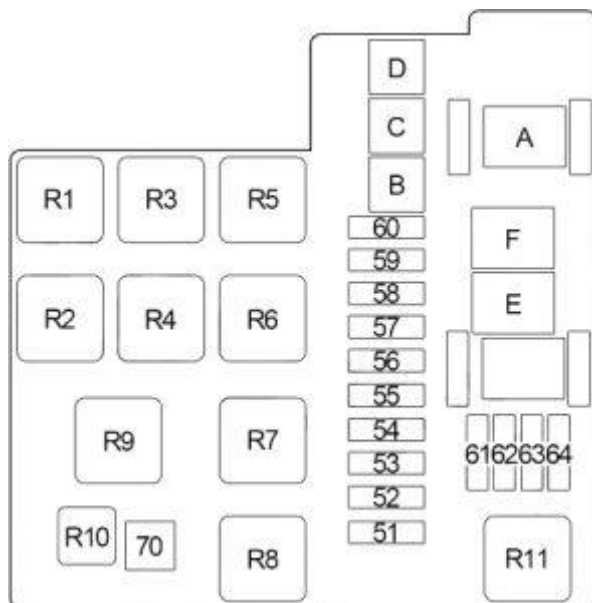

Infiniti J30 – fuse box diagram – engine

compartment fuse box

No.	A	Circuit Protected
-----	---	-------------------

51	15	Right Headlamp, Headlamp Control Unit, High Beam Indicator, Daytime Light Control Unit, Theft Warning Control Unit, Theft Warning Relay
52	15	Left Headlamp, Headlamp Control Unit, Daytime Light Control Unit, Theft Warning Relay
53	–	–
54	–	–
55	15	Horn Relay, Automatic Speed Control Device (ASCD) Steering Switch, Theft Warning Control Unit
56	15	Tail Lamp Relay (Lighting Switch, Fuse: “25”, “26”)
57	20	ABS
58	7.5	Engine Control Module (ECCS), Ignition Coil Relay, Mass Air Flow Sensor, Camshaft Position Sensor
59	10	Injectors
60	15	Fuel Pump Relay
61	20	Ignition Switch, Starter Hold Relay
62	10	Alternator
63	20	Rear Window Defogger Relay, Door Mirror Defogger Relay
64	20	Rear Window Defogger Relay, Door Mirror Defogger Relay
70	–	–

A	100	Alternator, Fuse: "E", "F", "55", "56", "63", "64"
B	25	Cooling Fan
C	30	ABS
D	30	Starter Relay, Starter Hold Relay, Theft Warning System, Inhibitor Switch
E	45	Circuit Breaker (CB1), Circuit Breaker (CB2), Accessory Relay No.2 (Fuse: "11", "10"), Fuse: "15", "16", "27"
F	75	Accessory Relay No.1 (Fuse: "5", "6", "7", "8"), Ignition Relay (Fuse: "20", "21", "22", "31", "32", "33", "36", "37"), Fuse: "1", "2", "3", "4", "12", "13", "14", "23", "34"
Relay		
R1	Cooling Fan	
R2	Automatic Speed Control Device (ASCD) Hold	
R3	Daytime Light Cut	
R4	Horn	
R5	Wiper	
R6	Park/Neutral Position	
R7	Starter	

R8	Rear Window Defogger
R9	Door Mirror Defogger
R10	'96-'97: Starter Hold
R11	Air Conditioner