

Citroen C-CROSSER (2007 – 2012) – fuse box diagram

Year of production: 2007, 2008, 2009, 2010, 2011, 2012

Fuse box in passenger compartment

The fuse boxes are placed in the lower part of the fascia behind the glove box.

Fuse	Ampere rating [A]	Functions
1	30	Heating
2	15	Brake lights, third brake light, built-in systems interface
3	10	Rear fog lamps
4	30	Windscreen wipers and wash-wipe
5	10	Diagnostic socket
6	20	Central locking, exterior mirrors
7	15	Audio equipment, telematics, multifunction display, hands-free kit, rear DVD player
8	7,5	Remote control key, air conditioning control unit, instrument panel, controls bar, steering wheel controls
9	15	Multifunction display, instrument panel.
10	15	Built-in systems interface
11	15	Rear wiper
12	7,5	Instrument panel, 4 wheel drive control unit, air conditioning control panel, ABS control unit, multifunction display, automatic headlamp adjustment, heated seats, air bags control unit, steering wheel angle sensor, sunroof, rear screen demisting, remote control.
13	—	Not used
14	10	Ignition switch
15	20	Sunroof
16	10	Exterior mirrors, audio equipment, telematics, rear DVD player
17	10	4 wheel drive control unit
18	7,5	Reversing lights, parking assistance control unit, reversing camera, air bags control unit
19	15	Accessories socket
20	30	Electric window controls
21	30	Rear screen demisting
22	7,5	Heated exterior mirrors
23	—	Not used
24	25	Driver's electric seat, footwell lighting, releasing of the rear bench seat
25	30	Heated seats

Fuse box in engine compartment

The fuse box is placed in the engine compartment near the battery (left-hand side).

Fuse	Ampere rating [A]	Functions
1	15	Front fog lamps
2	7	2.4 litre 16V engine control unit
3	20	CVT automatic gearbox control unit, CVT automatic gearbox control relay
4	10	Horn
5	7,5	2.4 litre 16V alternator
6	20	Headlamp wash
7	10	Air conditioning
8	15	2.4 litre 16V engine control unit
9	—	Not used
10	15	Demisting, wipers
11	—	Not used
12	—	Not used
13	—	Not used
14	10	Left-hand main beam headlamp
15	10	Right-hand main beam headlamp
16	20	Left-hand dipped headlamp (xenon).
17	20	Right-hand dipped headlamp (xenon)
18	10	Left-hand dipped headlamp, manual and automatic headlamp adjustment
19	10	Right-hand dipped headlamp
20	—	Not used
21	10	Ignition coils
22	20	Engine control unit, water in diesel detector, injection pump (Diesel), air flow sensor, water presence sensors, oxygen sensor, camshaft position sensor, purge canister solenoid valve, vehicle speed sensor, variable timing (VTC) solenoid valve, EGR solenoid valve
23	15	Petrol pump, fuel gauge
24	30	Starter
25	—	Not used
26	40	ABS control unit, ASC control unit.
27	30	ABS control unit, ASC control unit.
28	30	Condenser fan
29	40	Radiator fan
30	30	Passenger compartment fuse box

31	30	Audio amplifier
32	30	Diesel engine control unit

Spare fuses

The spare fuses are located under the engine compartment fuse box cover.

Fuse	Ampere rating [A]
33	10
34	15
35	20

WARNING: Terminal and harness assignments for individual connectors will vary depending on vehicle equipment level, model, and market.