


G ELECTRICAL WIRING ROUTING

Position of Parts in Engine Compartment

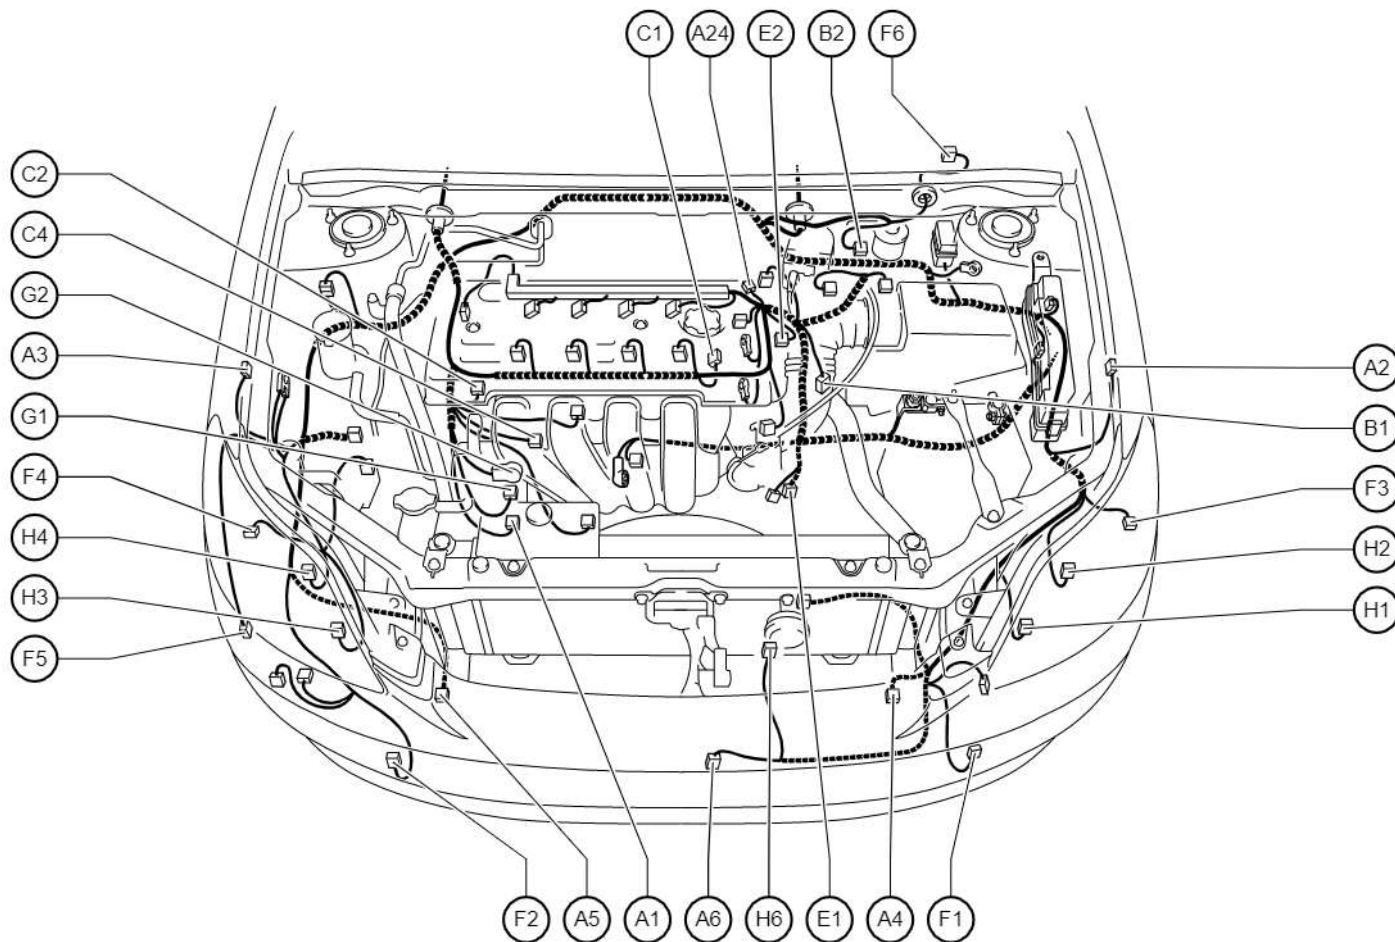

A 1 A/C Magnetic Clutch
 A 2 ABS Speed Sensor Front LH
 A 3 ABS Speed Sensor Front RH
 A 4 Airbag Sensor Front LH
 A 5 Airbag Sensor Front RH
 A 6 Ambient Temp. Sensor
 A24 Air Fuel Ratio Sensor (Bank 1 Sensor 1)

B 1 Back-Up Light SW
 B 2 Brake Fluid Level Warning SW

C 1 Camshaft Position Sensor
 C 2 Camshaft Timing Oil Control Valve (VVT)
 C 4 Crankshaft Position Sensor


E 1 Electronically Controlled Transmission Solenoid
 E 2 Engine Coolant Temp. Sensor

F 1 Front Fog Light LH
 F 2 Front Fog Light RH
 F 3 Front Parking Light LH
 Front Turn Signal Light LH
 F 4 Front Parking Light RH
 Front Turn Signal Light RH
 F 5 Front Washer Motor
 F 6 Front Wiper Motor

G 1 Generator
 G 2 Generator

H 1 Headlight LH (High)
 H 2 Headlight LH (Low)
 H 3 Headlight RH (High)
 H 4 Headlight RH (Low)
 H 6 Horn

Position of Parts in Engine Compartment

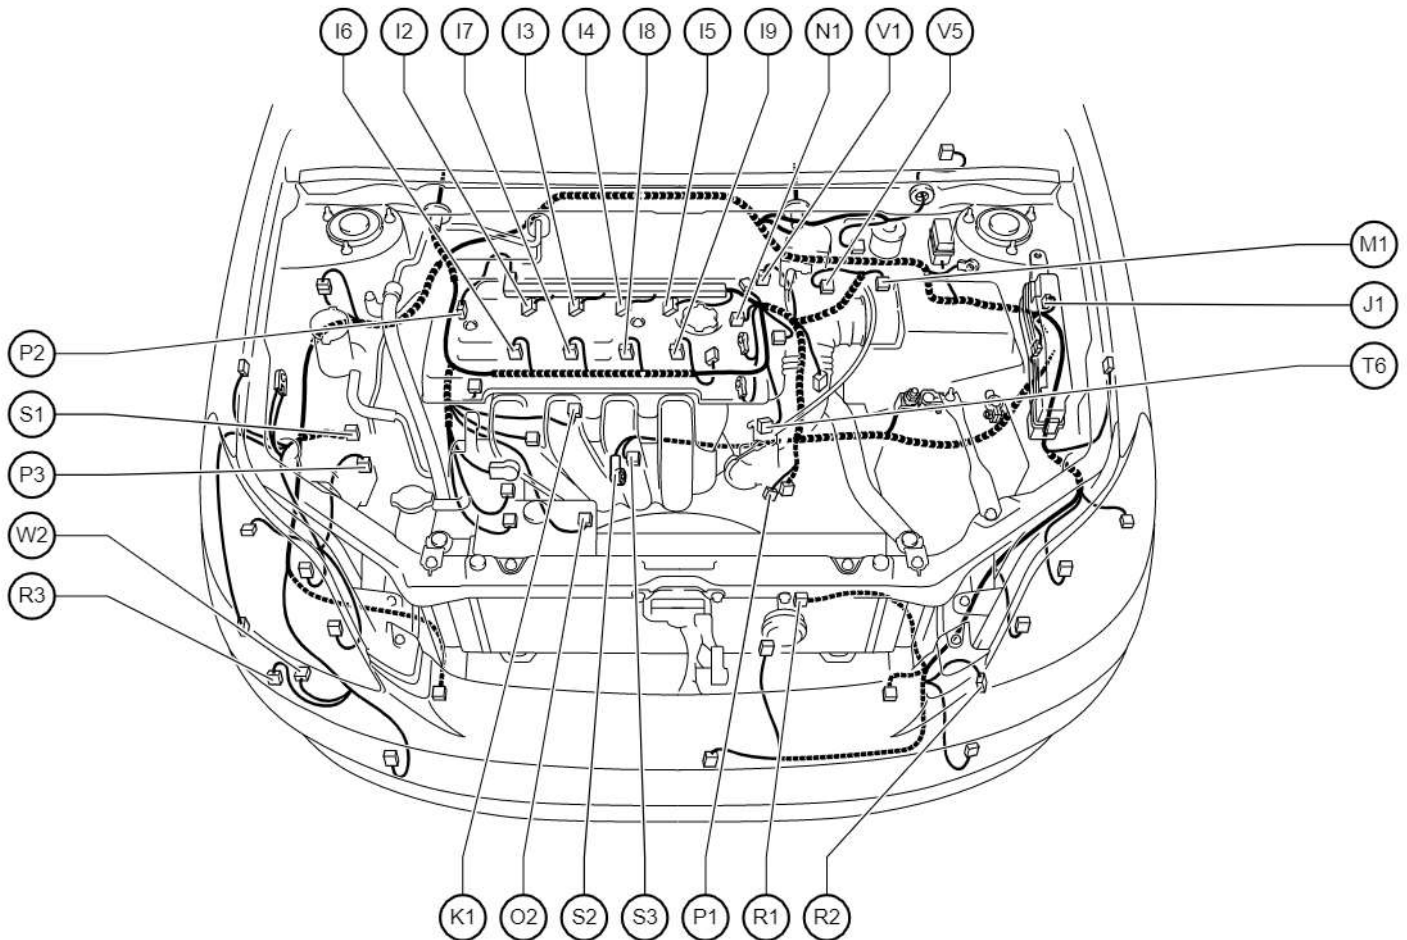

I 2 Ignition Coil and Igniter No.1
 I 3 Ignition Coil and Igniter No.2
 I 4 Ignition Coil and Igniter No.3
 I 5 Ignition Coil and Igniter No.4
 I 6 Injector No.1
 I 7 Injector No.2
 I 8 Injector No.3
 I 9 Injector No.4

J 1 Junction Connector

K 1 Knock Sensor (Bank 1)

M 1 Mass Air Flow Meter

N 1 Noise Filter (Ignition)

O 2 Oil Pressure SW

P 1 Park/Neutral Position SW

P 2 Power Steering Oil Pressure SW

P 3 Pressure SW

R 1 Radiator Fan Motor

R 2 Radiator Fan Resistor

R 3 Rear Washer Motor

S 1 Skid Control ECU with Actuator

S 2 Starter

S 3 Starter

T 6 Throttle Control Motor

Throttle Position Sensor


V 1 Vehicle Speed Sensor (Combination Meter)

V 5 VSV (Purge)

W 2 Washer Level Sensor

G ELECTRICAL WIRING ROUTING

Position of Parts in Instrument Panel

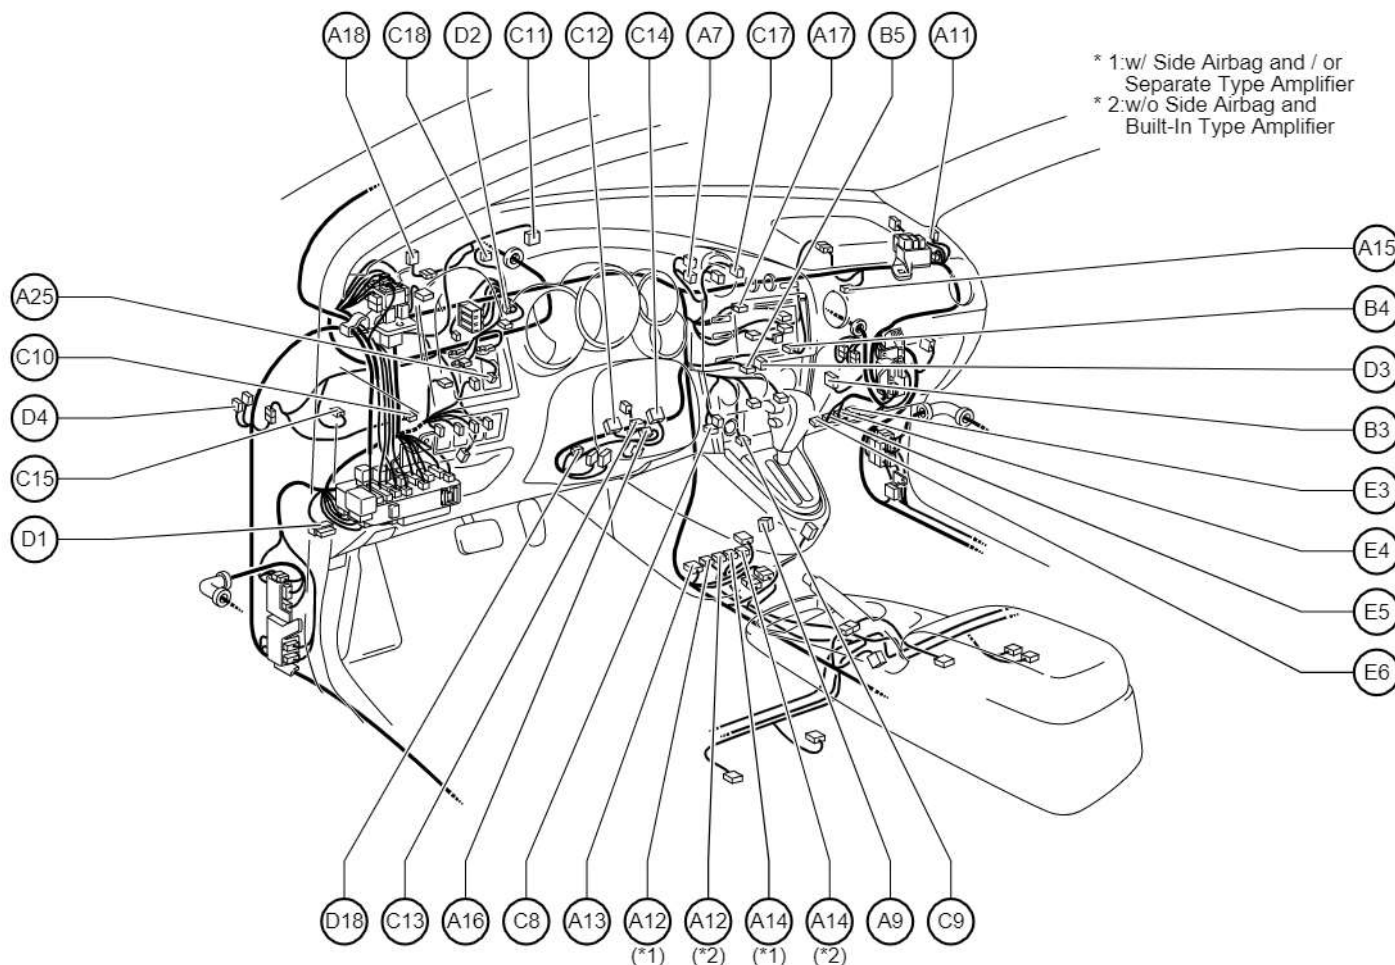

* 1:w/ Side Airbag and / or
Separate Type Amplifier
* 2:w/o Side Airbag and
Built-In Type Amplifier

A 7 A/C SW
Air Inlet Control SW
A 9 A/T Shift Lever Illumination
O/D Main SW
A 11 Air Inlet Control Servo Motor
A 12 Airbag Sensor Assembly
A 13 Airbag Sensor Assembly
A 14 Airbag Sensor Assembly
A 15 Airbag Squib (Front Passenger Airbag Assembly)
A 16 Airbag Squib (Steering Wheel Pad)
A 17 Antenna Amplifier
A 18 Automatic Light Control Sensor
A 25 Accel Position Sensor


B 3 Blower Motor
B 4 Blower Resistor
B 5 Blower SW

C 8 Cigarette Lighter
Power Outlet (Front)
C 9 Cigarette Lighter Illumination
C 10 Clutch Start SW
C 11 Combination Meter
C 12 Combination SW
C 13 Combination SW
C 14 Combination SW
C 15 Cruise Control Clutch SW
C 17 Clock
Front Passenger Seat Belt Warning Light
Option Connector
(Passenger Airbag ON-OFF Indicator Light)
C 18 Combination Meter

D 1 Data Link Connector 3
D 2 Daytime Running Light Relay
D 3 Defroster Mode SW
D 4 Diode (IG Relay)
D 18 Diode (Rear Wiper)

E 3 Engine Control Module
E 4 Engine Control Module
E 5 Engine Control Module
E 6 Engine Control Module

Position of Parts in Instrument Panel

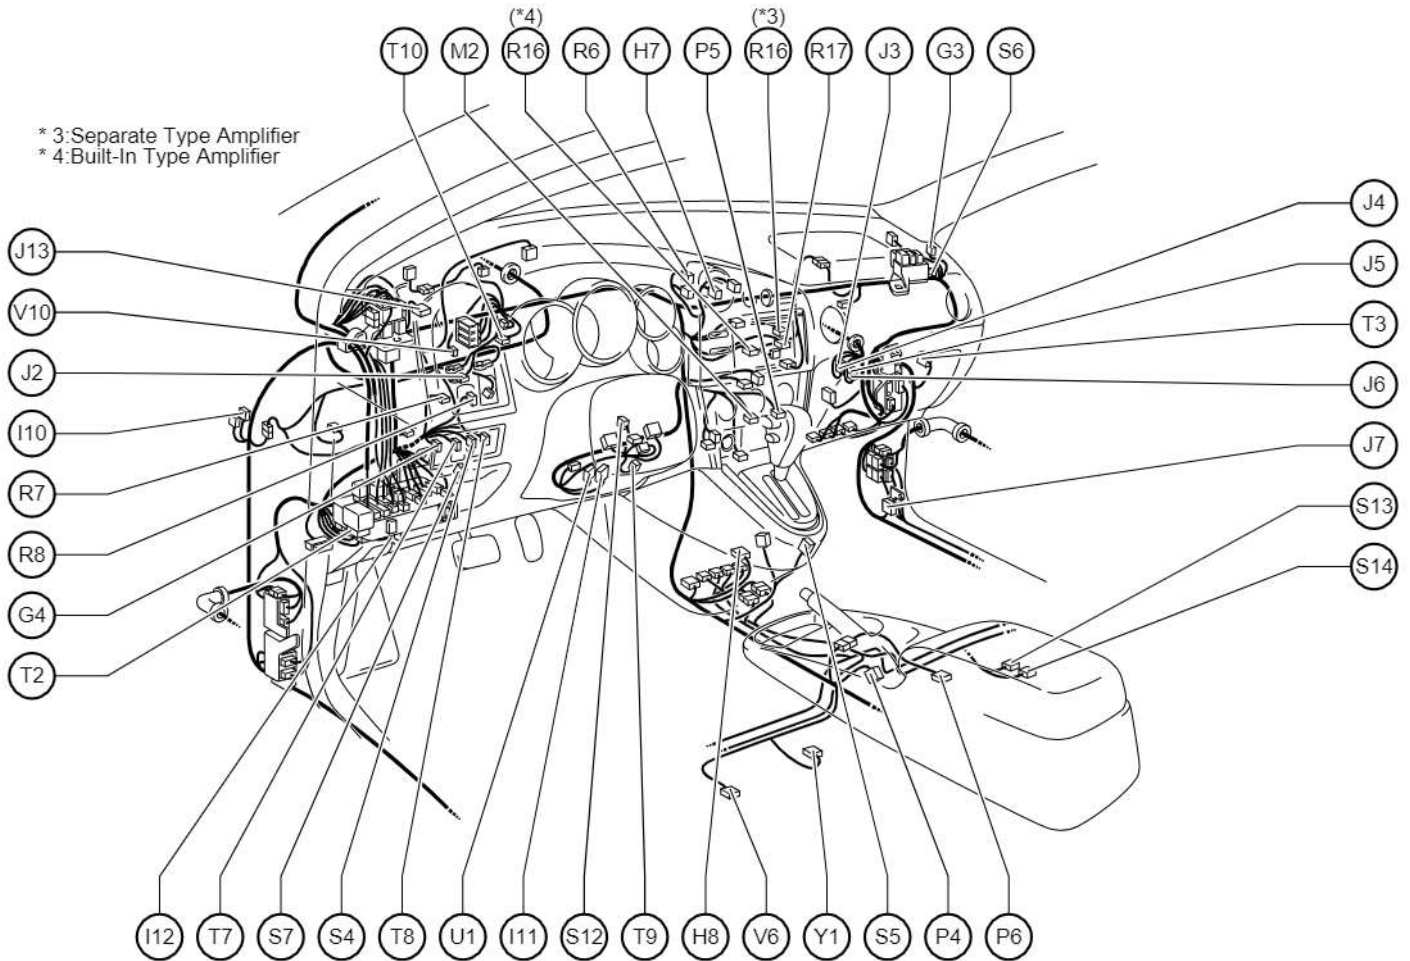

G 3 Glass Breakage Sensor ECU

G 4 Glass Hatch Opener SW

H 7 Hazard SW

H 8 Heated Oxygen Sensor (Bank 1 Sensor 2)

I 10 IG Relay

I 11 Ignition SW

I 12 Integration Relay

J 2 Junction Connector

J 3 Junction Connector

J 4 Junction Connector

J 5 Junction Connector

J 6 Junction Connector

J 7 Junction Connector

J 13 Junction Connector

M 2 Main SW

P 4 Parking Brake SW

P 5 Power Outlet (115V)

P 6 Power Outlet (Rear)

R 6 Rear Window Defogger SW

R 7 Remote Control Mirror SW

R 8 Rheostat

R16 Radio and Player

R17 Radio and Player

S 4 Security Indicator

S 5 Shift Lock Control ECU

S 6 Starter Cut Relay

S 7 Stop Light SW

S12 Steering Sensor

S13 Stereo Component Amplifier

S14 Stereo Component Amplifier

T 2 Turn Signal Flasher Relay

T 3 TVIP ECU

T 7 Tire Pressure Warning Reset SW

T 8 TRAC OFF SW

T 9 Transponder Key Amplifier

T10 Transponder Key Computer

U 1 Unlock Warning SW


V 6 Voltage Inverter

V10 VSC Warning Buzzer

Y 1 Yaw Rate Sensor


G ELECTRICAL WIRING ROUTING

Position of Parts in Body	
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
10	10
11	11
12	12
13	13
14	14
15	15
16	16
17	17
18	18
19	19
20	20
21	21
22	22
23	23
24	24
25	25
26	26
27	27
28	28
29	29
30	30
31	31
32	32
33	33
34	34
35	35
36	36
37	37
38	38
39	39
40	40
41	41
42	42
43	43
44	44
45	45
46	46
47	47
48	48
49	49
50	50
51	51
52	52
53	53
54	54
55	55
56	56
57	57
58	58
59	59
60	60
61	61
62	62
63	63
64	64
65	65
66	66
67	67
68	68
69	69
70	70
71	71
72	72
73	73
74	74
75	75
76	76
77	77
78	78
79	79
80	80
81	81
82	82
83	83
84	84
85	85
86	86
87	87
88	88
89	89
90	90
91	91
92	92
93	93
94	94
95	95
96	96
97	97
98	98
99	99
100	100

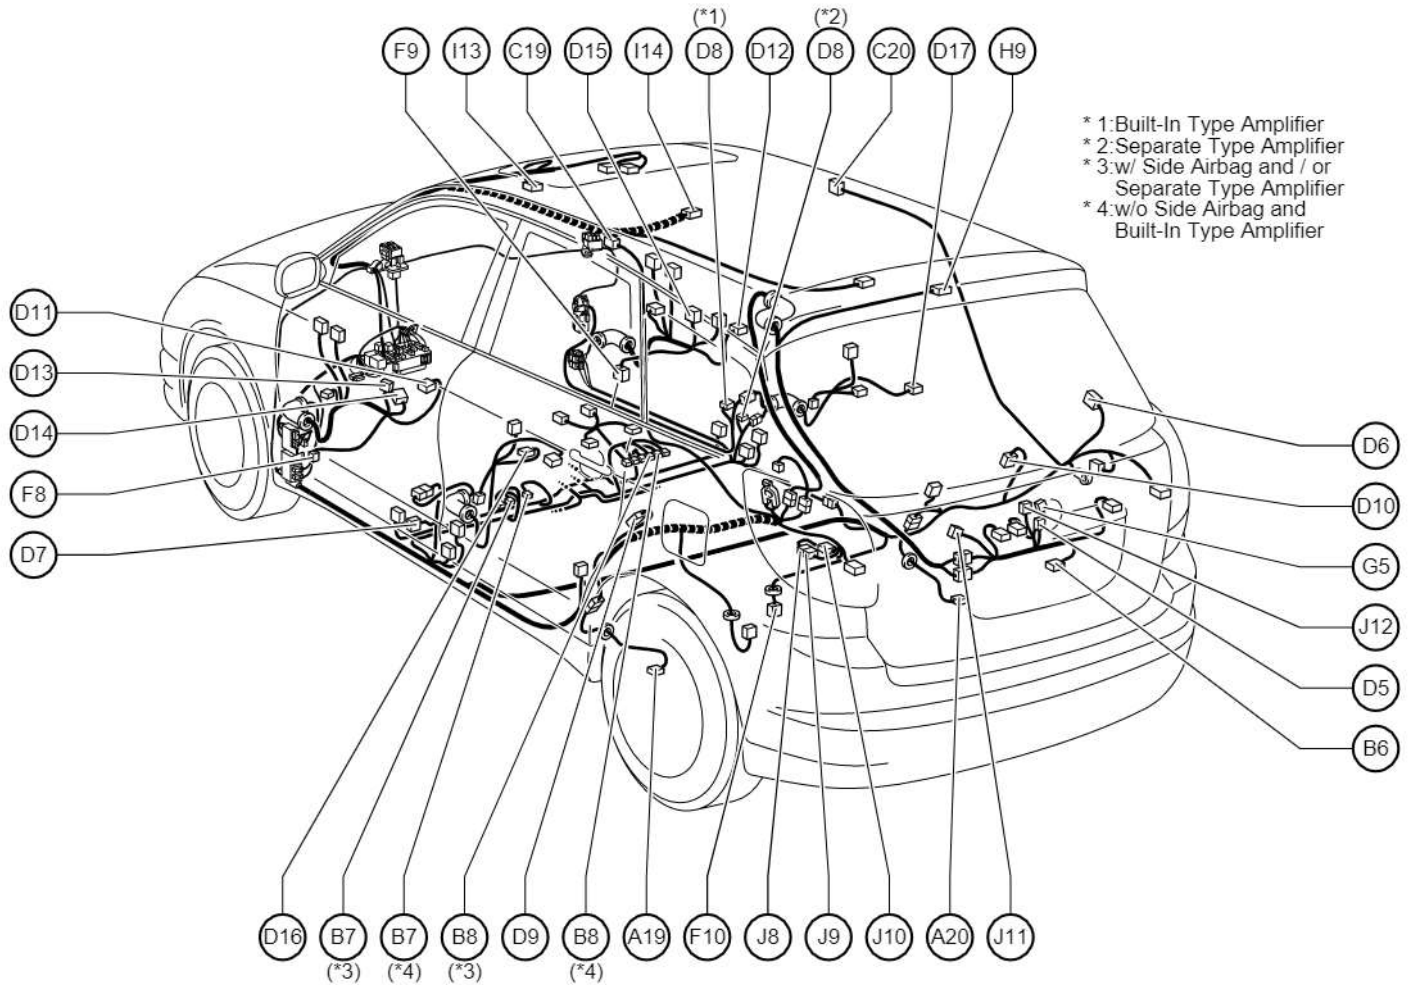

- | | | | |
|------|--------------------------------------|------|----------------------------------|
| A 19 | ABS Speed Sensor Rear LH | D 15 | Door Lock Control SW Front RH |
| A 20 | ABS Speed Sensor Rear RH | D 16 | Door Lock Motor Rear LH |
| | | | Door Unlock Detection SW Rear LH |
| B 6 | Back Door Courtesy SW | D 17 | Door Lock Motor Rear RH |
| | Back Door Lock Motor | | Door Unlock Detection SW Rear RH |
| B 7 | Buckle SW LH | | |
| | Seat Position Sensor | F 8 | Front Door Speaker LH |
| B 8 | Buckle SW RH | F 9 | Front Door Speaker RH |
| | Occupant Detection Sensor | F 10 | Fuel Pump |
| | | | Fuel Sender |
| C 19 | Curtain Shield Airbag Squib LH | | |
| C 20 | Curtain Shield Airbag Squib RH | G 5 | Glass Hatch Courtesy SW |
| | | | Glass Hatch Opener Motor |
| D 5 | Diode (Door Courtesy) | H 9 | High Mounted Stop Light |
| D 6 | Door Control Receiver | | |
| D 7 | Door Courtesy SW Front LH | I 13 | Inner Mirror |
| D 8 | Door Courtesy SW Front RH | | Personal Light |
| D 9 | Door Courtesy SW Rear LH | I 14 | Interior Light |
| D 10 | Door Courtesy SW Rear RH | | |
| D 11 | Door Key Lock and Unlock SW Front LH | J 8 | Junction Connector |
| | Door Lock Motor Front LH | J 9 | Junction Connector |
| | Door Unlock Detection SW Front LH | J 10 | Junction Connector |
| D 12 | Door Key Lock and Unlock SW Front RH | J 11 | Junction Connector |
| | Door Lock Motor Front RH | J 12 | Junction SW |
| | Door Unlock Detection SW Front RH | | |
| D 13 | Door Lock Control SW Front LH | | |
| D 14 | Door Lock Control SW Front LH | | |
| | Power Window Master SW | | |

Position of Parts in Body

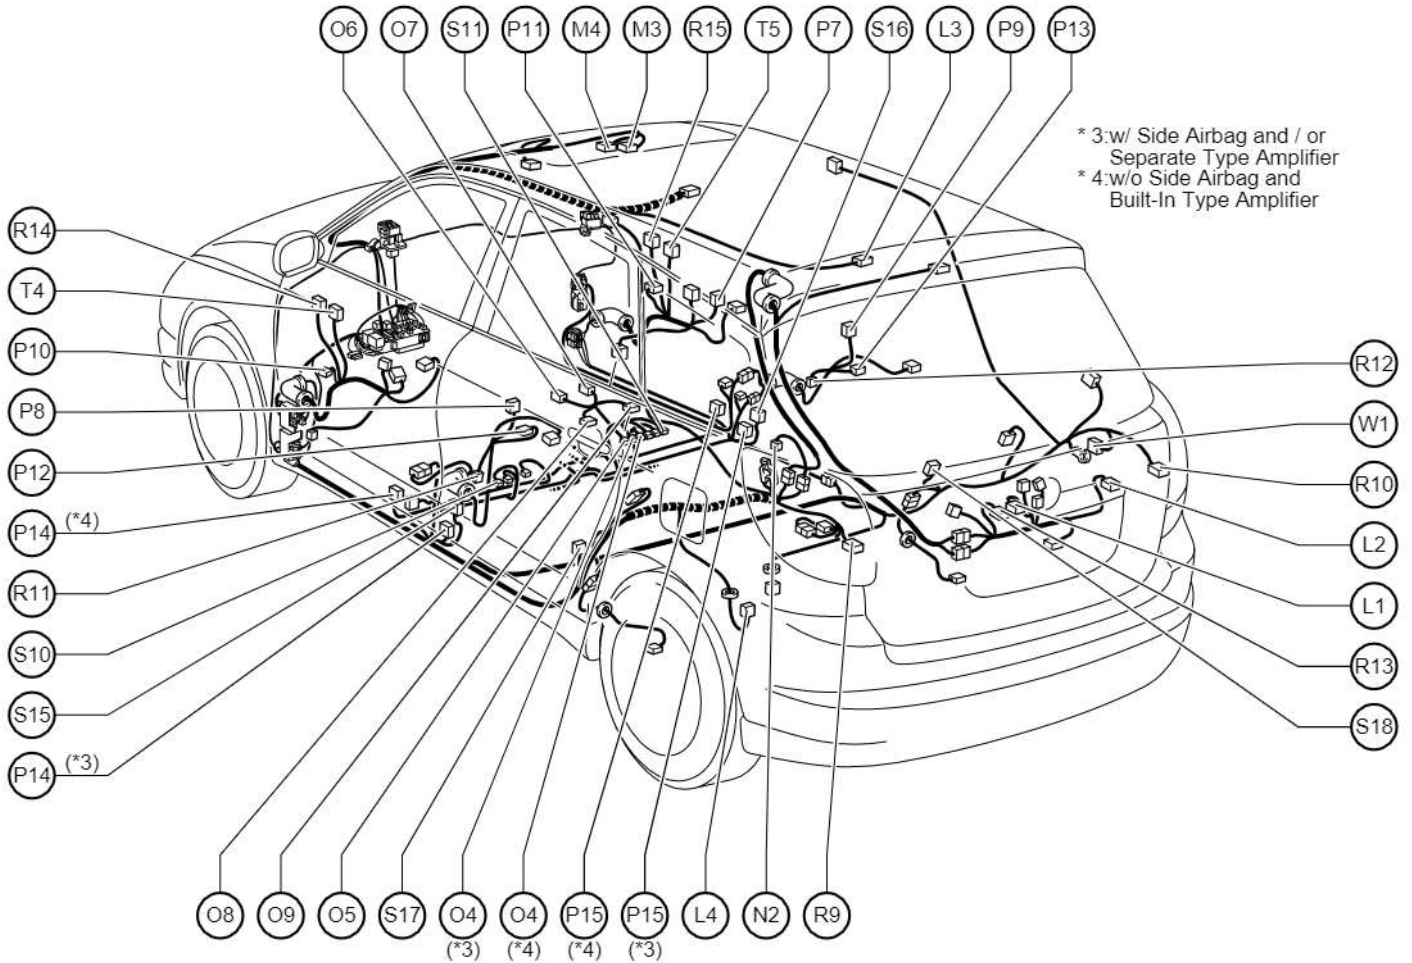

L 1 License Plate Light LH
 L 2 License Plate Light RH
 L 3 Luggage Compartment Light
 L 4 Canister Pump Module

M 3 Moon Roof Control Relay and SW
 Personal Light
 M 4 Moon Roof Motor and Limit SW

N 2 Noise Filter (Rear Window Defogger)

O 4 Occupant Classification ECU
 O 5 Occupant Classification ECU
 O 6 Occupant Classification Sensor Front LH
 O 7 Occupant Classification Sensor Front RH
 O 8 Occupant Classification Sensor Rear LH
 O 9 Occupant Classification Sensor Rear RH

P 7 Power Window Control SW Front RH
 P 8 Power Window Control SW Rear LH
 P 9 Power Window Control SW Rear RH
 P10 Power Window Motor Front LH
 P11 Power Window Motor Front RH
 P12 Power Window Motor Rear LH
 P13 Power Window Motor Rear RH
 P14 Pretensioner LH
 P15 Pretensioner RH

R 9 Rear Combination Light LH
 R10 Rear Combination Light RH
 R11 Rear Door Speaker LH
 R12 Rear Door Speaker RH
 R13 Rear Wiper Relay
 R14 Remote Control Mirror LH
 R15 Remote Control Mirror RH

S10 Side Airbag Squib LH
 S11 Side Airbag Squib RH
 S15 Side Airbag Sensor Front LH
 S16 Side Airbag Sensor Front RH
 S17 Side Airbag Sensor Rear LH
 S18 Side Airbag Sensor Rear RH


T 4 Tweeter LH
 T 5 Tweeter RH

W 1 Woofer

G ELECTRICAL WIRING ROUTING


□ : Location of Connector Joining Wire Harness and Wire Harness

▽ : Location of Ground Points

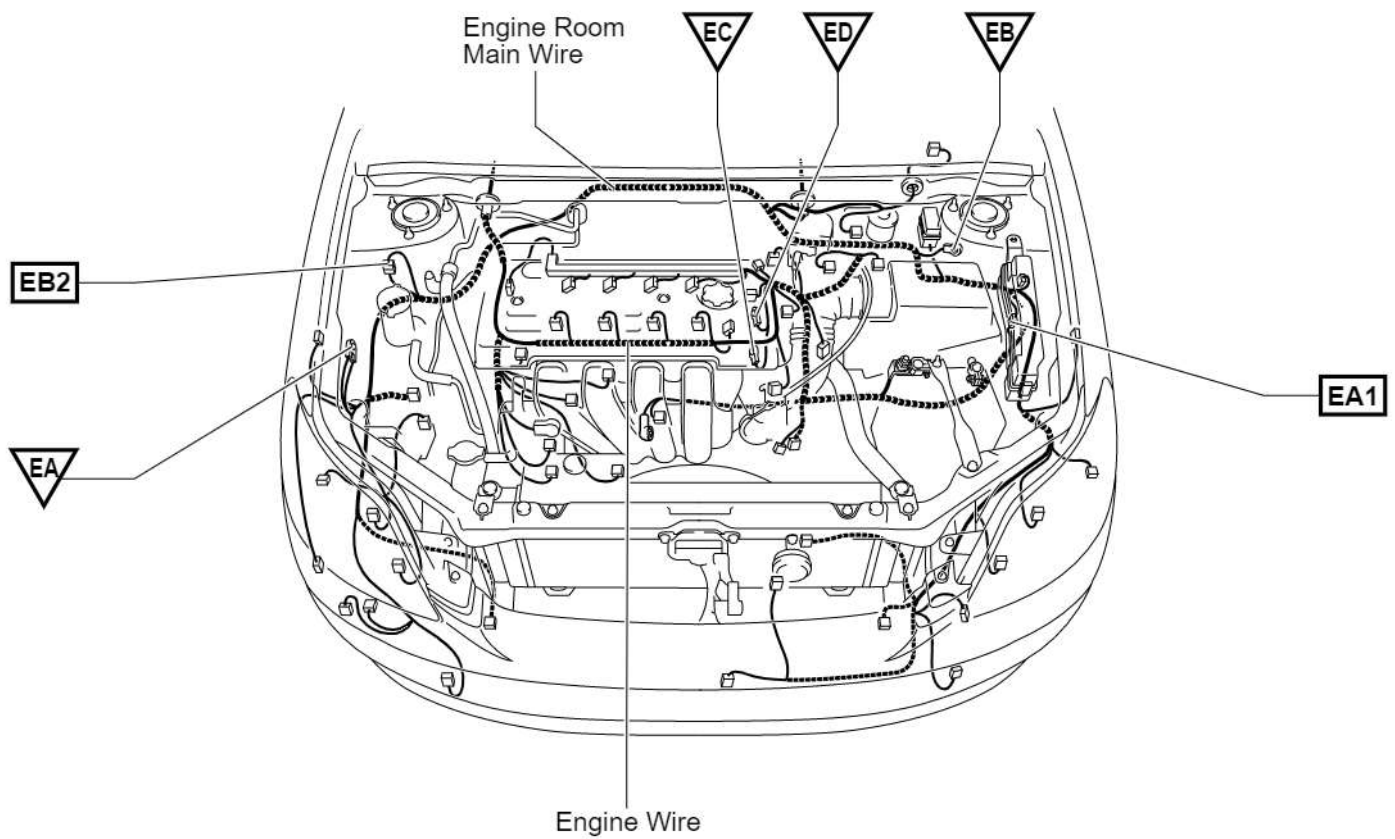


G ELECTRICAL WIRING ROUTING


□ : Location of Connector Joining Wire Harness and Wire Harness

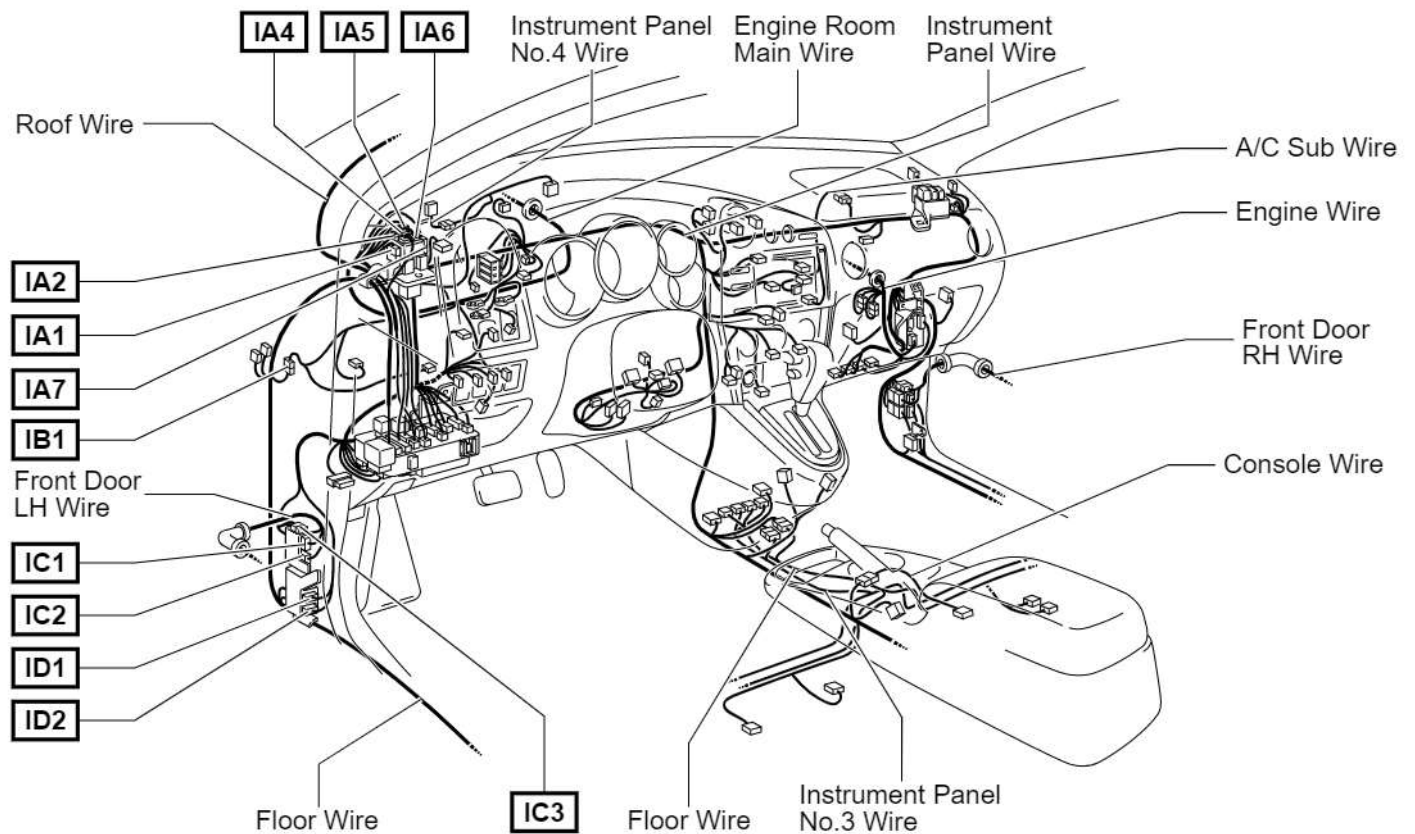

▽ : Location of Ground Points

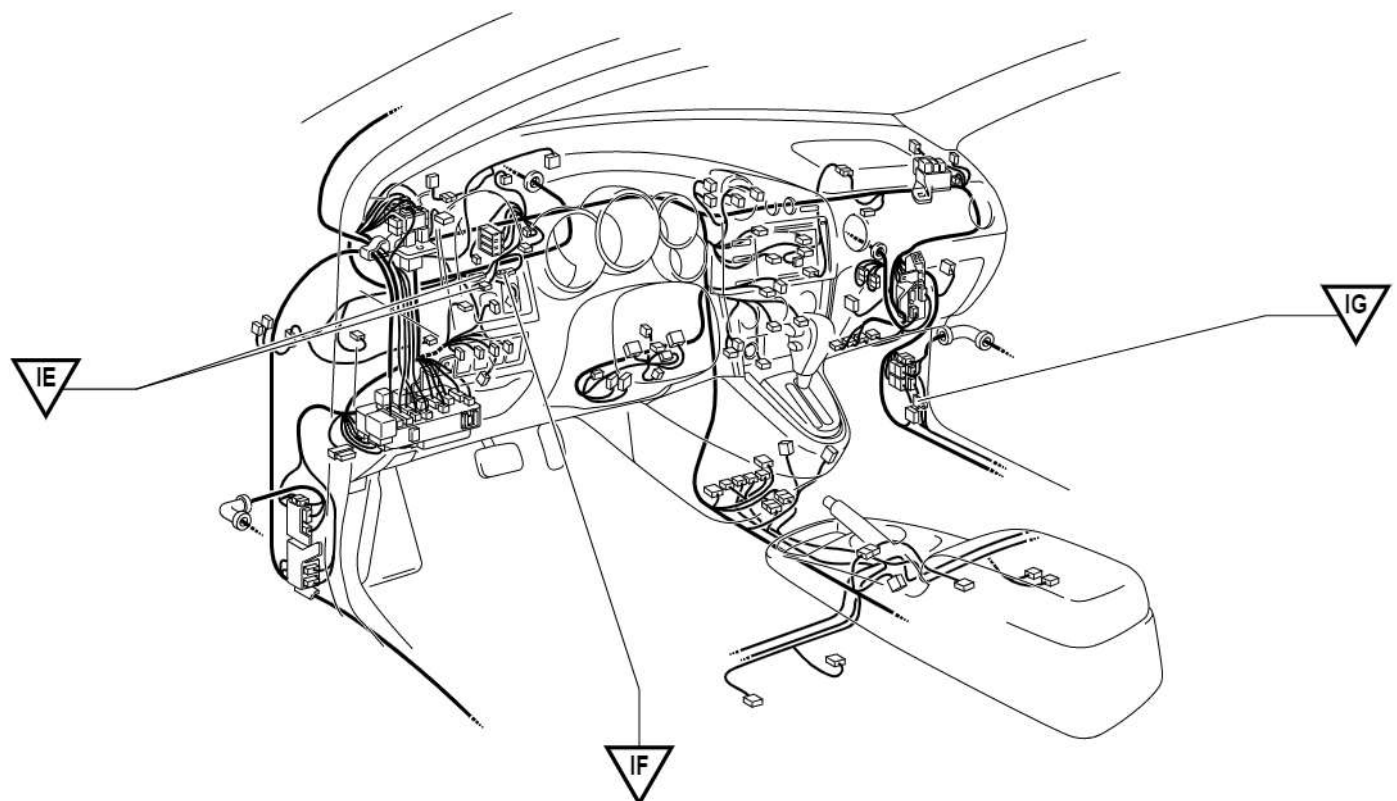

: Location of Connector Joining Wire Harness and Wire Harness

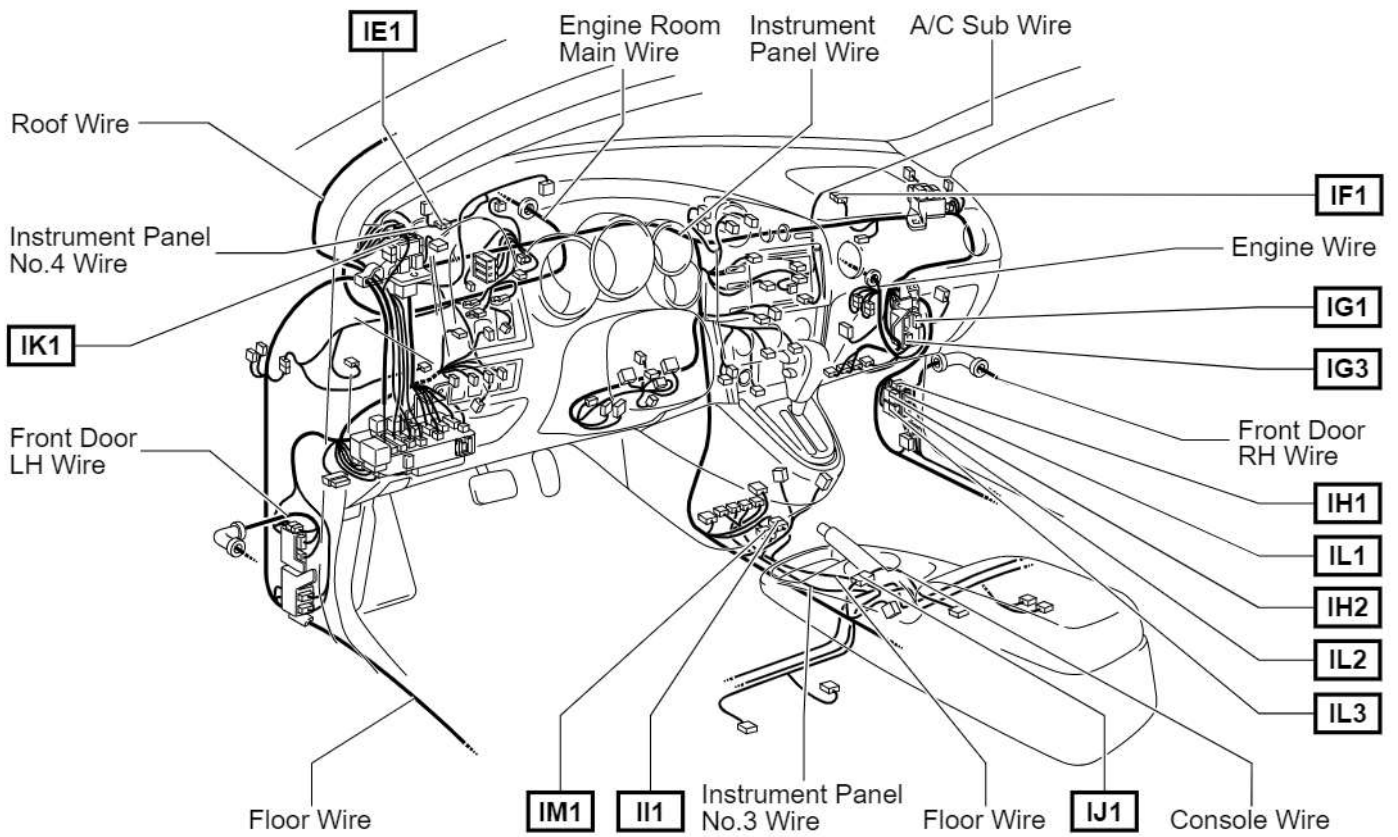

G ELECTRICAL WIRING ROUTING

□ : Location of Connector Joining Wire Harness and Wire Harness

▽ : Location of Ground Points

