

ELECTRICAL KEY HOLDER ASSY REPLACEMENT

8005L-01

HINT:

- The installation procedures are the removal procedures in reverse order. However, only installation procedures requiring additional information are included.
- A bolt without a torque specification is shown in the standard bolt chart ([see page 03-2](#)).
- 1. **DISCONNECT BATTERY NEGATIVE TERMINAL**
- 2. **REMOVE INSTRUMENT PANEL FINISH PANEL SUB-ASSY LOWER** ([See page 71-13](#))
- 3. **REMOVE ELECTRICAL KEY HOLDER ASSY**
 - (a) Disconnect the connector.
 - (b) Remove the 2 screws and electrical key holder.
- 4. **CONNECT BATTERY NEGATIVE TERMINAL**

NOTICE:

When disconnecting the negative (-) battery terminal, initialize the following systems after the terminal is reconnected.

- 5. **SYSTEM INITIALIZE** ([See page 01-29](#))

System Name	See Page
Power Window Control System	01-29



POWER SWITCH REPLACEMENT

8005S-01

HINT:

- The installation procedures are the removal procedures in reverse order. However, only installation procedures requiring additional information are included.
 - A bolt without a torque specification is shown in the standard bolt chart ([see page 03-2](#)).
1. **DISCONNECT BATTERY NEGATIVE TERMINAL**
 2. **LHD models:**
REMOVE INSTRUMENT PANEL FINISH PANEL SUB-ASSY UPPER ([See page 71-13](#))
 3. **RHD models:**
REMOVE INSTRUMENT PANEL REGISTER ASSY NO.1 ([See page 71-13](#))
 4. **REMOVE POWER SWITCH**
 - (a) Disconnect the connector.
 - (b) Disengage the 2 clips and remove the power switch.
 5. **CONNECT BATTERY NEGATIVE TERMINAL**

NOTICE:

When disconnecting the negative (-) battery terminal, initialize the following systems after the terminal is reconnected.

6. SYSTEM INITIALIZE

System Name	See Page
Power Window Control System	01-29

SMART KEY ECU REPLACEMENT

8005T-01

HINT:

- The installation procedures are the removal procedures in reverse order. However, only installation procedures requiring additional information are included.
 - A bolt without a torque specification is shown in the standard bolt chart ([see page 03-2](#)).
1. **DISCONNECT BATTERY NEGATIVE TERMINAL**
 2. **REMOVE INSTRUMENT PANEL FINISH PANEL SUB-ASSY UPPER** ([See page 71-7](#))
 3. **REMOVE SMART KEY ECU**
 - (a) Disconnect the connector.
 - (b) Remove the 2 screws and smart key ECU.
 4. **CONNECT BATTERY NEGATIVE TERMINAL**

NOTICE:

When disconnecting the negative (-) battery terminal, initialize the following systems after the terminal is reconnected.

5. SYSTEM INITIALIZE

System Name	See Page
Power Window Control System	01-29

