

Vauxhall Meriva B 2012 – 2016 fuse box diagram

Engine compartment fuse box



Vauxhall Meriva B – fuse box – engine compartment



Vauxhall Meriva B – fuse box – engine compartment

The fuse box is in the front left of the engine compartment.


Number	Circuit
1	Starter

2	—
3	Fuel filter, cooling
4	Horn
5	Terminal 30
6	Engine control module, transmission control unit
7	Fog light
8	Engine cooling
9	Engine cooling
10	Vacuum pump
11	Ignition, preheating
12	Headlamp levelling
13	Air conditioning system, terminal 15
14	Transmission control unit
15	High beam right
16	High beam left

17	Engine control module
18	Engine control module, terminal 15
19	Airbag
20	Engine control module
21	Engine control module, terminal 87
22	Electrical parking brake
23	Tyre repair kit
24	Fuel pump
25	ABS
26	Heated rear window
27	ABS
28	Interior fan
29	Cigarette lighter
30	Air conditioning system
31	Front power window, left

32	Front power window, right
33	Mirror heating
34	ABS
35	Airbag

Instrument panel fuse box

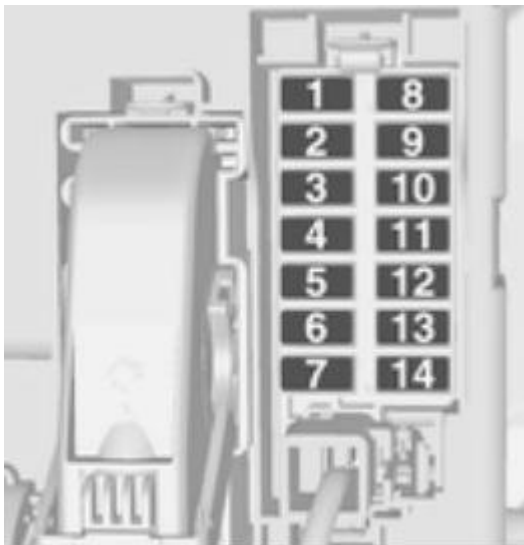

Vauxhall Meriva B – fuse box – instrument panel

The fuse box is behind the storage compartment in the instrument panel. Open compartment, compress the locking tabs, fold compartment down and remove.

In right-hand drive vehicles, the fuse box is located behind a cover in the glovebox. Open the glovebox, pull cover upwards and remove.

Number	Circuit
1	Radio
2	Display, instrument, telephone
3	Radio

4	Ignition switch, immobiliser
5	Windscreen washer, rear screen washer
6	Central locking system, tailgate
7	Central locking system
8	Display, instrument, telephone
9	Heated steering wheel
10	Rear left door unlocking
11	Rear right door unlocking
12	Courtesy light
13	Rain sensor, interior mirror, outside mirrors
14	—

Load compartment fuse box



Vauxhall Meriva B – fuse box – load compartment

The fuse box is on the left side of the load compartment behind a cover. Remove the cover.

Disengage the four retaining lugs and remove the cover.

Number	Circuit
1	Adaptive forward lighting
2	—
3	—
4	—
5	—
6	Rear power window, right
7	Adaptive forward lighting

8	Trailer module, Trailer socket
9	Seat, lumbar support, left
10	Rear power window, left
11	Park assist
12	Electrical sunblind
13	—
14	Heated front seats
15	Trailer module
16	Seat, lumbar support, right
17	—