

AUTOMATIC TRANSMISSION

ELECTRONICALLY CONTROLLED AUTOMATIC TRANSMISSION (ECT)

OPERATION CHECK	AT-1
LOCATION	AT-6
DIAGNOSTIC TROUBLE CODE CHART	AT-7
PROBLEM SYMPTOMS TABLE	AT-7
DESCRIPTION	AT-8
HOW TO PROCEED WITH TROUBLESHOOTING	AT-9
CUSTOMER PROBLEM ANALYSIS CHECK SHEET	AT-12
CHECK / CLEAR DTCs	AT-13
FREEZE FRAME DATA / DTC DETAILED INFORMATION	AT-14
OPERATION SUPPORT	AT-15
CIRCUIT DIAGRAM	AT-16
ECU TERMINALS	AT-17
ECU DATA LIST / ACTIVE TEST	AT-20
FAIL-SAFE CHART	AT-22
P0705/55	AT-24
P0705/56	AT-24
P0710/38	AT-27
P0711/38	AT-27
P0715/37	AT-29
P0720/42	AT-31
P0725/86	AT-33
P0753/61	AT-35
P0758/62	AT-35
P0763/63	AT-35
P0768/64	AT-39
P0773/65	AT-41
P1780/66	AT-41
P1703/72	AT-44
P1706/31	AT-45
P1711/41	AT-46
P1730/21	AT-47
P1731/22	AT-50
U0100/82	AT-53
U0101/85	AT-53

AT

AUTOMATIC TRANSMISSION ASSEMBLY

PRECAUTIONS	AT-54
-------------------	-------

AUTOMATIC TRANSMISSION FLUID

INSPECTION	AT-55
------------------	-------

NEUTRAL START SWITCH ASSEMBLY

COMPONENTS	AT-56
REMOVAL	AT-56
INSTALLATION	AT-57
ADJUSTMENT	AT-58
INSPECTION	AT-59

TORQUE CONVERTER AND DRIVE PLATE

INSPECTION	AT-60
------------------	-------

TRANSMISSION REVOLUTION SENSOR

COMPONENTS	AT-62
------------------	-------

REMOVAL	AT-63
INSTALLATION	AT-63
INSPECTION	AT-63
AUTOMATIC TRANSMISSION ASSEMBLY	
COMPONENTS	AT-65
REMOVAL	AT-69
INSTALLATION	AT-71
TRANSMISSION FLOOR SHIFT ASSEMBLY	
COMPONENTS	AT-78
REMOVAL	AT-79
INSTALLATION	AT-79
TRANSMISSION WIRE	
COMPONENTS	AT-81
REMOVAL	AT-82
INSTALLATION	AT-82
INSPECTION	AT-83
TRANSMISSION VALVE BODY ASSEMBLY	
COMPONENTS	AT-84
REMOVAL	AT-85
INSTALLATION	AT-88
AUTOMATIC TRANSMISSION THREE-WAY SOLENOID ASSEMBLY	
INSPECTION	AT-91
CLUTCH CONTROL SOLENOID NO. 1	
INSPECTION	AT-92
LOCK-UP CONTROL SOLENOID	
INSPECTION	AT-93
EXTENSION HOUSING OIL SEAL	
COMPONENTS	AT-94
REMOVAL	AT-95
INSTALLATION	AT-95
SHIFT LOCK DEVICE	
ON-VEHICLE INSPECTION	AT-96
CLUTCH CONTROL SOLENOID NO. 2	
INSPECTION	AT-97
TRANSMISSION CONTROL COMPUTER ASSEMBLY	
COMPONENTS	AT-98
REMOVAL	AT-98
INSTALLATION	AT-99
SHIFT LOCK RELEASE CABLE ASSEMBLY	
COMPONENTS	AT-100
REMOVAL	AT-102
INSTALLATION	AT-103

