

BRAKE CONTROL

ABS WITH EBD SYSTEM

PRECAUTIONS	BC-1
OPERATION CHECK	BC-1
LOCATION	BC-3
DIAGNOSTIC TROUBLE CODE CHART	BC-4
PROBLEM SYMPTOMS TABLE	BC-4
HOW TO PROCEED WITH TROUBLESHOOTING	BC-5
CUSTOMER PROBLEM ANALYSIS CHECK SHEET	BC-7
CHECK / CLEAR DTCs	BC-7
DIAGNOSIS SYSTEM	BC-9
TEST MODE	BC-9
ECU TERMINALS	BC-13
ECU DATA LIST / ACTIVE TEST	BC-15
C0200/21	BC-18
C0205/22	BC-18
C0210/23	BC-18
C0215/24	BC-18
C0226/52	BC-23
C0236/54	BC-23
C0246/56	BC-23
C0256/58	BC-23
C0273/13	BC-24
C0274/14	BC-24
C0278/11	BC-27
C0279/12	BC-27
C1235/25	BC-30
C1236/26	BC-30
C1238/27	BC-30
C1239/28	BC-30
C1241/15	BC-34
C1244/32	BC-36
C1245/31	BC-36
C1249/39	BC-39
C1251/51	BC-42
ABS WARNING LIGHT REMAINS ON	BC-43
BRAKE WARNING LIGHT REMAINS ON	BC-46
ABS ACTIVATION TIMING IS EARLY (ABS ACTIVATES BEFORE THE WHEELS LOCK)	BC-51
BRAKE PEDAL LOW (FLUID LEAKS OR AIR IN SYSTEM)	BC-52
NOISE DURING INITIAL CHECK OF ACTUATOR TOO LOUD	BC-54

ABS & TRC & VSC & BA SYSTEM WITH EBD

PRECAUTIONS	BC-55
OPERATION CHECK	BC-56
LOCATION	BC-58
DIAGNOSTIC TROUBLE CODE CHART	BC-59
PROBLEM SYMPTOMS TABLE	BC-60
HOW TO PROCEED WITH TROUBLESHOOTING	BC-61
CUSTOMER PROBLEM ANALYSIS CHECK SHEET	BC-63
CHECK / CLEAR DTCs	BC-64
TEST MODE	BC-65
ECU TERMINALS	BC-70
ECU DATA LIST / ACTIVE TEST	BC-72
C0200/21	BC-76

C0205/22	BC-76
C0210/23	BC-76
C0215/24	BC-76
C0226/52	BC-81
C0236/54	BC-81
C0246/56	BC-81
C0256/58	BC-81
C1225/61	BC-81
C0273/13	BC-83
C0274/14	BC-83
C1361/18	BC-83
C0278/11	BC-88
C0279/12	BC-88
C1203/78	BC-91
C1207/73	BC-92
C1208/37	BC-94
C1231/19	BC-96
C1233/36	BC-96
C1301/79	BC-96
U0100/49	BC-96
C1235/25	BC-99
C1236/26	BC-99
C1238/27	BC-99
C1239/28	BC-99
C1241/15	BC-103
C1244/32	BC-105
C0371/35	BC-105
C1245/31	BC-105
C1246/43	BC-107
C1249/39	BC-109
C1251/51	BC-112
C1380/66	BC-114
C1381/38	BC-118
ABS WARNING LIGHT REMAINS ON	BC-120
BRAKE WARNING LIGHT REMAINS ON	BC-123
SLIP INDICATOR LIGHT SYSTEM	BC-127
SKID CONTROL BUZZER (VSC BUZZER) DOES NOT SOUND	BC-129
ABS ACTIVATION TIMING IS EARLY (ABS ACTIVATES BEFORE THE WHEELS LOCK).	BC-130
VSC DOES NOT OPERATE (DIFFICULT TO OPERATE).	BC-131
BRAKE PEDAL LOW (FLUID LEAKS OR AIR IN SYSTEM)	BC-133
VSC WARNING IS DISPLAYED BUT DTC IS NOT OUTPUT	BC-135
NOISE DURING INITIAL CHECK OF ACTUATOR TOO LOUD	BC-138

BRAKE ACTUATOR ASSEMBLY

COMPONENTS	BC-139
REMOVAL	BC-140
INSTALLATION	BC-140

BRAKE ACTUATOR ASSEMBLY (WITH VSC)

COMPONENTS	BC-142
REMOVAL	BC-143
INSTALLATION	BC-143

SPEED SENSOR FR LH

COMPONENTS	BC-145
REMOVAL	BC-146
INSTALLATION	BC-147
INSPECTION	BC-147

SPEED SENSOR RR LH	
COMPONENTS	BC-148
REMOVAL	BC-149
INSTALLATION	BC-150
INSPECTION	BC-151
DECELERATION SENSOR (4WD)	
COMPONENTS	BC-152
REMOVAL	BC-154
INSTALLATION	BC-154
YAW RATE SENSOR (WITH VSC)	
COMPONENTS	BC-155
REMOVAL	BC-157
INSTALLATION	BC-157
STEERING SENSOR (WITH VSC)	
COMPONENTS	BC-159
REMOVAL	BC-160
INSTALLATION	BC-160
PROPORTIONING VALVE ASSEMBLY (WITHOUT ABS)	
COMPONENTS	BC-161
REMOVAL	BC-162
INSTALLATION	BC-162
ON-VEHICLE INSPECTION	BC-163

