

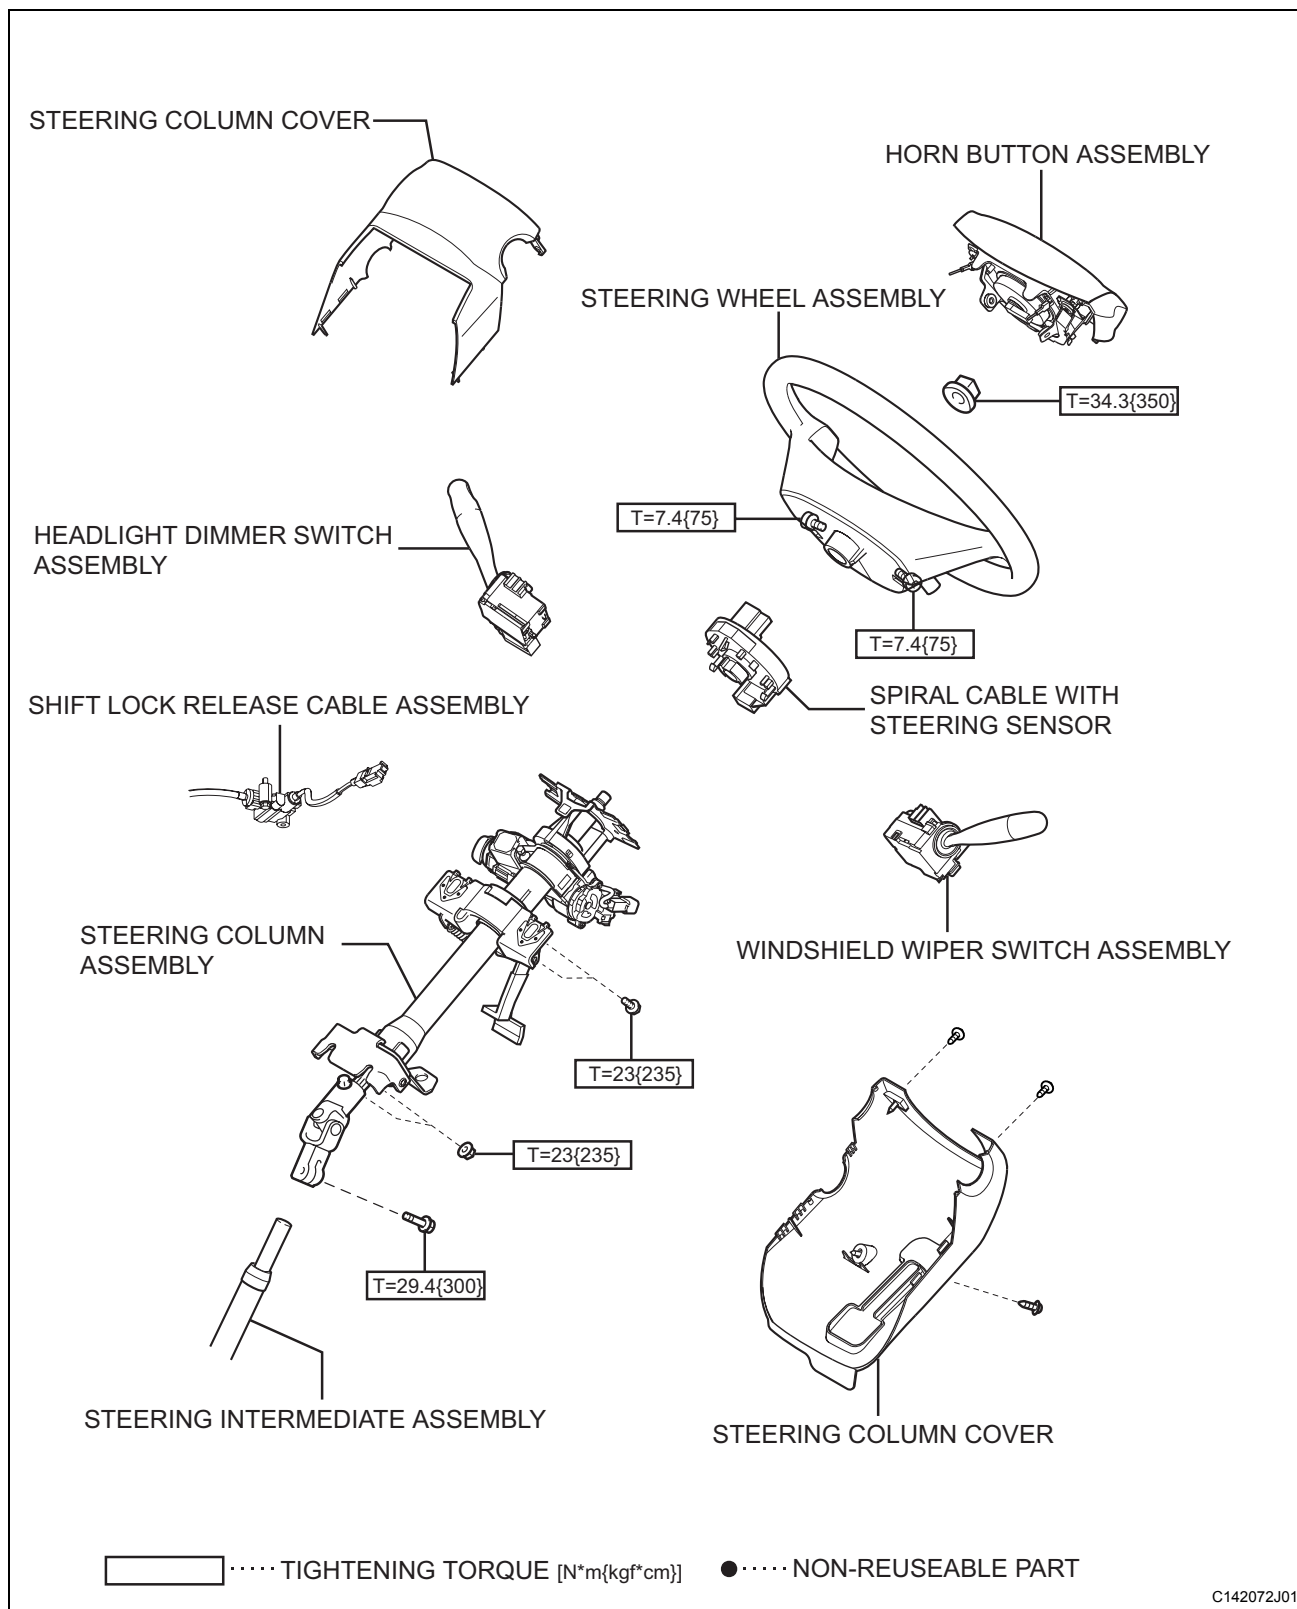


STEERING COLUMN ASSEMBLY


COMPONENTS

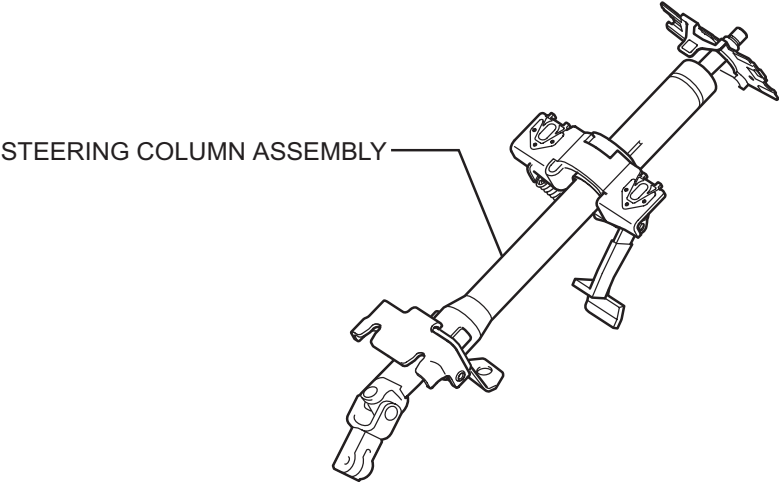

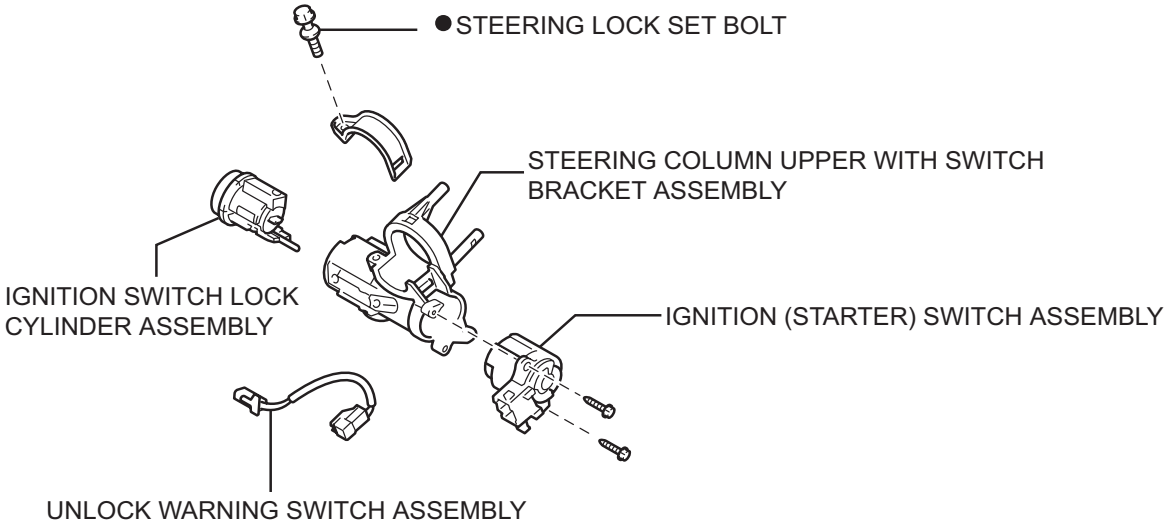


●.....NON-REUSEABLE PART

INSTRUMENT PANEL UNDER COVER NO. 1

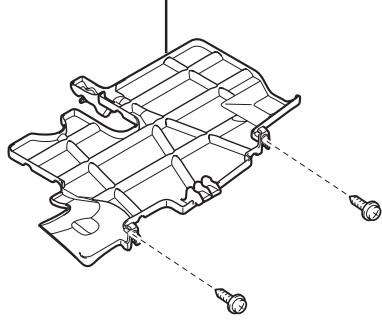


INSTRUMENT PANEL FINISH PANEL LWR

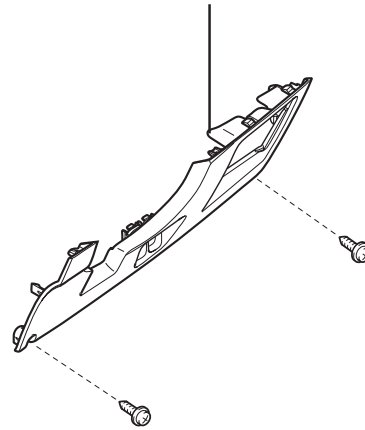


C136487J01

REMOVAL

1. **HANDLING AND WORK PRECAUTIONS**
2. **CHECK THAT FRONT TIRES FACE STRAIGHT AHEAD**
3. **DISCONNECT BATTERY NEGATIVE TERMINAL**
4. **REMOVE HORN BUTTON ASSEMBLY**
5. **REMOVE STEERING WHEEL ASSEMBLY**
 - (a) Remove the nut and put matchmarks on the steering wheel assembly and the steering main shaft.
 - (b) Remove the steering wheel assembly.

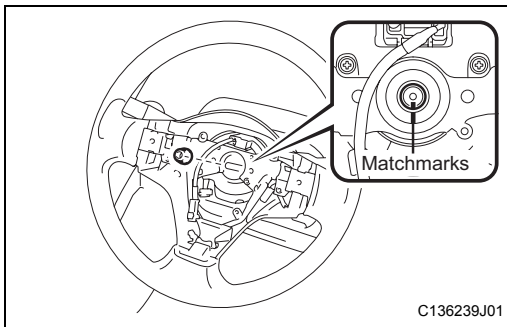


C136239J01

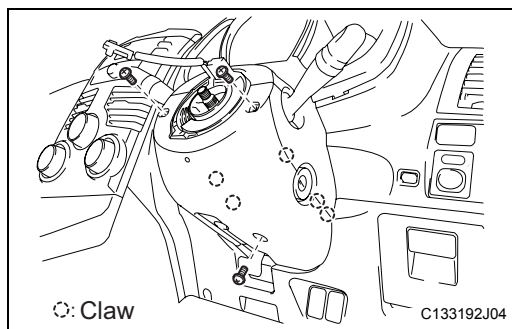

6. REMOVE STEERING COLUMN COVER

- (a) Remove the 3 screws and detach the 5 claws to remove the steering column cover (lower).

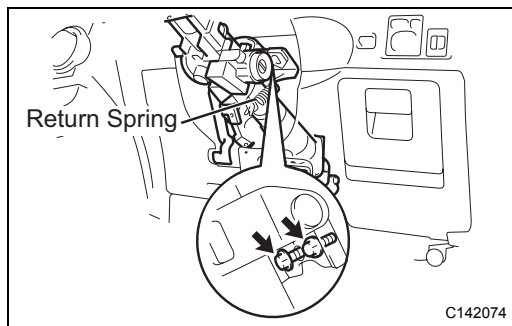

- (b) Remove the 2 steering column assembly bolts to disconnect the steering column.
- (c) Do not release the tilt lever until the installation is completed. (Because it may malfunction.)
- (d) Remove the steering column cover (upper) from the steering column assembly.

7. REMOVE SPIRAL CABLE WITH STEERING SENSOR (See page RS-177)

8. REMOVE HEADLIGHT DIMMER SWITCH ASSEMBLY

9. REMOVE WINDSHIELD WIPER SWITCH ASSEMBLY


10. REMOVE INSTRUMENT PANEL FINISH PANEL LOWER

11. REMOVE NO. 1 INSTRUMENT PANEL UNDER COVER

12. DISCONNECT SHIFT LOCK RELEASE CABLE ASSEMBLY

13. REMOVE STEERING COLUMN ASSEMBLY

- (a) Disconnect the connectors and wire harness clamps from the steering column assembly.
- (b) Put matchmarks on the steering intermediate shaft assembly and the steering column assembly.
- (c) Remove bolt A.

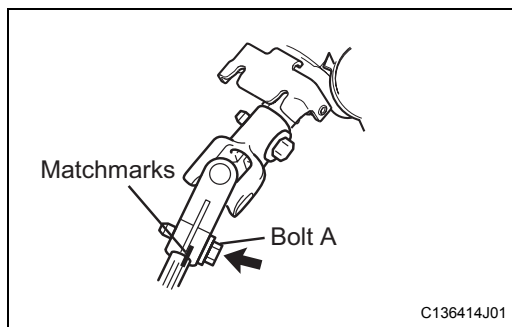


- (d) Remove the 2 nuts to remove the steering column assembly.

DISASSEMBLY

14. REMOVE STEERING COLUMN UPPER WITH SWITCH BRACKET ASSEMBLY


- (a) Using a drill, drill a hole in the 2 steering lock set bolts to allow for a screw extractor.

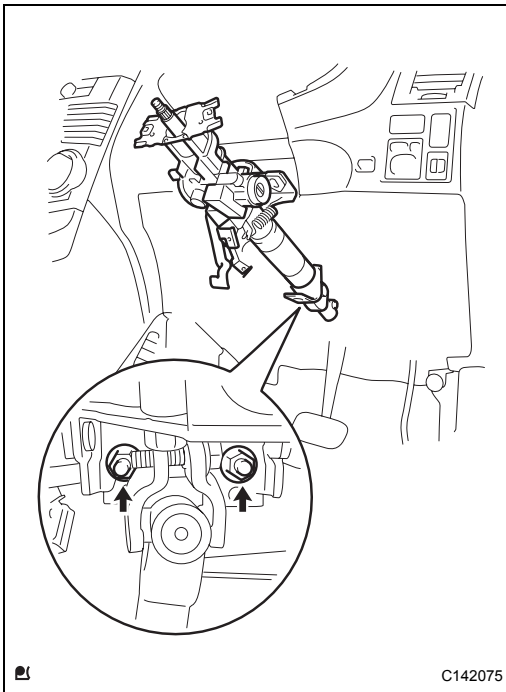

- (b) Remove the steering lock set bolts using screw extractors and then remove the steering column upper with switch bracket assembly.

15. REMOVE UNLOCK WARNING SWITCH ASSEMBLY


- (a) Disconnect the unlock warning switch assembly connector from the ignition (starter) switch assembly.

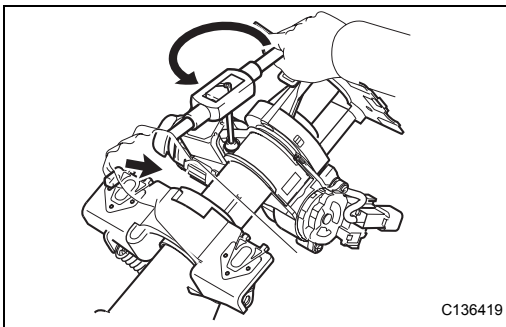

- (b) Disengage the 3 claws to remove the unlock warning switch assembly.

16. REMOVE IGNITION SWITCH LOCK CYLINDER ASSEMBLY


- (a) Place the ignition switch lock cylinder assembly in the ACC position.

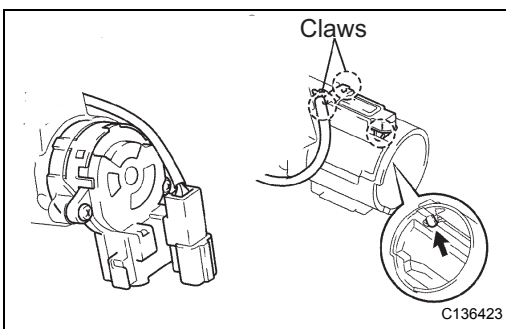

- (b) Press down on the location shown in the illustration using a thin flat-head screwdriver and pull out the ignition switch lock cylinder assembly.

17. REMOVE IGNITION (STARTER) SWITCH ASSEMBLY

- (a) Remove the 2 screws and then the ignition (starter) switch assembly from the steering column bracket assembly upper.

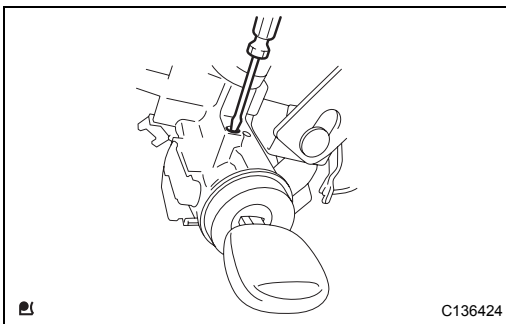

REASSEMBLY

1. INSTALL IGNITION (STARTER) SWITCH ASSEMBLY

- (a) Install the ignition (starter) switch assembly using 2 screws.

2. INSTALL IGNITION SWITCH CYLINDER ASSEMBLY

- (a) Place the ignition switch lock cylinder assembly in the ACC position.
- (b) Insert the ignition switch lock cylinder assembly.
- (c) Make sure that the ignition switch lock cylinder assembly is securely fixed in place.

3. INSTALL UNLOCK WARNING SWITCH ASSEMBLY

- (a) Engage the 3 claws and install the unlock warning switch assembly.
- (b) Connect the unlock warning switch assembly connector to the ignition (starter) switch assembly.



4. INSTALL STEERING COLUMN UPPER WITH SWITCH BRACKET ASSEMBLY


- (a) Install the steering column clamp upper and steering column upper with switch bracket assembly using new steering lock set bolts and fully tighten down the bolts.

INSTALLATION

5. INSTALL STEERING COLUMN ASSEMBLY


- (a) Align matchmarks and connect the steering column assembly to the steering intermediate shaft assembly.

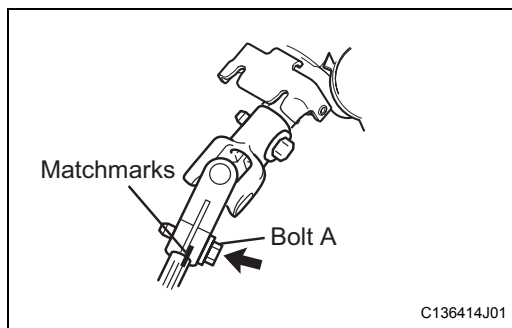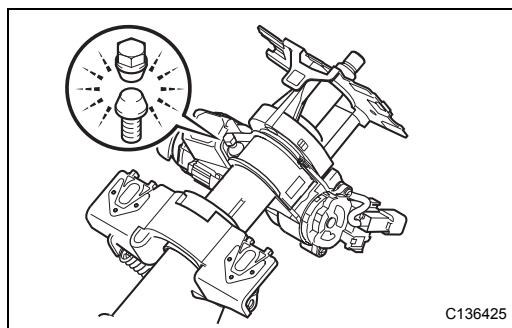

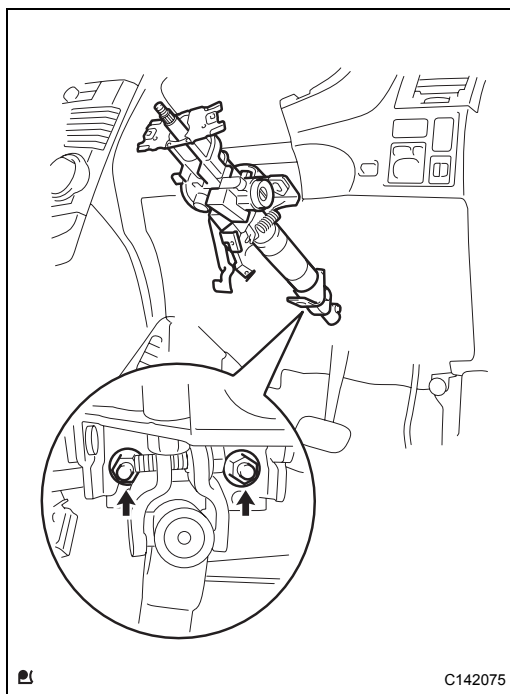


- (b) Install the steering column assembly with the 2 nuts.
Torque: 23 N*m (235 kgf*cm)
- (c) Install the steering column assembly and steering intermediate shaft assembly using a new bolt (A).
Torque: 29.4 N*m (300 kgf*cm)
- (d) Connect the connectors and clamp the wire harness to the steering column assembly bracket.

6. INSTALL SHIFT LOCK RELEASE CABLE ASSEMBLY
7. INSTALL INSTRUMENT PANEL UNDER COVER NO. 1
8. INSTALL INSTRUMENT PANEL FINISH PANEL LOWER
9. INSTALL WINDSHIELD WIPER SWITCH ASSEMBLY
10. INSTALL HEADLIGHT DIMMER SWITCH ASSEMBLY
11. INSTALL SPIRAL CABLE WITH STEERING SENSOR (See page RS-178)

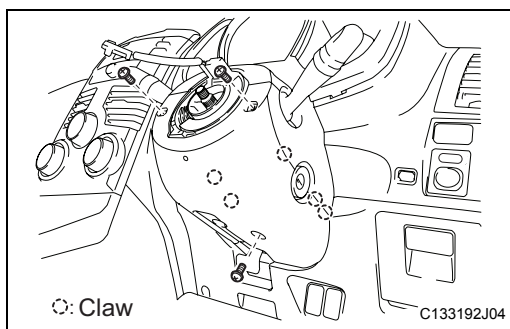


12. INSTALL STEERING COLUMN COVER

- (a) Install the steering column cover (upper) to the steering column assembly.

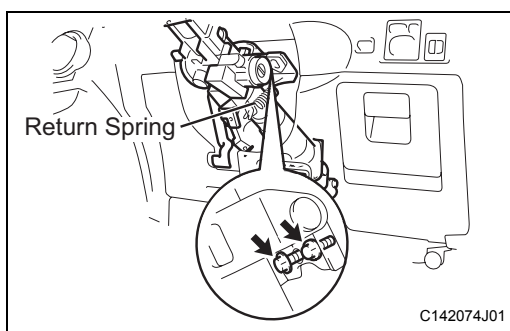

- (b) Install the steering column assembly using 2 bolts.
Torque: 23 N*m (235 kgf*cm)
- (c) With the tilt lever released, make sure that the steering column assembly moves smoothly.
HINT:
If the steering column assembly has been removed with the tilt lever released, install the steering column assembly with the holding spring removed, and then install the holding spring.
- (d) Attach the 5 claws and install the steering column cover (lower).
- (e) Install the steering column cover using the 3 screws.

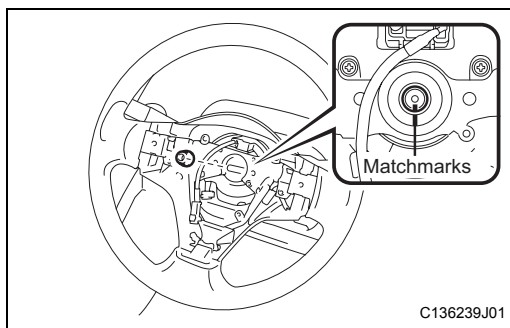

13. INSTALL STEERING WHEEL ASSEMBLY

- (a) Align the matchmarks and install the steering wheel assembly to the steering column assembly.
- (b) Install the nut.
Torque: 34.3 N*m (350 kgf*cm)

14. INSTALL HORN BUTTON ASSEMBLY

15. CONNECT BATTERY NEGATIVE TERMINAL

16. CHECK AIRBAG WARNING LIGHT