

SRS AIRBAG

SRS AIRBAG SYSTEM

OPERATION CHECK	RS-1
LOCATION	RS-6
DIAGNOSTIC TROUBLE CODE CHART	RS-7
PROBLEM SYMPTOMS TABLE	RS-11
DESCRIPTION	RS-12
HOW TO PROCEED WITH TROUBLESHOOTING	RS-15
CUSTOMER PROBLEM ANALYSIS CHECK SHEET	RS-18
CHECK / CLEAR DTCs	RS-19
DIAGNOSIS SYSTEM	RS-20
ECU TERMINALS	RS-22
B1000/31	RS-24
B1600/15	RS-25
B1605/15	RS-25
B1620/32	RS-33
B1625/33	RS-38
B1630/23	RS-43
B1635/24	RS-48
B1800/13	RS-53
B1801/14	RS-57
B1802/11	RS-61
B1803/12	RS-65
B1805/53	RS-69
B1806/54	RS-72
B1807/51	RS-75
B1808/52	RS-78
B1820/43	RS-81
B1821/44	RS-84
B1822/41	RS-87
B1823/42	RS-90
B1825/47	RS-93
B1826/48	RS-96
B1827/45	RS-99
B1828/46	RS-102
B1830/83	RS-105
B1831/84	RS-108
B1832/81	RS-111
B1833/82	RS-114
B1835/87	RS-117
B1836/88	RS-120
B1837/85	RS-123
B1838/86	RS-126
B1900/63	RS-129
B1901/64	RS-132
B1902/61	RS-135
B1903/62	RS-138
B1905/73	RS-141
B1906/74	RS-144
B1907/71	RS-147
B1908/72	RS-150
WARNING LIGHT DOES NOT TURN ON	RS-153
WARNING LIGHT REMAINS ON	RS-155
POWER SOURCE VOLTAGE DROP	RS-158

RS

TC TERMINAL CIRCUIT	RS-161
SRS AIRBAGS	
PRECAUTIONS	RS-164
HORN BUTTON ASSEMBLY	
COMPONENTS	RS-169
REMOVAL	RS-169
INSTALLATION	RS-170
DISPOSAL	RS-171
SPIRAL CABLE	
COMPONENTS	RS-176
REMOVAL	RS-177
INSPECTION	RS-177
INSTALLATION	RS-178
INSPECTION	RS-179
INSTRUMENT PANEL PASSENGER AIRBAG ASSEMBLY	
COMPONENTS	RS-180
REMOVAL	RS-181
INSTALLATION	RS-182
DISPOSAL	RS-182
CURTAIN SHIELD AIRBAG RH	
COMPONENTS	RS-187
REMOVAL	RS-187
INSTALLATION	RS-189
DISPOSAL	RS-190
FRONT SEAT AIRBAG ASSEMBLY RH	
COMPONENTS	RS-195
REMOVAL	RS-195
INSTALLATION	RS-196
DISPOSAL	RS-196
AIRBAG COMPUTER ASSEMBLY	
COMPONENTS	RS-201
REMOVAL	RS-202
INSTALLATION	RS-203
SIDE AIRBAG SENSOR ASSEMBLY RH	
COMPONENTS	RS-205
REMOVAL	RS-206
INSTALLATION	RS-207
SIDE AIRBAG SENSOR ASSEMBLY RH NO. 2	
COMPONENTS	RS-208
REMOVAL	RS-209
INSTALLATION	RS-209
AIRBAG CUTOFF SWITCH CYLINDER	
COMPONENTS	RS-211
REMOVAL	RS-212
INSTALLATION	RS-212
INSPECTION	RS-213
FRONT AIRBAG SENSOR	
COMPONENTS	RS-214
REMOVAL	RS-215
INSTALLATION	RS-216

