


TAILLIGHT (REAR COMBINATION LIGHT) ASSEMBLY LH


COMPONENTS

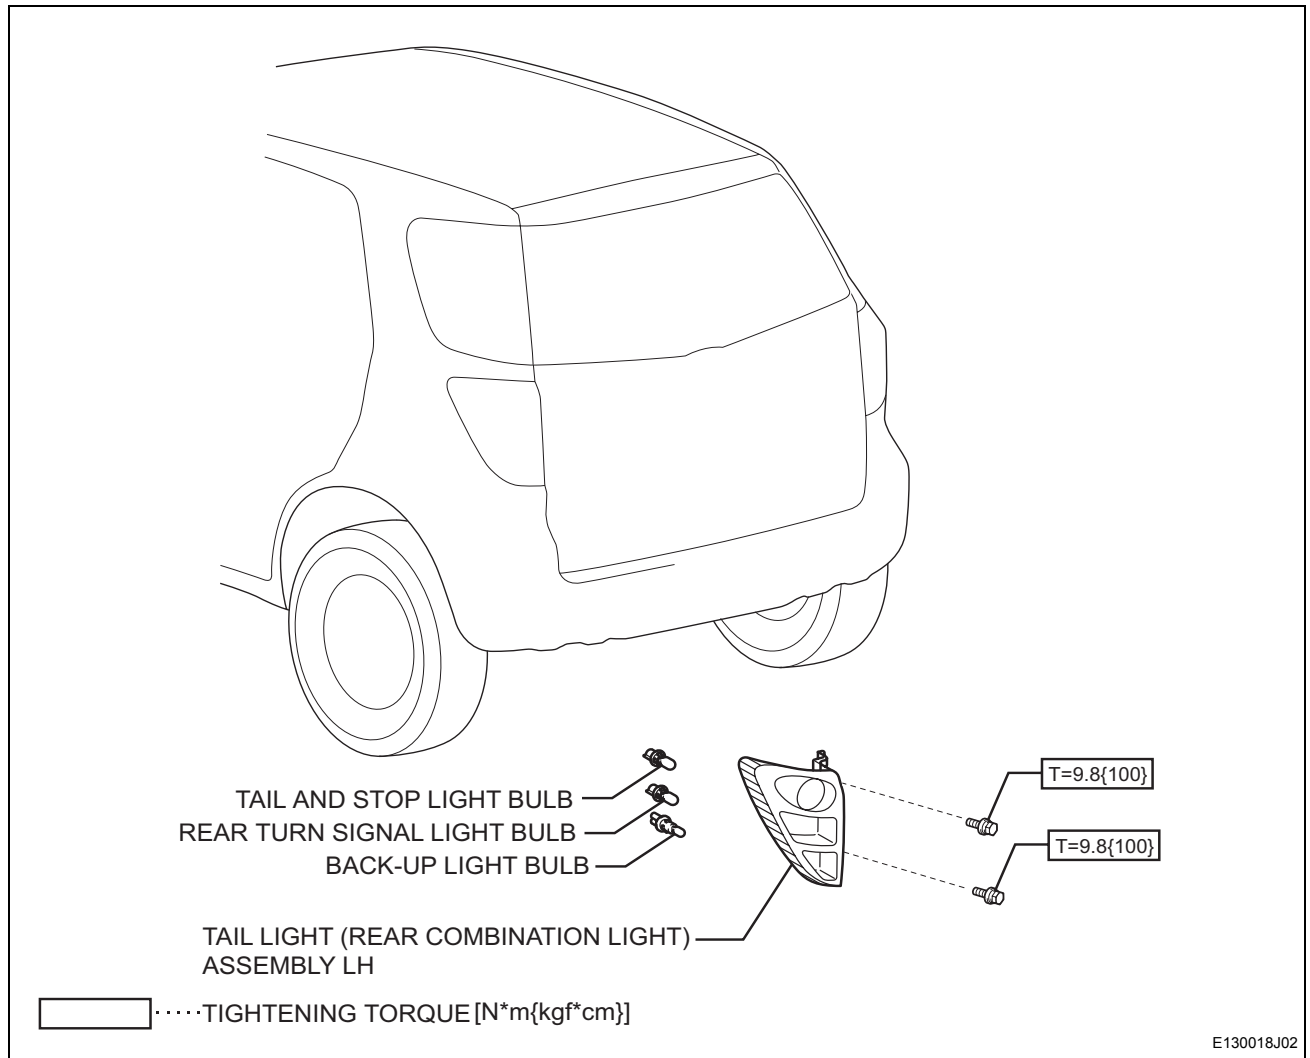

REMOVAL

1. DISCONNECT BATTERY NEGATIVE TERMINAL
2. REMOVE TAILLIGHT (REAR COMBINATION LIGHT) ASSEMBLY LH
 - (a) Remove the 2 bolts.



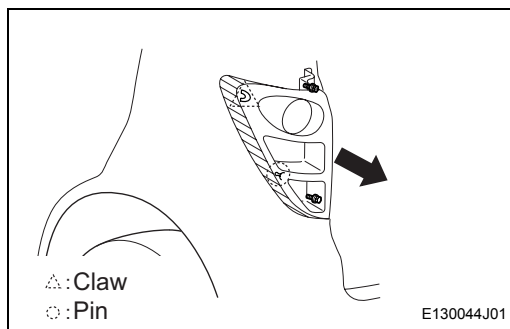


- (b) Pulling in the direction indicated by the arrow, disengage the pin and clip and remove the taillight (rear combination light) assembly LH.

HINT:

- Leave the claw and clip in the vehicle body.
- With the door closed, pull the taillight (rear combination light) assembly RH in the direction of the arrow.


3. REMOVE TAILLIGHT AND STOP LIGHT BULBS

- (a) Turning in the direction of the arrow in the illustration, remove the tail and stop light bulbs and the stop light bulb socket as a unit.
- (b) Remove the taillight and stop light bulbs from the taillight and stop light bulb socket.

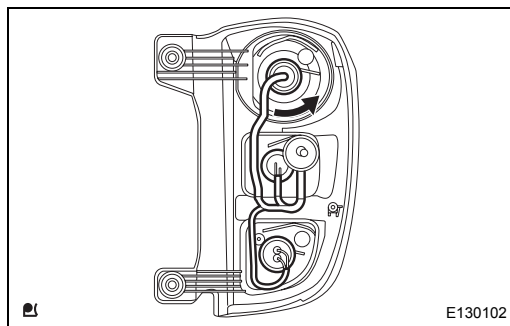


4. REMOVE REAR TURN SIGNAL RIGHT BULB

- (a) Turning in the direction shown in the illustration, remove the rear turn signal light bulb and rear turn signal light socket as a unit.
- (b) Remove the rear turn signal light bulb from the rear turn signal light socket.

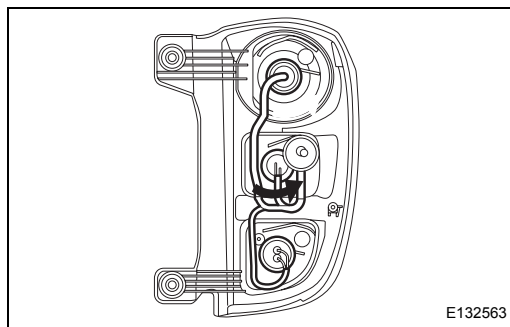


5. REMOVE BACKUP LIGHT BULB (WITHOUT REAR FOG LIGHT)

- (a) Turning in the direction shown in the illustration, remove the backup light bulb from the backup light bulb socket as a unit.
- (b) Remove the backup light bulb from the backup light bulb socket.

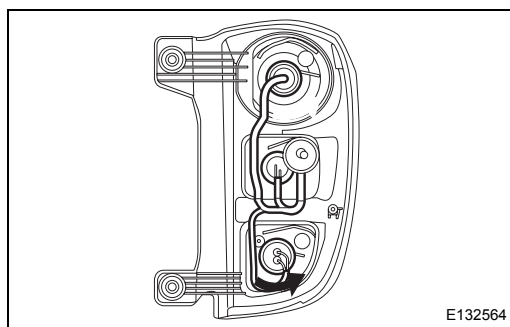

6. REMOVE REAR FOG LIGHT (WITH REAR FOG LIGHT)


- (a) Turning in the direction shown in the illustration, remove the rear fog light bulb and rear fog light bulb socket as a unit.
- (b) Remove the rear fog light bulb from the rear fog light bulb socket.

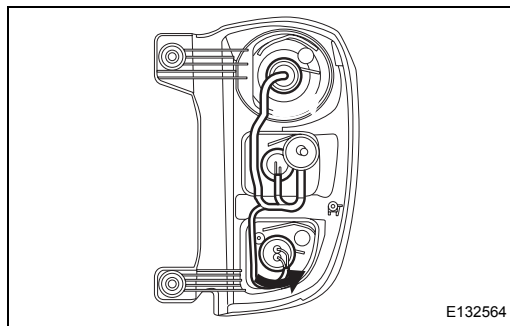

INSTALLATION


1. INSTALL REAR FOG LIGHT (WITH REAR FOG LIGHT)

- (a) Install the rear fog light bulb in the rear fog light bulb socket.
- (b) Turning in the direction shown in the illustration, install the rear fog light bulb and rear fog light bulb socket as a unit.

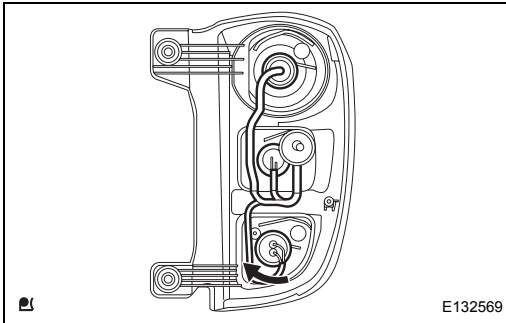

2. INSTALL BACKUP LIGHT BULB (WITHOUT REAR FOG LIGHT)


- (a) Install the backup light bulb in the backup light bulb socket.

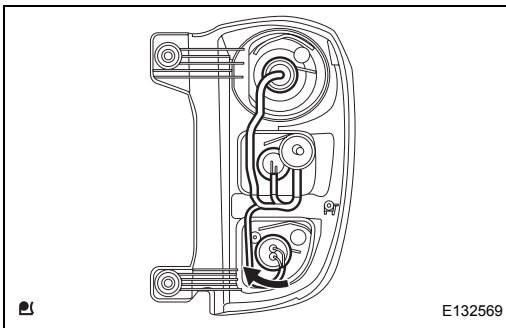

- (b) Turning in the direction shown in the illustration, install the backup light bulb and backup light bulb socket as a unit.

3. INSTALL TAILLIGHT AND STOP LIGHT BULB


- (a) Install the taillight and stop light bulbs in the taillight and stop light bulb socket.

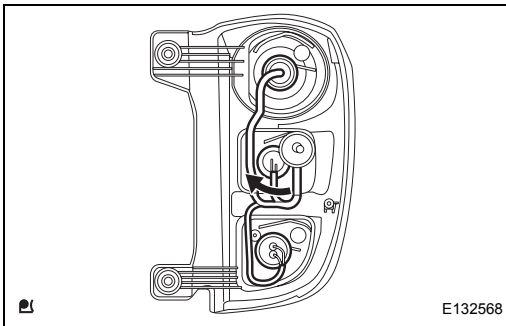


- (b) Turning in the direction shown in the illustration, install the taillight and stop light bulb and taillight and stop light bulb socket as a unit.

4. INSTALL REAR TURN SIGNAL LIGHT BULB

- (a) Install the rear turn signal light bulb in the rear turn signal light socket.

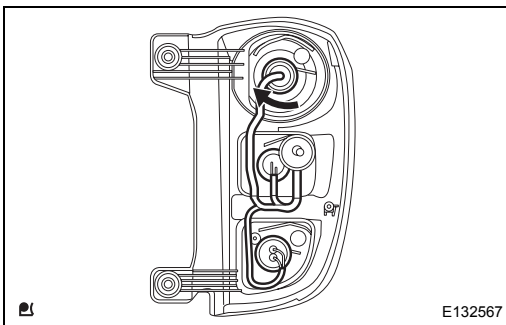

- (b) Turning in the direction shown in the illustration, install the rear turn signal light bulb and rear turn signal light bulb socket as a unit.

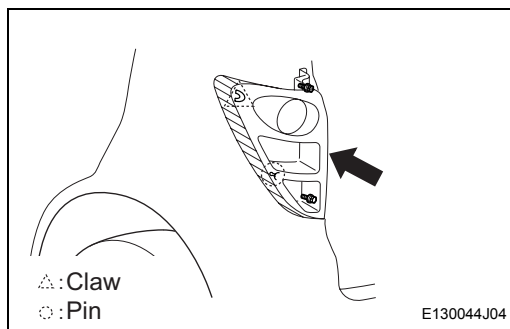**5. INSTALL TAILLIGHT (REAR COMBINATION LIGHT) ASSEMBLY LH**

- (a) Engage the pin and clip and install the taillight (rear combination light) assembly LH.

HINT:

Align the claw of the taillight (rear combination lamp) assembly LH with the clip.

- (b) Install the 2 bolts.

Torque: 9.8 N*m (100 kgf*cm)

6. CONNECT BATTERY NEGATIVE TERMINAL**7. PERFORM INTIALIZATION**

(See page SS-10 for details.)

