



REAR WIPER RUBBER


COMPONENTS

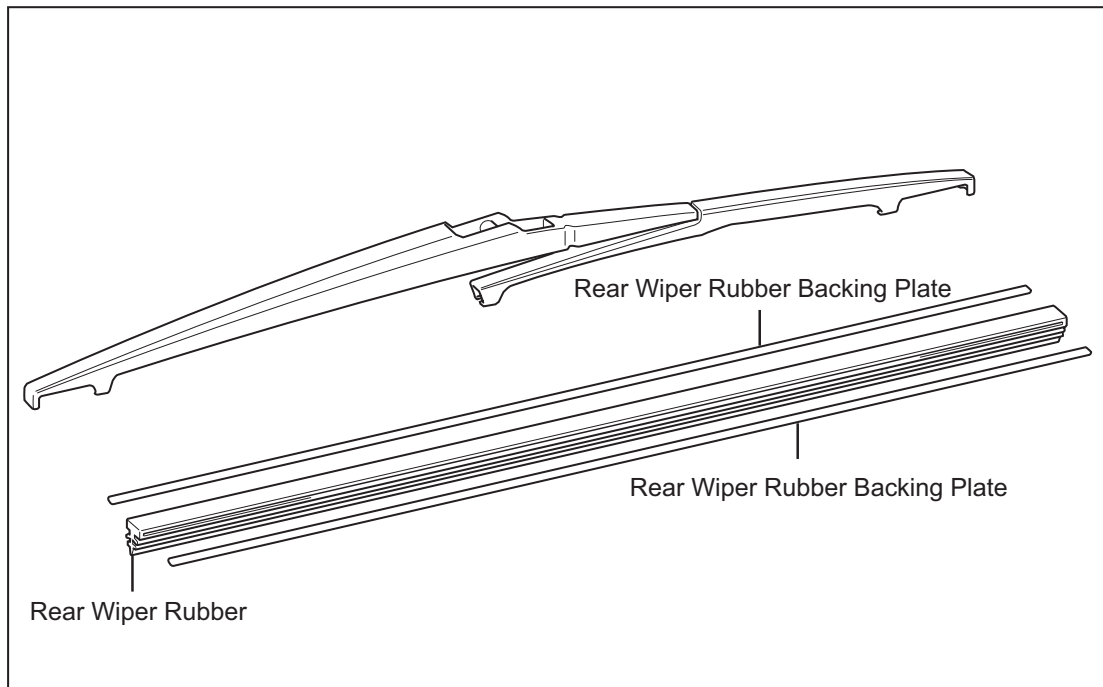

WW

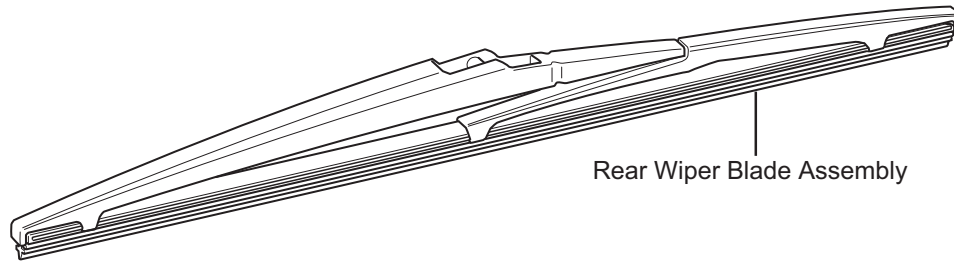

REMOVAL

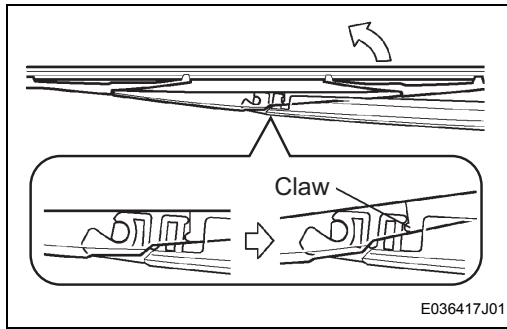


1. REMOVE REAR WIPER BLADE

- (a) Lift up the rear wiper blade.
- (b) Lift the rear wiper blade to the position shown in the illustration until you hear the sound of the claws snapping out of their engagement. [*1]

NOTICE:


Be careful not to damage the claws.

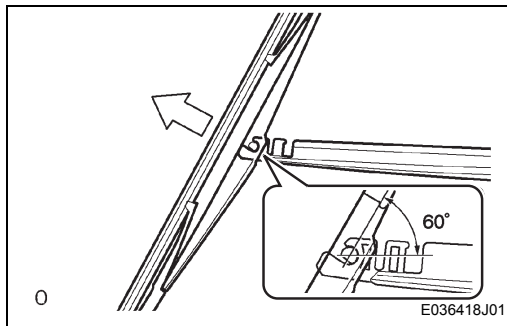

- (c) After completing [*1] above, remove the rear wiper blade from the rear wiper arm by pulling the blade straight away from the wiper arm towards the left side of the vehicle.

NOTICE:

Do not lay the wiper arm down on the windshield with the wiper blade removed.

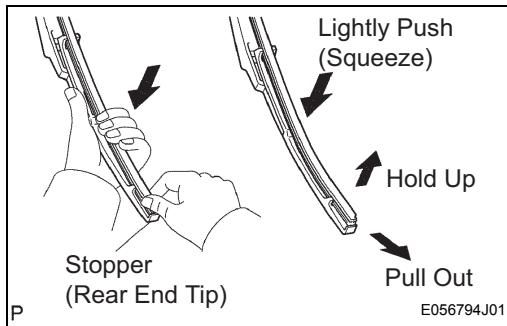

2. REMOVE REAR WIPER RUBBER

- (a) Squeeze the rear wiper rubber out of the stopper at the back end of the rear wiper blade and pull it out as shown in the illustration.

NOTICE:


Do not pull out the wiper rubber forcibly. Doing so will deform the backing plate or damage the blade claw.

HINT:

Lightly press around the center of the wiper blade claws until it is easy to lift and pull out the rubber.

- (b) Remove the backing blade from the rear wiper rubber.

INSTALLATION

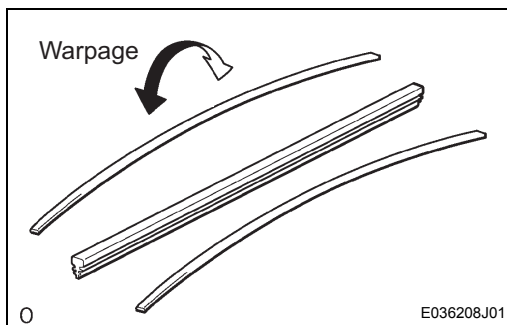


1. INSTALL REAR WIPER BLADE


- (a) Install the rear wiper rubber backing plate as shown in the illustration.

NOTICE:

Make sure that the curve of the backing plate is facing in the proper direction.

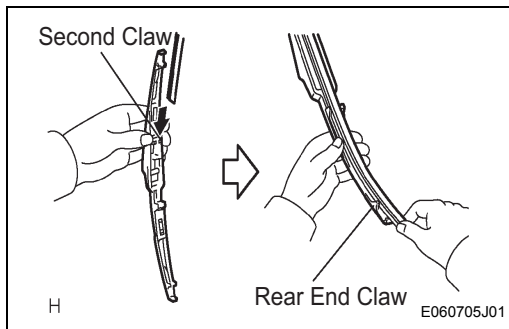

- (b) Insert the rear wiper rubber at the second claw from the front end of the wiper blade and push the rubber through to the rear end of the rear wiper blade.
- (c) Pass the rear wiper rubber through the rear end side claw and allow it to protrude from the rear end stopper.
- (d) Pass the rear wiper rubber through the front end claw to install it.

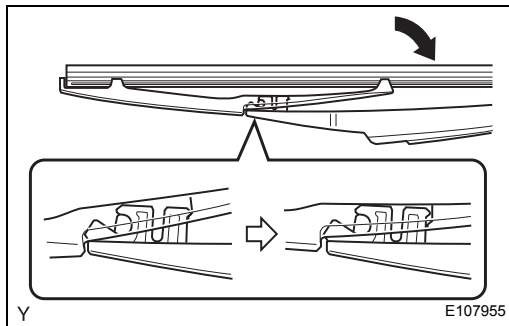

2. INSTALL REAR WIPER RUBBER

- (a) Engage the claw and install the rear wiper blade to the wiper arm.
- (b) Confirm that the claws are engaged securely and return the rear wiper arm.

WW