



ANTENNA ASSEMBLY (WITH HOLDER)


COMPONENTS

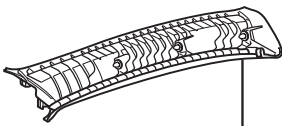


FRONT PILLAR GARNISH LH

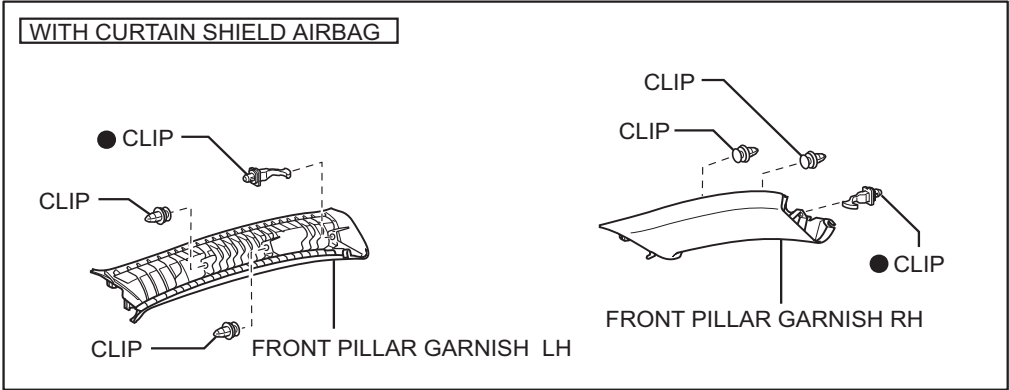

FRONT PILLAR GARNISH RH

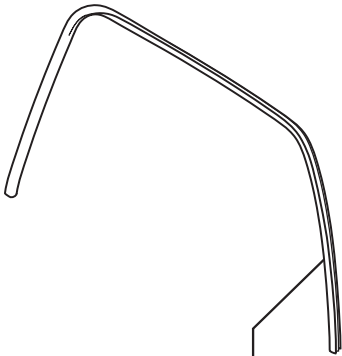


FRONT DOOR OPENING TRIM WEATHERSTRIP LH

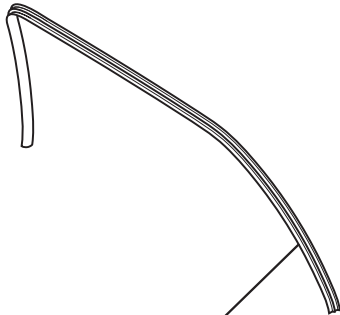

FRONT DOOR OPENING TRIM WEATHERSTRIP RH


●.....NON-REUSEABLE PART




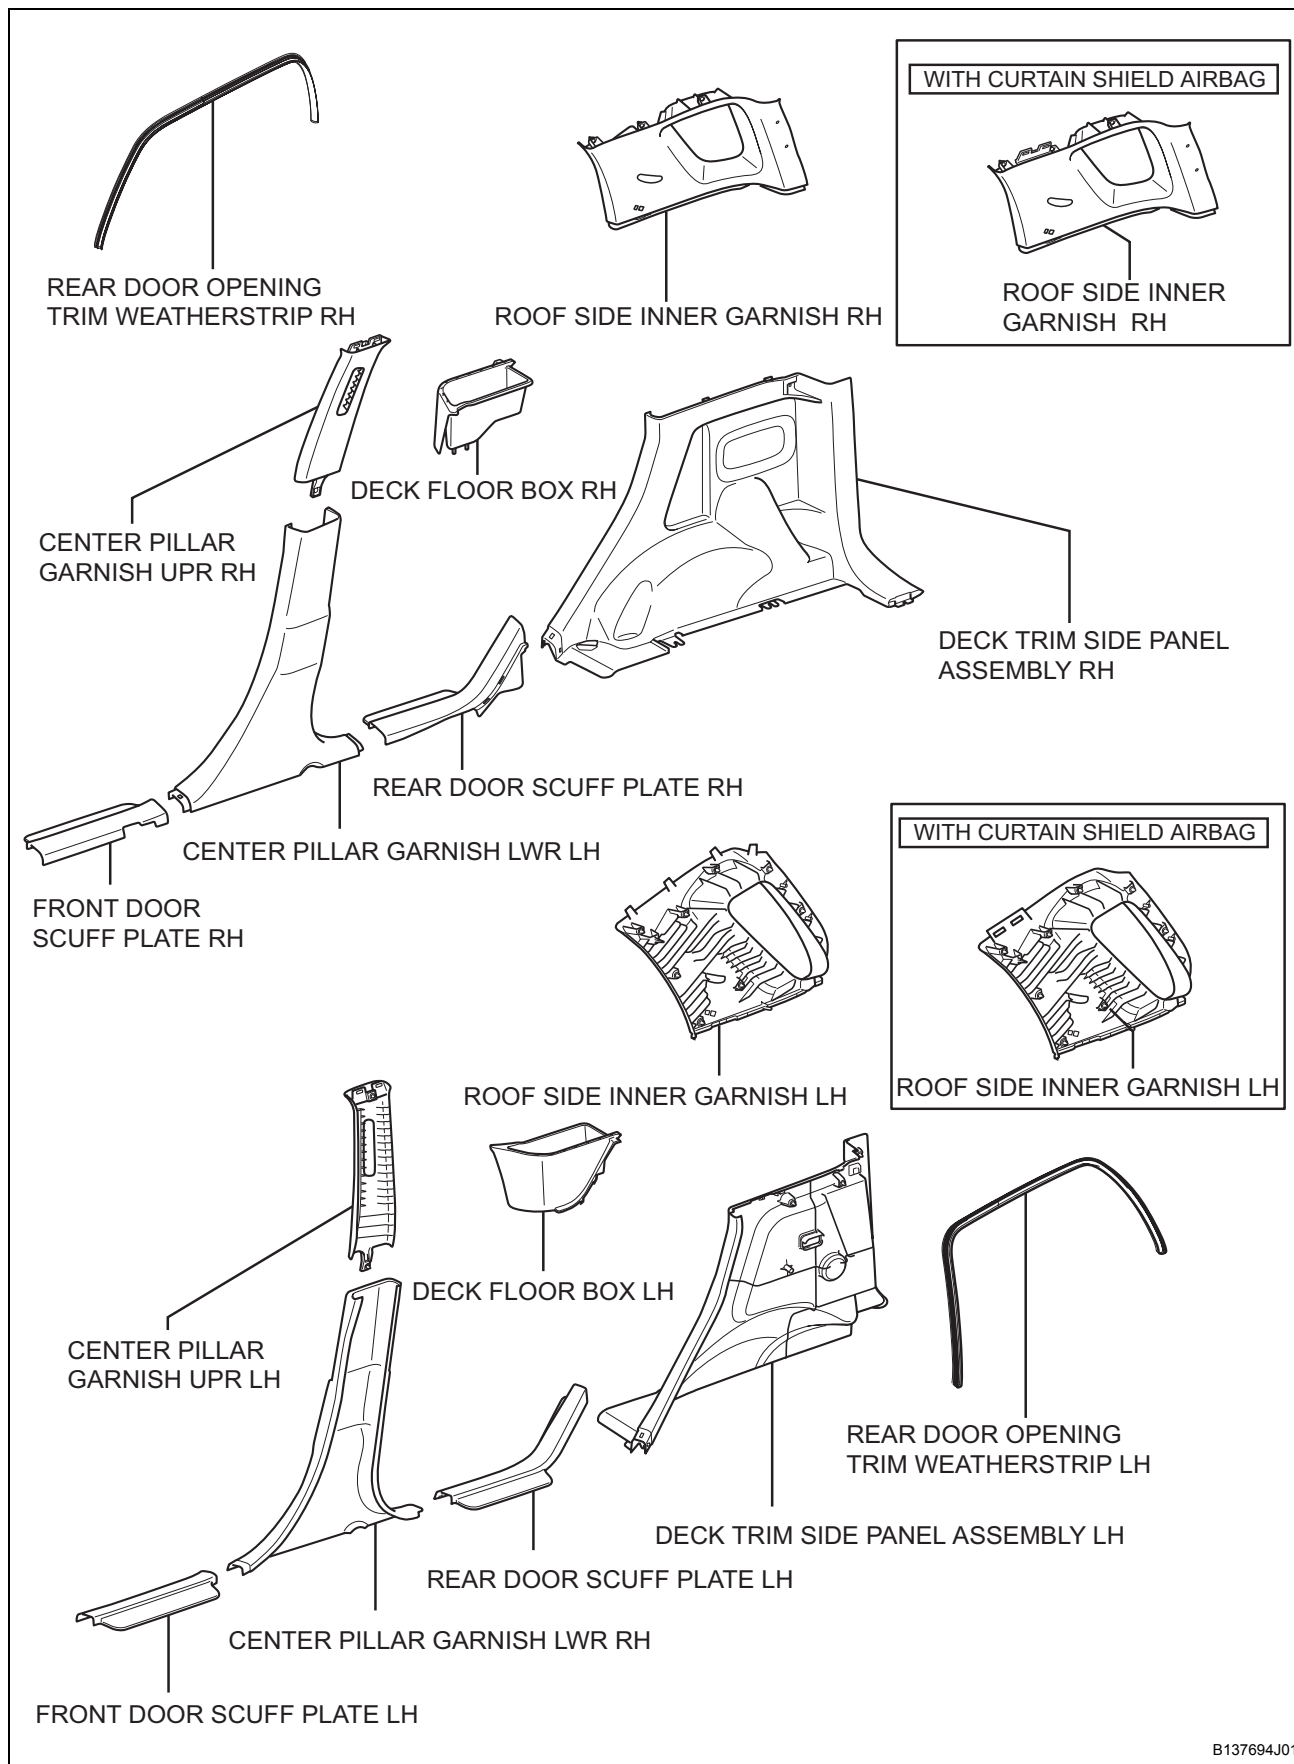

AV

AV

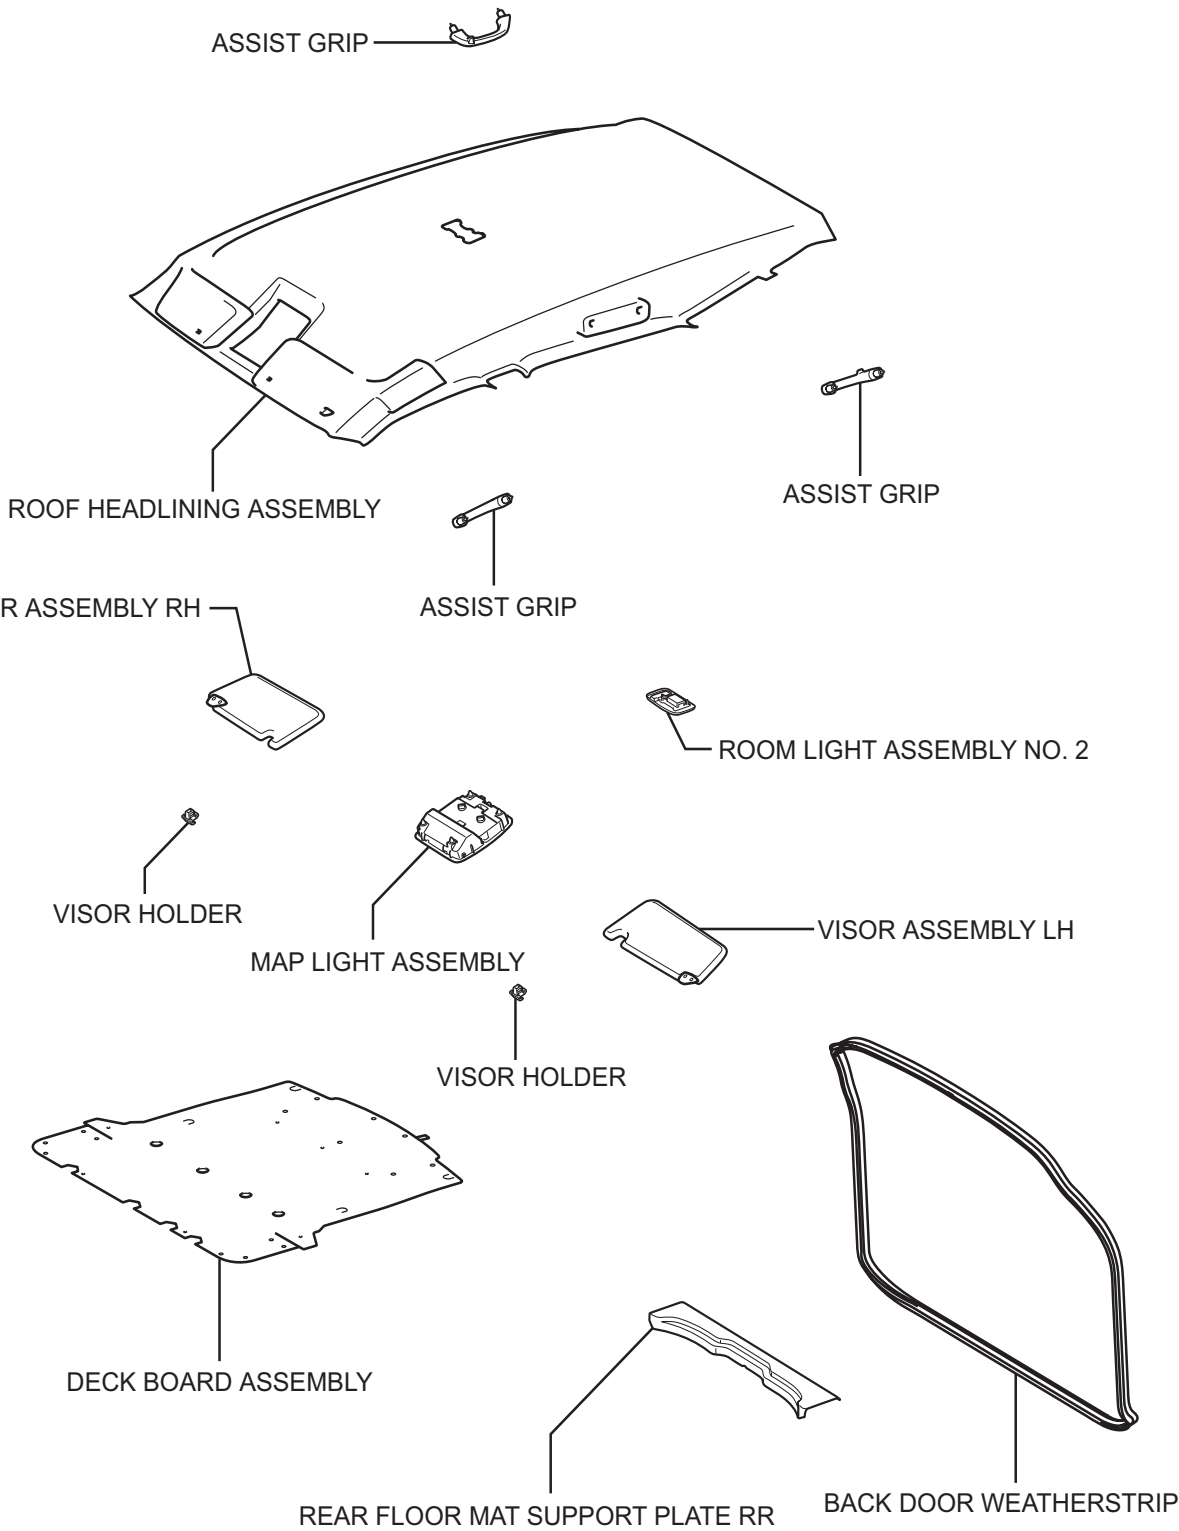

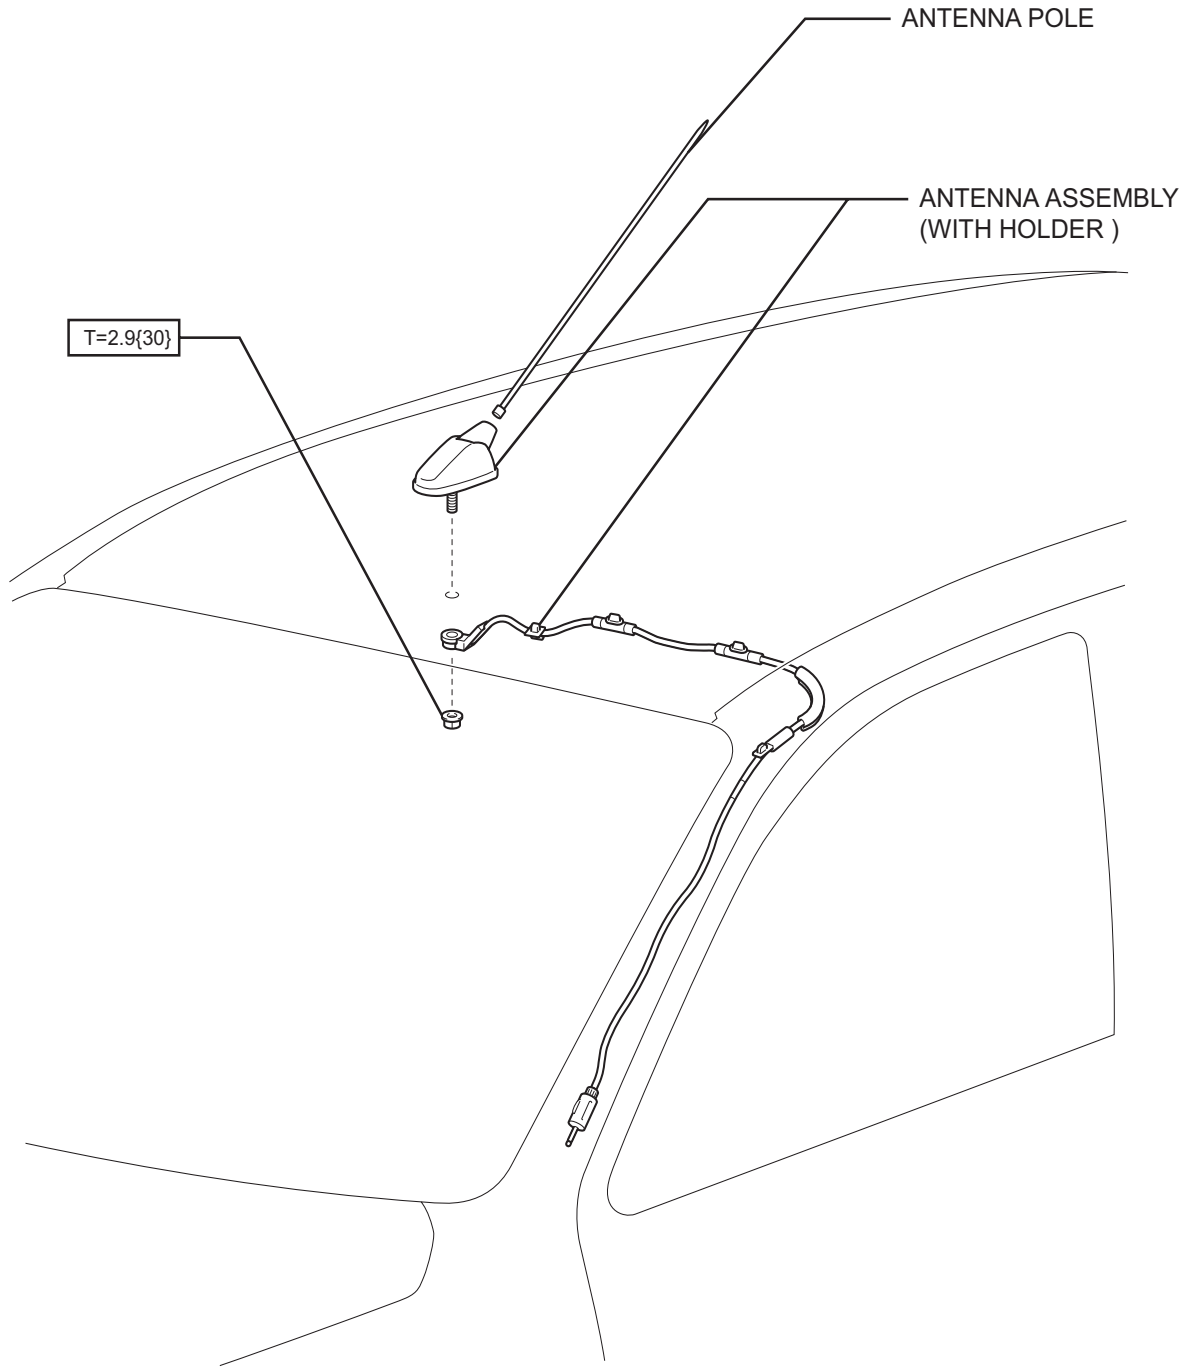


AV





REMOVAL

1. HANDLING AND OPERATING PRECAUTIONS (See Page IR-4)
2. REMOVE FRONT DOOR SCUFF PLATE RH (See Page IR-4)
3. REMOVE FRONT DOOR SCUFF PLATE LH
4. REMOVE DECK BOARD ASSEMBLY (See Page IR-4)
5. REMOVE DECK FLOOR BOX RH (See Page IR-4)
6. REMOVE DECK FLOOR BOX LH
7. REMOVE REAR DOOR SCUFF PLATE RH (See Page IR-4)
8. REMOVE REAR DOOR SCUFF PLATE LH
9. REMOVE BACK DOOR WEATHERSTRIP
10. REMOVE REAR FLOOR MAT SUPPORT PLATE RR (See Page IR-5)
11. REMOVE CENTER PILLAR GARNISH LWR RH
12. REMOVE CENTER PILLAR GARNISH LWR LH
13. REMOVE DECK TRIM SIDE PANEL ASSEMBLY RH (See Page IR-5)
14. REMOVE DECK TRIM SIDE PANEL ASSEMBLY LH (See Page IR-5)
15. REMOVE FRONT DOOR OPENING TRIM WEATHERSTRIP RH
16. REMOVE FRONT DOOR OPENING TRIM WEATHERSTRIP LH
17. REMOVE REAR DOOR WEATHERSTRIP
18. REMOVE REAR DOOR OPENING TRIM WEATHERSTRIP LH
19. REMOVE FRONT PILLAR GARNISH RH (WITHOUT CURTAIN SHIELD AIRBAG) (See Page IR-5)
20. REMOVE FRONT PILLAR GARNISH LH (WITHOUT CURTAIN SHIELD AIRBAG)
21. REMOVE FRONT PILLAR GARNISH RH (WITH CURTAIN SHIELD AIRBAG) (See Page IR-5)
22. REMOVE FRONT PILLAR GARNISH LH (WITH CURTAIN SHIELD AIRBAG)
23. REMOVE SHOULDER BELT ANCHOR COVER (See Page SB-9)
24. SEPARATE FRONT SEAT OUTER BELT ASSEMBLY RH (See page SB-9)
25. SEPARATE FRONT SEAT OUTER BELT ASSEMBLY LH
26. REMOVE CENTER PILLAR GARNISH UPR RH (See Page IR-6)
27. REMOVE CENTER PILLAR GARNISH UPR LH
28. REMOVE ROOF SIDE INNER GARNISH RH (WITHOUT CURTAIN SHIELD AIRBAG) (See Page IR-6)
29. REMOVE ROOF SIDE INNER GARNISH LH (WITHOUT CURTAIN SHIELD AIRBAG)

30. REMOVE ROOF SIDE INNER GARNISH RH (WITH CURTAIN SHIELD AIRBAG) (See Page IR-6)
31. REMOVE ROOF SIDE INNER GARNISH LH (WITH CURTAIN SHIELD AIRBAG)
32. REMOVE MAP LAMP ASSEMBLY (See Page IR-6)
33. REMOVE ROOM LIGHT ASSEMBLY NO. 2 (See Page IR-7)
34. REMOVE ASSIST GRIP (See Page IR-7)
35. REMOVE VISOR ASSEMBLY RH (See Page IR-7)
36. REMOVE VISOR ASSEMBLY LH
37. REMOVE VISOR HOLDER (See Page IR-8)
38. REMOVE SEAT BELT RETRACTOR COVER (See Page SB-37)
39. REMOVE ROOF HEADLINING ASSEMBLY (See Page IR-8)
40. REMOVE ANTENNA ASSEMBLY (WITH HOLDER)
 - (a) Remove the nut and disconnect the antenna cable.

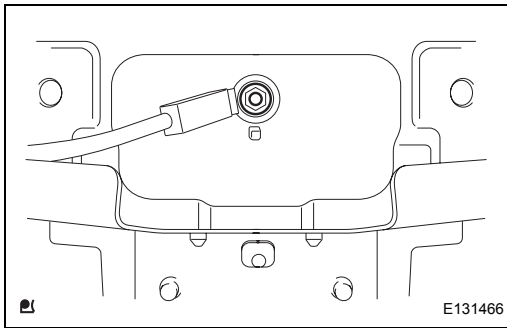

(b) Detach the 4 clamps and remove the antenna cable.

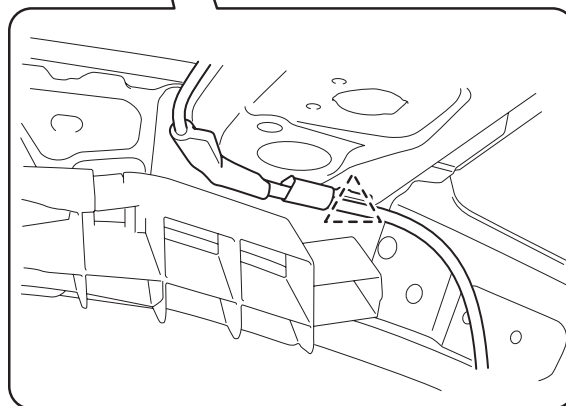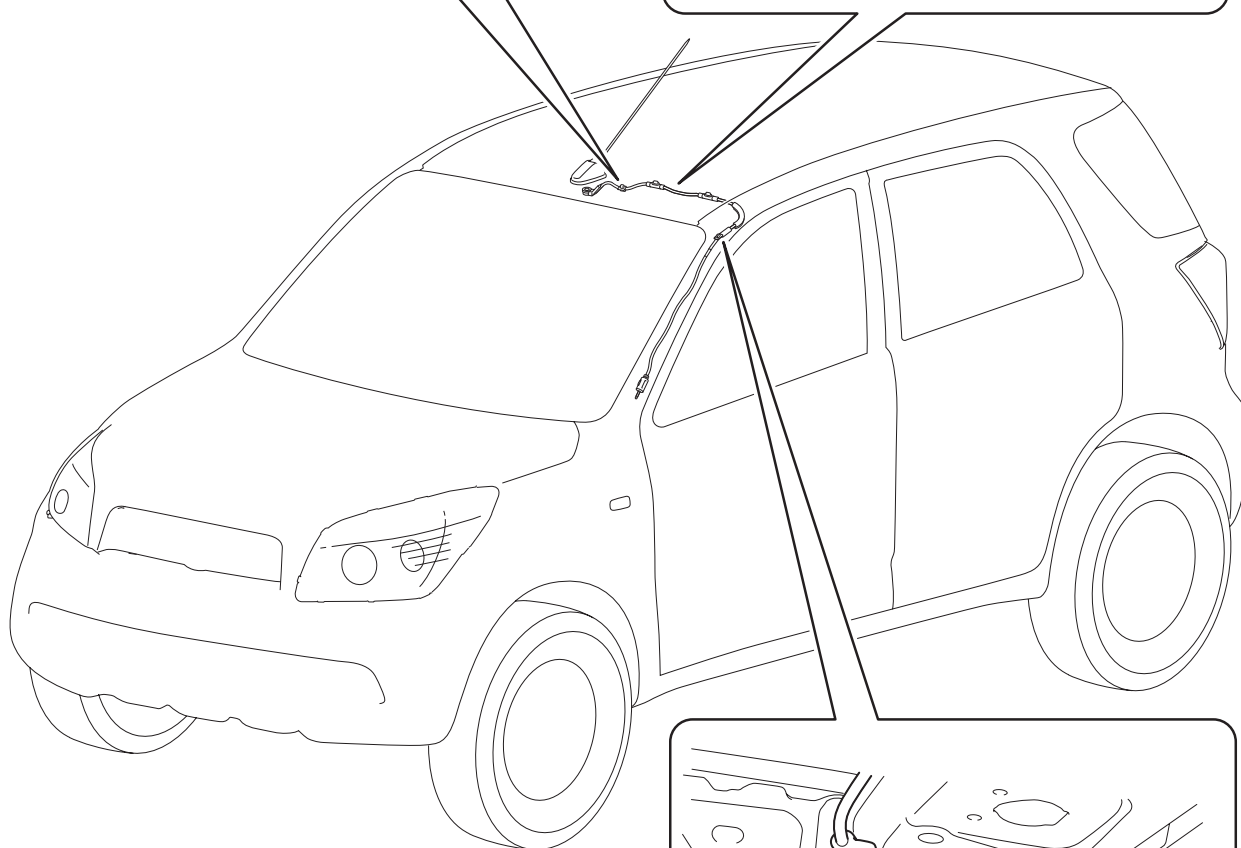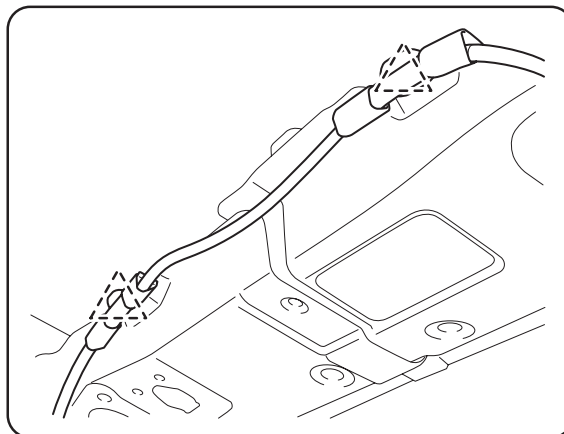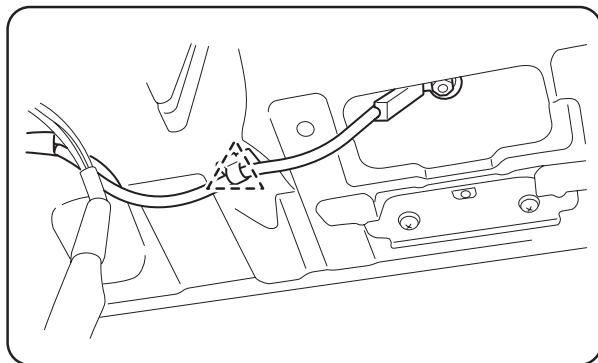





△ : Clamp

E131467J01

(c) Remove the antenna holder.


INSTALLATION

1. **INSTALL ANTENNA ASSEMBLY (WITH HOLDER)**
 - (a) Install the antenna holder.
 - (b) Connect the 4 clamps and install the antenna cable.

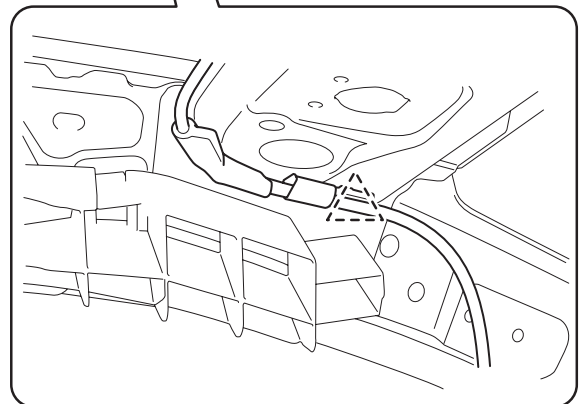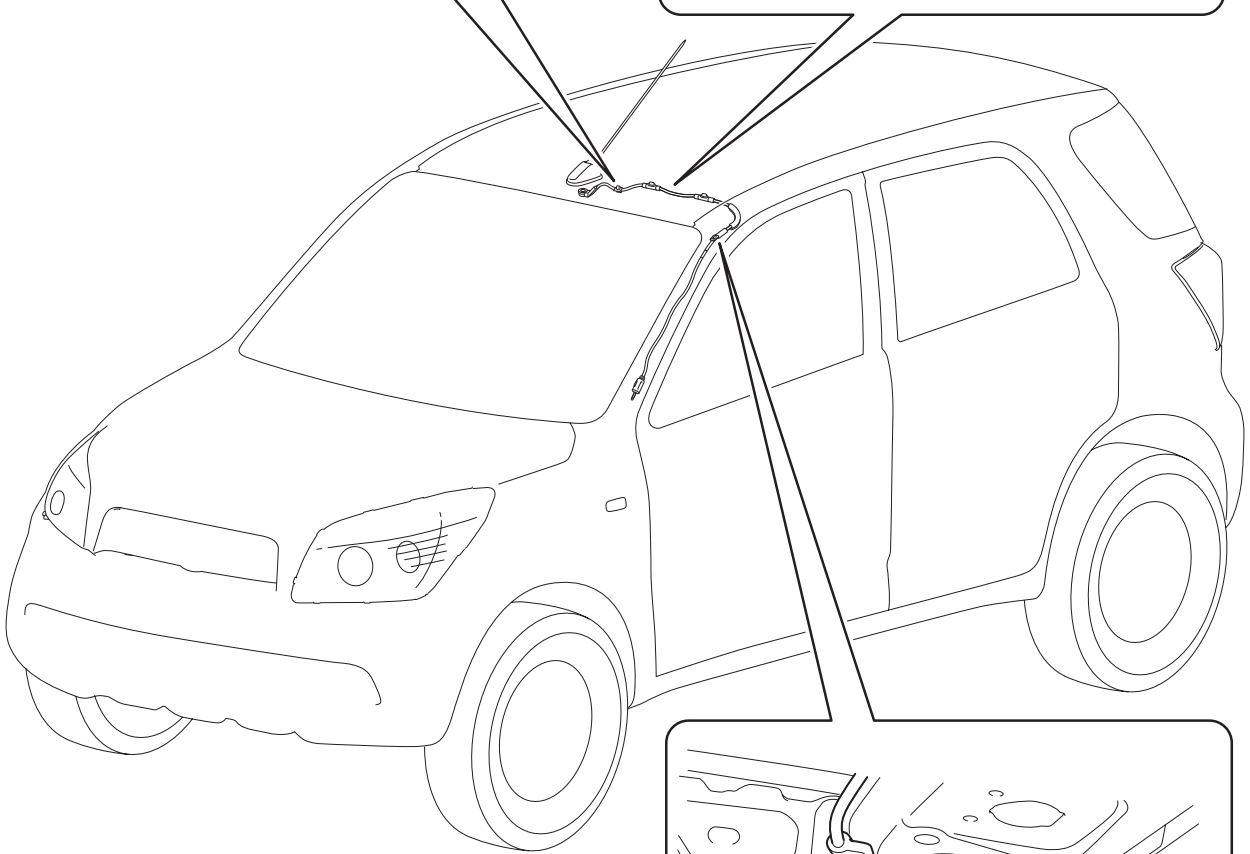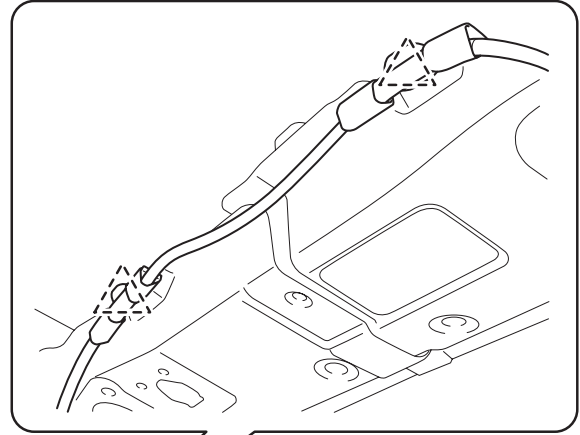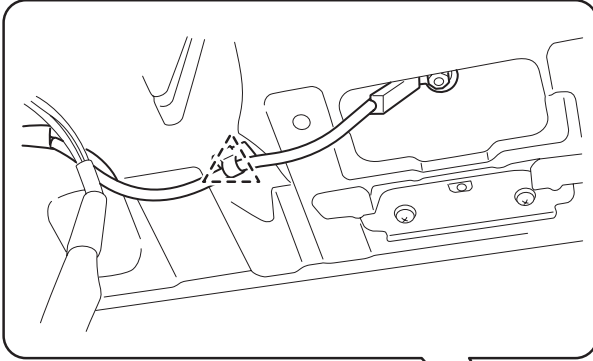

△ : Clamp

AV

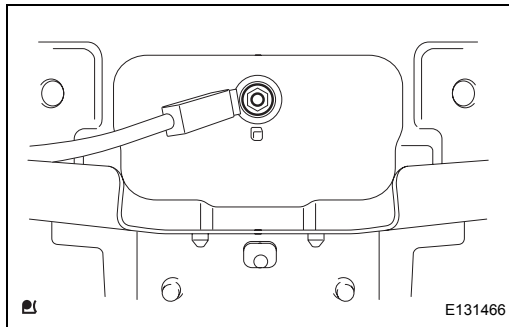

(c) Install the antenna cable to the antenna holder with the nut.

Torque: 2.9 N*m (30 kgf*cm)

2. INSTALL ROOF HEADLINING ASSEMBLY
3. INSTALL VISOR HOLDER (See Page IR-10)
4. INSTALL VISOR ASSEMBLY RH (See Page IR-10)
5. INSTALL VISOR ASSEMBLY LH
6. INSTALL ASSIST GRIP (See Page IR-10)
7. INSTALL ROOM LIGHT ASSEMBLY NO. 2 (See Page IR-10)
8. INSTALL MAP LIGHT ASSEMBLY (See Page IR-10)
9. INSTALL FRONT PILLAR GARNISH RH (WITHOUT CURTAIN SHIELD AIRBAG) (See Page IR-10)
10. INSTALL FRONT PILLAR GARNISH LH (WITHOUT CURTAIN SHIELD AIRBAG)
11. INSTALL FRONT PILLAR GARNISH RH (WITH CURTAIN SHIELD AIRBAG) (See Page IR-10)
12. INSTALL FRONT PILLAR GARNISH LH (WITH CURTAIN SHIELD AIRBAG)
13. INSTALL CENTER PILLAR GARNISH UPR RH (See Page IR-11)
14. INSTALL CENTER PILLAR GARNISH UPR LH
15. CONNECT FRONT SEAT OUTER BELT ASSEMBLY RH (See Page SB-13)
16. INSTALL SHOULDER BELT ANCHOR COVER
17. CONNECT FRONT SEAT OUTER BELT ASSEMBLY LH
18. INSTALL SHOULDER BELT ANCHOR COVER
19. INSTALL ROOF SIDE INNER GARNISH RH (WITHOUT CURTAIN SHIELD AIRBAGS) (See Page IR-11)
20. INSTALL ROOF SIDE INNER GARNISH LH (WITHOUT CURTAIN SHIELD AIRBAG)
21. INSTALL ROOF SIDE INNER GARNISH RH (WITH CURTAIN SHIELD AIRBAG)
22. INSTALL ROOF SIDE INNER GARNISH LH (WITH CURTAIN SHIELD AIRBAG)
23. INSTALL FRONT DOOR OPENING TRIM WEATHERSTRIP RH (See Page IR-11)
24. INSTALL FRONT DOOR OPENING TRIM WEATHERSTRIP LH
25. INSTALL REAR DOOR OPENING TRIM WEATHERSTRIP RH (See Page IR-11)
26. INSTALL REAR DOOR OPENING TRIM WEATHERSTRIP LH
27. INSTALL CENTER PILLAR GARNISH LWR RH
28. INSTALL CENTER PILLAR GARNISH LWR LH
29. INSTALL DECK TRIM SIDE PANEL ASSEMBLY RH (See Page IR-12)

30. INSTALL DECK TRIM SIDE PANEL ASSEMBLY LH (See Page IR-12)
31. INSTALL FRONT DOOR SCUFF PLATE RH (See Page IR-12)
32. INSTALL FRONT DOOR SCUFF PLATE LH
33. INSTALL REAR DOOR SCUFF PLATE RH (See Page IR-12)
34. INSTALL REAR DOOR SCUFF PLATE LH
35. INSTALL DECK FLOOR BOX RH (See Page IR-12)
36. INSTALL DECK FLOOR BOX LH
37. INSTALL REAR FLOOR MAT SUPPORT PLATE RR (See Page IR-13)
38. INSTALL BACK DOOR WEATHERSTRIP
39. INSTALL DECK BOARD ASSEMBLY (See Page IR-13)

AV