


ANTENNA CORD NO. 2

COMPONENTS


AV

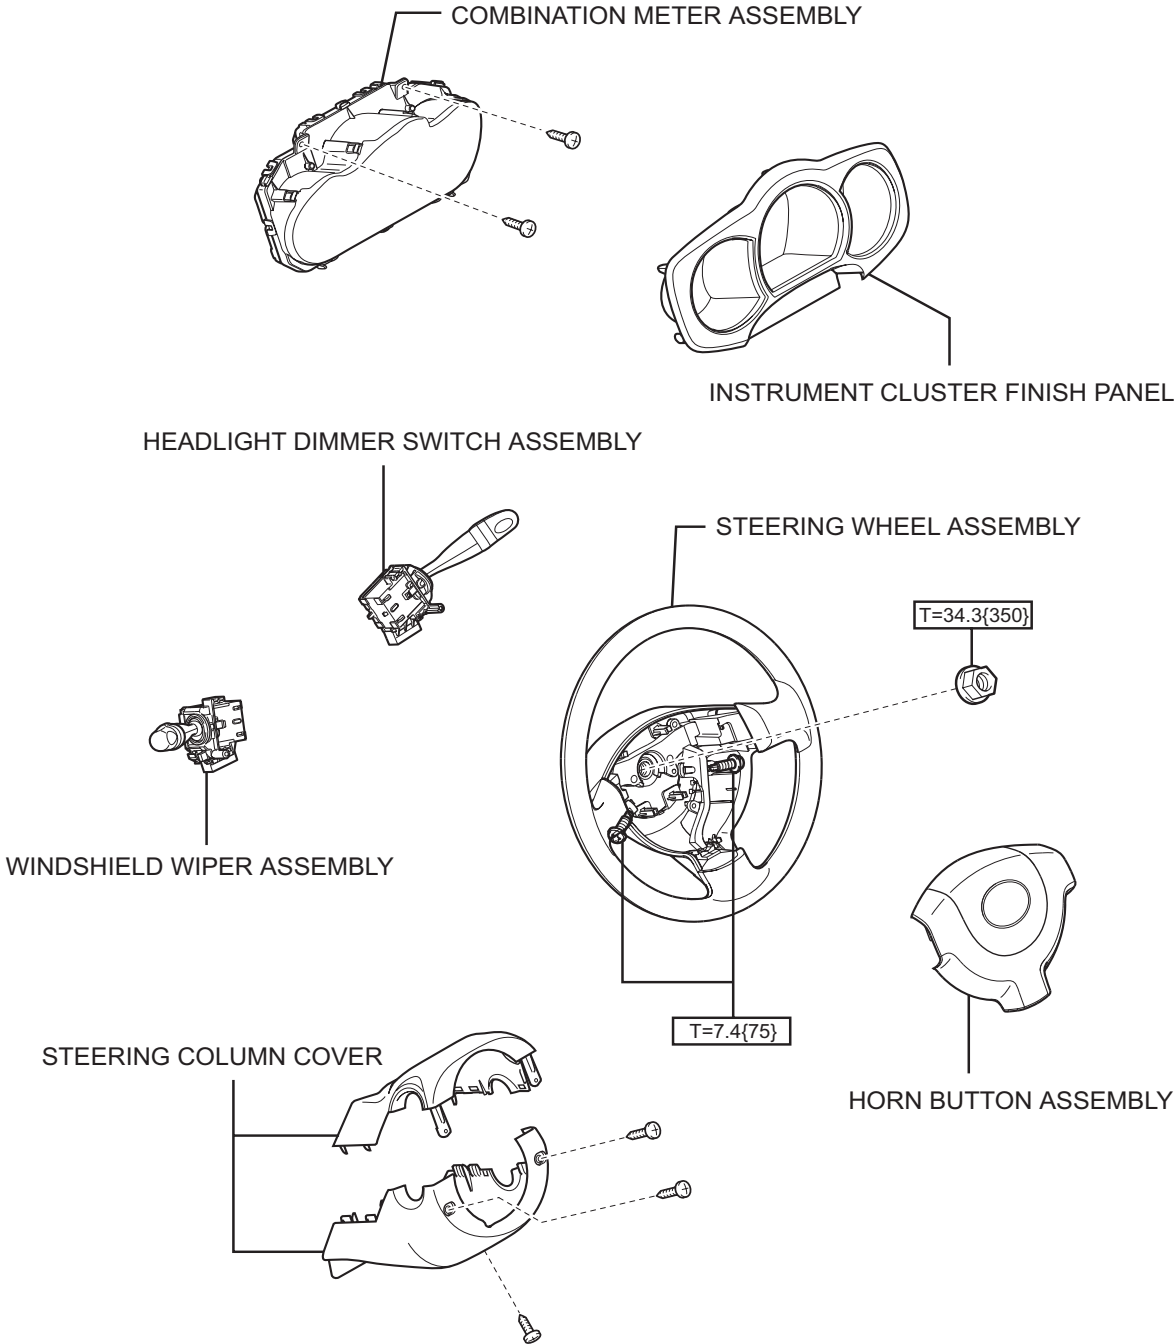


..... TIGHTENING TORQUE [N*m{kgf*cm}]



STEREO COMPONENT
TUNER ASSEMBLY

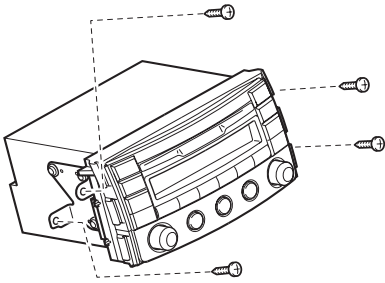

RADIO TUNER OPENING COVER

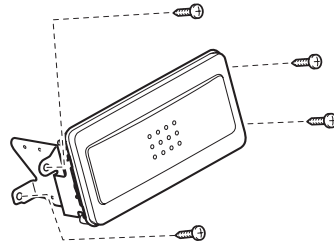

AIR INLET DAMPER
CONTROL CABLE




DEFROSTER DAMPER
CONTROL
CABLE



AIR MIXTURE DAMPER
CONTROL CABLE





INSTRUMENT CLUSTER FINISH PANEL CTR

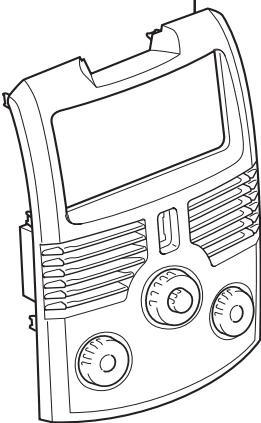


AV

AV

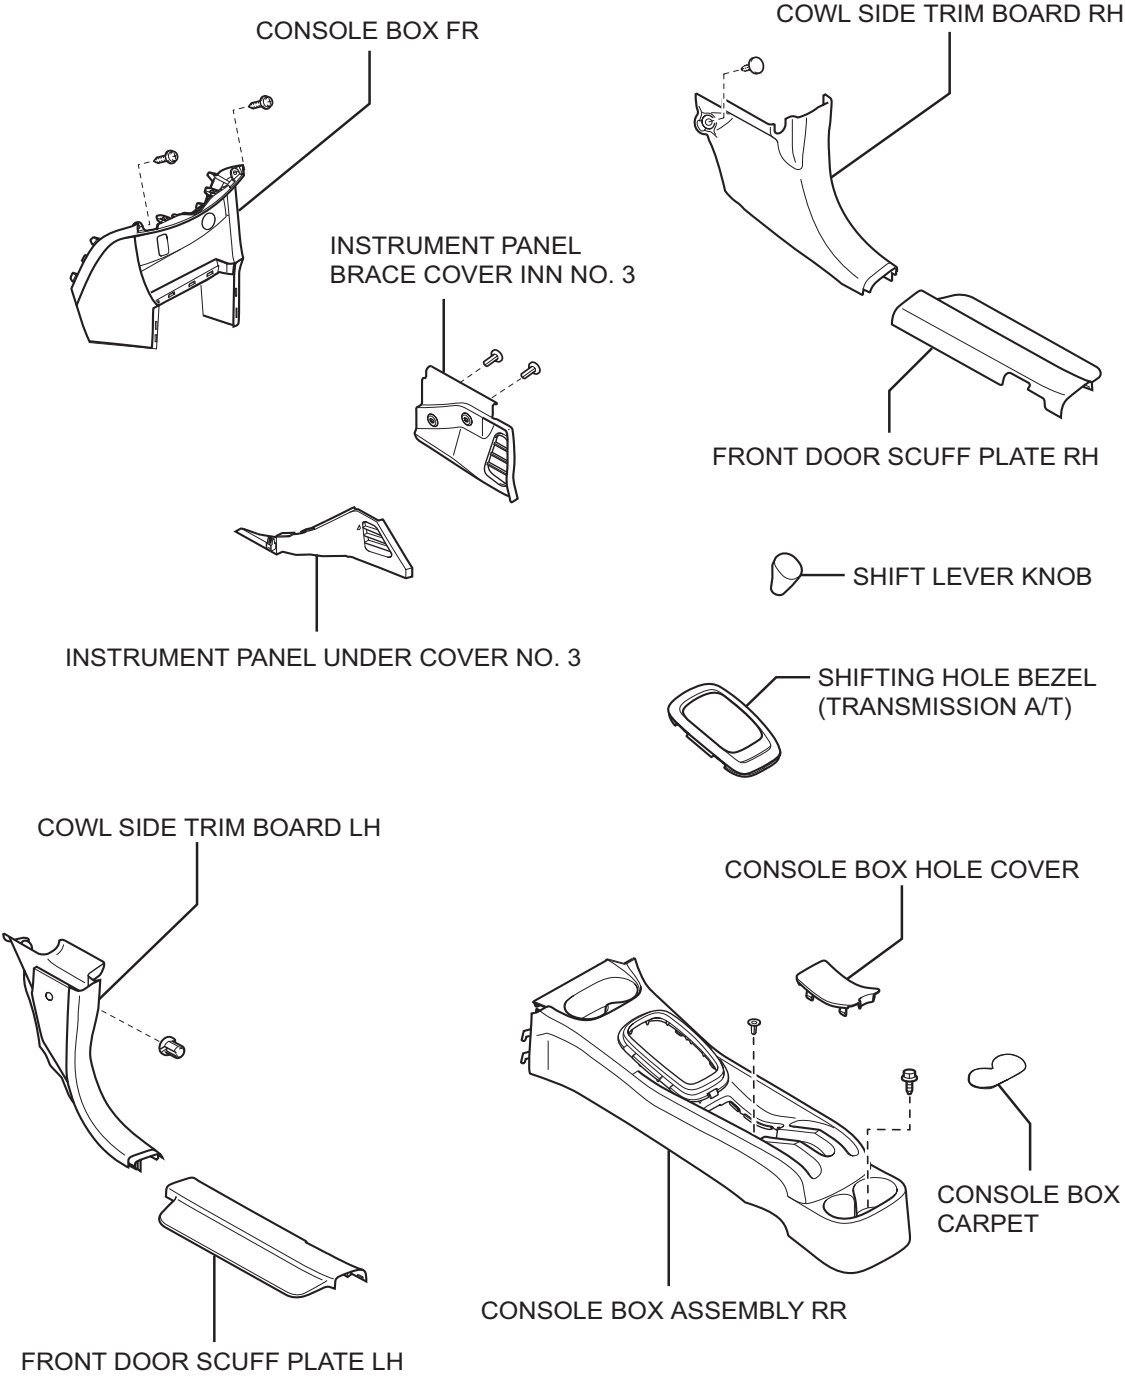


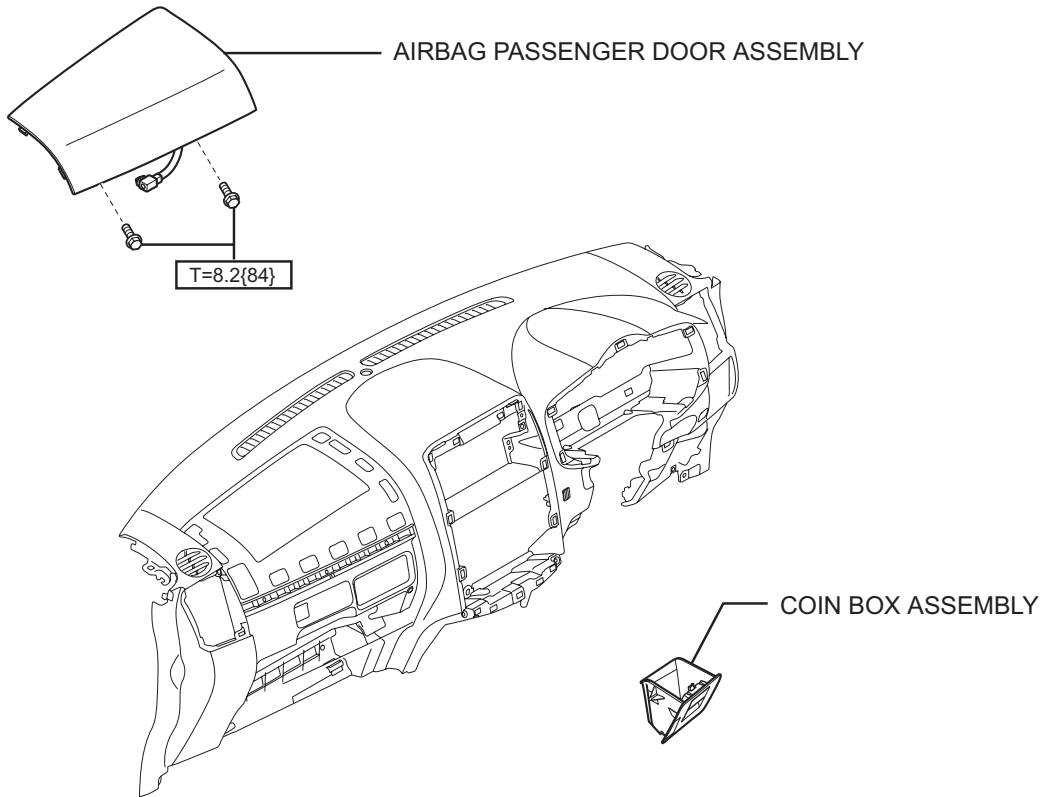

W/ AIRBAG CUTOFF SWITCH CYLINDER

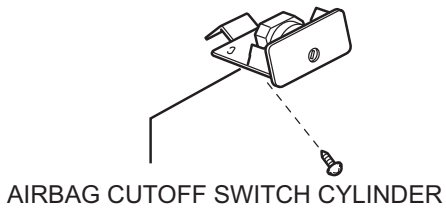

W/O AIRBAG CUTOFF SWITCH CYLINDER

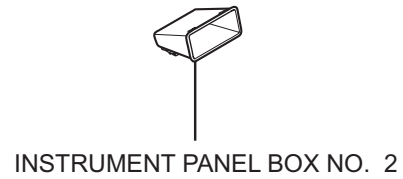

INSTRUMENT PANEL UNDER COVER NO. 1


GLOVE COMPARTMENT DOOR STOPPER

GLOVE COMPARTMENT DOOR ASSEMBLY

INSTRUMENT PANEL UNDER COVER NO. 2


INSTRUMENT PANEL FINISH PANEL LWR

..... TIGHTENING TORQUE [N*m{kgf*cm}]

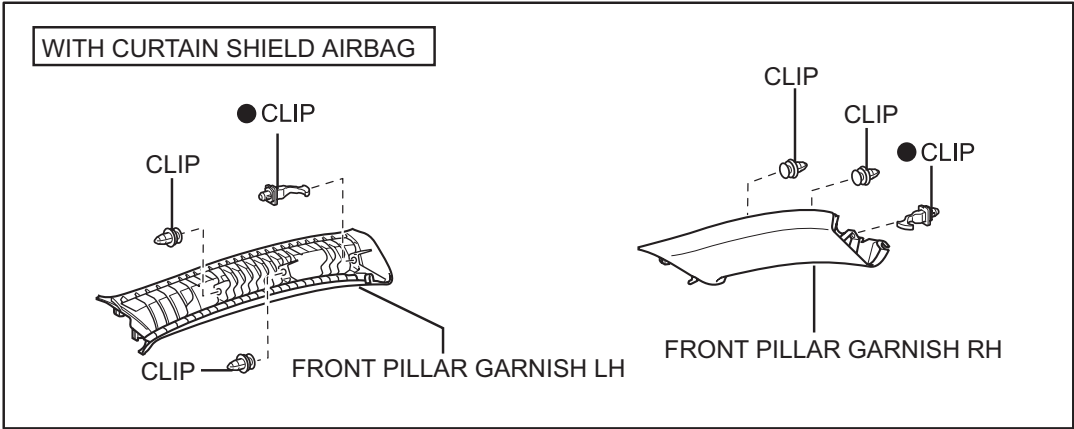

AV


FRONT PILLAR GARNISH LH

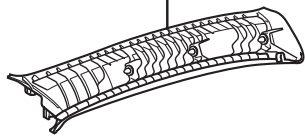


FRONT PILLAR GARNISH RH



FRONT DOOR OPENING TRIM WEATHERSTRIP RH

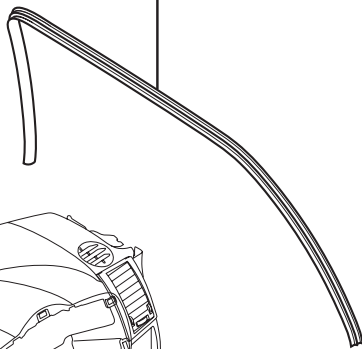


FRONT DOOR OPENING TRIM WEATHERSTRIP LH

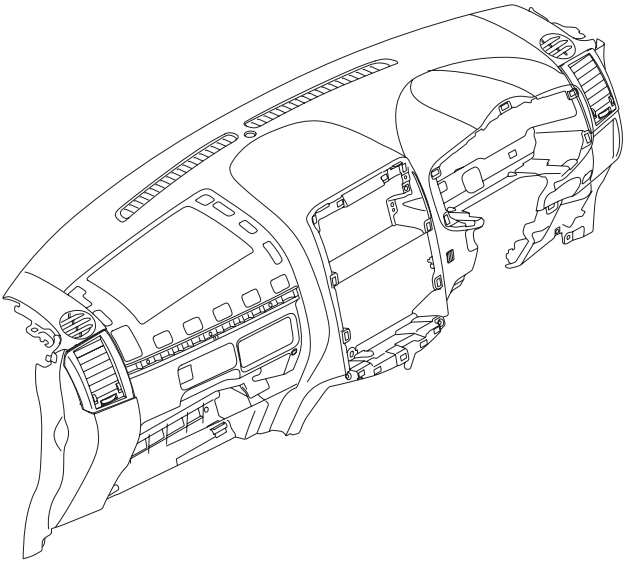


●.....NON-REUSEABLE PART

INSTRUMENT PANEL

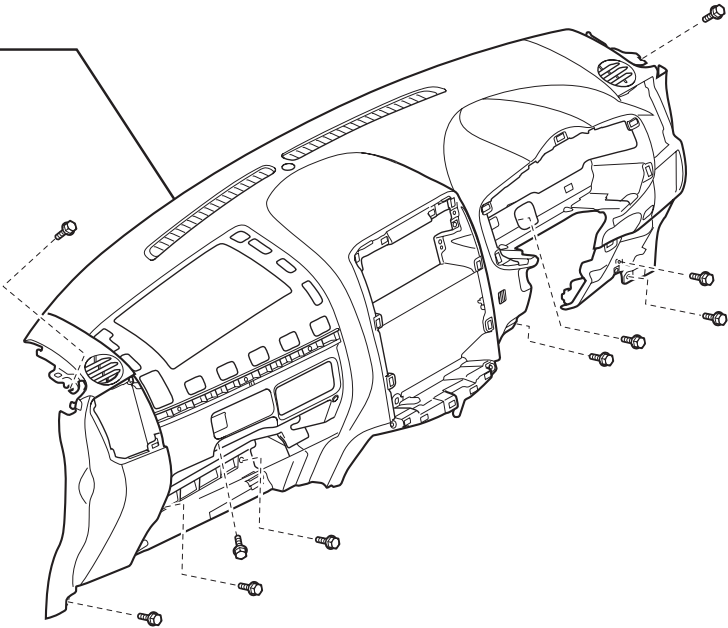

ANTENNA CORD NO. 2

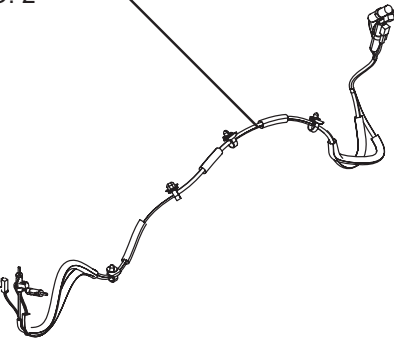







AV

REMOVAL

TABLE OF BOLTS, SCREWS AND NUTS

HINT:

      - All necessary bolts, screws and nuts relevant to installing and removing the instrument panel are shown in the text or illustration below with their part numbers.
- In the illustration, D indicates diameter (mm) and L indicates length (mm).

<A>		D=6 L18			D=6 L14	<C>		D=5 L=14
	91551-80618			90109-06292			93568-55014	
<D>		D=5 L=14	<E>		D=5 L=14	<F>		D=6 L14
	93567-55014			93567-15014			91551-80614	


B139418J01

1. HANDLING AND OPERATING PRECAUTIONS (See Page IP-8)
2. CHECK FRONT TIRES FACING STRAIGHT AHEAD
3. DISCONNECT BATTERY NEGATIVE TERMINAL
4. REMOVE HORN BUTTON ASSEMBLY (See Page RS-170)
5. REMOVE STEERING WHEEL ASSEMBLY (See Page SR-4)
6. REMOVE INSTRUMENT CLUSTER FINISH PANEL (See Page ME-30)
7. REMOVE STEERING COLUMN COVER (See Page IP-8)
8. REMOVE HEADLIGHT DIMMER SWITCH ASSEMBLY (See Page LI-50)
9. REMOVE WINDSHIELD WIPER SWITCH ASSEMBLY (See Page WW-22)
10. REMOVE COMBINATION METER ASSEMBLY (See Page ME-31)
11. DISCONNECT INSTRUMENT CLUSTER FINISH PANEL CTR (See Page IP-9)
12. DISCONNECT AIR MIX DAMPER CONTROL CABLE (See Page IP-9)

13. DISCONNECT DEFROSTER DAMPER CONTROL CABLE (See Page IP-9)
14. DISCONNECT AIR INLET CONTROL CABLE (See Page IP-9)
15. REMOVE RADIO TUNER OPENING COVER (WITHOUT RADIO RECEIVER)
16. REMOVE STEREO COMPONENT TUNER ASSEMBLY
17. REMOVE SHIFT LEVER KNOB (MANUAL TRANSMISSION)
18. REMOVE SHIFTING HOLE BEZEL (AUTOMATIC TRANSMISSION) (See Page IP-9)
19. REMOVE CONSOLE BOX ASSEMBLY RR (See Page IP-9)
20. REMOVE CONSOLE BOX FR (See Page IP-10)
21. REMOVE FRONT DOOR SCUFF PLATE RH (See Page IP-10)
22. REMOVE FRONT DOOR SCUFF PLATE LH
23. REMOVE COWL SIDE TRIM BOARD RH (See Page IP-10)
24. REMOVE COWL SIDE TRIM BOARD LH
25. REMOVE INSTRUMENT PANEL BRACE COVER INN NO. 3 (See Page IP-10)
26. REMOVE INSTRUMENT PANEL UNDERCOVER NO. 3 (See Page IP-11)
27. REMOVE COIN BOX ASSEMBLY (See Page IP-11)
28. REMOVE INSTRUMENT PANEL FINISH PANEL LWR (See Page IP-11)
29. REMOVE INSTRUMENT PANEL UNDER COVER NO. 1 (See Page IP-11)
30. REMOVE GLOVE COMPARTMENT DOOR ASSEMBLY (See Page IP-11)
31. REMOVE GLOVE COMPARTMENT DOOR STOPPER (See Page IP-12)
32. REMOVE INSTRUMENT PANEL BOX NO. 2 (See Page IP-12)
33. REMOVE INSTRUMENT PANEL UNDER COVER NO. 2 (See Page IP-12)
34. REMOVE FRONT DOOR OPENING TRIM WEATHERSTRIP RH (See Page IP-12)
35. REMOVE FRONT DOOR OPENING TRIM WEATHERSTRIP LH
36. REMOVE FRONT PILLAR GARNISH RH (WITHOUT CURTAIN SHIELD AIRBAG) (See Page IP-12)
37. REMOVE FRONT PILLAR GARNISH LH (WITHOUT CURTAIN SHIELD AIRBAG)
38. REMOVE FRONT PILLAR GARNISH RH (WITH CURTAIN SHIELD AIRBAG) (See Page IP-13)
39. REMOVE FRONT PILLAR GARNISH LH (WITH CURTAIN SHIELD AIRBAG)

40. REMOVE INSTRUMENT PANEL (See Page IP-14)**41. REMOVE ANTENNA CORD NO. 2**

- (a) Disconnect connectors and clamps, and remove antenna cord No. 2

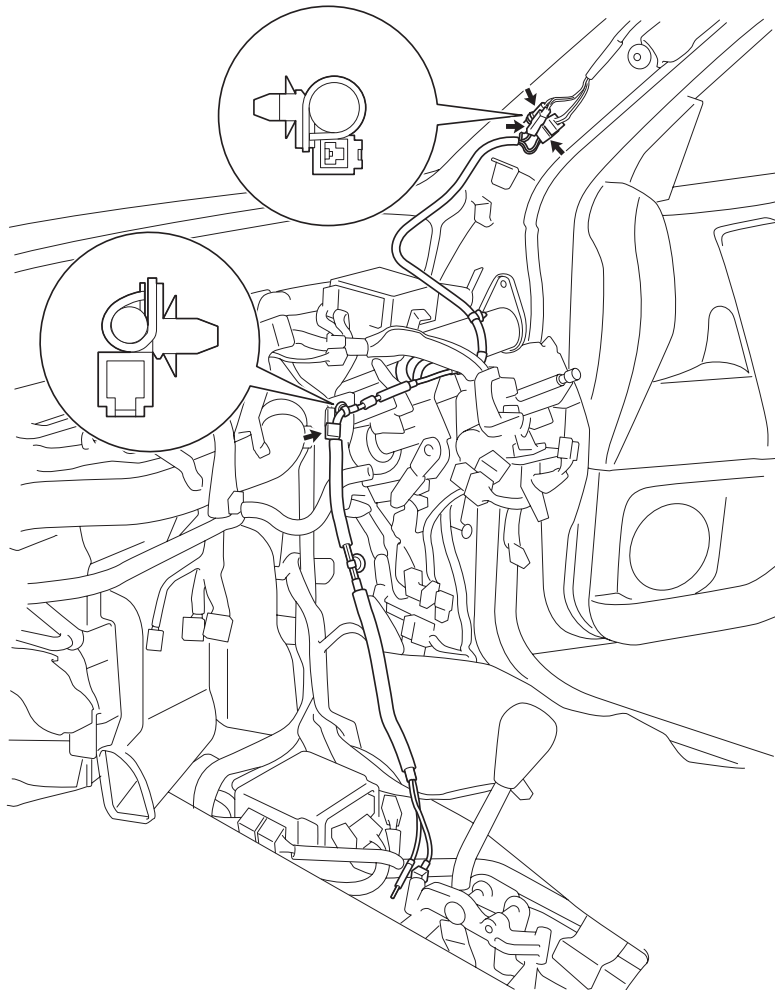


E130361

INSTALLATION

1. INSTALL ANTENNA CORD NO. 2

- (a) Connect the connectors and clamps and install antenna cord No. 2.

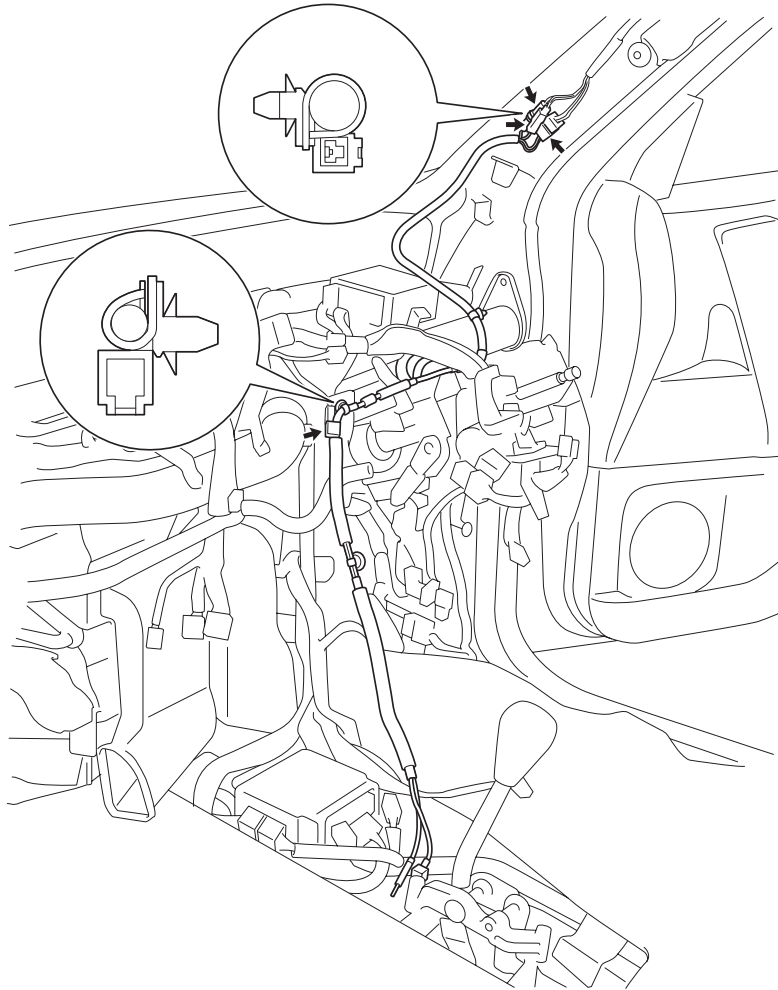

E130361J01

2. INSTALL INSTRUMENT PANEL (See Page IP-16)
3. INSTALL INSTRUMENT PANEL PASSENGER AIRBAG ASSEMBLY (See Page IP-16)
4. INSTALL FRONT PILLAR GARNISH RH (WITHOUT CURTAIN SHIELD AIRBAG) (See Page IP-16)
5. INSTALL FRONT PILLAR GARNISH LH (WITHOUT CURTAIN SHIELD AIRBAG)
6. INSTALL FRONT PILLAR GARNISH RH (WITH CURTAIN SHIELD AIRBAG) (See Page IP-16)
7. INSTALL FRONT PILLAR GARNISH LH (WITH CURTAIN SHIELD AIRBAG)
8. INSTALL FRONT DOOR OPENING TRIM WEATHERSTRIP RH (See Page IP-17)



9. INSTALL FRONT DOOR OPENING TRIM WEATHERSTRIP LH
10. INSTALL INSTRUMENT PANEL UNDER COVER NO. 2 (See Page IP-17)
11. INSTALL INSTRUMENT PANEL BOX NO. 2
12. INSTALL GLOVE COMPARTMENT DOOR STOPPER (See Page IP-17)
13. INSTALL GLOVE COMPARTMENT DOOR ASSEMBLY (See Page IP-18)
14. INSTALL INSTRUMENT PANEL UNDER COVER NO. 1 (See Page IP-18)
15. INSTALL INSTRUMENT PANEL FINISH PANEL LWR (See Page IP-18)
16. INSTALL COIN BOX ASSEMBLY (See Page IP-19)
17. INSTALL INSTRUMENT PANEL UNDER COVER NO. 3 (See Page IP-19)
18. INSTALL INSTRUMENT PANEL BRACE COVER NO. 3 (See Page IP-19)
19. INSTALL COWL SIDE TRIM BOARD RH (See Page IP-19)
20. INSTALL COWL SIDE TRIM BOARD LH
21. INSTALL FRONT DOOR SCUFF PLATE RH (See Page IP-19)
22. INSTALL FRONT DOOR SCUFF PLATE LH
23. INSTALL CONSOLE BOX FR (See Page IP-19)
24. INSTALL CONSOLE BOX ASSEMBLY RR (MANUAL TRANSMISSION) (See Page IP-20)
25. INSTALL SHIFTING HOLE BEZEL (AUTOMATIC TRANSMISSION) (See Page IP-20)
26. INSTALL SHIFT LEVER KNOB (MANUAL TRANSMISSION)
27. INSTALL RADIO TUNER OPENING COVER (WITHOUT RADIO RECEIVER)
28. INSTALL STEREO COMPONENT TUNER ASSEMBLY
29. INSTALL AIR INLET DAMPER CONTROL CABLE (AIR CONDITIONING MANUAL) (See Page IP-20)
30. INSTALL DEFROSTER DAMPER CONTROL CABLE (AIR CONDITIONING MANUAL) (See Page IP-20)
31. INSTALL AIR MIX DAMPER CONTROL CABLE (AIR CONDITIONING MANUAL) (See Page IP-21)
32. INSTALL INSTRUMENT CLUSTER FINISH PANEL CTR (See Page IP-21)
33. INSTALL COMBINATION METER ASSEMBLY (See Page ME-31)
34. INSTALL WINDSHIELD WIPER SWITCH ASSEMBLY (See Page WW-23)
35. INSTALL HEADLIGHT DIMMER SWITCH ASSEMBLY (See Page LI-50)

36. INSTALL STEERING COLUMN COVER (See Page IP-21)
37. INSTALL INSTRUMENT CLUSTER FINISH PANEL (See Page ME-32)
38. INSTALL STEERING WHEEL ASSEMBLY (See Page SR-8)
39. INSTALL HORN BUTTON ASSEMBLY (See Page RS-170)
40. CONNECT BATTERY NEGATIVE TERMINAL
41. CHECK AIRBAG WARNING LIGHT (See Page IP-21)

AV