


OUTER REAR VIEW MIRROR RH


COMPONENTS

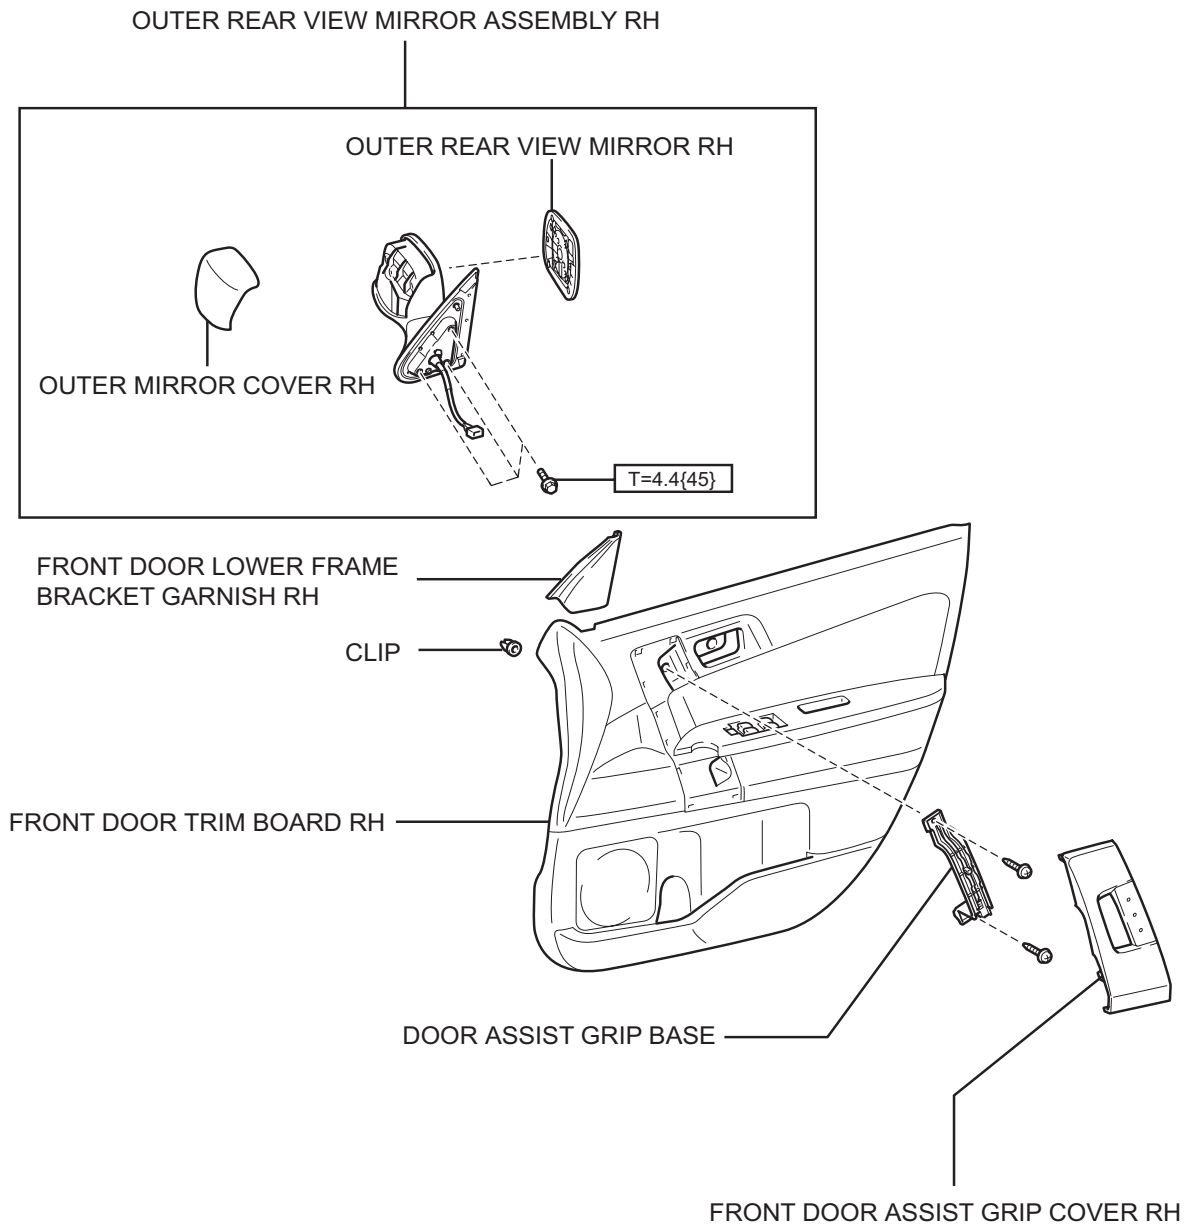


... TIGHTENING TORQUE [N*m{kgf·cm}]



REMOVAL

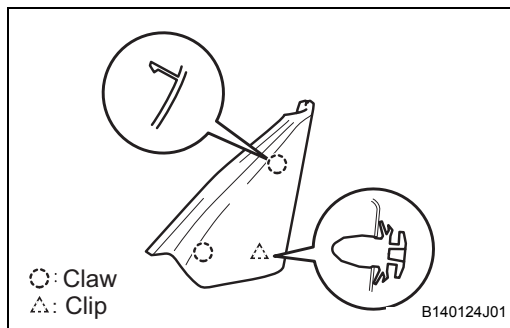

1. **REMOVE FRONT DOOR LOWER FRAME BRACKET GARNISH RH**
 - (a) Disengage the 2 claws and the clip, and remove the front door lower frame bracket garnish RH.
2. **REMOVE FRONT DOOR ASSIST GRIP COVER RH (See page ED-11)**
3. **REMOVE DOOR ASSIST GRIP BASE (See page ED-11)**
4. **REMOVE FRONT DOOR TRIM BOARD RH (See page ED-11)**

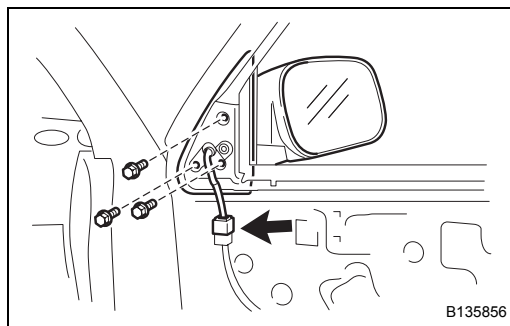

5. **REMOVE OUTER REAR VIEW MIRROR ASSEMBLY RH**
 - (a) Disconnect the connector.
 - (b) Remove the 3 bolts and outer rear view mirror assembly RH.

DISASSEMBLY


1. **REMOVE OUTER REAR VIEW MIRROR RH**
 - (a) Protect the outer rear view mirror assembly RH with waste cloth or etc., as shown in the illustration.

- (b) Insert a screwdriver wrapped with protective tape into the two clip areas shown in the illustration and disengage the clips located at the lower part of the mirror.

NOTICE:


Before removal, warm the mirror using a hair dryer etc. because the clip and claws may break in cold temperatures.


- (c) Pull down the mirror and remove.
 - (d) Disconnect the connector and remove the outer rear view mirror RH. (Vehicles with mirror heater)

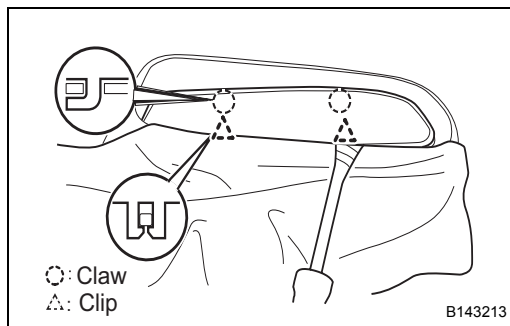

2. **REMOVE OUTER MIRROR COVER RH**


- (a) Remove the claws through the inside of the mirror body.

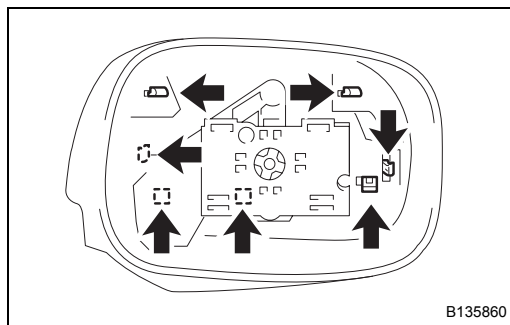

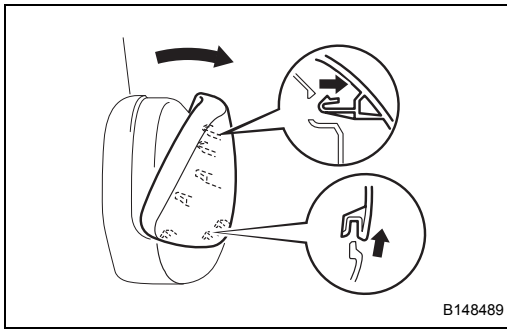

- (b) As shown in the illustration, pull the upper part of the mirror forward. Remove the lower claw and then remove the outer mirror cover RH.

REASSEMBLY

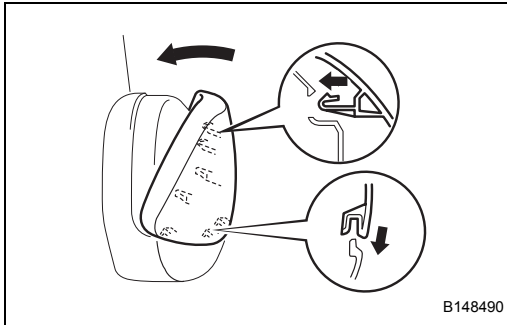

1. INSTALL OUTER MIRROR COVER RH


- Engage the claw of the lower part of the mirror cover.
- Engage the claw of the upper part of the mirror cover to install the outer mirror cover RH.
- After installing the outer mirror cover, check that there is bump between the cover and mirror body.

NOTICE:


A bump between the cover and the mirror body will cause a wind noise or similar sound.

2. INSTALL OUTER REAR VIEW MIRROR RH

- Connect the connector. (Vehicles with mirror heater)
- Engage the 2 claws of the mirror.
- Engage the 2 claws to install the mirror.

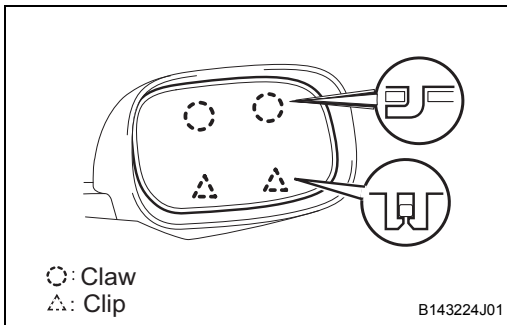

INSTALLATION

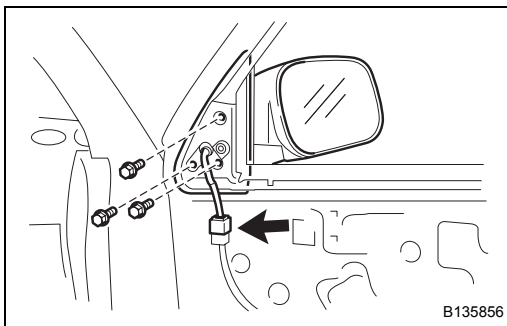

1. INSTALL OUTER REAR VIEW MIRROR ASSEMBLY RH

- Install the outer rear view mirror assembly RH with the 3 bolts.
Torque: 4.4 N*m (45 kgf*cm)
- Connect the connector.

2. INSTALL FRONT DOOR TRIM BOARD RH (See page ED-25)

3. INSTALL DOOR ASSIST GRIP BASE (See page ED-26)

4. INSTALL FRONT DOOR ASSIST GRIP COVER RH (See page ED-26)

5. INSTALL FRONT DOOR LOWER FRAME BRACKET GARNISH RH

- Engage the two claws and the clip, and install the front door lower frame bracket garnish RH.

