


INSTRUMENT PANEL

PRECAUTIONS

1. **PRECAUTIONS FOR VEHICLES WITH SRS AIRBAG AND SEAT BELT PRETENSIONER**
 - (a) Some operations in this section may affect the SRS airbags. Prior to performing the corresponding servicing operations, read the SRS airbag NOTICE. (See page RS-164.)
2. **NOTICE FOR REMOVAL AND INSTALLATION**
 - (a) When prying the clip and the claw to detach and disengage them with a screwdriver, be sure to apply protective tape to prevent damage to the parts.




COMPONENTS

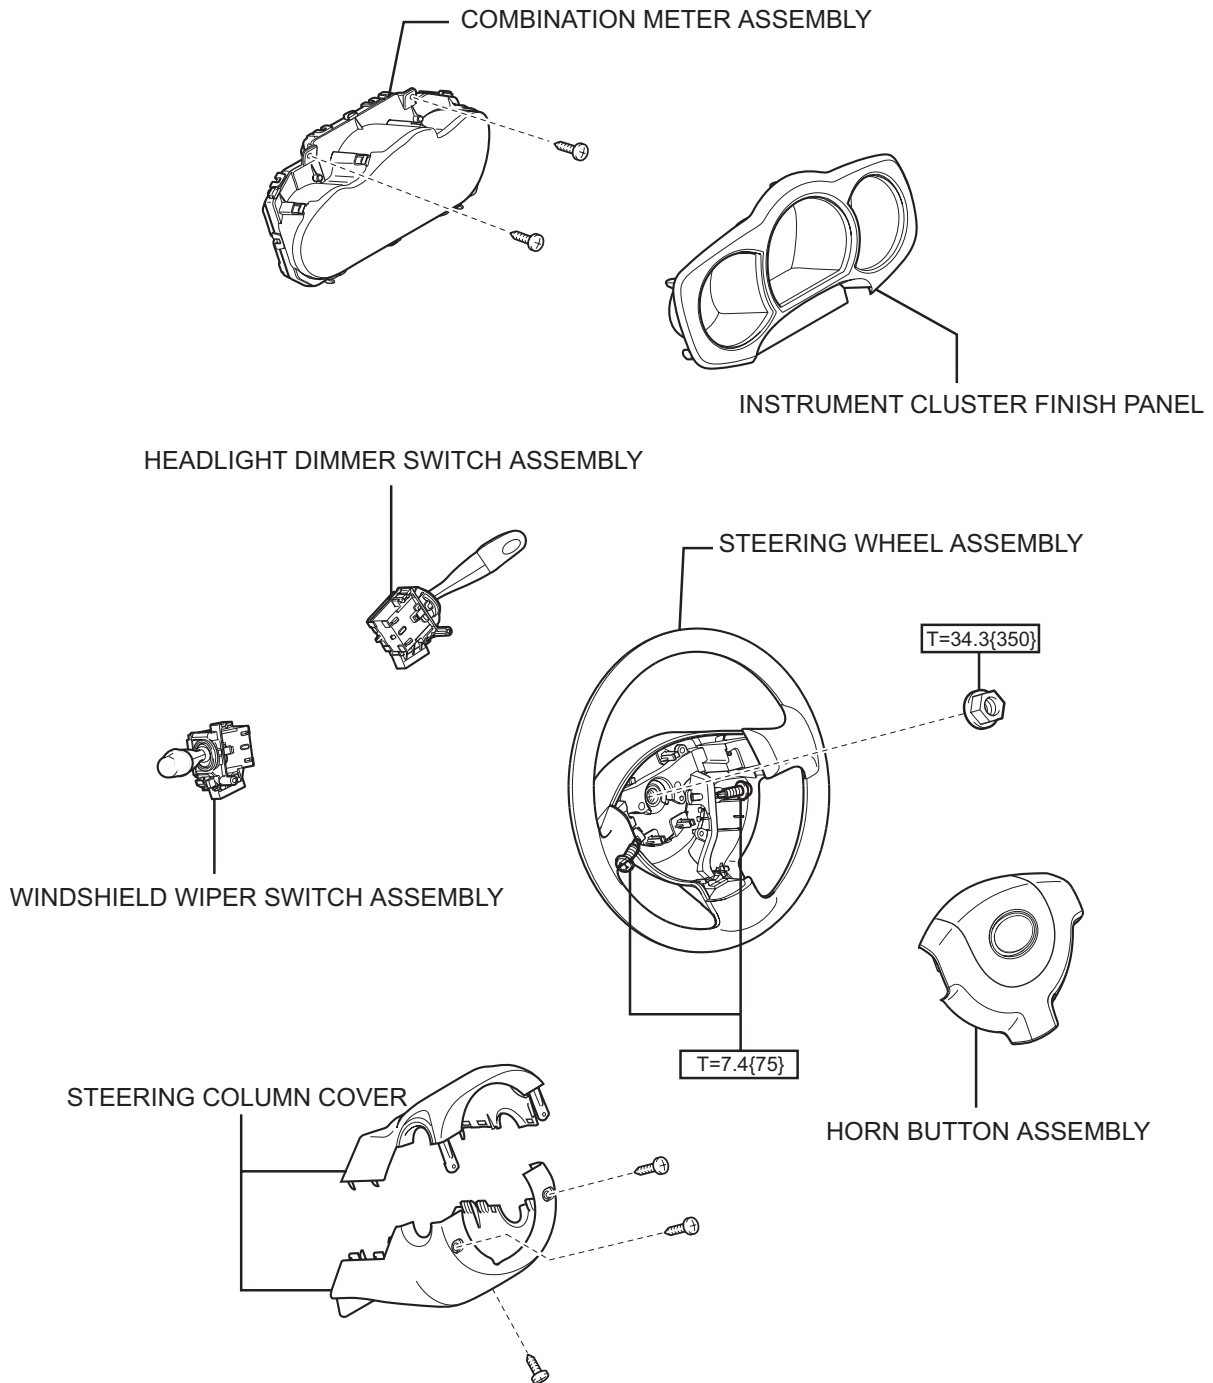


.....TIGHTENING TORQUE [N*m{kgf*cm}]

STEREO COMPONENT
TUNER ASSEMBLY

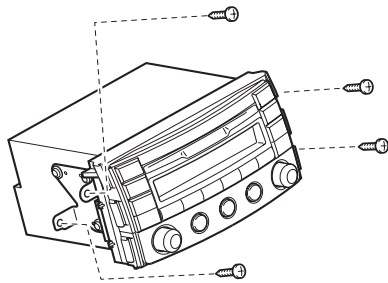

RADIO TUNER OPENING COVER

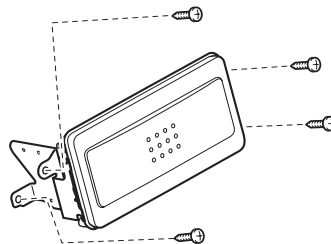



AIR MIXTURE DAMPER
CONTROL CABLE

INSTRUMENT CLUSTER FINISH PANEL CTR



AIR INLET DAMPER
CONTROL CABLE

DEFROSTER DAMPER
CONTROL
CABLE

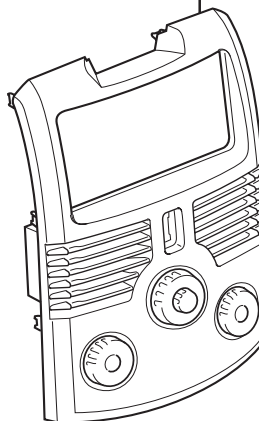


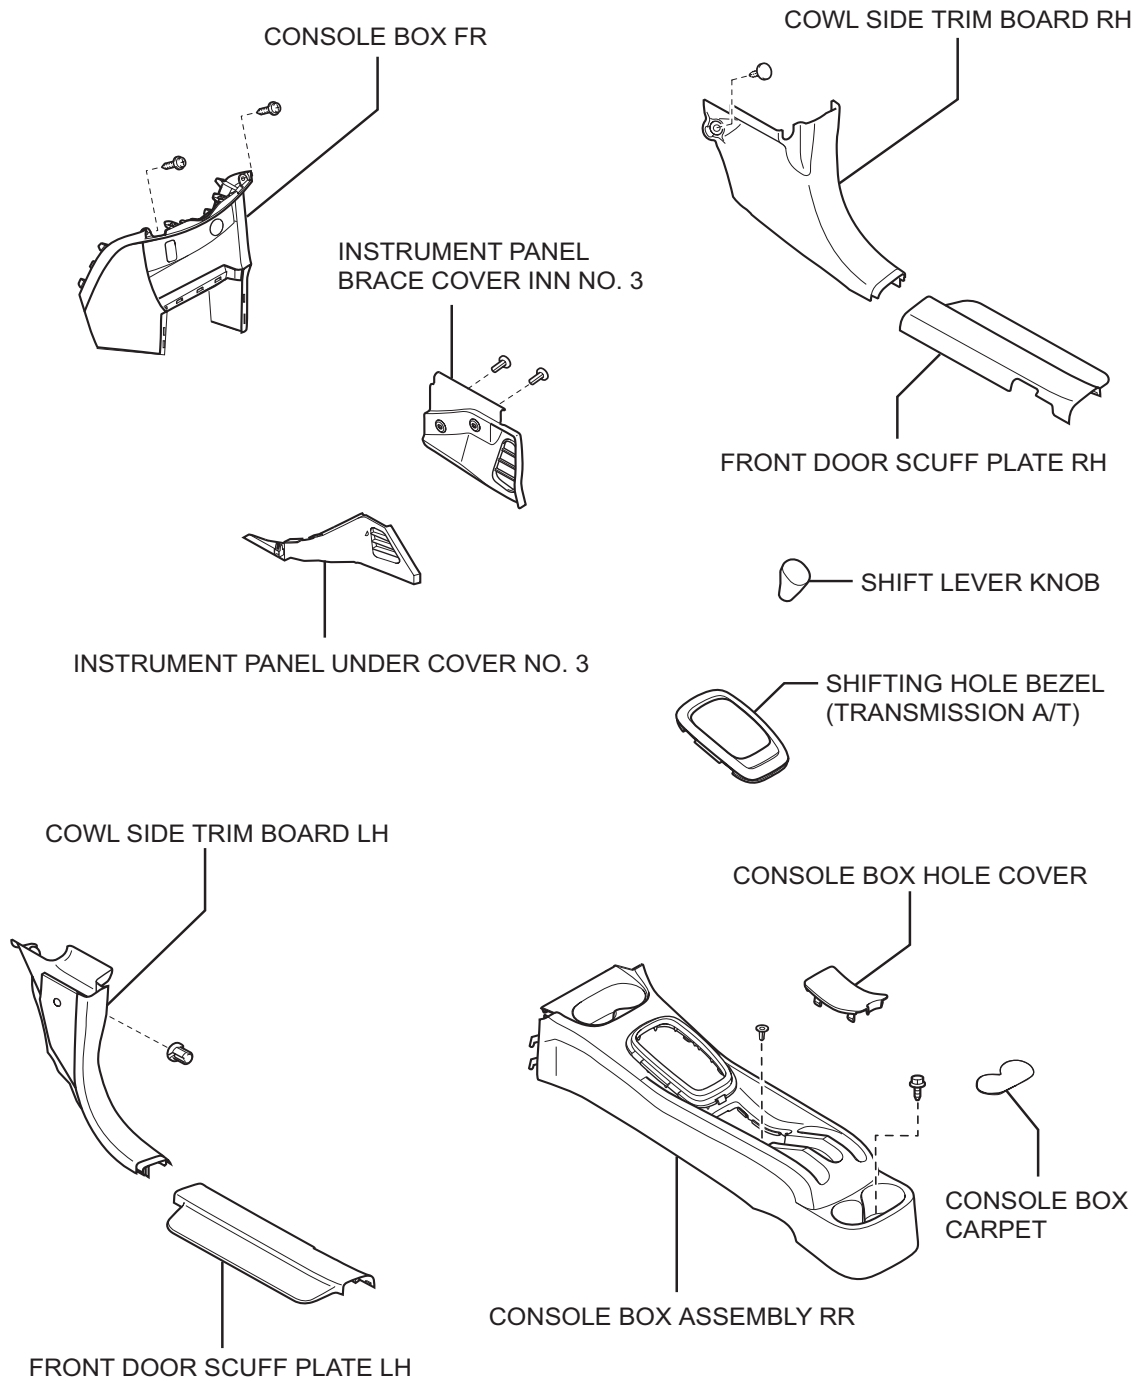

IP

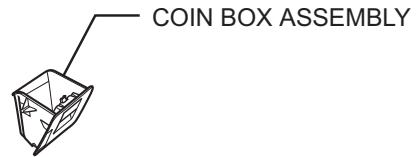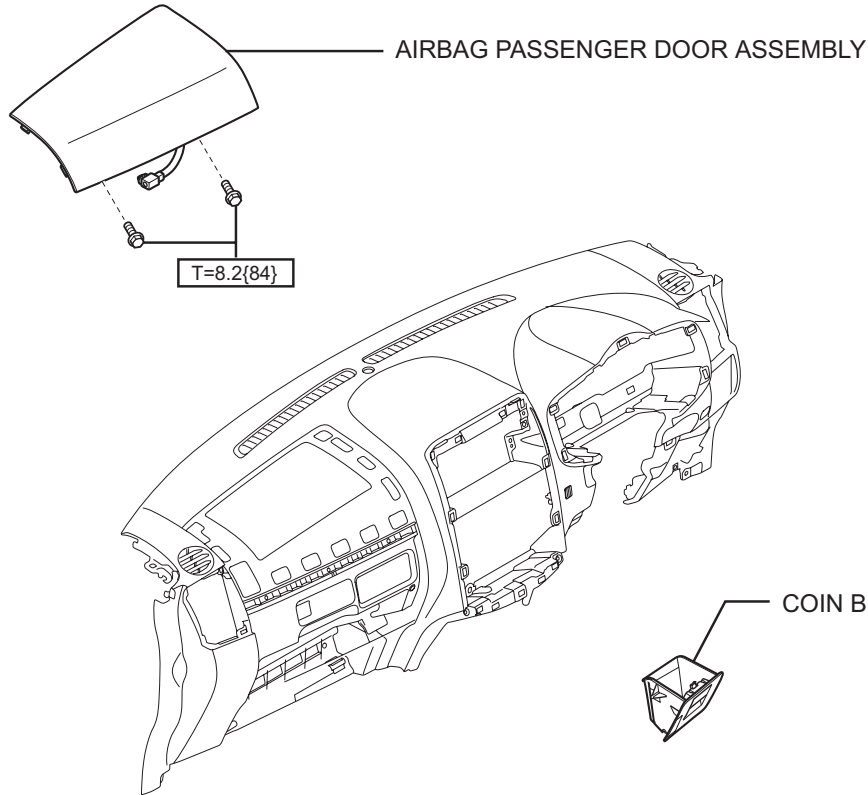

W/ AIRBAG CUTOFF SWITCH CYLINDER

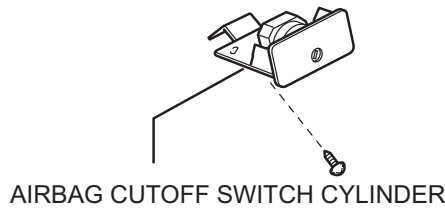


W/O AIRBAG CUTOFF SWITCH CYLINDER



INSTRUMENT PANEL UNDER COVER NO. 1


GLOVE COMPARTMENT
DOOR STOPPER

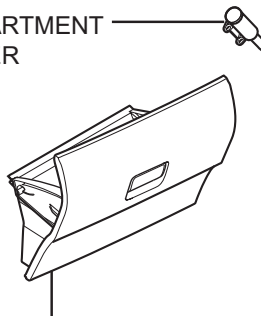

INSTRUMENT PANEL
UNDER COVER NO. 2





INSTRUMENT PANEL FINISH PANEL LWR

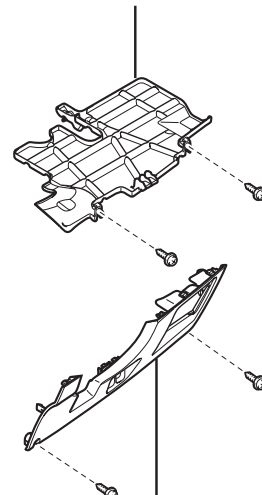


..... TIGHTENING TORQUE [N*m{kgf*cm}]



WITH CURTAIN SHIELD AIRBAG

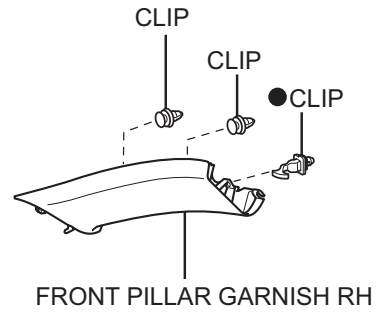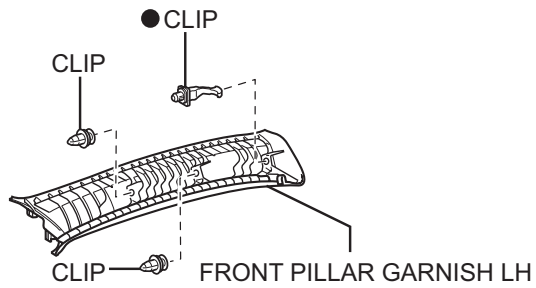

FRONT PILLAR GARNISH LH

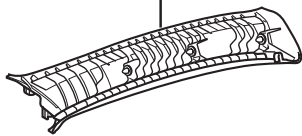

FRONT PILLAR GARNISH RH

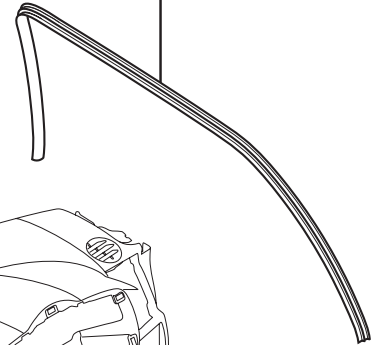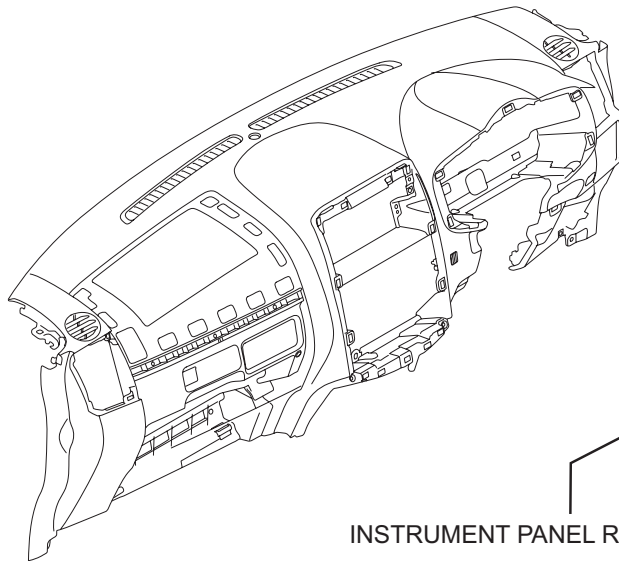FRONT DOOR OPENING TRIM
WEATHERSTRIP RHFRONT DOOR OPENING TRIM
WEATHERSTRIP LH

INSTRUMENT PANEL REGISTER NO. 1




INSTRUMENT PANEL REGISTER NO. 2




● NON REUSEABLE PARTS

DEFROSTER NOZZLE
ASSEMBLY

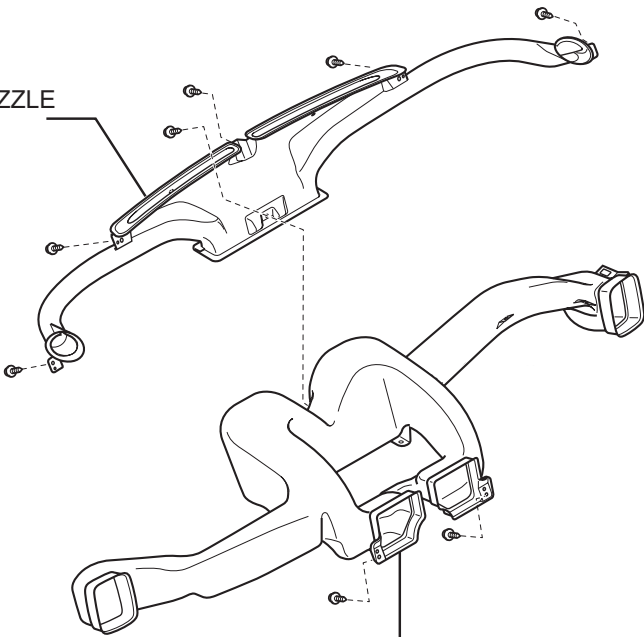


HEATER TO REGISTER DUCT CTR

INSTRUMENT PANEL

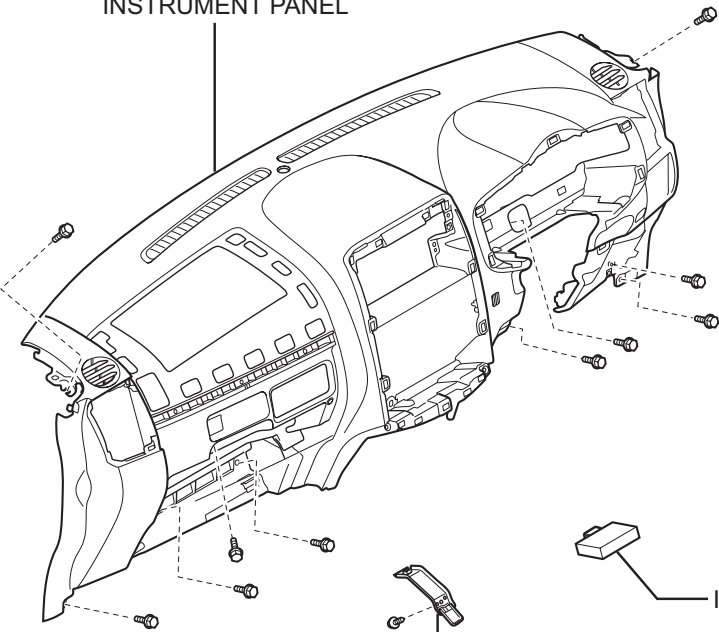

SWITCH HOLE BASE NO. 1

 

INDICATOR ASSEMBLY



GLOVE COMPARTMENT DOOR LOCK STRIKER









REMOVAL

TABLE OF BOLTS, SCREWS AND NUTS

HINT:

      - All necessary bolts, screws and nuts relevant to installing and removing the instrument panel are shown in the text or illustration below with their part numbers.
- In the illustration, D indicates diameter (mm) and L indicates length (mm).

<A>	 D=6 L=18 91551-80618		 D=6 L=14 90109-06292	<C>	 D=5 L=14 93568-55014
<D>	 D=5 L=14 93567-55014	<E>	 D=5 L=14 93567-15014	<F>	 D=6 L=14 91551-80614

B139418J01

IP

1. HANDLING AND WORK PRECAUTIONS

(See page IP-1.)

2. CHECK FRONT TIRES FACING STRAIGHT AHEAD

3. DISCONNECT BATTERY NEGATIVE TERMINAL

4. REMOVE HORN BUTTON ASSEMBLY (See page RS-170)

5. REMOVE STEERING WHEEL ASSEMBLY (See page SR-4)

6. REMOVE INSTRUMENT CLUSTER FINISH PANEL (See page ME-30)


7. REMOVE STEERING COLUMN COVER


(a) Remove the 3 <C> screws and detach the 5 claws. Then remove the steering column cover.

8. REMOVE HEADLIGHT DIMMER SWITCH ASSEMBLY (See page LI-50)

9. REMOVE WINDSHIELD WIPER SWITCH ASSEMBLY (See page WW-22)


10. REMOVE COMBINATION METER ASSEMBLY (See page ME-31)

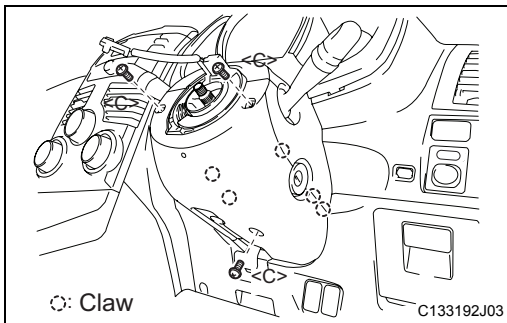

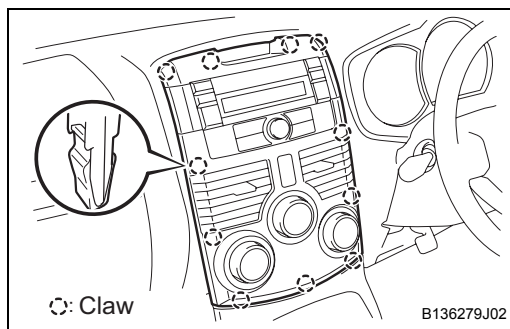


11. DISCONNECT INSTRUMENT CLUSTER FINISH PANEL CTR

- (a) Detach the 11 clips and remove the instrument cluster finish panel CTR.
- (b) Disconnect each connector.

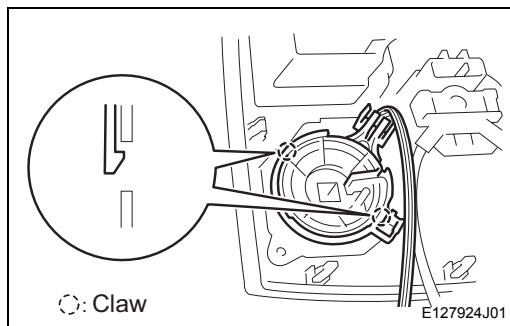


12. DISCONNECT AIR MIX DAMPER CONTROL CABLE

- (a) Detach the 2 claws and disconnect the air mix control cable.

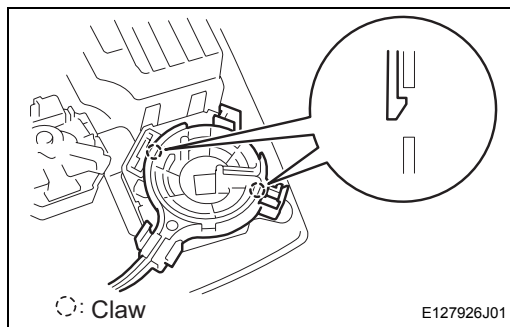

13. DISCONNECT DEFROSTER DAMPER CONTROL CABLE

- (a) Detach the 2 claws and disconnect the defroster control cable.

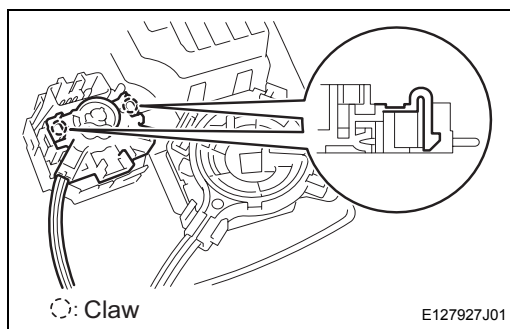

14. DISCONNECT AIR INLET DAMPER CONTROL CABLE

- (a) Detach the 2 claws and disconnect the air inlet control cable.

15. REMOVE RADIO TUNER OPENING COVER (WITHOUT RADIO RECEIVER)

16. REMOVE STEREO COMPONENT TUNER ASSEMBLY


17. REMOVE SHIFT LEVER KNOB (MANUAL TRANSMISSION)


18. REMOVE SHIFTING HOLE BEZEL (AUTOMATIC TRANSMISSION)

- (a) Detach the claw and remove the shifting hole bezel.


19. REMOVE CONSOLE BOX ASSEMBLY RR

- (a) Remove the console box hole cover and detach the clip.
- (b) Remove the console box carpet. Then remove the bolt.
- (c) Sliding the console box assembly RR in the direction of the arrows indicated in the arrow, detach the 8 claws and remove the console box assembly RR.

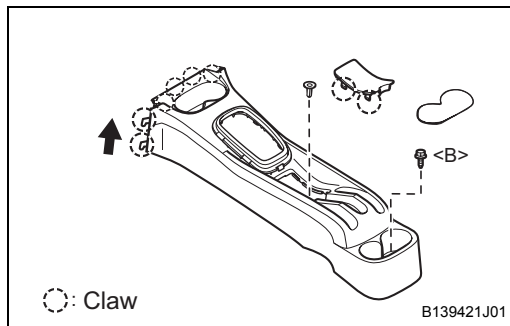


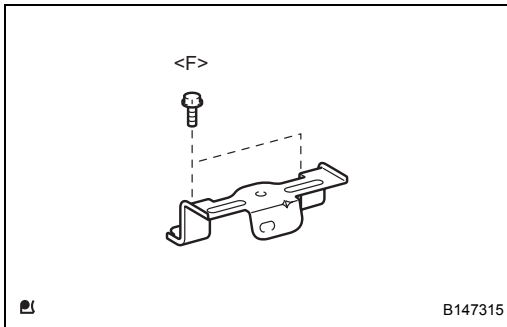**20. REMOVE CONSOLE BOX MOUNTING BRACKET NO. 1**

- (a) Remove the 2 <F> bolts, then remove console box mounting bracket No. 1

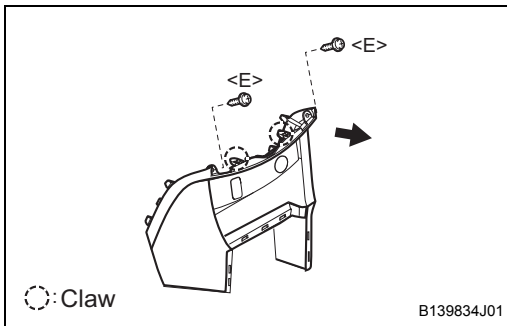**21. REMOVE CONSOLE BOX FR**


- (a) Remove the 2 <E> screws.
 (b) Detach the 2 claws and disconnect each connector to remove the console box FR.

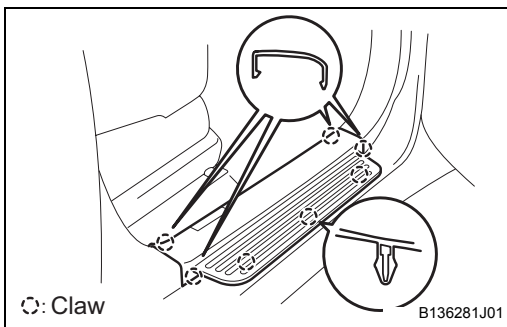**22. REMOVE FRONT DOOR SCUFF PLATE RH**


- (a) Detach the 7 claws and remove the front door scuff plate RH.

23. REMOVE FRONT DOOR SCUFF PLATE LH**24. REMOVE COWL SIDE TRIM BOARD RH**


- (a) Detach the clip.

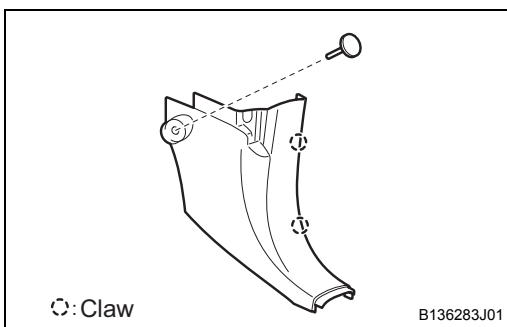


- (b) Detach the 2 claws and remove the cowl side trim board RH.

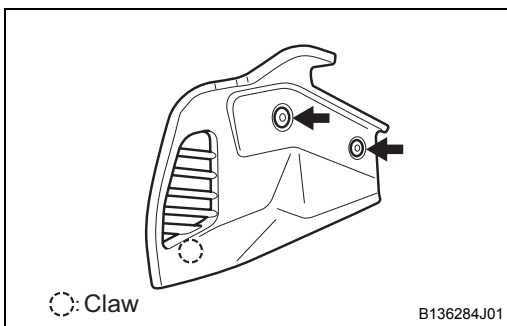25. REMOVE COWL SIDE TRIM BOARD LH**26. REMOVE INSTRUMENT PANEL BRACE COVER INN NO. 3.**


- (a) Detach the 2 clips and the claw, and then remove the instrument panel brace cover INN No. 3.

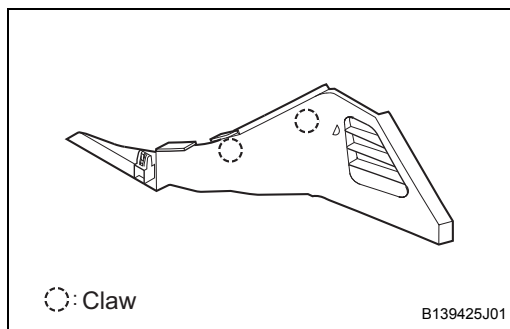**27. REMOVE INSTRUMENT PANEL UNDER COVER NO. 3**


- (a) Detach the 3 claws and remove the instrument panel under cover No. 3.

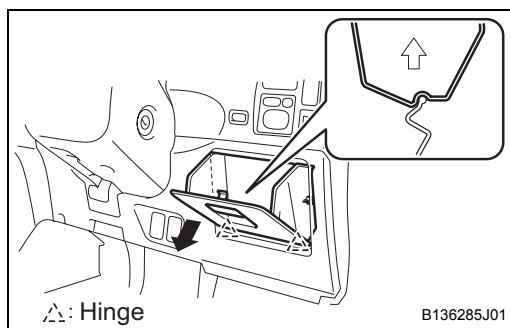**28. REMOVE COIN BOX ASSEMBLY**


- (a) Open the instrument panel box.
- (b) With the instrument panel box open, pull the hinge side directly above and detach the claws to remove it.
- (c) Disengage the stopper to the instrument panel box from the notch of the instrument panel finish panel LWR, and then remove the instrument panel box.

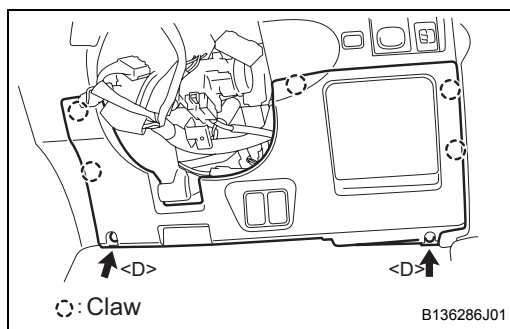**29. REMOVE INSTRUMENT PANEL FINISH PANEL LOWER**


- (a) Remove the 2 <D> screws.
- (b) Detach the 5 claws to the instrument panel finish panel LWR.
- (c) Disconnect the DLC connector and the wire harness clamp, and then remove the instrument panel finish panel LWR.

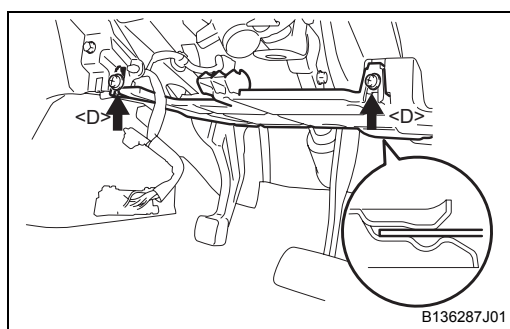**30. REMOVE NO. 1 INSTRUMENT PANEL UNDER COVER**

- (a) Detach the 2 <D> screws and the claw, and remove the instrument panel under cover No. 1.

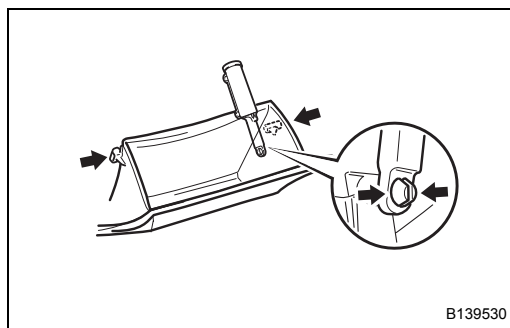**31. REMOVE GLOVE COMPARTMENT DOOR ASSEMBLY**

- (a) Detach the claw and remove the glove compartment door stopper.

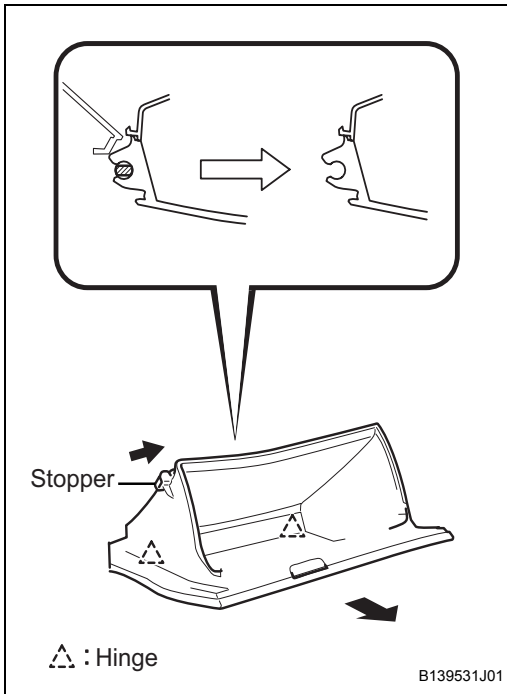

- (b) Deform the stopper part of the glove compartment door assembly to some extent so that the stopper can be disengaged, and open the glove compartment door assembly to the horizontal position.
- (c) Horizontally pull the glove compartment door assembly and disengage the hinge, and then remove the glove compartment door assembly.

NOTICE:

Pulling the glove compartment assembly upward may result in the loosened hinges, so be sure to pull the glove compartment assembly horizontally when removing it.

32. REMOVE GLOVE COMPARTMENT DOOR STOPPER



- (a) Detach the claw and remove the glove compartment door stopper.

33. REMOVE INSTRUMENT PANEL BOX NO. 2


- (a) Pull open the instrument panel box No. 2 by pressing it from the inside, and detach the claw to remove the instrument panel box No. 2.

REMOVE AIRBAG CUTOFF SWITCH CYLINDER (w/AIRBAG CUTOFF SWITCH CYLINDER)**34. REMOVE INSTRUMENT PANEL UNDER COVER NO. 2**

- (a) Detach the 5 claws and then remove the instrument panel under cover No. 2.

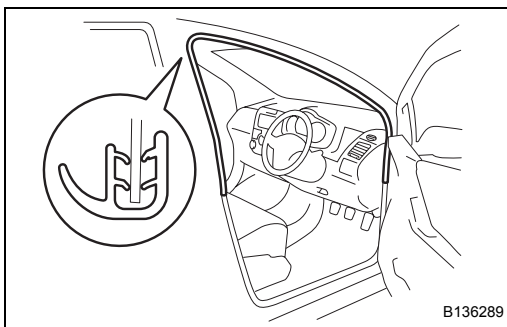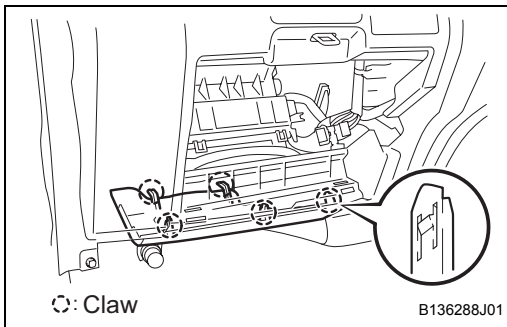**35. REMOVE FRONT DOOR OPENING TRIM WEATHERSTRIP RH**

- (a) Remove the front door opening trim weatherstrip RH.

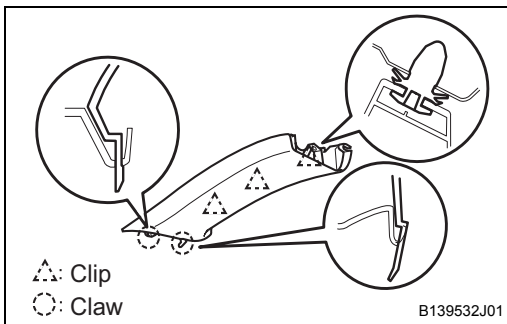36. REMOVE FRONT DOOR OPENING TRIM WEATHERSTRIP LH**37. REMOVE FRONT PILLAR GARNISH RH (WITHOUT CURTAIN SHIELD AIRBAG)**

- (a) Detach the 3 clips and 2 claws, and remove the front pillar garnish RH.

38. REMOVE FRONT PILLAR GARNISH LH (WITHOUT CURTAIN SHIELD AIRBAG)

39. REMOVE FRONT PILLAR GARNISH RH (WITH CURTAIN SHIELD AIRBAG)



NOTICE:

Install the protective cover to the curtain shield airbag immediately after removing the front pillar garnish.

- (a) Detach the 3 clips and 2 claws, and remove the front pillar garnish RH.

NOTICE:

Be sure to install new parts for the removed special clips as they may be damaged.

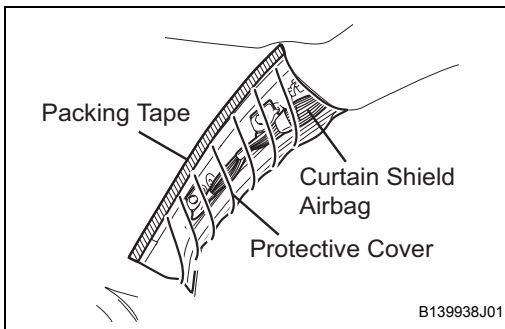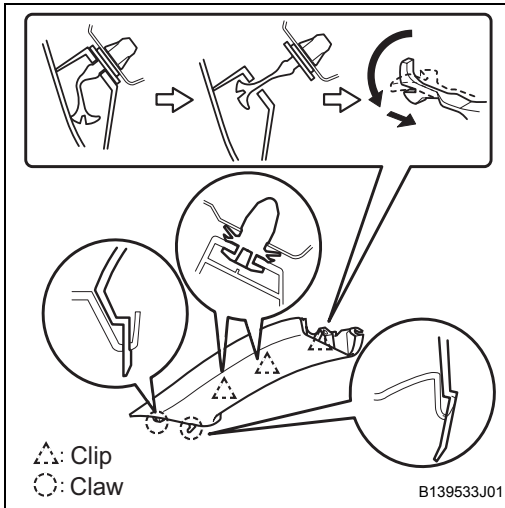

- (b) Using a rag or nylon, wrap the curtain shield airbag as shown in the illustration and fix both ends of the rag or nylon with gum tape.

40. REMOVE FRONT PILLAR GARNISH LH (WITH CURTAIN SHIELD AIRBAG)

41. REMOVE INSTRUMENT PANEL REGISTER ASSEMBLY NO. 1

- (a) Apply protective tape.
(b) Remove the outer mirror switch assembly.

- (c) As shown in the illustration, push out the instrument panel register assembly No. 1 from the back side. Then detach the two lower side claws.


- (d) Disengage the 2 upper side claws and then remove the instrument panel register assembly No. 1.


NOTICE:

Due to the risk of dents, damage and paint chipping, do not forcibly bend the instrument panel register assembly No. 1.

42. REMOVE INSTRUMENT PANEL REGISTER ASSEMBLY NO. 2

- (a) Apply protective tape.

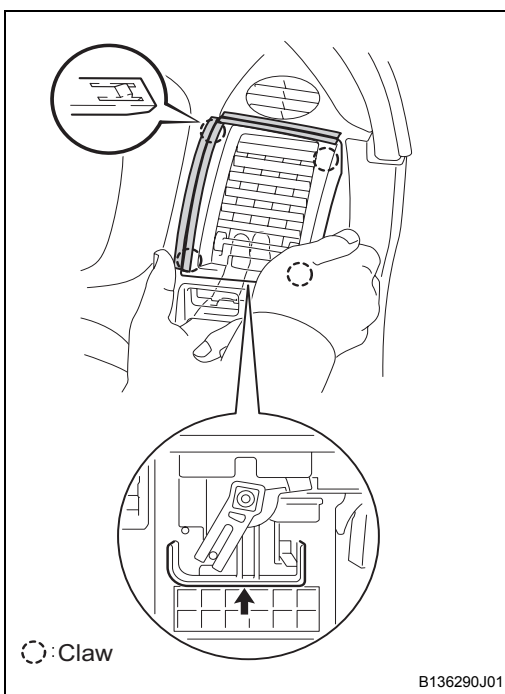

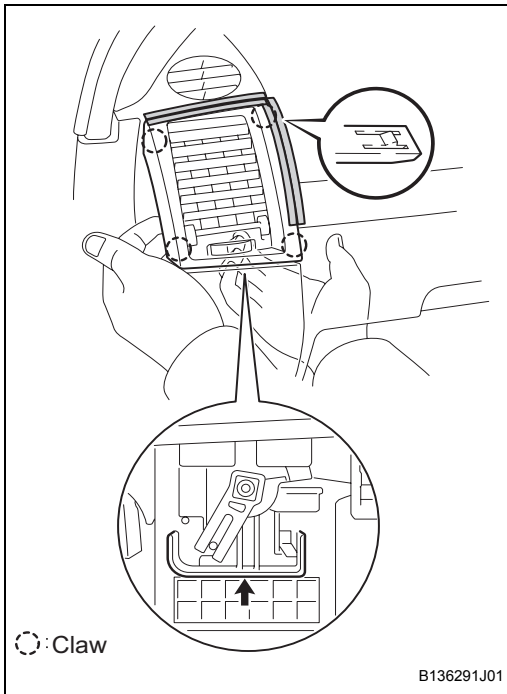


- (b) As shown in the illustration, push out the instrument panel register assembly No. 2 from the back side. Then detach the two lower side claws.
- (c) Detach the 2 upper side claws and then remove the instrument register assembly No. 2.

NOTICE:


Due to the risk of dents, damage and paint chipping, do not forcibly bend the instrument panel register assembly No. 2.

43. REMOVE INSTRUMENT PANEL PASSENGER AIRBAG ASSEMBLY

- (a) Disconnect the connector.

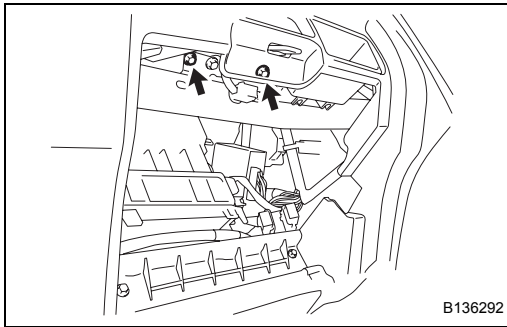

- (b) Remove the 2 bolts.

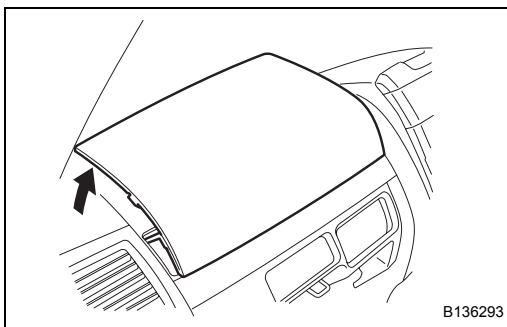


- (c) Put your hand in the opening of the instrument panel and detach the claw. Then remove the instrument panel passenger airbag assembly.

44. REMOVE INSTRUMENT PANEL

- (a) Disconnect each clamp and each connector.
- (b) Remove the 10 bolts.

- (c) Detach the 5 claws and remove the instrument panel.

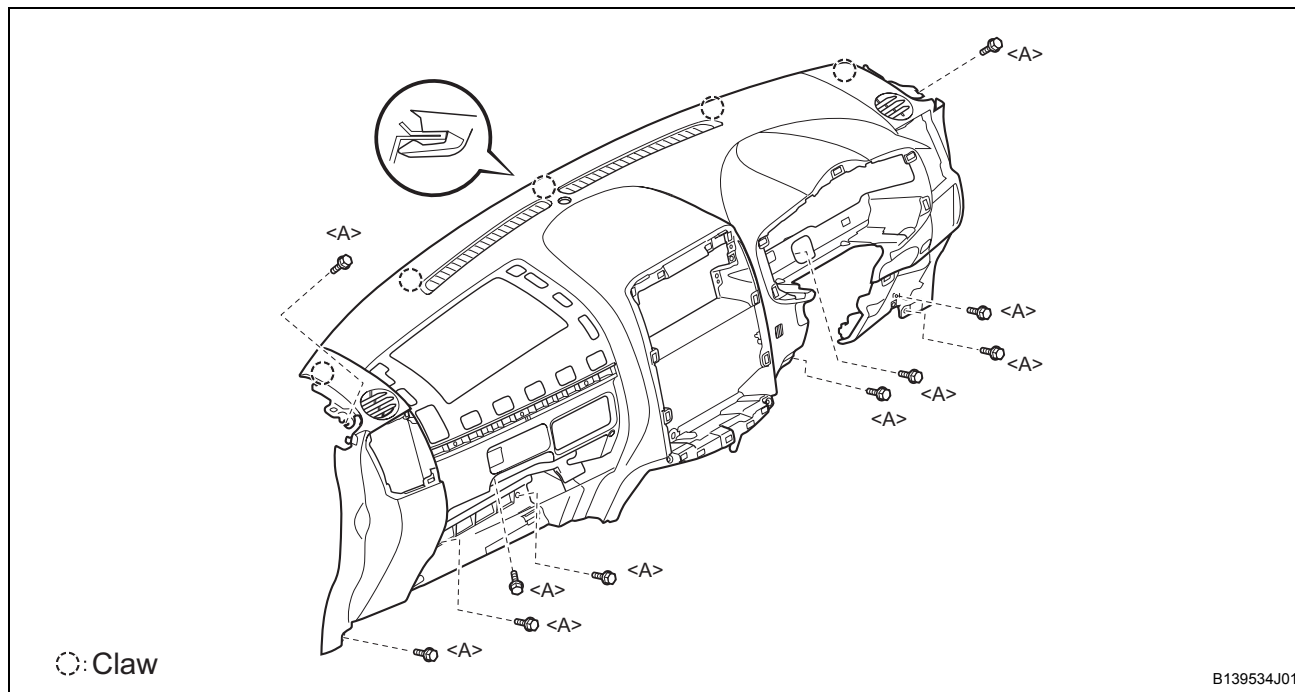

45. REMOVE SWITCH HOLE BASE NO. 1

- (a) Remove the 4 <E> screws. Then remove the switch hole base No. 1.

46. REMOVE GLOVE COMPARTMENT DOOR LOCK STRIKER

- (a) Remove the <E> screw. Then remove the glove compartment door lock striker.

47. REMOVE HEATER TO REGISTER DUCT CTR

- (a) Remove the 3 <E> screws. Then remove the heater to register duct CTR.

48. REMOVE DEFROSTER NOZZLE ASSEMBLY

- (a) Remove the 5 <E> screws. Then remove the defroster nozzle assembly.

49. REMOVE INDICATOR ASSEMBLY

- (a) Detach the 2 claws and remove the indicator assembly.

INSTALLATION

1. INSTALL INDICATOR ASSEMBLY

- (a) Attach the 2 claws and install the indicator assembly.

2. INSTALL DEFROSTER NOZZLE ASSEMBLY

- (a) Install the defroster nozzle assembly with the 5 <E> screws.

3. INSTALL HEATER TO REGISTER DUCT CTR

- (a) Install the heater to register duct CTR with the 3 <E> screws.

4. INSTALL GLOVE COMPARTMENT DOOR LOCK STRIKER

- (a) Install the glove compartment door lock striker with the <E> screw.

5. INSTALL SWITCH HOLE BASE NO. 1

- (a) Install the switch hole base No. 1 with the 4 <E> screws.



6. INSTALL INSTRUMENT PANEL

- (a) Attach the 5 claws.

NOTICE:

Make sure they do not bite into any of the wire harnesses.

- (b) Connect each connector and clamp.
(c) Install the instrument panel with the 10 <A> bolts.

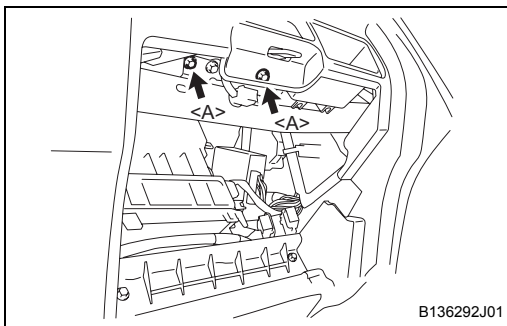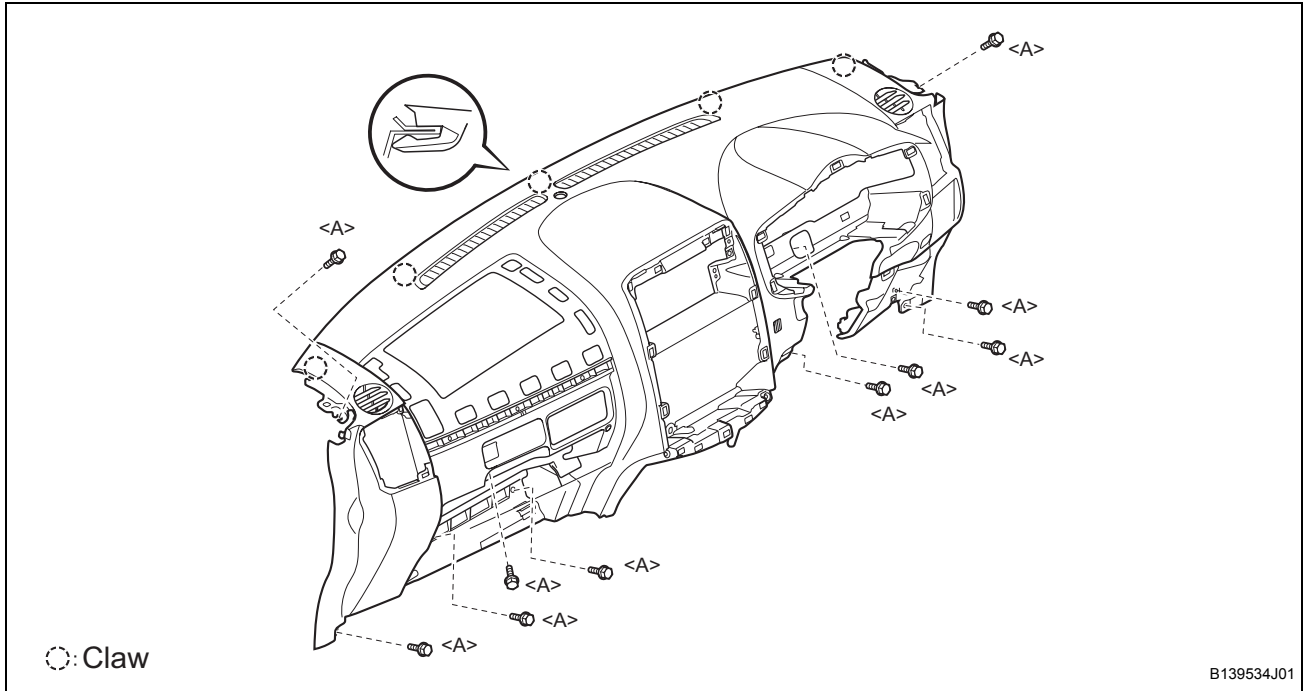**7. INSTALL INSTRUMENT PANEL PASSENGER AIRBAG ASSEMBLY**

- (a) Install the instrument panel passenger airbag with the 2 <A> bolts.

Torque: 8.2 N*m (84 kgf*cm)

- (b) Connect the connector.

8. INSTALL INSTRUMENT PANEL REGISTER ASSEMBLY NO. 1


- (a) Attach the 4 claws and install the indicator panel register assembly No. 1.


9. INSTALL INSTRUMENT PANEL REGISTER ASSEMBLY NO. 2**10. INSTALL FRONT PILLAR GARNISH RH (WITHOUT CURTAIN SHIELD AIRBAG)**

- (a) Attach the 3 clips and 2 claws, and install the front pillar garnish RH.

11. INSTALL FRONT PILLAR GARNISH LH (WITHOUT CURTAIN SHIELD AIRBAG)**12. INSTALL FRONT PILLAR GARNISH RH (WITH CURTAIN SHIELD AIRBAG)**


- (a) Remove the rag or the nylon.

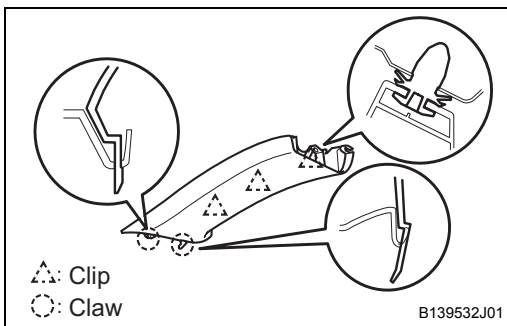

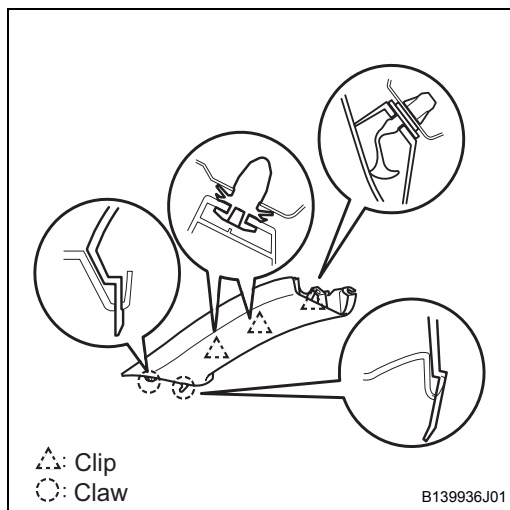

- (b) Install a new clip A (front pillar garnish clip) on the garnish side.
- (c) Attach the 2 claws and clip to install the front pillar garnish.

13. INSTALL FRONT PILLAR GARNISH LH (WITH CURTAIN SHIELD AIRBAG)

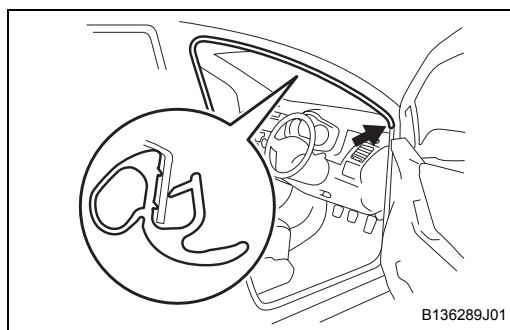


14. INSTALL FRONT DOOR OPENING TRIM WEATHERSTRIP RH

- (a) Align the front side of the front door opening trim weatherstrip and the corner of the body flange, and install the front door opening trim weatherstrip RH.

NOTICE:

Check that the corner does not rise up after installation.

15. INSTALL FRONT DOOR OPENING TRIM WEATHERSTRIP LH

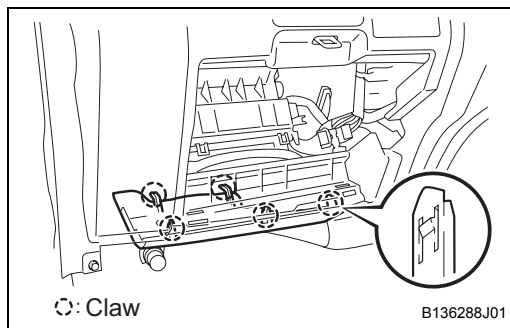

16. INSTALL INSTRUMENT PANEL UNDER COVER NO. 2


- (a) Attach the 2 innermost claws first, and then attach the other 3 claws to install the instrument panel under cover No. 2.

17. INSTALL INSTRUMENT PANEL BOX NO. 2

INSTALL AIRBAG CUTOFF SWITCH CYLINDER (w/AIRBAG CUTOFF SWITCH CYLINDER)

18. INSTALL GLOVE COMPARTMENT DOOR STOPPER

- (a) Attach the claw and install the glove compartment door stopper.

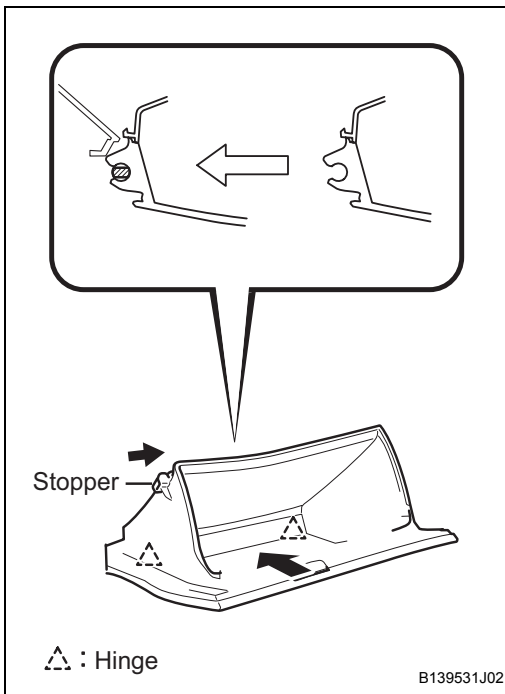


19. INSTALL GLOVE COMPARTMENT DOOR ASSEMBLY


- (a) Attach the claw of the hinge horizontally to install the glove compartment door assembly.

NOTICE:

Always align the hinge horizontally when installing. Installing it upwards may result in the loosened hinge.

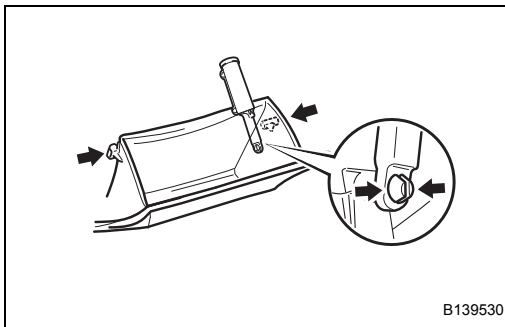

- (b) Bend the stopper part of the glove compartment door assembly slightly and engage the stopper.
- (c) Attach the claw and connect the glove compartment door stopper.

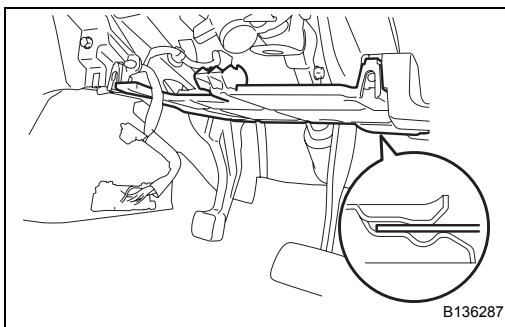


20. INSTALL INSTRUMENT PANEL UNDER COVER NO. 1


- (a) Attach the 4 innermost claws to install the instrument panel under cover No. 1.
- (b) Install the 2 <D> screws.

21. INSTALL INSTRUMENT PANEL FINISH PANEL LOWER


- (a) Install the DLC connector and the wire harness clamp to the instrument panel finish panel LWR.

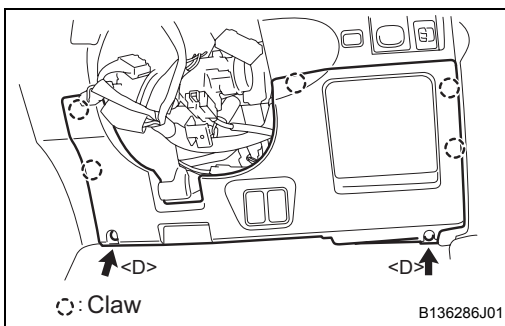

- (b) Attach the 5 claws.
- (c) Install the instrument panel finish panel LWR with the 2 <D> bolts.

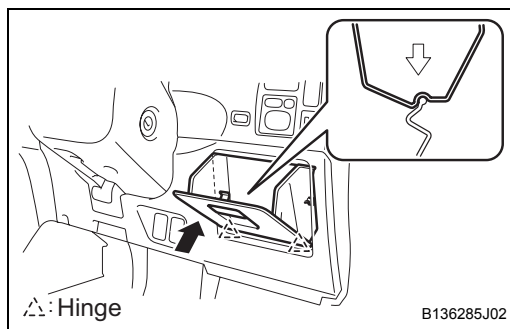**22. INSTALL COIN BOX ASSEMBLY**


- (a) Insert the coin box stopper from the notch of the instrument panel finish panel LWR.
- (b) Attach the hinge with the coin box open.
- (c) Close the coin box.

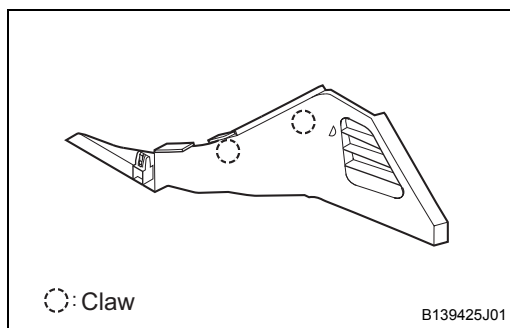**23. INSTALL INSTRUMENT PANEL UNDER COVER NO. 3**


- (a) Attach the 3 claws and install the instrument panel under cover No. 3.

24. INSTALL INSTRUMENT PANEL BRACE COVER INN NO. 3

- (a) Attach the claws.

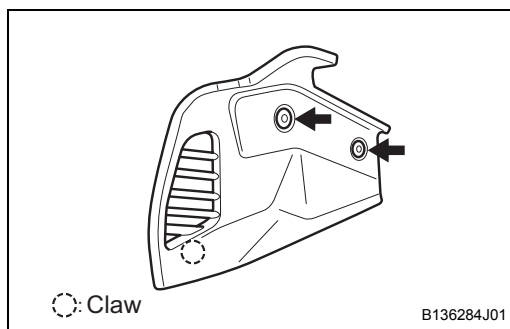


- (b) Install the instrument panel brace cover INN No. 3 with the 2 clips.

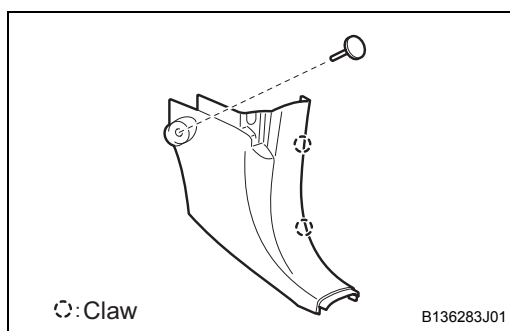**25. INSTALL COWL SIDE TRIM BOARD RH**


- (a) Attach the 2 claws and install the cowl side trim board RH.
- (b) Attach the clip.

26. INSTALL COWL SIDE TRIM BOARD LH**27. INSTALL FRONT DOOR SCUFF PLATE RH**


- (a) Attach the 7 claws and install the front door scuff plate RH.

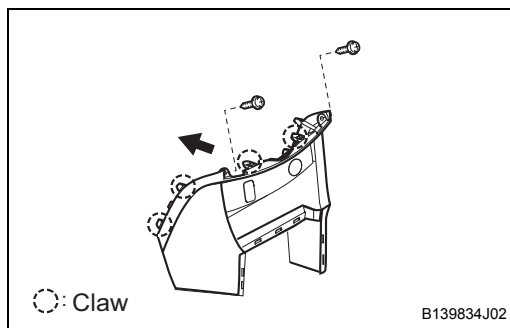28. INSTALL FRONT DOOR SCUFF PLATE LH**29. INSTALL CONSOLE BOX FR**

- (a) Attach the 6 claws.
- (b) Install the console box FR with the 2 screws.

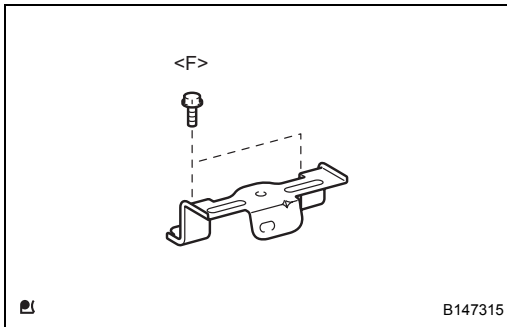**30. INSTALL CONSOLE BOX MOUNTING BRACKET NO. 1**

- (a) Install the console box mounting bracket No. 1 with the 2 <F> bolts.

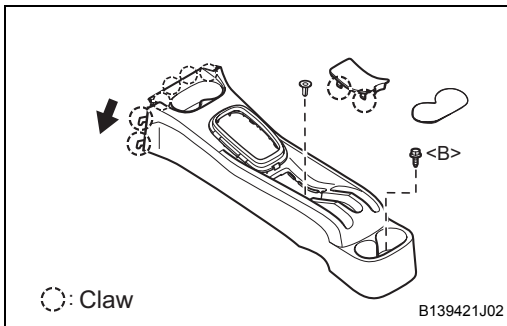**31. INSTALL CONSOLE BOX ASSEMBLY RR (MANUAL TRANSMISSION)**



- (a) Attach the 8 claws.
 (b) Install the console box assembly RR with the clip and bolt .
 (c) Install the console box hole cover and the console box carpet.

32. INSTALL SHIFTING HOLE BEZEL (AUTOMATIC TRANSMISSION)


- (a) Attach the claw and install the shifting hole bezel.

33. INSTALL SHIFT LEVER KNOB (MANUAL TRANSMISSION)**34. INSTALL RADIO TUNER OPENING COVER (WITHOUT RADIO RECEIVER)****35. INSTALL STEREO COMPONENT TUNER ASSEMBLY****36. INSTALL AIR INLET DUMPER CONTROL CABLE**

- (a) Attach the 2 claws and connect the air inlet damper control cable.

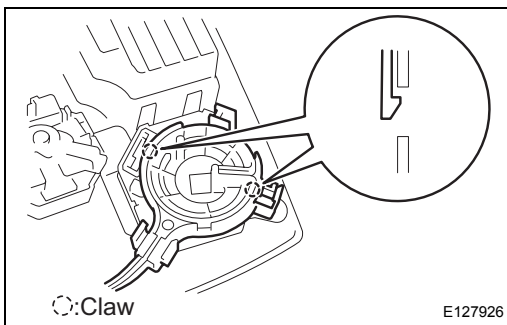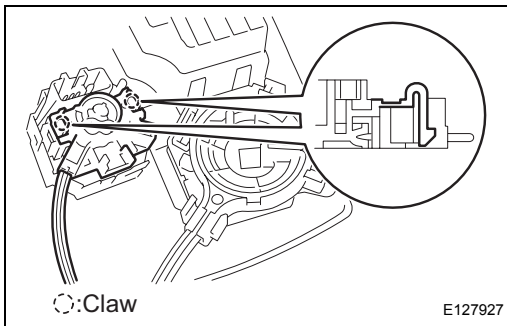**37. INSTALL DEFROSTER DUMPER CONTROL CABLE**


- (a) Attach the 2 claws and connect the defroster damper control cable.

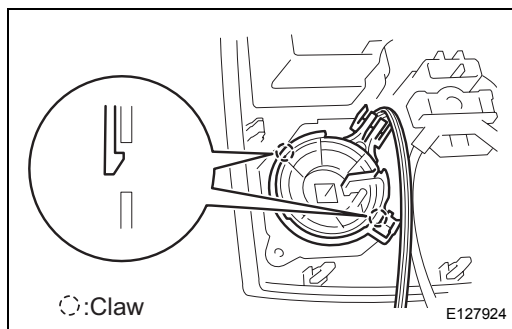**38. INSTALL AIR MIX DAMPER CONTROL CABLE**

- (a) Attach the 2 claws and connect the air mix damper control cable.

39. INSTALL INSTRUMENT CLUSTER FINISH PANEL CTR

- (a) Connect each connector.

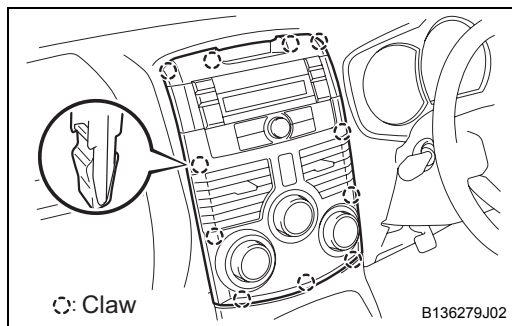

- (b) Attach the 11 clips and install the instrument cluster finish panel CTR.

40. INSTALL COMBINATION METER ASSEMBLY (See page ME-31)**41. INSTALL WINDSHIELD WIPER SWITCH ASSEMBLY (See page WW-23)****42. INSTALL HEADLIGHT DIMMER SWITCH ASSEMBLY (See page LI-50)****43. INSTALL STEERING COLUMN COVER**

- (a) Install the steering column cover (upper) to the steering column assembly.
- (b) Attach the 5 claws and install the steering column cover (lower).
- (c) Install the steering column cover with the 3 <C> screws.

44. INSTALL INSTRUMENT CLUSTER FINISH PANEL (See page ME-32)**45. INSTALL STEERING WHEEL ASSEMBLY (See page SR-8)****46. INSTALL HORN BUTTON ASSEMBLY (See page RS-170)****47. CONNECT BATTERY NEGATIVE TERMINAL****48. INSPECT AIRBAG WARNING LIGHT (See page RS-1.)**