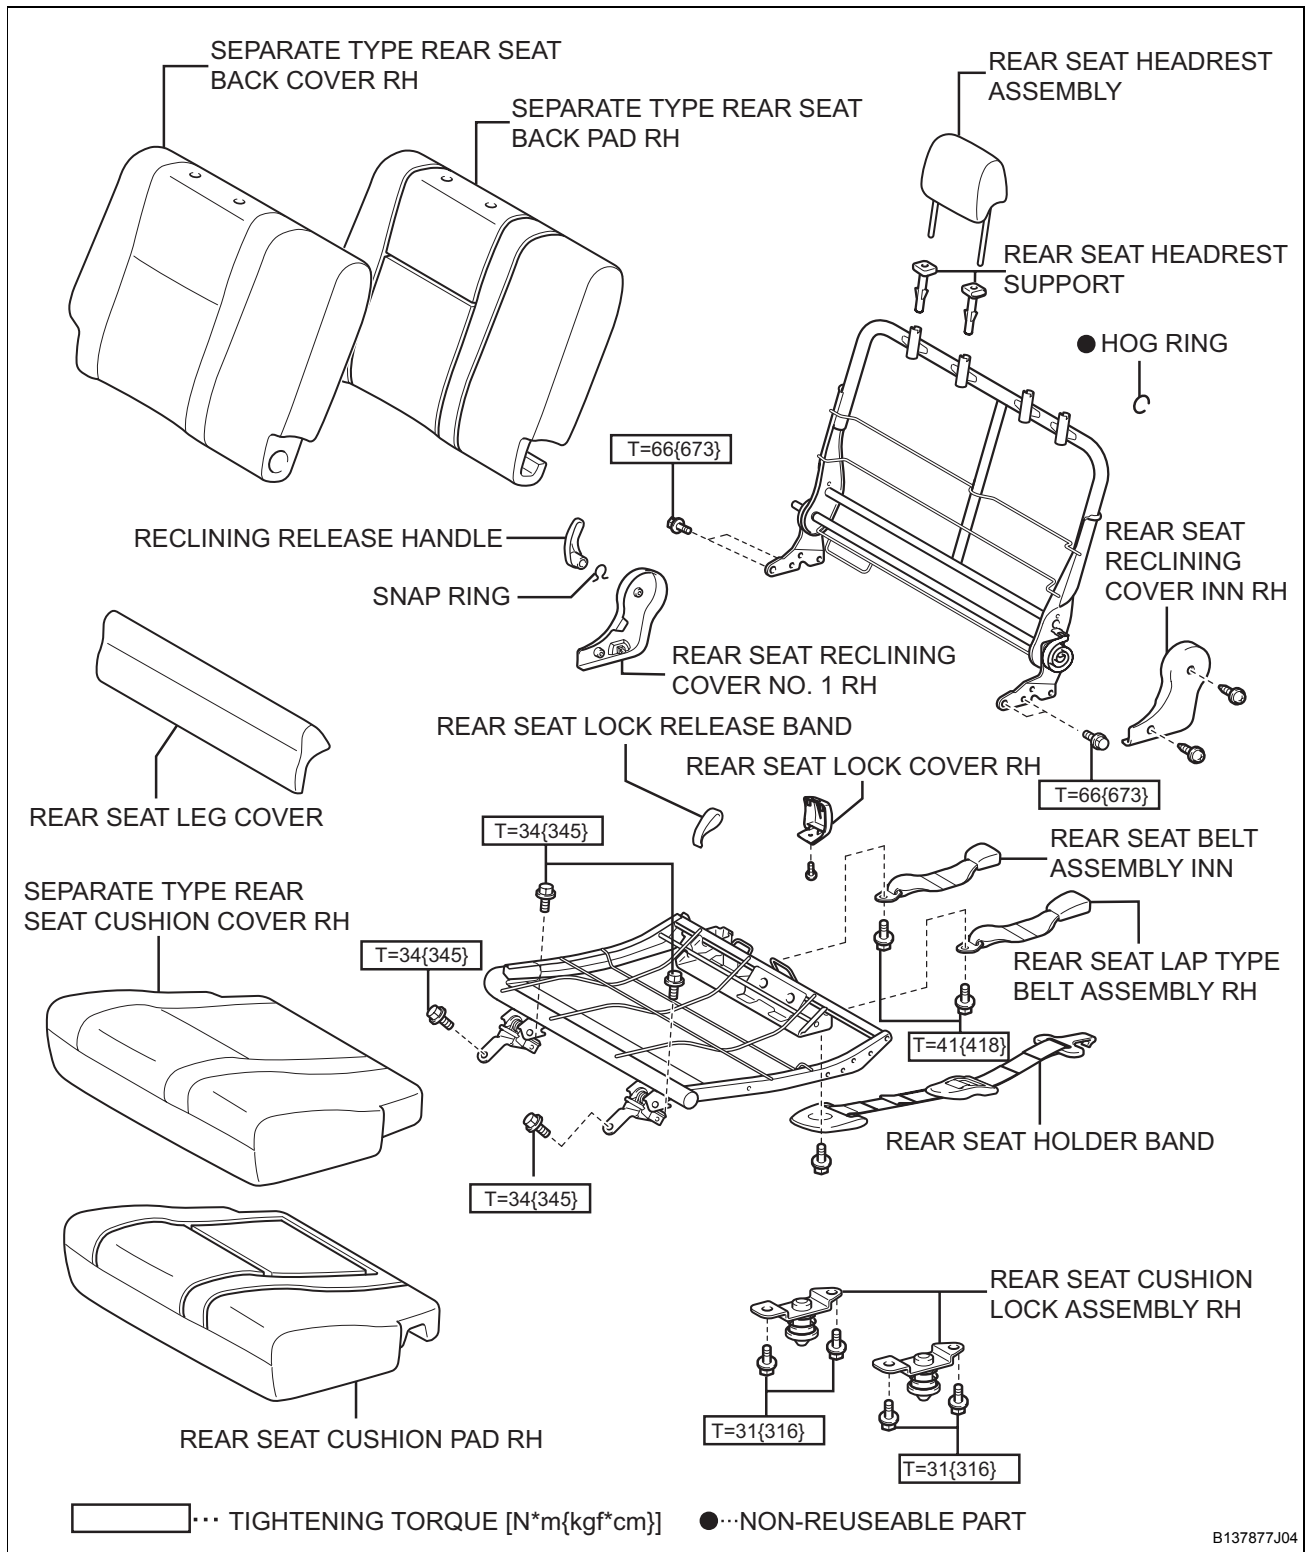


REAR SEAT ASSEMBLY RH (6:4 Division, Double Fold Type)

COMPONENTS



SE

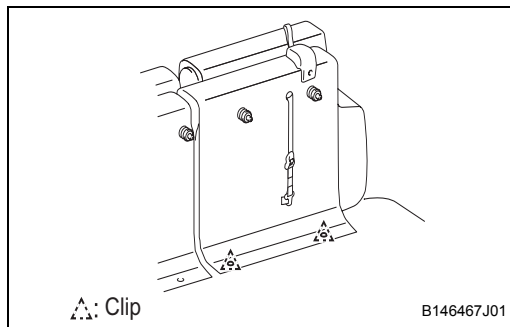
REMOVAL

1. REMOVE REAR SEAT LEG COVER

- (a) Disengage the 4 claws and remove the rear seat leg cover.

2. REMOVE REAR SEAT ASSEMBLY RH

- (a) Pull the rear seat lock release band and pull up the rear seat assembly RH.
- (b) Remove the 2 clips.

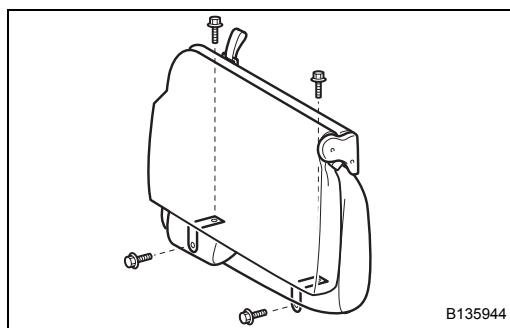


- (c) Remove the 4 bolts and the rear seat assembly RH.

DISASSEMBLY

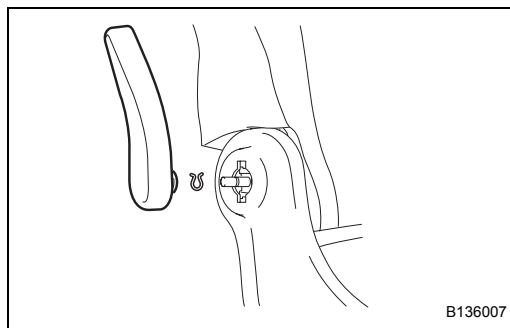
1. REMOVE REAR SEAT HEADREST ASSEMBLY

- (a) Press the lock button of the rear headrest support, and remove the rear seat headrest assembly.



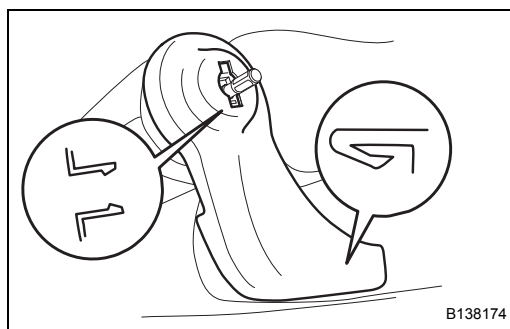
2. REMOVE RECLINING RELEASE HANDLE

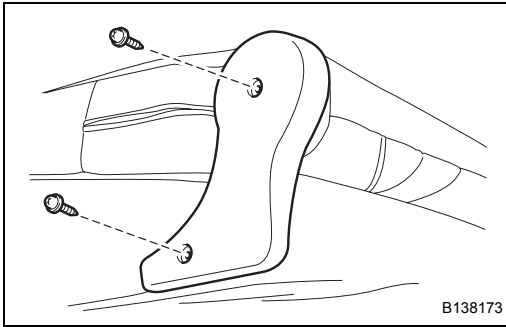
- (a) Disengage the snap ring and remove the reclining release handle.



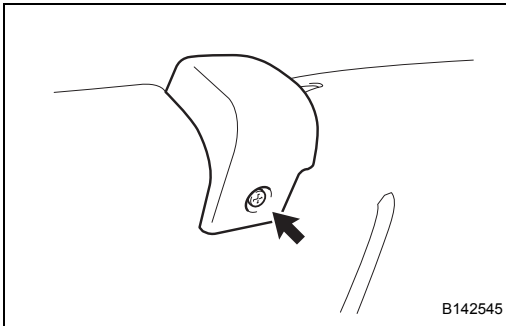
3. REMOVE REAR SEAT RECLINING COVER NO. 1 RH

- (a) Disengage the 2 claws and remove the rear seat reclining cover No. 1 RH.

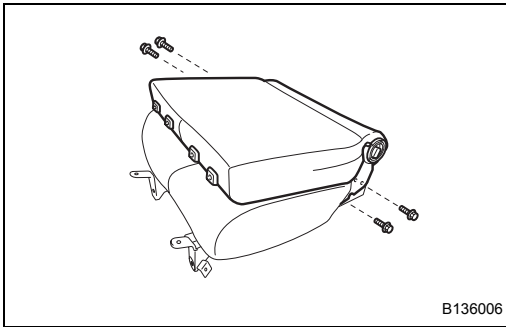


**4. REMOVE REAR SEAT RECLINING COVER INN RH**

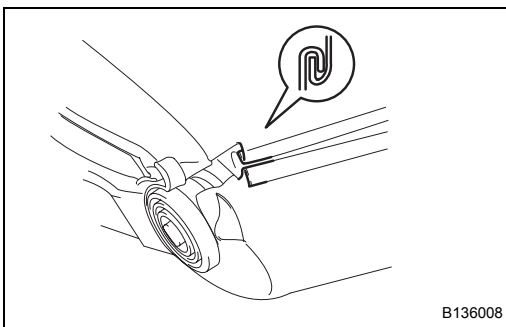
- (a) Remove the 2 bolts and the rear seat reclining cover INN RH.

**5. REMOVE REAR SEAT LOCK COVER RH**

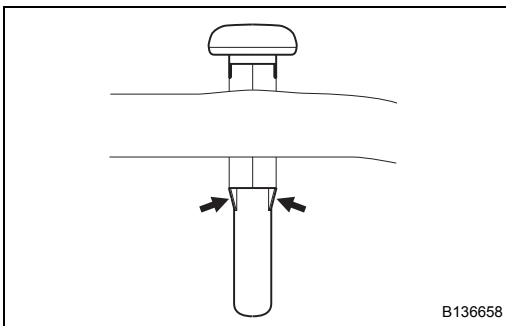
- (a) Remove the screws and the rear seat lock cover RH.

**6. REMOVE REAR SEATBACK ASSEMBLY RH**

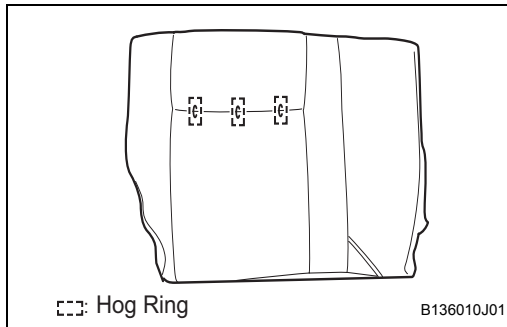
- (a) Remove the 4 bolts and the rear seatback assembly.

**7. REMOVE REAR SEAT HEADREST SUPPORT**

- (a) Disengage the claws of the separate type rear seatback cover RH.
(b) Open the fastener.



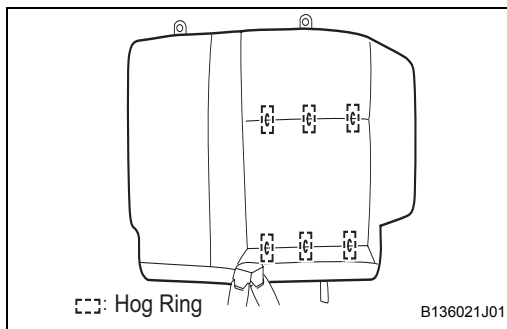
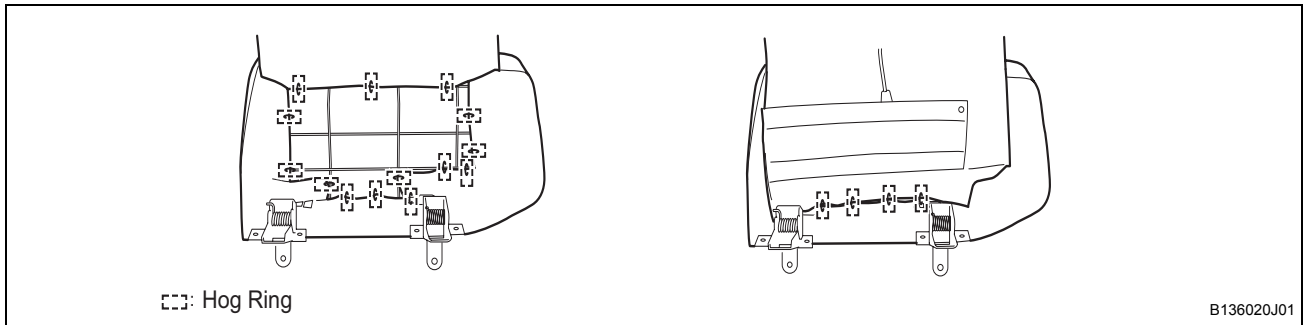
- (c) Disengage the claw and remove the rear seat headrest support.

**8. REMOVE SEPARATE TYPE REAR SEATBACK COVER RH**

- (a) Remove the hog rings and the separate type rear seatback cover RH.

9. REMOVE SEPARATE TYPE REAR SEATBACK PAD RH**10. REMOVE SEPARATE TYPE REAR SEAT CUSHION COVER RH**

- (a) Remove the hog rings.



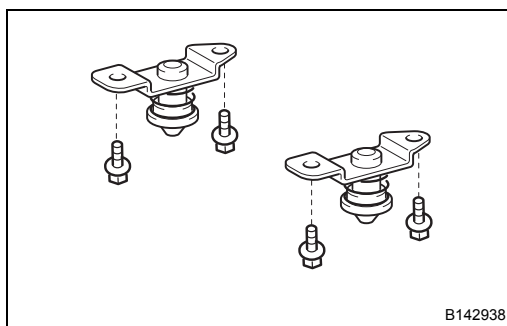
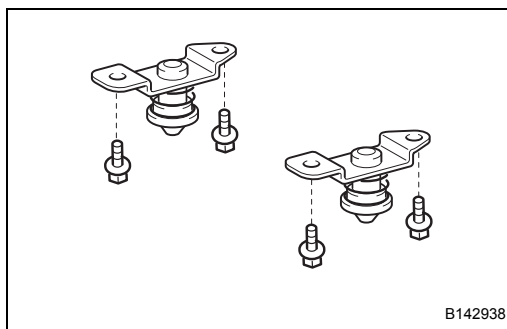
- (b) Remove the hog rings and the separate type rear seat cushion cover RH.

11. REMOVE REAR SEAT CUSHION PAD RH**12. REMOVE REAR SEAT LOCK RELEASE BAND****13. REMOVE REAR SEAT HOLDER BAND**

- (a) Remove the bolt and the rear seat holder band.

14. REMOVE REAR SEAT BELT ASSEMBLY INN (See page SB-31)**15. REMOVE REAR SEAT WRAP TYPE BELT ASSEMBLY RH (See page SB-27)****16. REMOVE REAR SEAT CUSHION LOCK ASSEMBLY RH**

- (a) Remove the 4 bolts and the rear seat cushion lock assembly RH.

REASSEMBLY**1. INSTALL REAR SEAT CUSHION ASSEMBLY RH**

- (a) Install the rear seat cushion lock assembly RH with the 4 bolts.
Torque: 31 N*m (316 kgf*cm)

2. INSTALL REAR SEAT BELT ASSEMBLY INN (See page SB-31)**3. INSTALL REAR SEAT WRAP TYPE BELT ASSEMBLY RH (See page SB-27)****4. INSTALL REAR SEAT HOLDER BAND**

- (a) Put rear seat holder band through the separate type rear seat cushion cover RH.

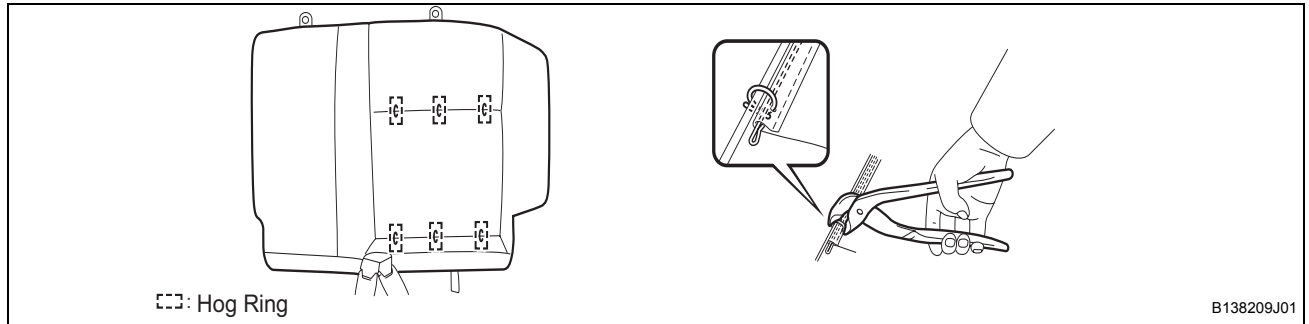
(b) Install the rear seat holder band with the bolt.

5. INSTALL REAR SEAT LOCK RELEASE BAND

6. INSTALL REAR SEAT CUSHION PAD RH

7. INSTALL SEPARATE TYPE REAR SEAT CUSHION COVER RH

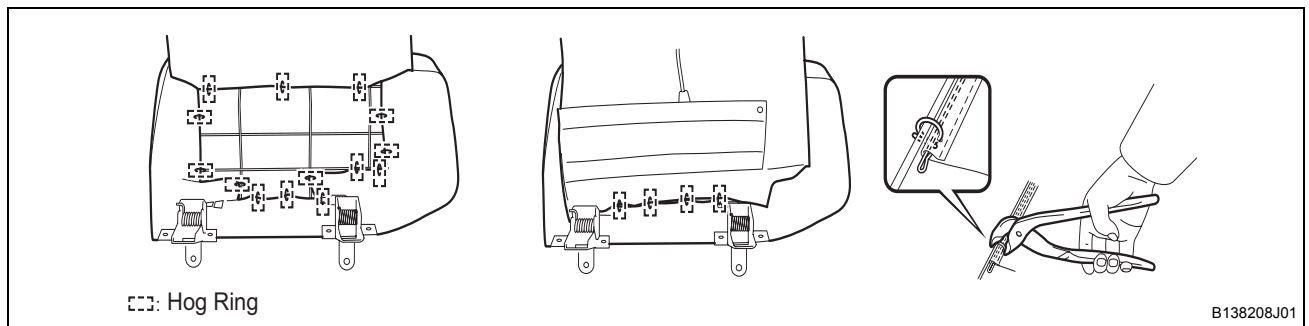
(a) Using hog ring pliers, install new hog rings.



NOTICE:

- Do not damage or soil the separate type rear seat cushion cover RH.
- Align the center of the cover and the center of the separate type rear seat cushion cover RH, making sure to avoid wrinkles, and attach them with the hog rings.

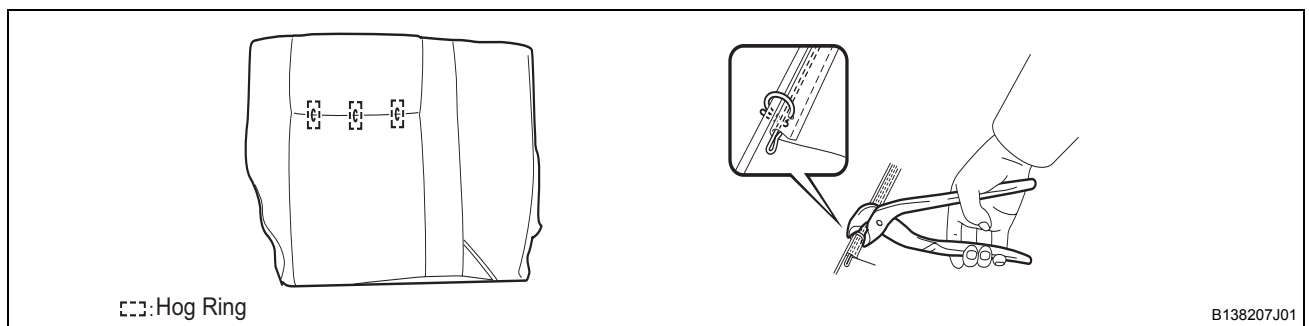
(b) Using hog ring pliers, install the separate type rear seat cushion cover RH with new hog rings.



8. INSTALL SEPARATE TYPE REAR SEATBACK PAD RH

9. INSTALL SEPARATE TYPE REAR SEATBACK COVER RH

(a) Using hog ring pliers, install the separate type rear seatback cover RH with new hog rings.

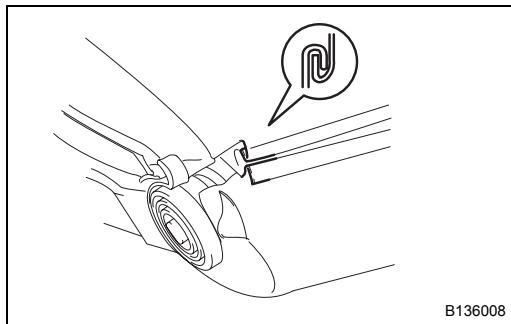


NOTICE:

- Do not damage or soil the separate type front seatback cover RH.
- Align the center of the cover and the center of the separate type rear seatback cover RH, making sure to avoid wrinkles, and install hog rings.

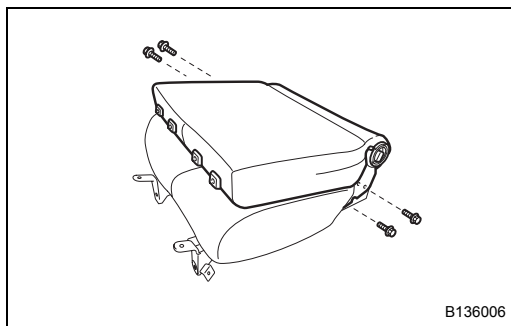
(b) Close the fastener.

(c) Engage the claws of the separate type rear seatback cover RH.

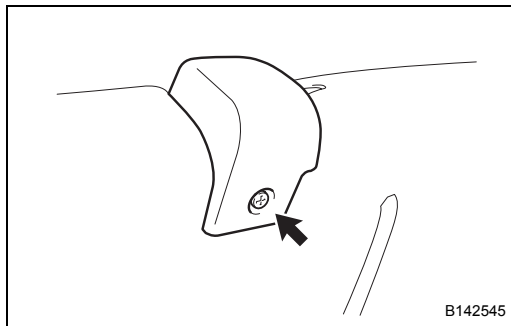
10. INSTALL REAR SEAT HEADREST SUPPORT**11. INSTALL REAR SEATBACK ASSEMBLY RH**

(a) Install the rear seat back assembly RH with the 4 bolts.

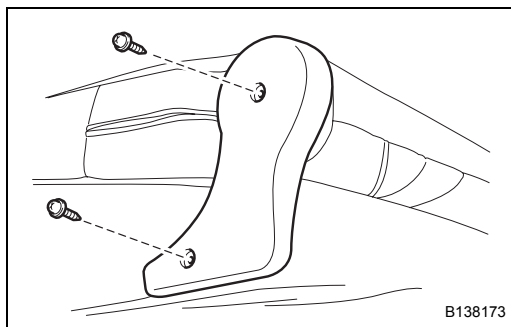
Torque: 66 N*m (673 kgf*cm)

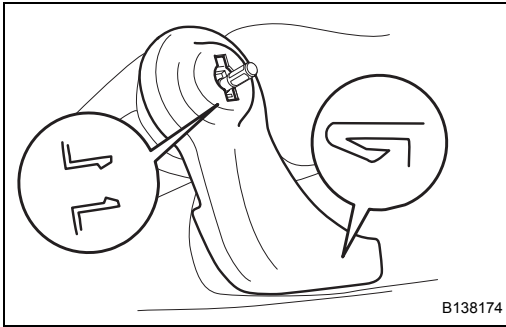
**SE****12. INSTALL REAR SEAT LOCK COVER RH**

(a) Install the rear seat lock cover RH with the screw.

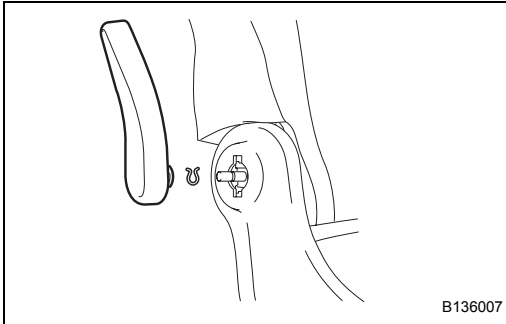
**13. INSTALL REAR SEAT RECLINING COVER INN RH**

(a) Install the rear seat reclining cover INN RH with the 2 screws.

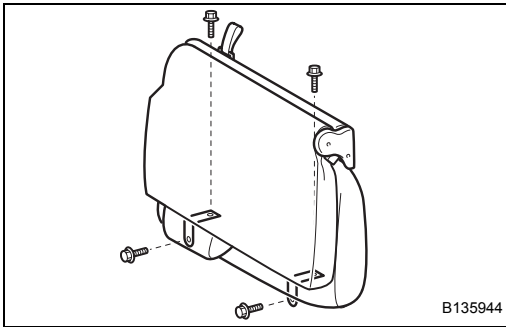


**14. INSTALL REAR SEAT RECLINING COVER NO. 1 RH**

- (a) Engage the claw and install the rear seat reclining cover No. 1 RH.

**15. INSTALL RECLINING RELEASE HANDLE**

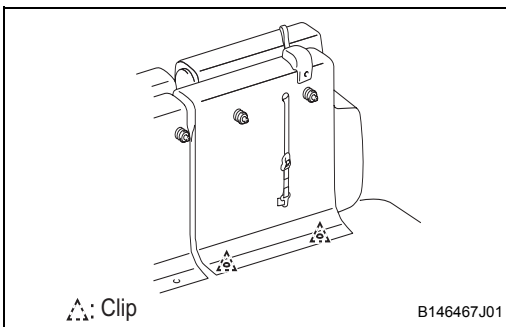
- (a) Attach the snap ring to the reclining release handle and then install the reclining release handle.

16. INSTALL REAR SEAT HEADREST ASSEMBLY**INSTALLATION****1. INSTALL REAR SEAT ASSEMBLY RH**

- (a) Tighten the 4 bolts in the order shown in the illustration, and install rear seat assembly RH.

Torque: 34 N*m (345 kgf*cm)

- (b) Check that both the two rear seat cushion locks lock smoothly.

**2. INSTALL REAR SEAT LEG COVER**

- (a) Attach the 4 claws and install the rear seat leg cover.

SE

