


REAR SEAT ASSEMBLY LH (6:4 Division, Double Fold Type)

COMPONENTS

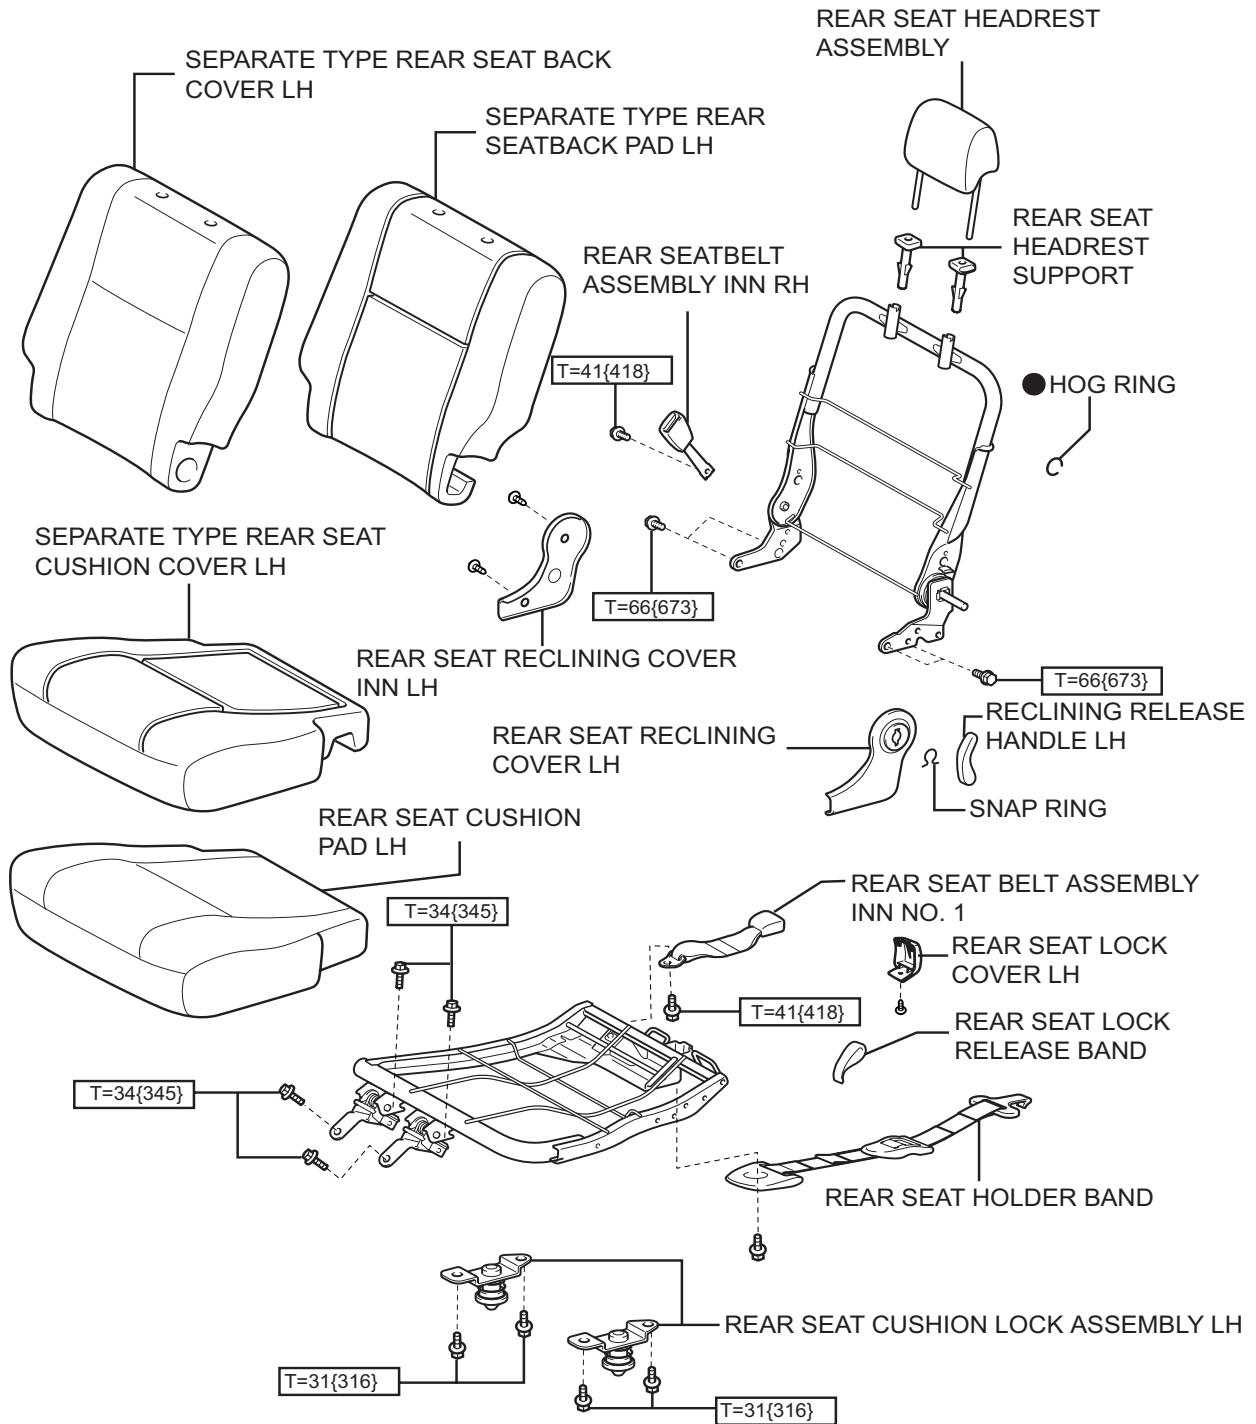

□ ... TIGHTENING TORQUE [N*m{kgf*cm}] ● ... NON-REUSEABLE PART




REMOVAL

1. REMOVE REAR SEAT LEG COVER

- (a) Disengage the 4 claws and remove the rear seat leg cover.

2. REMOVE REAR SEAT ASSEMBLY LH

- (a) Pull the rear seat lock release band and move the rear seat assembly LH to the upright position.
- (b) Remove the 2 clips.

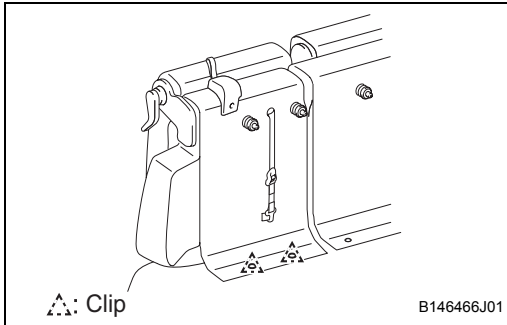


- (c) Remove the 4 bolts and the rear seat assembly LH.

DISASSEMBLY


1. REMOVE REAR SEAT HEADREST ASSEMBLY

- (a) Press the lock button of the rear seat headrest support, and remove the rear seat headrest.

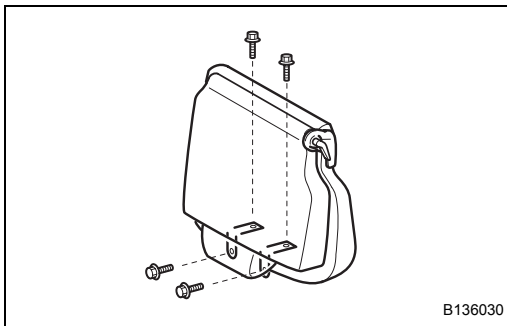

2. REMOVE RECLINING RELEASE HANDLE LH


- (a) Disengage the snap ring and remove the reclining release handle LH.

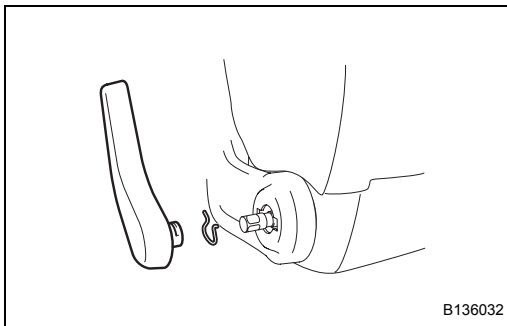


3. REMOVE REAR SEAT RECLINING COVER LH

- (a) Disengage the 2 claws and remove the rear seat reclining cover LH.


4. REMOVE REAR SEAT BELT ASSEMBLY INN RH (See page SB-31)

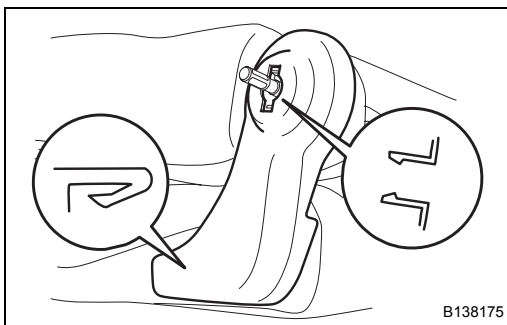

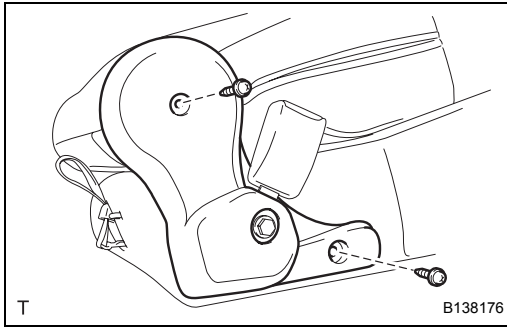


5. REMOVE REAR SEAT RECLINING COVER INN LH

- (a) Remove the 2 bolts and the rear seat reclining cover INN LH.

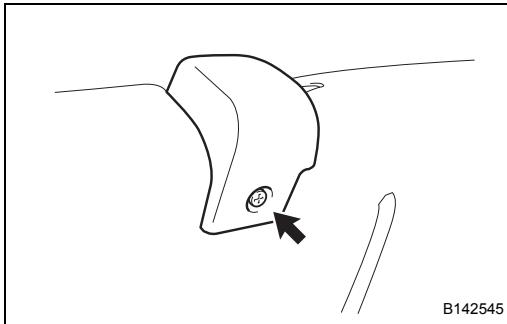


6. REMOVE REAR SEAT LOCK COVER LH

- (a) Remove the screws and the rear seat lock cover LH.

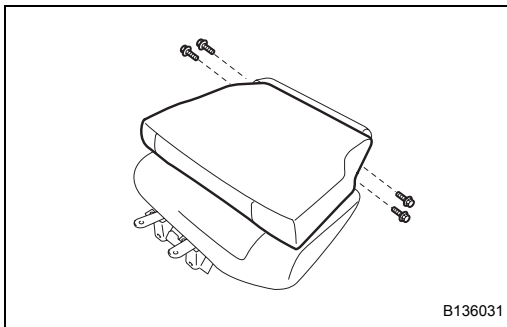


7. REMOVE REAR SEATBACK ASSEMBLY LH

- (a) Remove the 4 bolts and the rear seat back assembly LH.

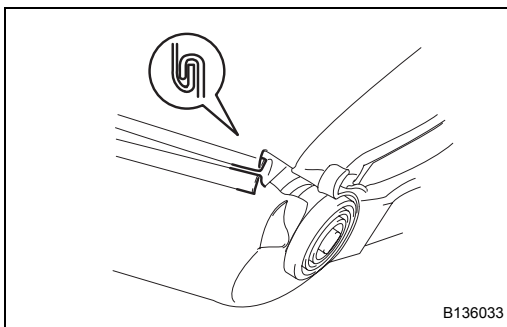


8. REMOVE REAR SEAT HEADREST SUPPORT

- (a) Disengage the claws of the separate type rear seatback cover LH.
 (b) Open the fastener.

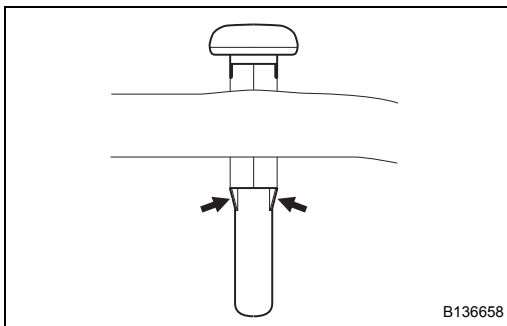


- (c) Disengage the claw and remove the rear seat headrest support.

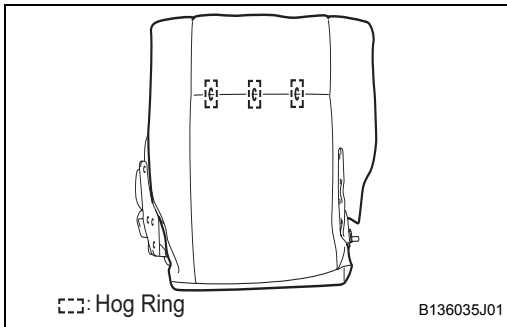**9. REMOVE SEPARATE TYPE REAR SEATBACK COVER LH**

- (a) Remove the hog rings and the separate type rear seatback cover LH.

10. REMOVE SEPARATE TYPE REAR SEATBACK PAD LH**11. REMOVE SEPARATE TYPE REAR SEAT CUSHION COVER LH**



- (a) Remove the hog rings.

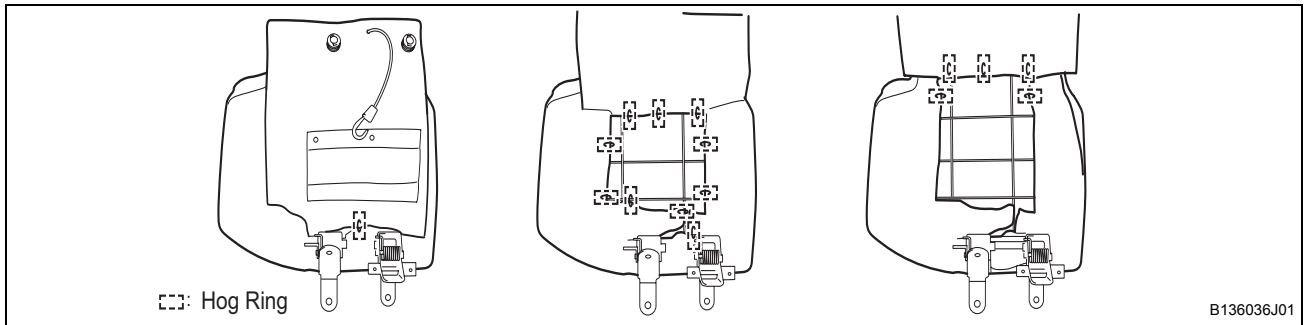

- (b) Remove the hog rings and the separate type rear seat cushion cover LH.

12. REMOVE REAR SEAT CUSHION PAD LH**13. REMOVE REAR SEAT LOCK RELEASE BAND****14. REMOVE REAR SEAT HOLDER BAND**

- (a) Remove the bolt and the rear seat holder band.

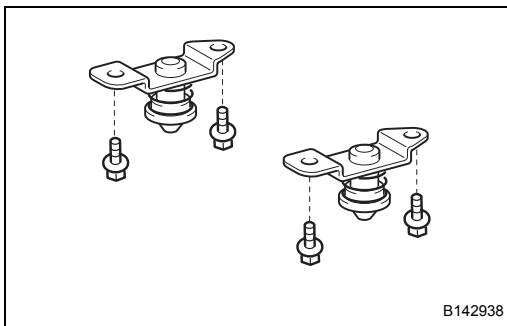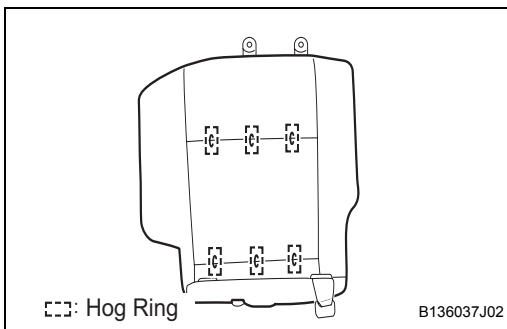15. REMOVE REAR SEAT BELT ASSEMBLY INN NO. 1 (See page SB-35)**16. REMOVE REAR SEAT CUSHION LOCK ASSEMBLY LH**


- (a) Remove the 4 bolts and the rear seat cushion lock assembly LH.

REASSEMBLY**1. INSTALL REAR SEAT CUSHION LOCK ASSEMBLY LH**

- (a) Install the rear seat cushion lock assembly LH with the 4 bolts.
Torque: 31 N*m (316 kgf*cm)

2. INSTALL REAR SEAT BELT ASSEMBLY INN NO. 1 (See page SB-35)**3. INSTALL REAR SEAT HOLDER BAND**


- (a) Put the rear seat holder band through the separate type rear seat cushion cover LH.
(b) Install the rear seat holder band with the bolt.

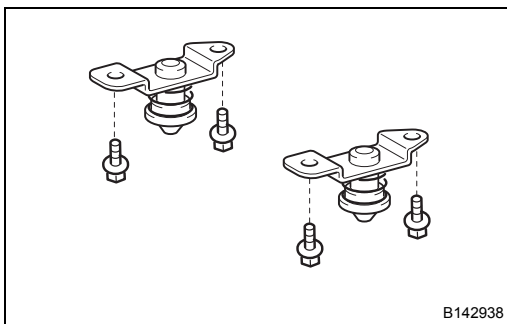4. INSTALL REAR SEAT LOCK RELEASE BAND


5. INSTALL REAR SEAT CUSHION PAD LH

6. INSTALL SEPARATE TYPE REAR SEAT CUSHION COVER LH

- (a) Using hog ring pliers, install new hog rings.

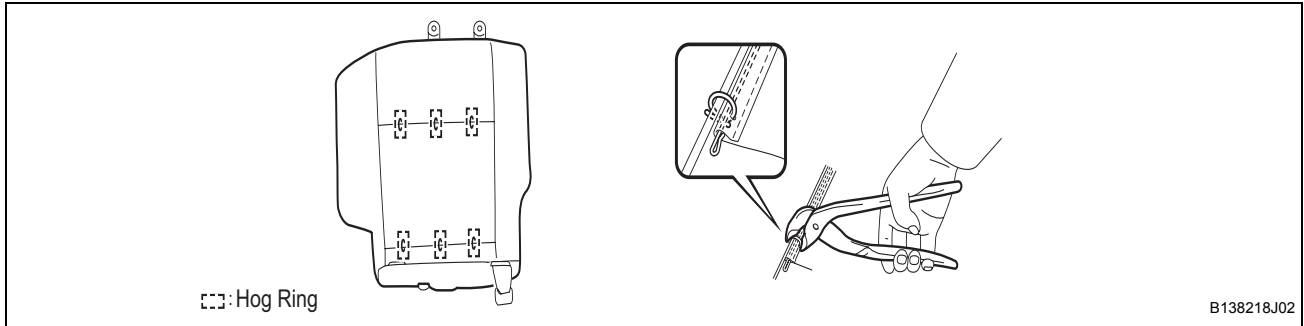**NOTICE:**


- Do not damage or soil the separate type rear seat cushion cover LH.
 - Align the center of the cover and the center of the separate type rear seat cushion cover LH, making sure to avoid wrinkles, and install hog rings.
- (b) Using hog ring pliers, install the separate type rear seat cushion cover LH with new hog rings.

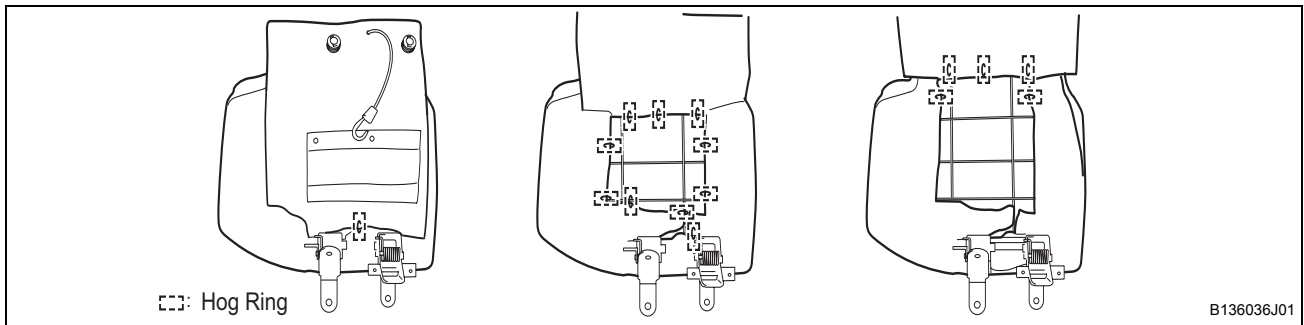

7. INSTALL SEPARATE TYPE REAR SEATBACK PAD LH

8. INSTALL SEPARATE TYPE REAR SEATBACK COVER LH

- (a) Using hog ring pliers, install the separate type rear seatback cover LH with new hog rings.

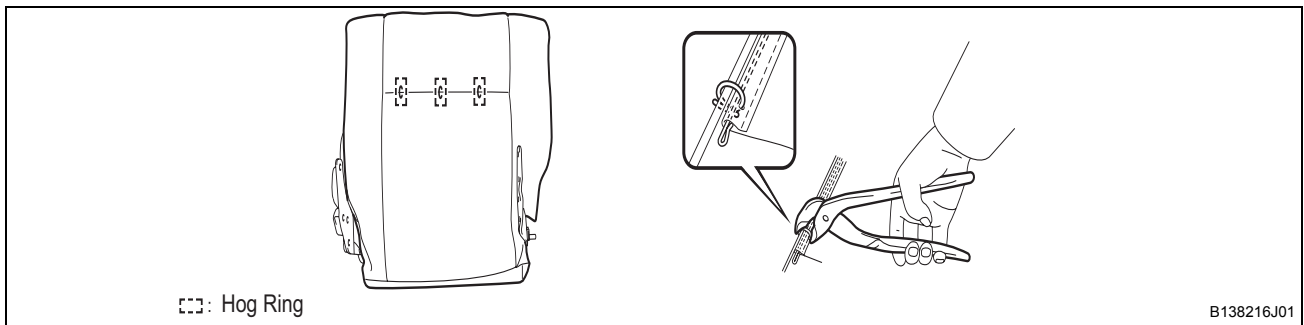**NOTICE:**


- Do not damage or soil the separate type rear seatback cover LH.

- Align the center of the cover and the center of the separate type rear seatback cover LH, making sure to avoid wrinkles, and install hog rings.

(b) Close the fastener.

(c) Engage the claws of the separate type rear seatback cover LH.


9. INSTALL REAR SEAT HEADREST SUPPORT

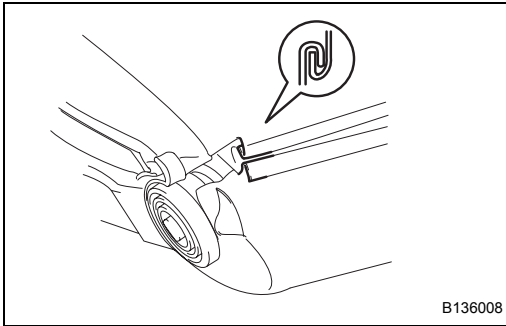

10. INSTALL REAR SEATBACK ASSEMBLY LH


(a) Install the rear seat back assembly LH with the 4 bolts.

Torque: 66 N*m (673 kgf*cm)

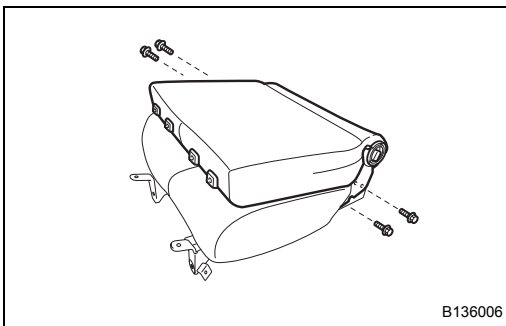

11. INSTALL REAR SEAT LOCK COVER LH


(a) Install the rear seat lock cover LH with the screw.

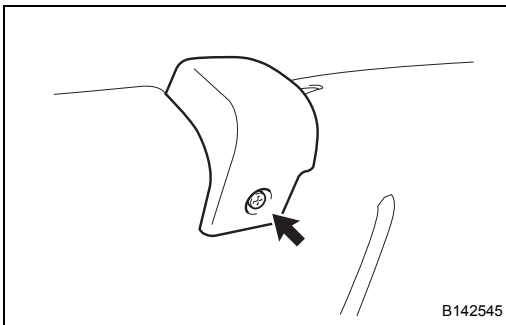


12. INSTALL REAR SEAT RECLINING COVER INN LH


(a) Install the rear seat reclining cover INN LH with the 2 screws.

13. INSTALL REAR SEAT BELT ASSEMBLY INN RH (See page SB-31)

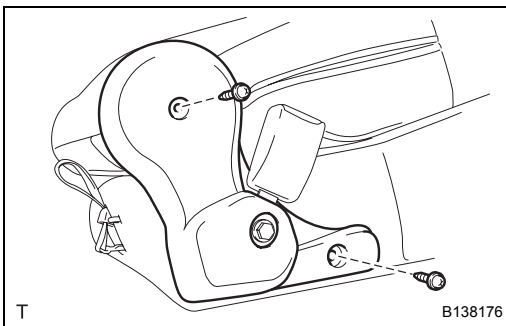


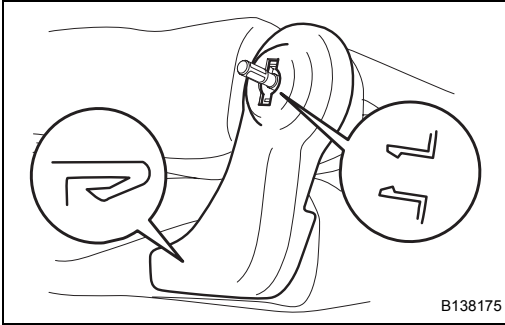**14. INSTALL REAR SEAT RECLINING COVER LH**

- (a) Engage the 2 claws and install the rear seat reclining cover LH.

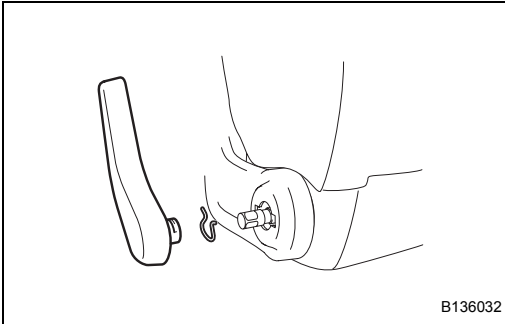**15. INSTALL RECLINING RELEASE HANDLE LH**

- (a) Attach the snap ring to the reclining release handle LH, then install the reclining release handle LH.

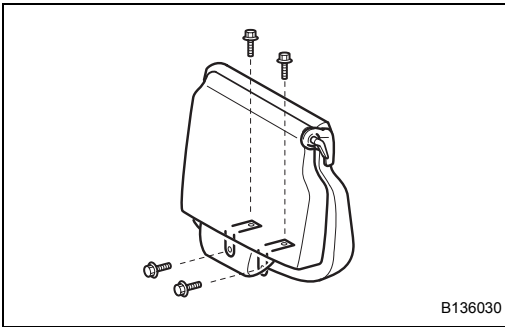16. INSTALL REAR SEAT HEADREST ASSEMBLY**INSTALLATION****1. INSTALL REAR SEAT ASSEMBLY LH**

- (a) Tighten the 4 bolts in the order shown in the illustration, and install the rear seat assembly LH.


Torque: 34 N*m (345 kgf*cm)

- (b) Check that both the two rear seat cushion locks lock smoothly.

- (c) Install the 2 clips.

2. INSTALL REAR SEAT LEG COVER

- (a) Attach the 4 claws and install the rear seat leg cover.

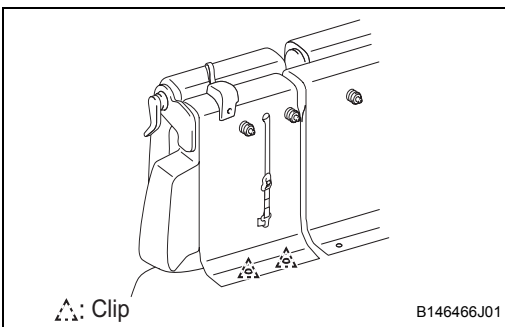

SE