


FUEL LID LOCK CONTROL CABLE


COMPONENTS



....TIGHTENING TORQUE [N*m{kgf*cm}]

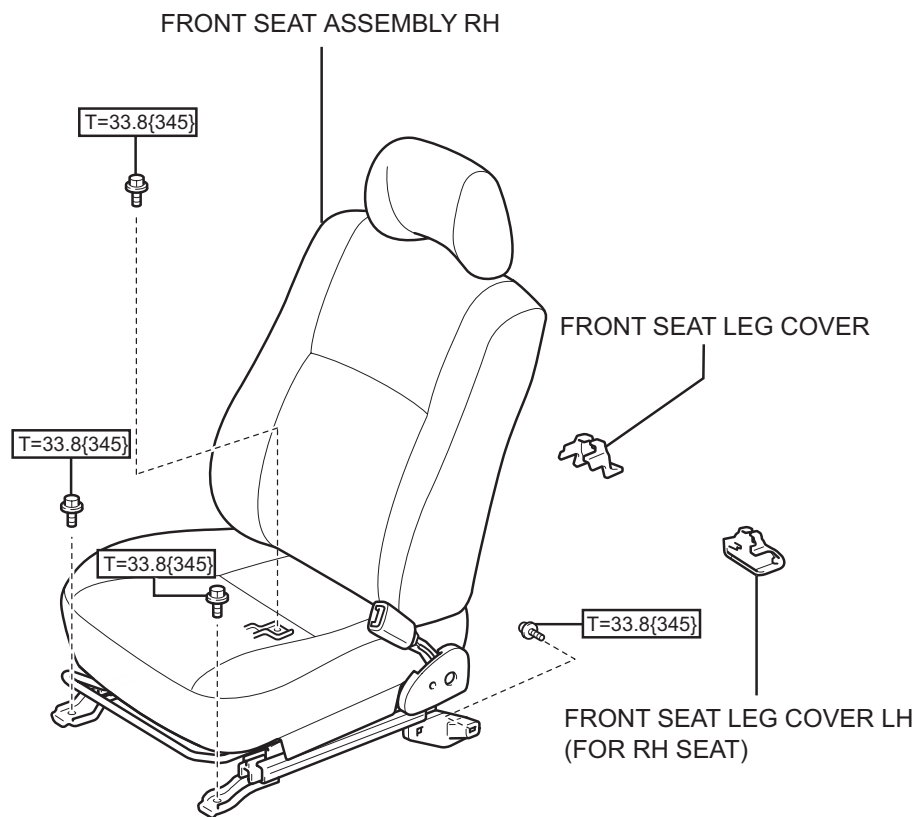

RIGHT-HAND DRIVE

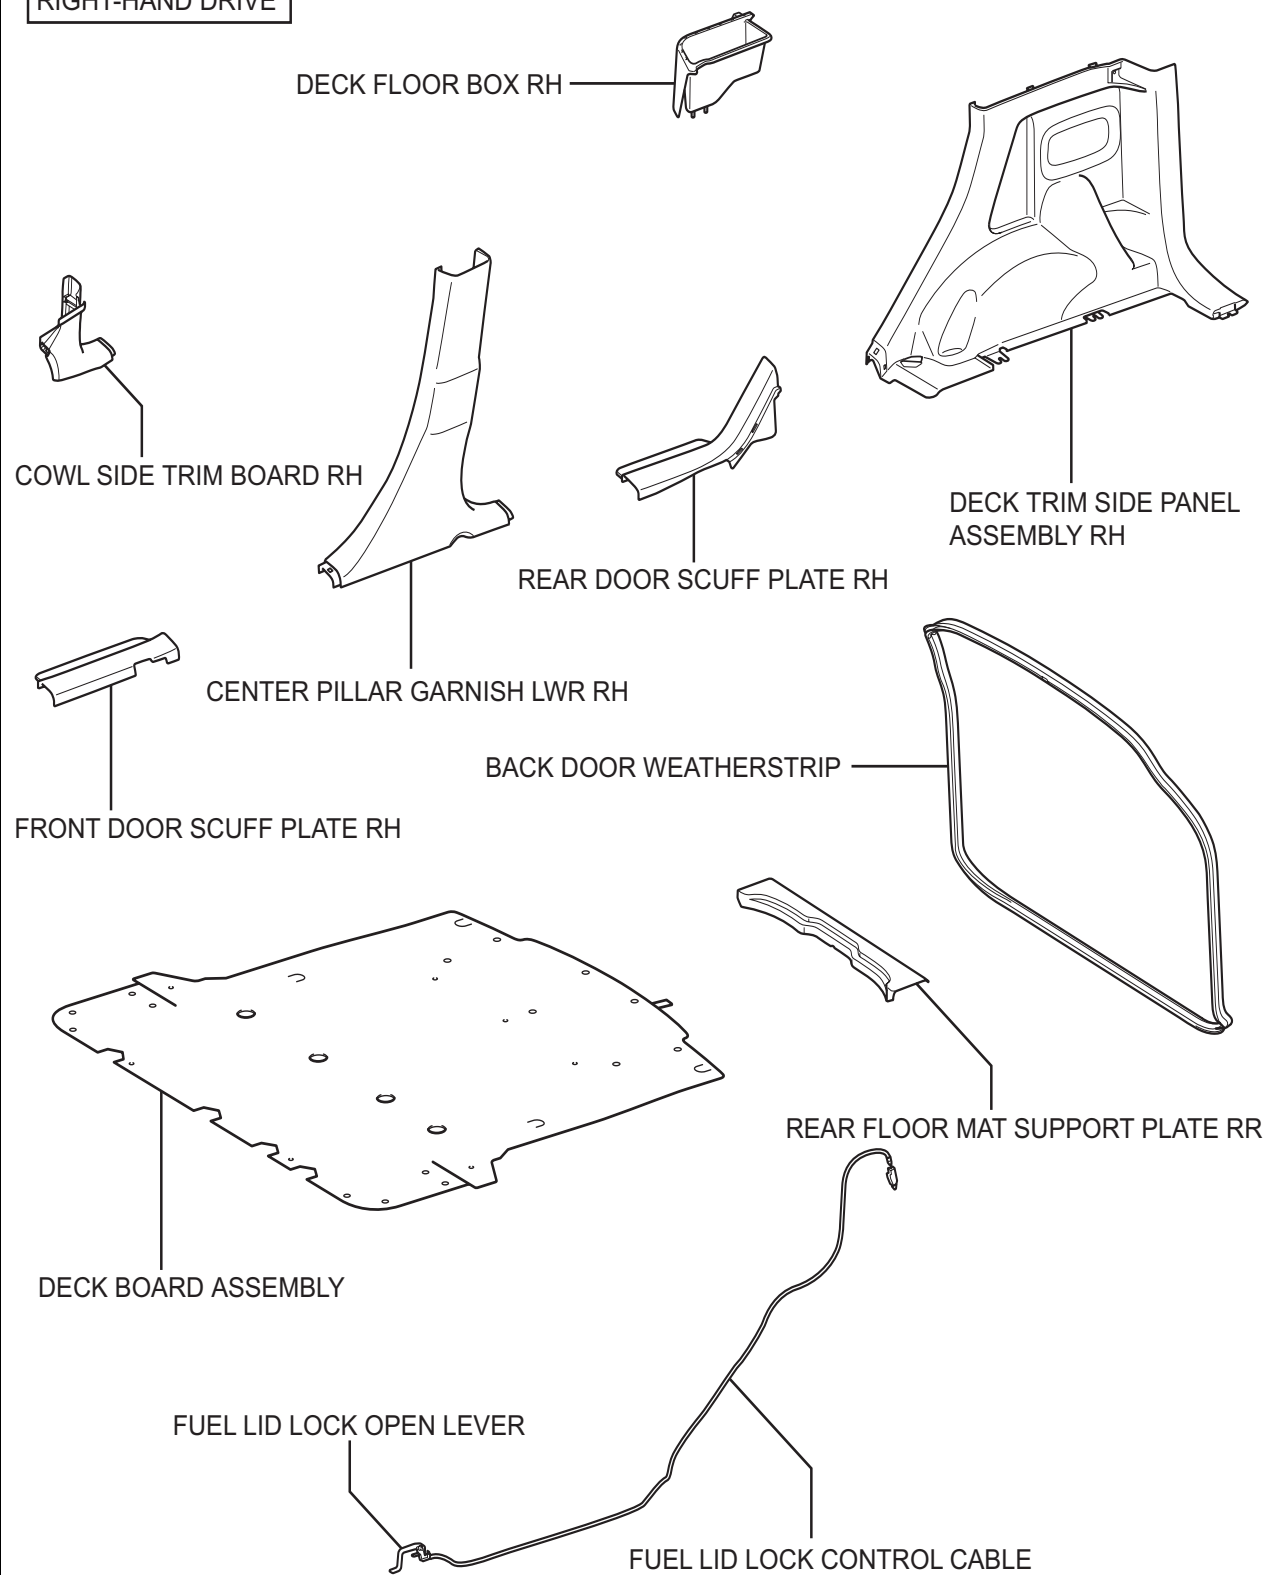


ED

LEFT-HAND DRIVE




DECK FLOOR BOX RH

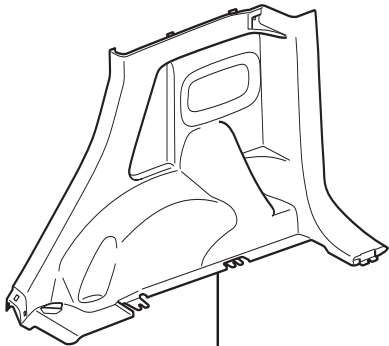

DECK TRIM SIDE PANEL ASSEMBLY RH

REAR DOOR SCUFF PLATE RH

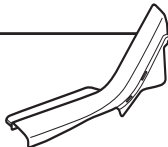


DECK FLOOR BOX LH



COWL SIDE TRIM BOARD LH

CENTER PILLAR
GARNISH LWR LH

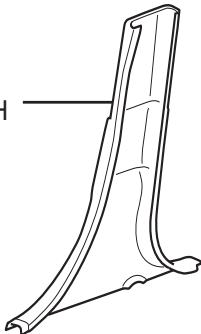

REAR DOOR SCUFF PLATE LH




FRONT DOOR SCUFF PLATE LH




ED


LEFT-HAND DRIVE

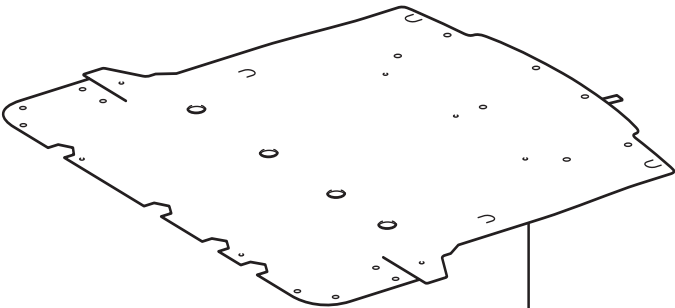


DECK BOARD ASSEMBLY

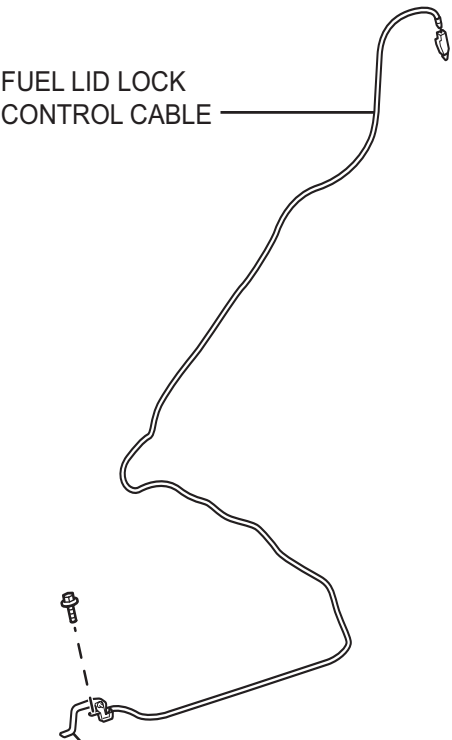


FUEL LID LOCK
CONTROL CABLE

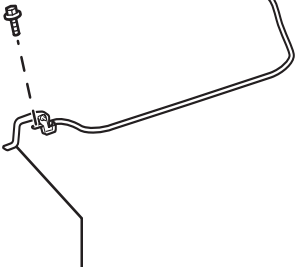

FUEL LID LOCK OPEN LEVER

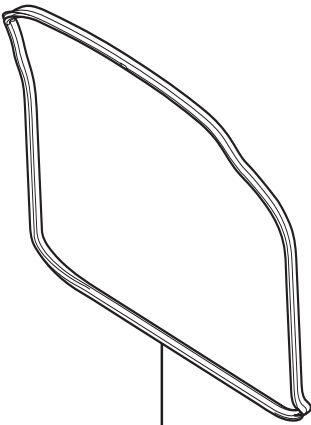

BACK DOOR WEATHERSTRIP


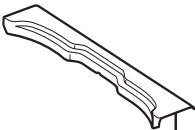


REAR FLOOR MAT SUPPORT PLATE RR

ED


REMOVAL

- For right-hand drive vehicles, please refer to step 1 to step 15.
 - For left-hand drive vehicles, please refer to step 16 to step 35.
1. **PRECAUTIONS WHEN OVERHAULING SEATS WITH SRS SIDE AIRBAGS** (See page SE-3)
 2. **REMOVE FRONT SEAT LEG COVER** (See page SE-3)
 3. **REMOVE FRONT SEAT LEG COVER LH (FOR RH SEAT)** (See page SE-3)
 4. **REMOVE FRONT SEAT ASSEMBLY RH** (See page SE-3)
 5. **REMOVE FRONT DOOR SCUFF PLATE RH** (See page IR-4)
 6. **REMOVE COWL SIDE TRIM BOARD RH** (See page IP-10)
 7. **REMOVE DECK BOARD ASSEMBLY** (See page IR-4)
 8. **REMOVE DECK FLOOR BOX RH** (See page IR-4)
 9. **REMOVE REAR DOOR SCUFF PLATE RH** (See page IR-4)
 10. **REMOVE BACK DOOR WEATHERSTRIP**
 11. **REMOVE REAR FLOOR MAT SUPPORT PLATE RR** (See page IR-5)
 12. **REMOVE CENTER PILLAR GARNISH LWR RH**
 13. **REMOVE DECK TRIM SIDE PANEL ASSEMBLY RH** (See page IR-5)
 14. **REMOVE FUEL LID LOCK OPEN LEVER**
 - (a) Remove the bolt and the fuel lid lock open lever.
 - (b) Remove the fuel lid lock open lever from the fuel lid lock control cable.

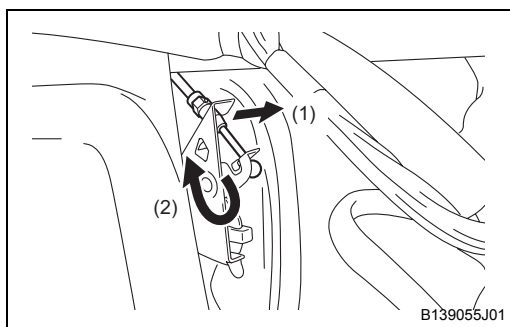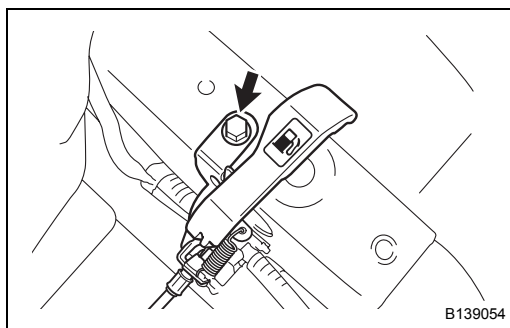


15. **REMOVE FUEL LID LOCK CONTROL CABLE**
 - (a) Disconnect the fuel lid lock control cable, as shown in the illustration.


- (b) Remove the tape and the clamps from the locations shown in the illustration, and remove the fuel lid lock control cable.

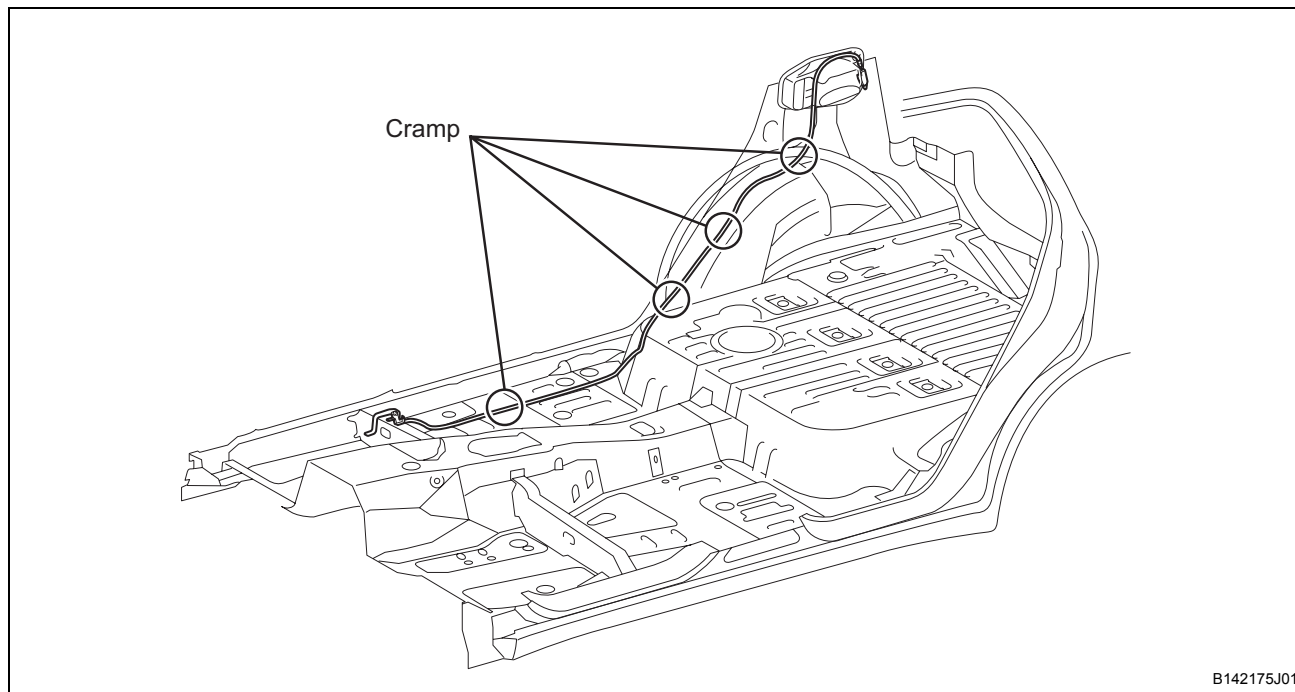


16. PRECAUTIONS WHEN OVERHAULING SEATS WITH SRS SIDE AIRBAGS (See page SE-3)
17. REMOVE FRONT SEAT LEG COVER (See page SE-3)
18. REMOVE FRONT SEAT LEG COVER LH (FOR RH SEAT) (See page SE-3)
19. REMOVE FRONT SEAT ASSEMBLY RH (See page SE-3)
20. REMOVE FRONT SEAT LEG COVER
21. REMOVE FRONT SEAT LEG COVER LH (FOR LH SEAT)
22. REMOVE FRONT SEAT ASSEMBLY LH
23. REMOVE FRONT DOOR SCUFF PLATE LH (See page IR-4)
24. REMOVE COWL SIDE TRIM BOARD LH (See page IP-10)
25. REMOVE DECK BOARD ASSEMBLY (See page IR-4)
26. REMOVE DECK FLOOR BOX RH (See page IR-4)
27. REMOVE DECK FLOOR BOX LH
28. REMOVE REAR DOOR SCUFF PLATE RH (See page IR-4)
29. REMOVE REAR DOOR SCUFF PLATE LH
30. REMOVE BACK DOOR WEATHERSTRIP
31. REMOVE REAR FLOOR MAT SUPPORT PLATE RR (See page IR-5)
32. REMOVE CENTER PILLAR GARNISH LWR LH
33. REMOVE DECK TRIM SIDE PANEL ASSEMBLY RH (See page IR-5)

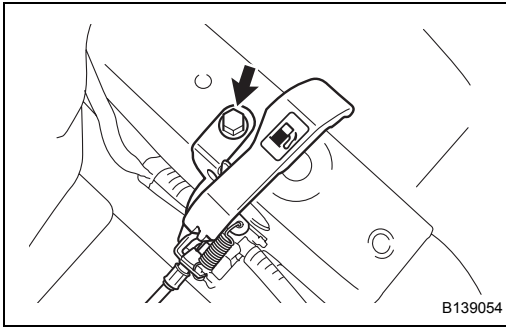**34. REMOVE FUEL LID LOCK OPEN LEVER**

- (a) Remove the bolt and the fuel lid lock open lever.
- (b) Remove the fuel lid lock open lever from the fuel lid lock control cable.

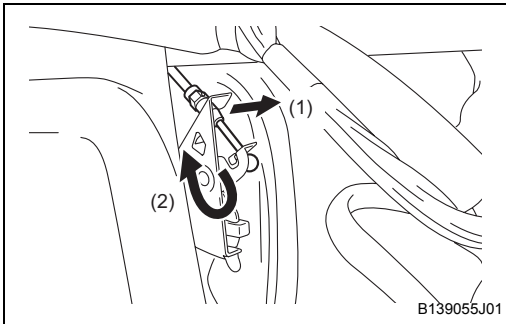**35. REMOVE FUEL LID LOCK CONTROL CABLE**

- (a) Disconnect the fuel lid lock control cable, as shown in the illustration.
- (b) Remove the tape and the resin band from the locations shown in the illustration, and remove the fuel lid lock control cable.

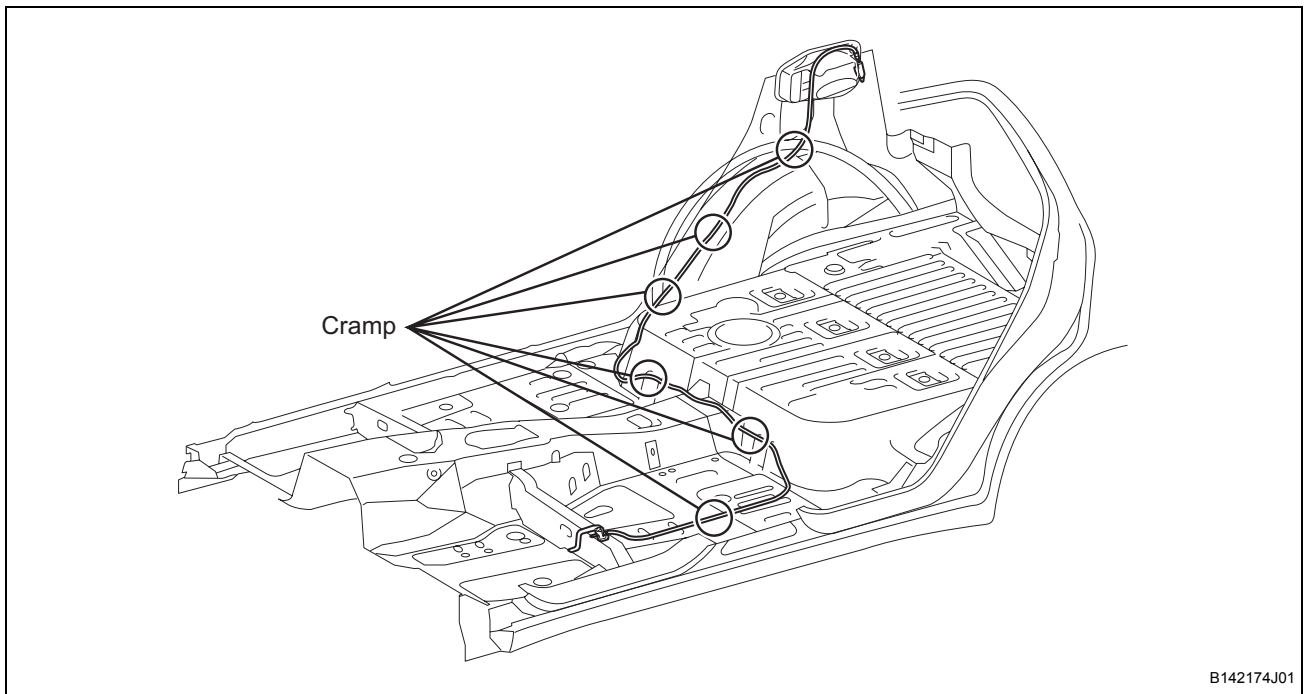


ED

INSTALLATION

- For right-hand drive vehicles, please refer to step 1 to step 17.
- For left-hand drive vehicles, please refer to step 18 to step 39.


1. INSTALL FUEL FILLER OPENING LID LOCK**2. INSTALL FUEL LID LOCK OPEN LEVER**

- (a) Connect the fuel lid lock control cable.

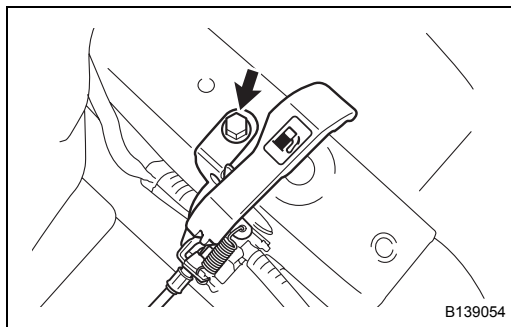


- (b) Install the fuel lid lock open lever with the bolt.

Torque: 6.0 N*m (61 kgf*cm)

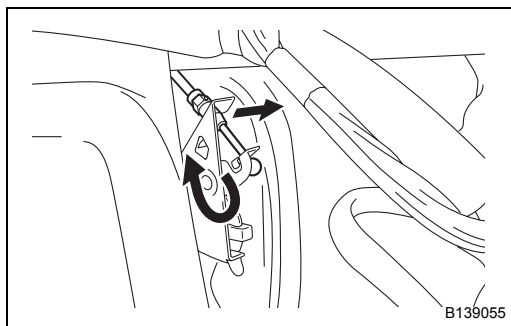



3. INSTALL FUEL LID LOCK CONTROL CABLE

- (a) Connect the fuel lid lock control cable assembly, as shown in the illustration.
- (b) Install the fuel lid lock control cable with the tape and the clamps on the location, as shown in the illustration.

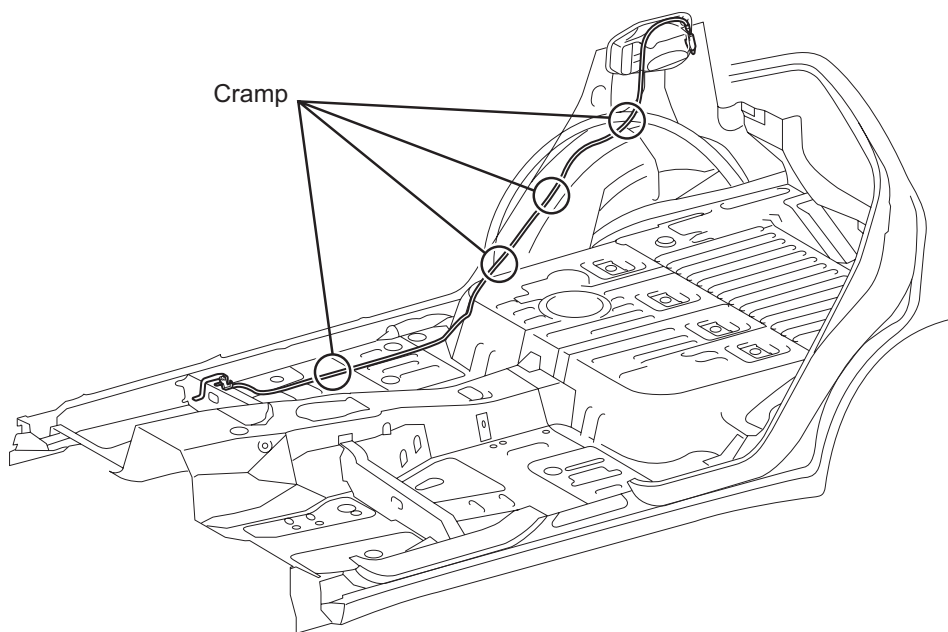

4. INSTALL DECK TRIM SIDE PANEL ASSEMBLY RH (See page IR-12)
5. INSTALL REAR FLOOR MAT SUPPORT PLATE RR (See page IR-13)
6. INSTALL REAR DOOR SCUFF PLATE RH (See page IR-12)
7. INSTALL DECK FLOOR BOX RH (See page IR-12)
8. INSTALL BACK DOOR WEATHERSTRIP
9. INSTALL DECK BOARD ASSEMBLY (See page IR-13)


10. INSTALL CENTER PILLAR GARNISH LWR RH
11. INSTALL COWL SIDE TRIM BOARD RH (See page IP-19)
12. INSTALL FRONT DOOR SCUFF PLATE RH (See page IR-12)
13. INSTALL FRONT SEAT ASSEMBLY RH (See page SE-8)
14. INSTALL FRONT SEAT LEG COVER LH (FOR RH SEAT) (See page SE-9)
15. INSTALL FRONT SEAT LEG COVER (See page SE-9)
16. CHECK AIRBAG WARNING LIGHT (See page RS-1)
17. PERFORM INITIALIZATION (See page SE-9)
18. INSTALL FUEL FILLER OPENING LID LOCK
19. INSTALL FUEL LID LOCK OPEN LEVER
 - (a) Connect the fuel lid lock control cable.
 - (b) Install the fuel lid lock open lever with the bolt.
Torque: 6.0 N*m (61 kgf*cm)

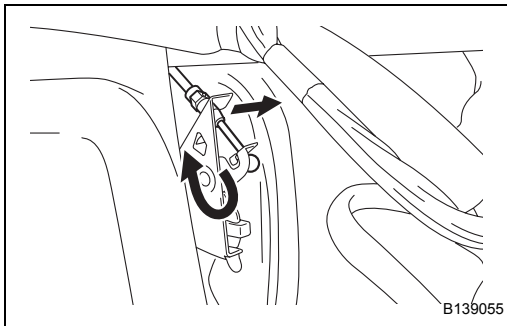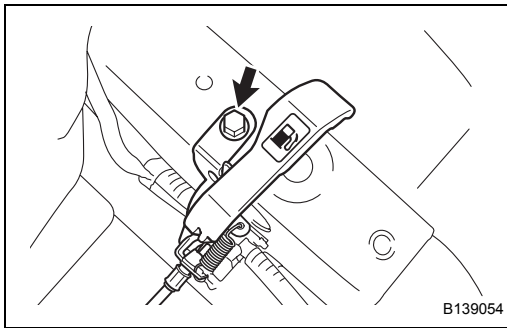

20. INSTALL FUEL LID LOCK CONTROL CABLE

- (a) Connect the fuel lid lock control cable assembly, as shown in the illustration.

- (b) Install the fuel lid lock control cable with the tape and the clamps on the location, as shown in the illustration.

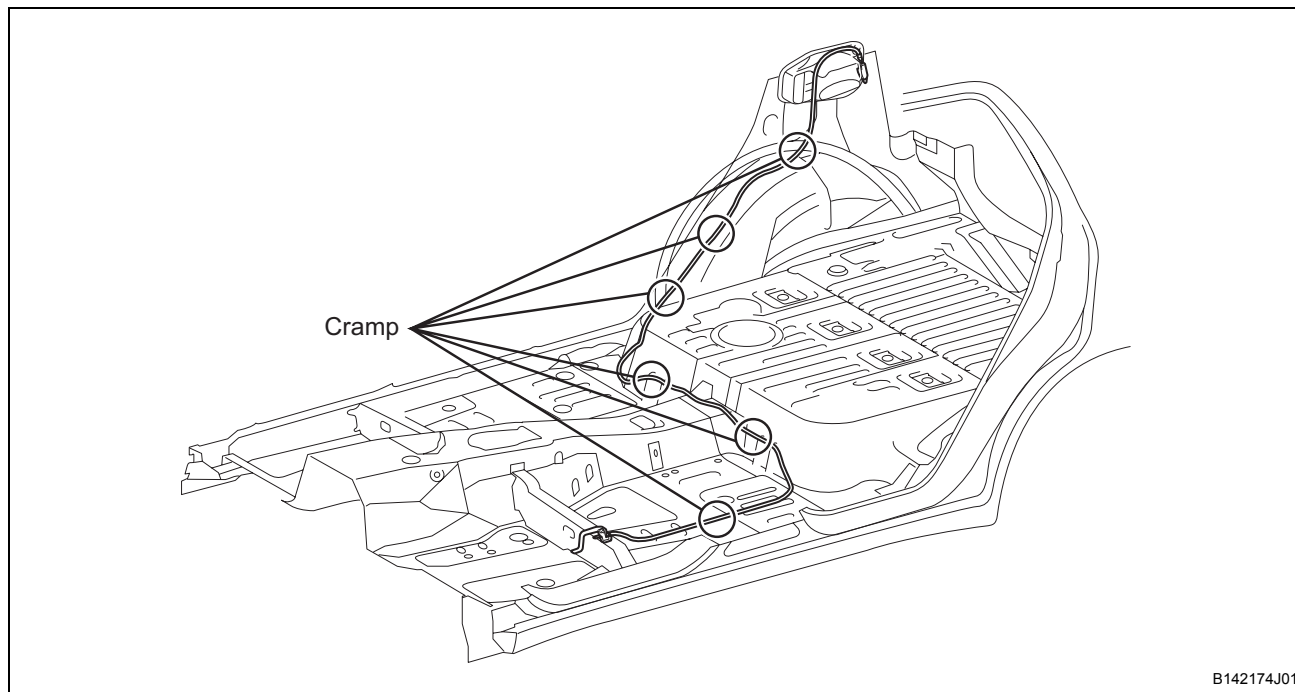

21. INSTALL DECK TRIM SIDE PANEL ASSEMBLY RH (See page IR-12)
22. INSTALL REAR FLOOR MAT SUPPORT PLATE RR (See page IR-13)
23. INSTALL REAR DOOR SCUFF PLATE RH (See page IR-12)
24. INSTALL REAR DOOR SCUFF PLATE LH
25. INSTALL DECK FLOOR BOX RH (See page IR-12)
26. INSTALL DECK FLOOR BOX LH
27. INSTALL BACK DOOR WEATHERSTRIP
28. INSTALL DECK BOARD ASSEMBLY (See page IR-13)
29. INSTALL CENTER PILLAR GARNISH LWR LH
30. INSTALL COWL SIDE TRIM BOARD LH (See page IP-19)
31. INSTALL FRONT DOOR SCUFF PLATE LH (See page IR-12)
32. INSTALL FRONT SEAT ASSEMBLY RH (See page SE-8)
33. INSTALL FRONT SEAT LEG COVER LH (FOR RH SEAT) (See page SE-9)
34. INSTALL FRONT SEAT LEG COVER (See page SE-9)
35. INSTALL FRONT SEAT ASSEMBLY LH
36. INSTALL FRONT SEAT LEG COVER LH (FOR LH SEAT)
37. INSTALL FRONT SEAT LEG COVER
38. CHECK AIRBAG WARNING LIGHT (See page RS-1)
39. PERFORM INITIALIZATION (See page SE-9)

