




FRONT FENDER LH

COMPONENTS

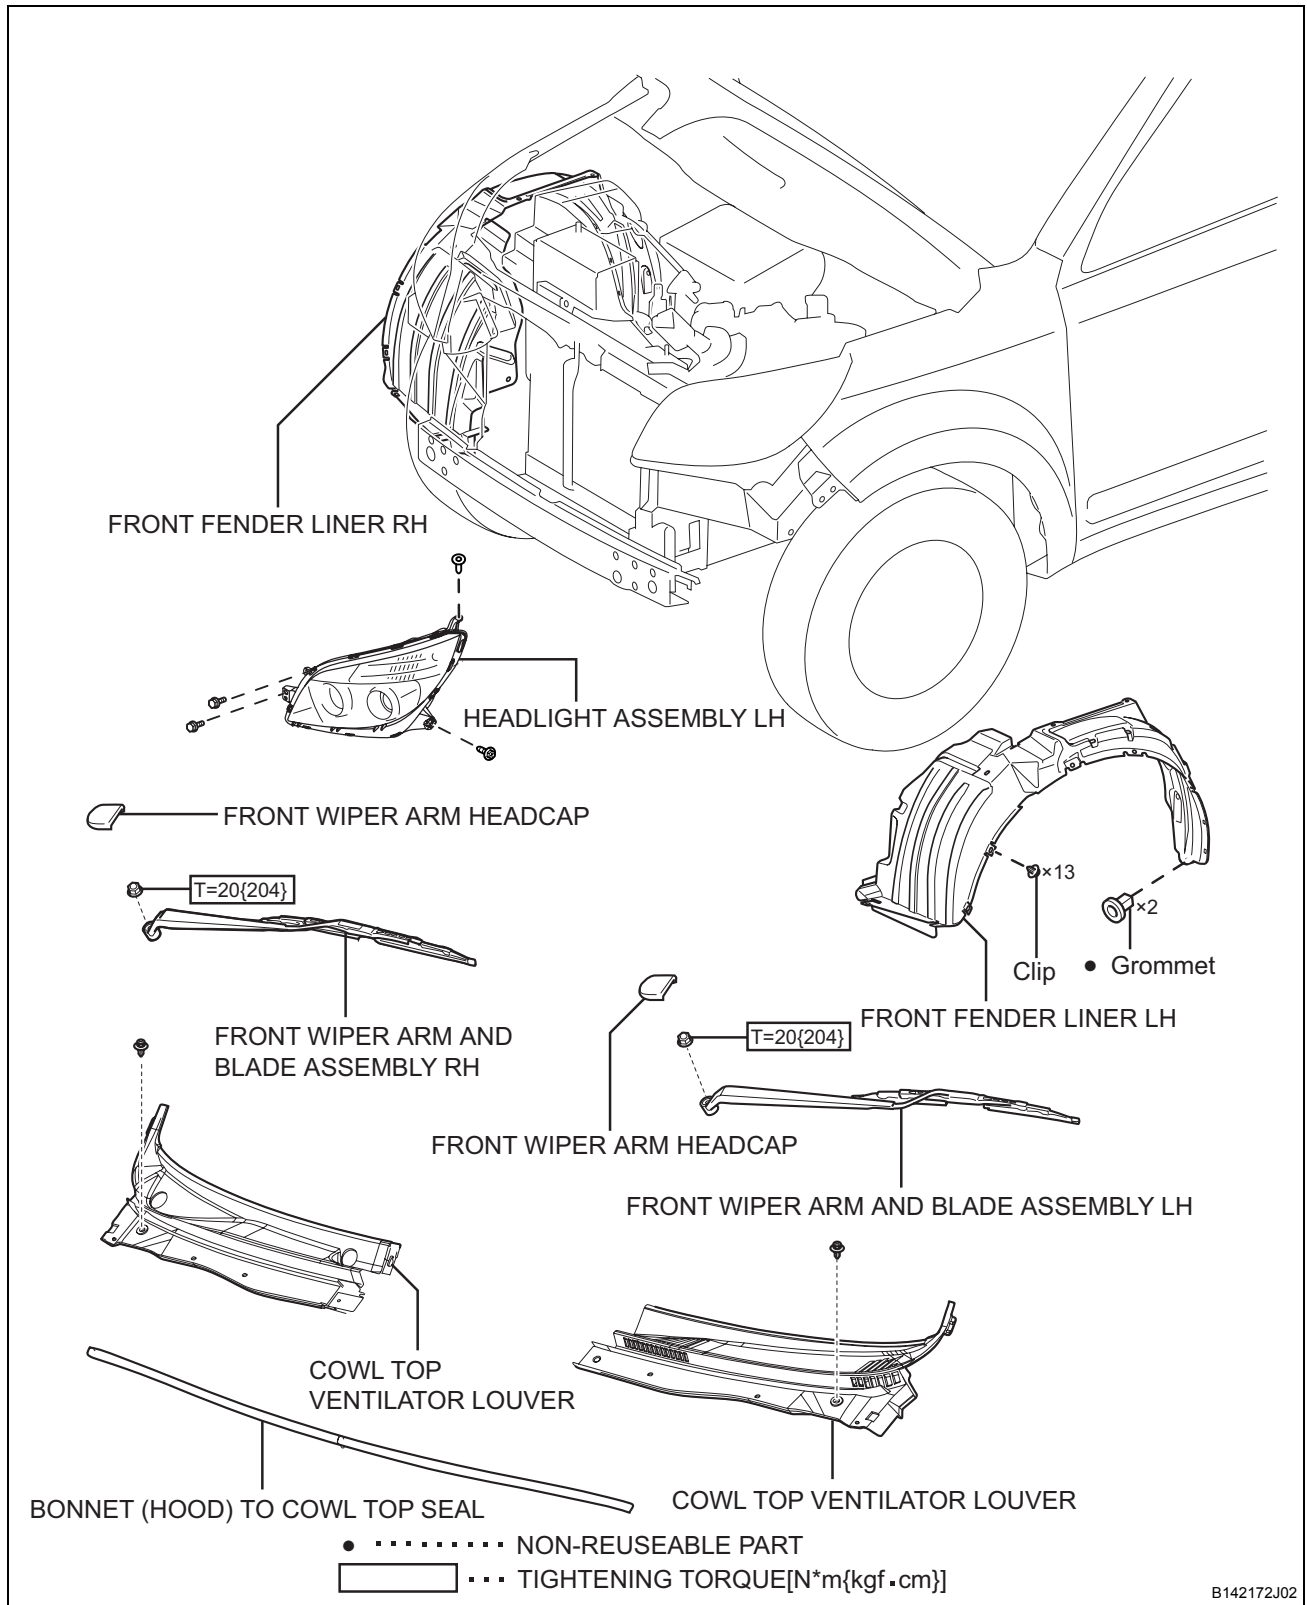


ED



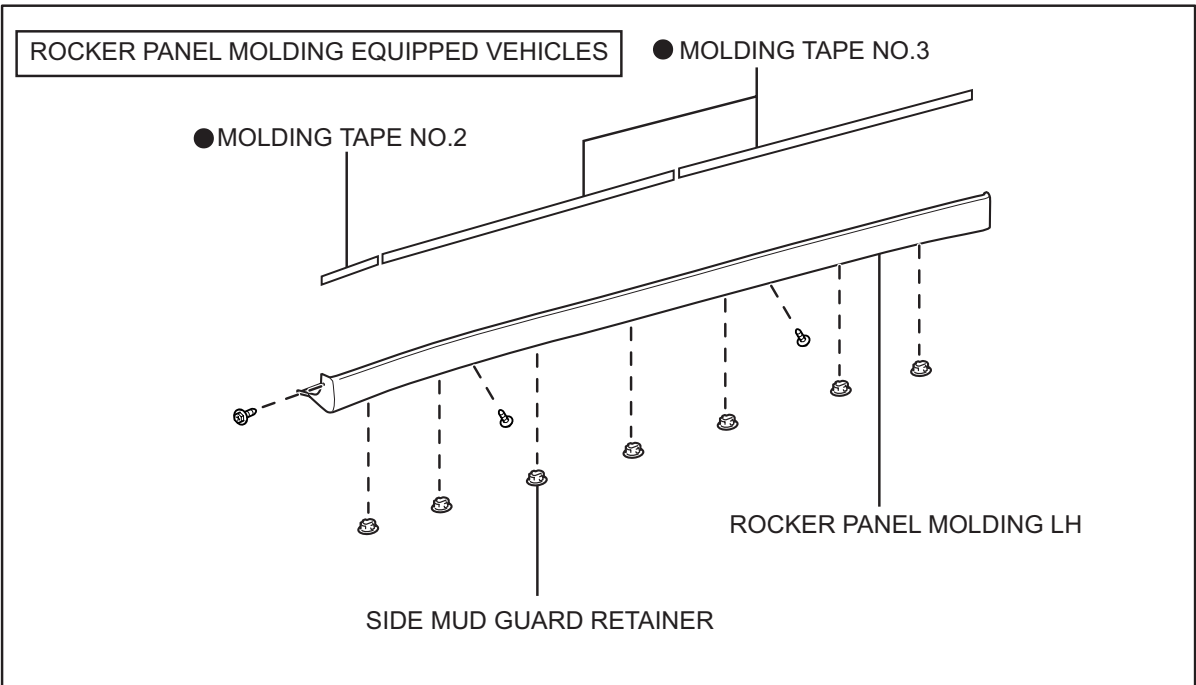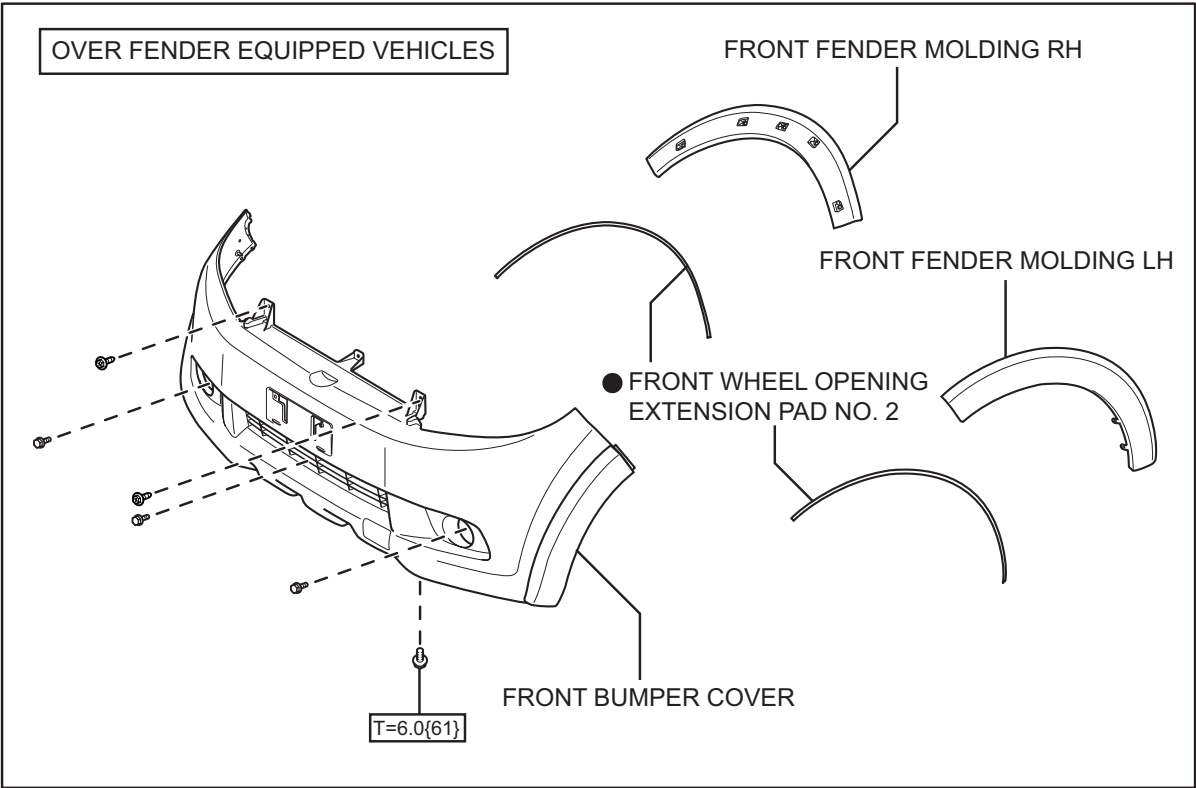

● NON-REUSEABLE PART

..... TIGHTENING TORQUE [N*m{kgf*cm}]

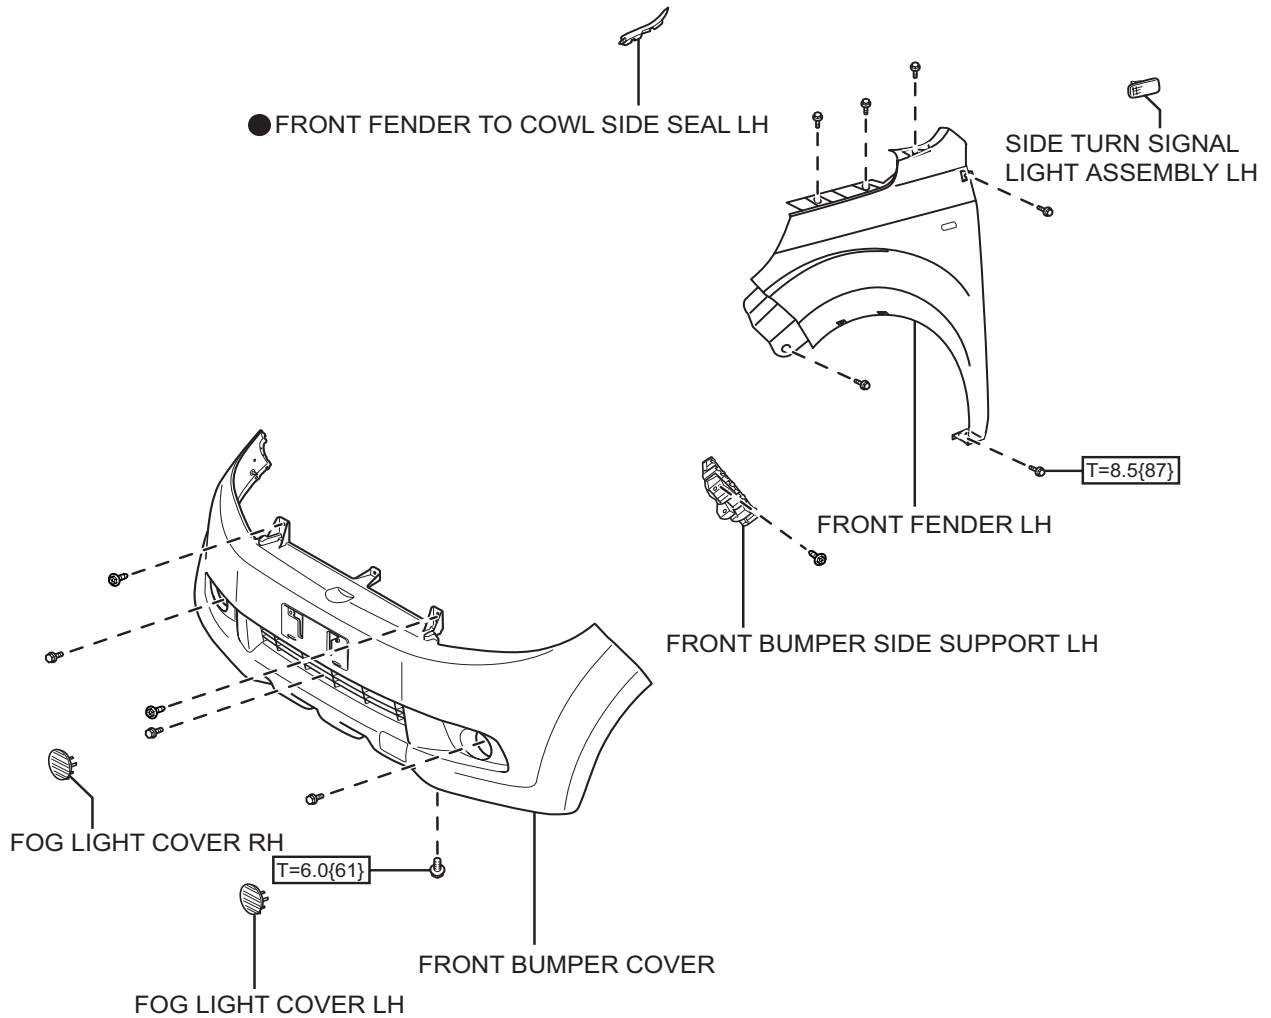

FOG LIGHT EQUIPPED VEHICLES



SIDE MUD GUARD EQUIPPED VEHICLES





● NON-REUSEABLE PART

 TIGHTENING TORQUE[N*m{kgf·cm}]


REMOVAL

1. REMOVE FRONT WIPER ARM AND BLADE ASSEMBLY RH (See page WW-5)
2. REMOVE FRONT WIPER ARM AND BLADE ASSEMBLY LH (See page WW-5)
3. REMOVE COWL TOP VENTILATOR LOUVER (See page WW-5)
4. REMOVE FRONT FENDER MUD GUARD LH (WITH SIDE MUD GUARD) (See page ET-13)
5. REMOVE SIDE MUD GUARD RETAINER (WITH ROCKER PANEL MOLDING) (See page ET-20)
6. REMOVE ROCKER PANEL MOLDING LH (WITH ROCKER PANEL MOLDING) (See page ET-20)
7. REMOVE MOLDING TAPE NO. 2 (WITH ROCKER PANEL MOLDING)
8. REMOVE MOLDING TAPE NO. 3 (WITH ROCKER PANEL MOLDING)
9. REMOVE FRONT FENDER MOLDING LH (WITH OVER FENDER) (See page ET-25)
10. REMOVE FRONT FENDER MOLDING RH (WITH OVER FENDER)
11. REMOVE FRONT WHEEL OPENING EXTENSION PAD NO. 2 (WITH OVER FENDER) (See page ET-25)
12. REMOVE FRONT FENDER LINER RH
 - (a) Remove the clip, then roll back the front fender liner RH.

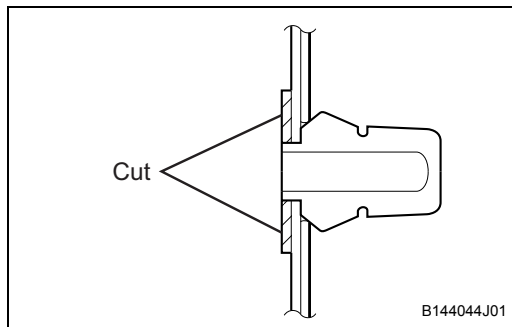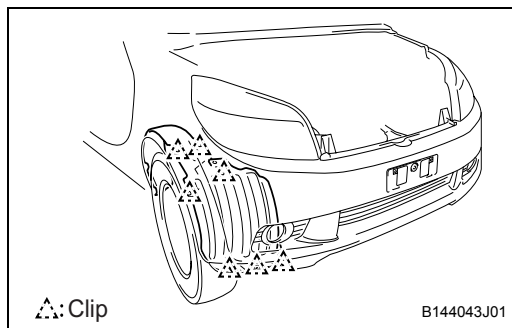
ED

13. REMOVE FRONT FENDER LINER LH
 - (a) Cut off the fender liner with a cutter knife and remove the 2 grommets.
 - (b) Remove the 13 clips and the front fender liner LH.
14. REMOVE FOG LIGHT ASSEMBLY LH (WITH FOG LIGHT)
15. REMOVE FOG LIGHT ASSEMBLY RH (WITH FOG LIGHT)
16. REMOVE FOG LIGHT COVER LH (WITHOUT FOG LIGHT) (See page ET-2)
17. REMOVE FOG LIGHT COVER RH (WITHOUT FOG LIGHT)
18. REMOVE FRONT BUMPER COVER (See page ET-2)
19. REMOVE FRONT BUMPER SIDE SUPPORT LH (See page ET-3)
20. REMOVE SIDE TURN SIGNAL LIGHT ASSEMBLY LH (See page LI-35)

21. REMOVE FRONT FENDER TO COWL SIDE SEAL LH
22. REMOVE HEADLIGHT ASSEMBLY LH (See page LI-26)
23. REMOVE FRONT FENDER LH
 - (a) Remove the 6 bolts and the front fender LH.

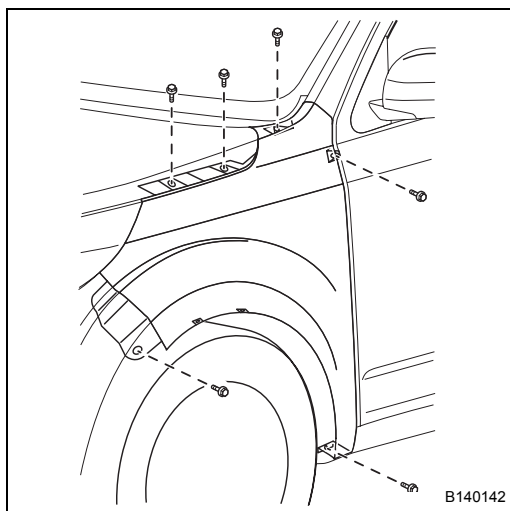

INSTALLATION

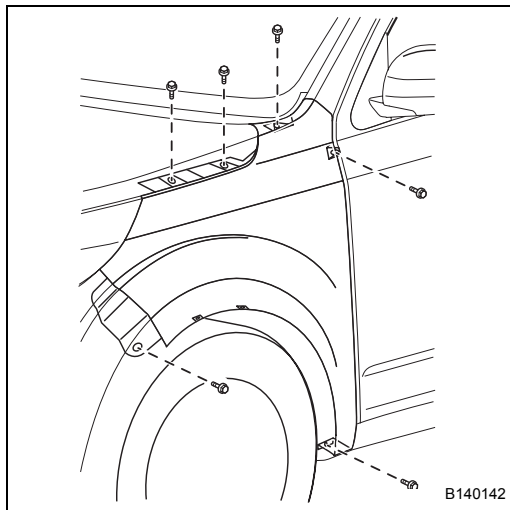

1. INSTALL FRONT FENDER LH
 - (a) Install the front fender LH with the 6 bolts.
Torque: 8.5 N*m (87 kgf*cm)
2. INSTALL FRONT FENDER TO COWL SIDE SEAL LH
 - (a) Heat the double-sided tape on the vehicle body with a heat gun. Then scrape off the tape using a rag.
 - (b) Clean the application surface on the body side with a solvent.
 - (c) Install a new front fender to cowl side seal LH with double-sided tape.
3. INSTALL SIDE TURN SIGNAL LIGHT ASSEMBLY LH (See page LI-36)
4. INSTALL HEADLIGHT ASSEMBLY LH
5. INSTALL FRONT BUMPER SIDE SUPPORT RH (See page ET-5)
6. INSTALL FRONT BUMPER COVER (See page ET-5)
7. REMOVE FOG LIGHT ASSEMBLY LH (WITH FOG LIGHT)
8. REMOVE FOG LIGHT ASSEMBLY RH (WITH FOG LIGHT)
9. REMOVE FOG LIGHT COVER LH (WITHOUT FOG LIGHT)
10. INSTALL FOG LIGHT COVER RH (WITHOUT FOG LIGHT)
11. INSTALL FRONT FENDER LINER LH
 - (a) Install the front fender liner LH with the 13 clips.
 - (b) Install 2 new grommets. (Vehicles without the rocker panel molding and side mud guard)
12. INSTALL FRONT FENDER LINER RH
13. CLEAN VEHICLE INSTALLATION SURFACE (WITH ROCKER PANEL MOLDING) (See page ET-21)
14. CLEAN ROCKER PANEL MOLDING LH (WHEN REUSING) (See page ET-21)
15. INSTALL MOLDING TAPE NO. 2 (WITH ROCKER PANEL MOLDING) (See page ET-22)

16. INSTALL MOLDING TAPE NO. 3 (WITH ROCKER PANEL MOLDING) (See page ET-22)
17. INSTALL ROCKER PANEL MOLDING LH (WITH ROCKER PANEL MOLDING) (See page ET-22)
18. INSTALL SIDE MUD GUARD RETAINER (WITH ROCKER PANEL MOLDING) (See page ET-23)
19. INSTALL FRONT FENDER MUD GUARD LH (WITH SIDE MUD GUARD) (See page ET-14)
20. REMOVE FRONT WHEEL OPENING EXTENSION PAD NO. 2 (WITH OUTSIDE MOLDING) (See page ET-27)
21. INSTALL FRONT FENDER MOLDING RH (WITH OUTSIDE MOLDING)
22. INSTALL FRONT FENDER MOLDING LH (WITH OUTSIDE MOLDING) (See page ET-27)
23. INSTALL COWL TOP VENTILATOR LOUVER (See page WW-8)
24. INSTALL FRONT WIPER ARM AND BLADE ASSEMBLY RH (See page WW-9)
25. INSTALL FRONT WIPER ARM AND BLADE ASSEMBLY LH (See page WW-10)
26. PERFORM INITIALIZATION (See page SS-11)