




FRONT BUMPER

COMPONENTS

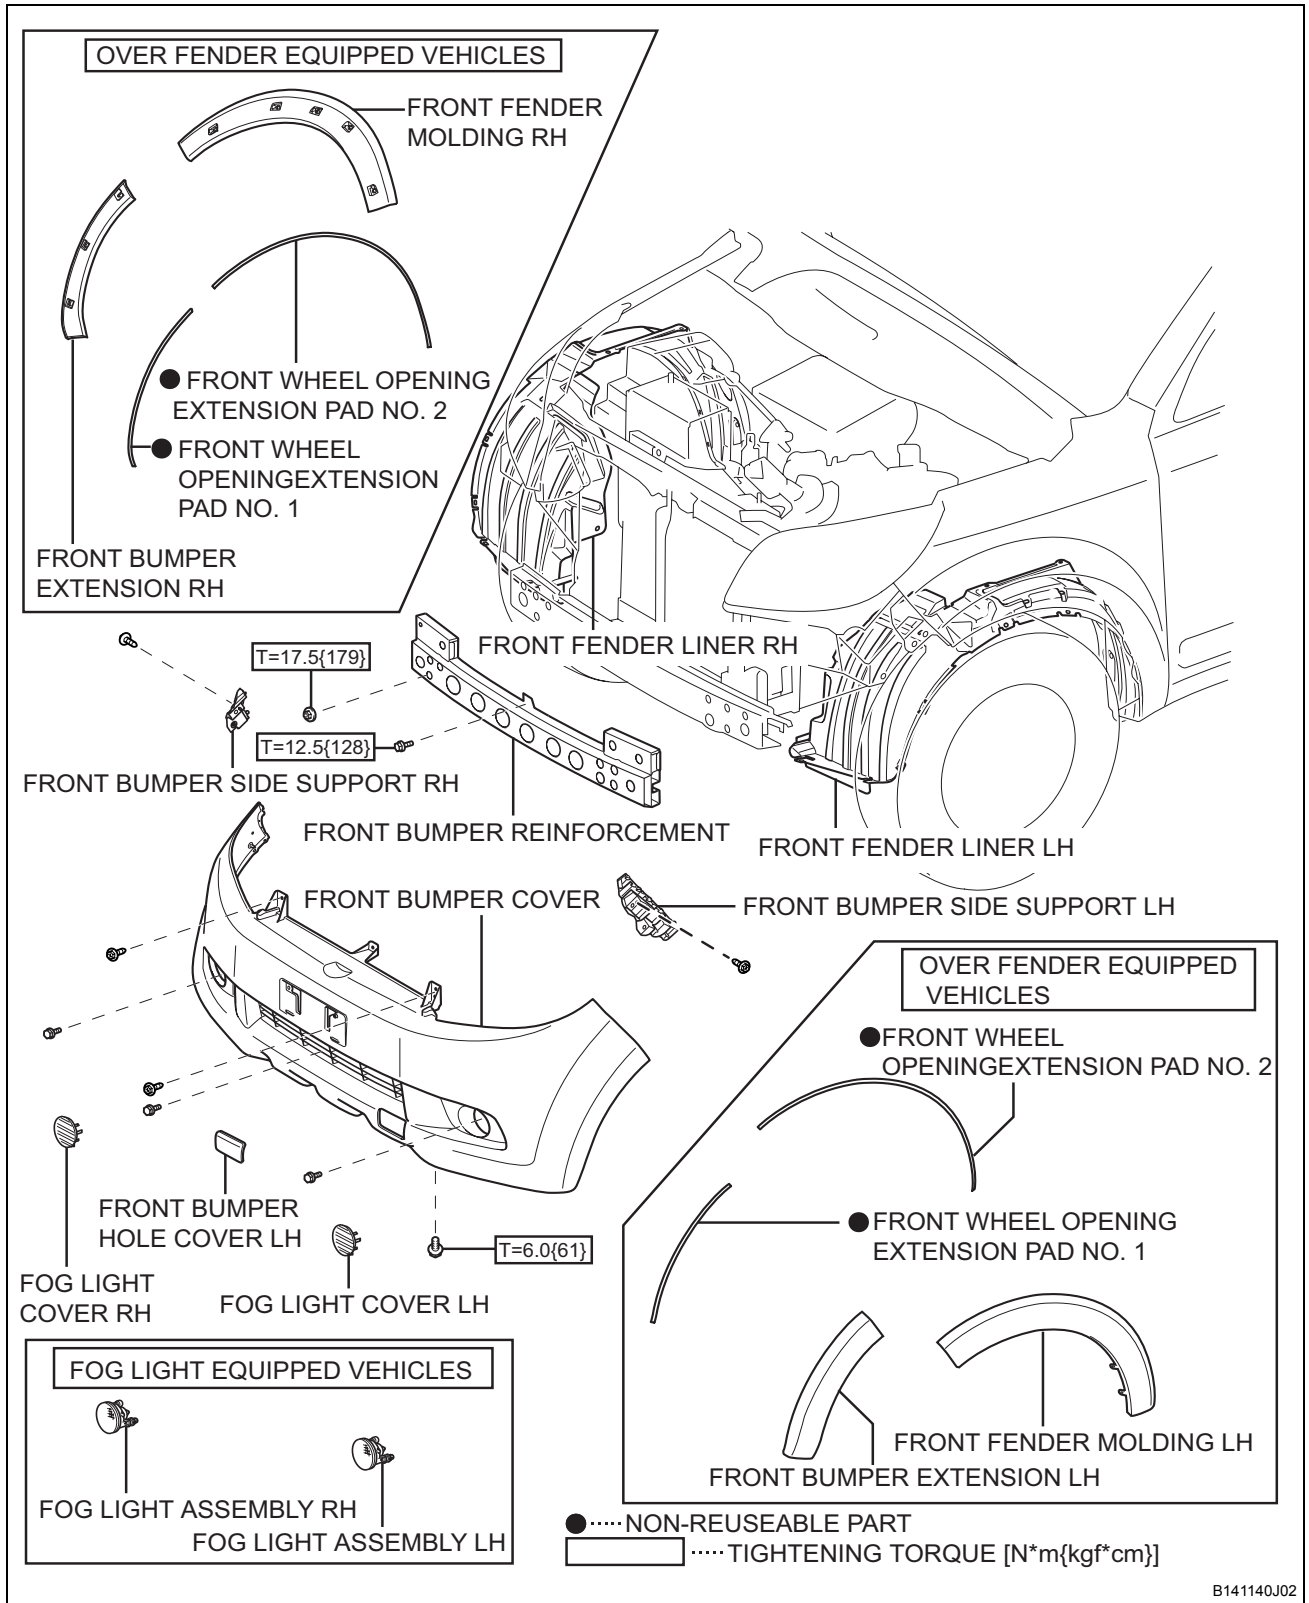

REMOVAL


1. REMOVE FRONT FENDER MOULDING LH (WITH OVER FENDER)
(See page ET-25)
2. REMOVE FRONT FENDER MOULDING RH (WITH OVER FENDER)
3. REMOVE FRONT WHEEL OPENING EXTENSION PAD NO. 2
(WITH OVER FENDER) (See page ET-25)
4. REMOVE FRONT FENDER LINER LH
(a) Remove the clip, then roll back the front fender liner LH.
5. REMOVE FRONT FENDER LINER RH
6. REMOVE FOG LIGHT ASSEMBLY LH (WITH FOG LIGHT) (See page LI-33)
7. REMOVE FOG LIGHT ASSEMBLY RH (WITH FOG LIGHT)

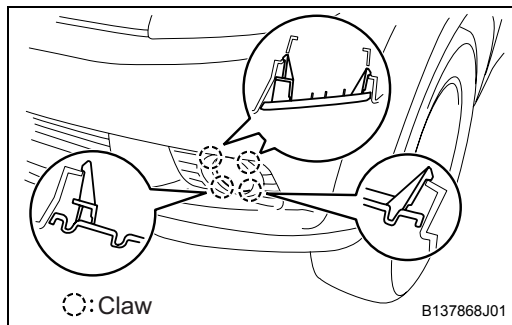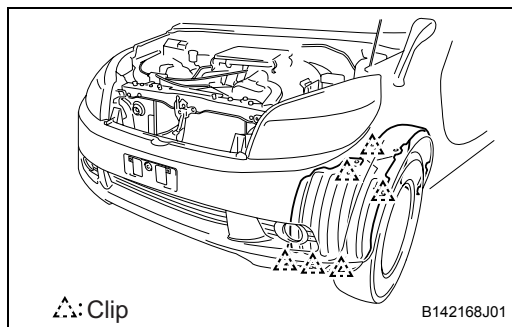


8. REMOVE FOG LIGHT COVER LH (WITHOUT FOG LIGHT)
(a) Disengage the 4 claws and remove the fog light cover LH.
9. REMOVE FOG LIGHT COVER RH (WITHOUT FOG LIGHT)

10. REMOVE FRONT BUMPER COVER

- (a) Apply protective tape as shown in the illustration.
- (b) Remove the 5 clips, the 5 bolts, and the 2 screws.

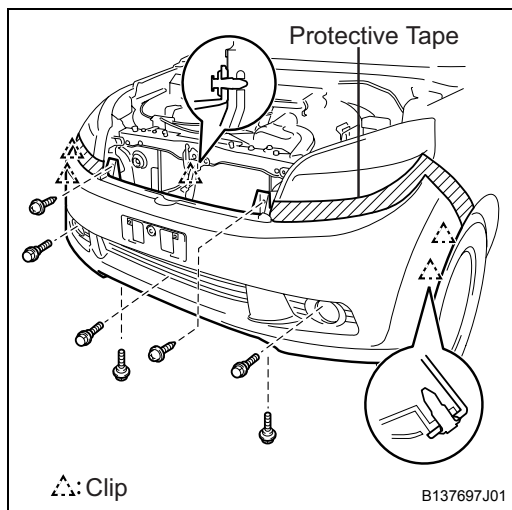


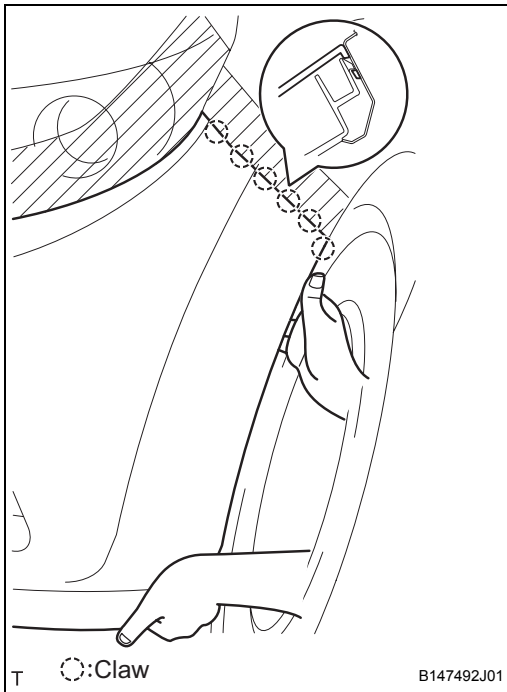


- (c) Hold the front bumper cover with both hands as shown in the illustration. With the front bumper cover pushed up, disengage the 6 claws on the left and right side without damaging them. Then remove the front bumper cover.

NOTICE:


- Disengaging the claws all at once may damage the claw on the front bumper side support or the front bumper cover. Be sure to disengage the claws one at a time from the outside.
- Hold areas close to the claws when disengaging the claws. Holding areas away from the claws may damage the claws or the front bumper cover.
- Securely hold the front bumper cover so that it will not fall down.

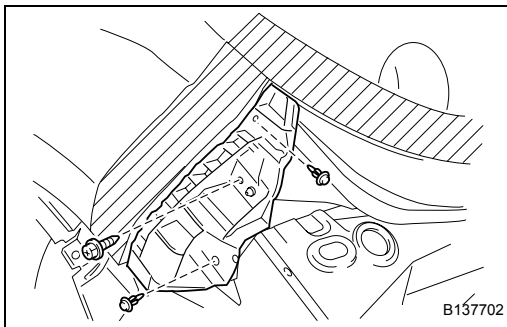
**11. REMOVE FRONT BUMPER SIDE SUPPORT RH**

- (a) Remove the screw and the 2 clips.

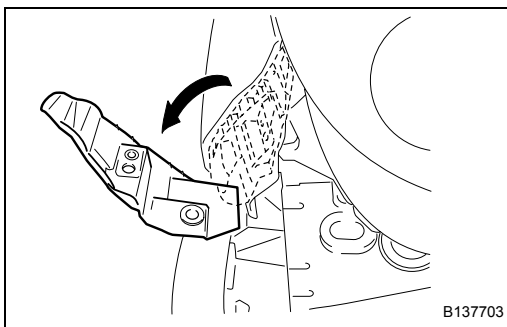

- (b) Turn the front bumper side support approximately 90° and remove it, as shown in the illustration.

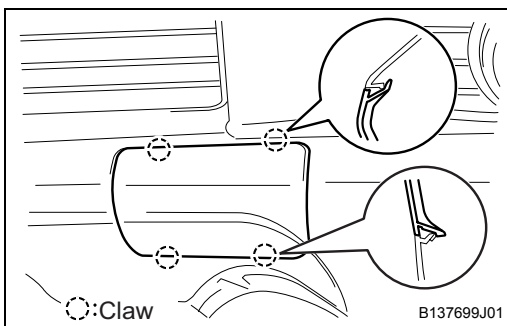12. REMOVE FRONT BUMPER SIDE SUPPORT LH**13. REMOVE FRONT BUMPER HOLE COVER LH**

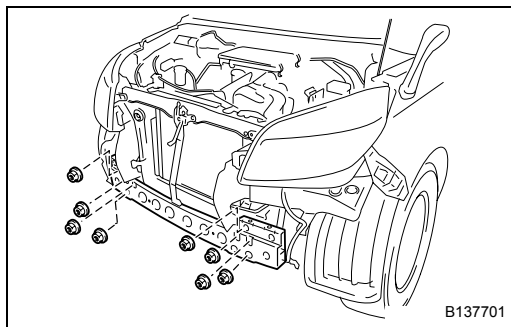**14. REMOVE FRONT BUMPER REINFORCEMENT**



- (a) Remove the bolt and 6 nuts and then remove the front bumper reinforcement.

15. REMOVE FRONT BUMPER EXTENSION LH (WITH OVER FENDER) (See page ET-25)**16. REMOVE FRONT BUMPER EXTENSION RH (WITH OVER FENDER)****17. REMOVE FRONT WHEEL OPENING EXTENSION PAD NO. 1 (WITH OVER FENDER) (See page ET-25)****INSTALLATION****1. CLEAN INSTALLATION SURFACE (WITH OVER FENDER) (See page ET-25)****2. CLEAN FRONT BUMPER EXTENSION AND FRONT FENDER MOULDING (WHEN REUSING) (See page ET-26)****3. INSTALL FRONT WHEEL OPENING EXTENSION PAD NO. 1 (WITH OVER FENDER) (See page ET-26)****4. INSTALL FRONT BUMPER EXTENSION LH (WITH OVER FENDER) (See page ET-26)****5. INSTALL FRONT BUMPER EXTENSION RH (WITH OVER FENDER)****6. INSTALL FRONT BUMPER REINFORCEMENT**


- (a) Install the front bumper reinforcement with the bolt and 6 nuts.

Torque: 12.5 N*m (128 kgf*cm) (bolt)

17.5 N*m (179 kgf*cm) (nut)

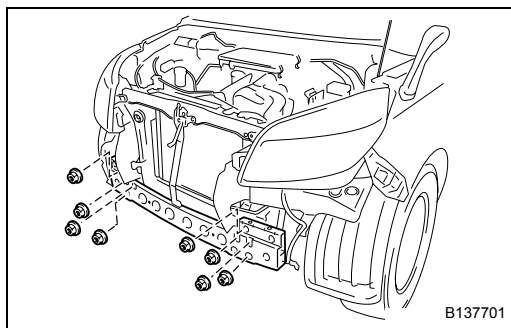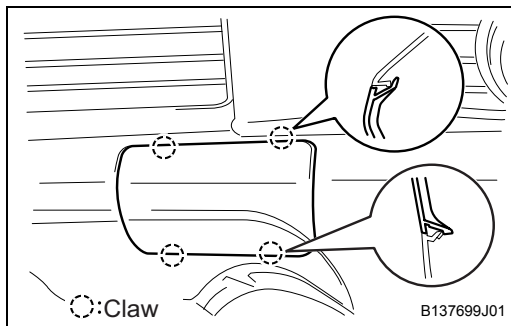
**ET****7. INSTALL FRONT BUMPER HOLE COVER LH**

- (a) Attach the 4 claws and install the front bumper hole cover LH.

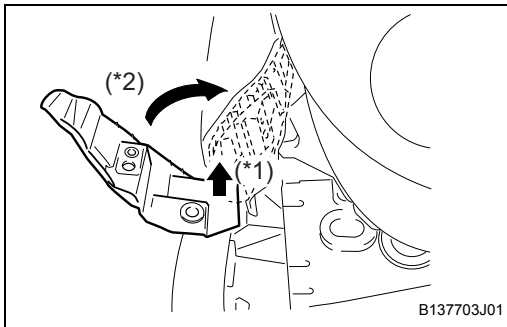


8. INSTALL FRONT BUMPER SIDE SUPPORT RH

- (a) Insert the tip of the front bumper side support RH into the front fender RH hole, while it is tilted at a 90°. (*1)
- (b) Tilt the front bumper side support RH 90°. (*2)

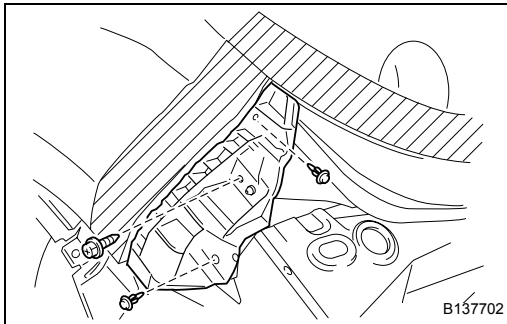


- (c) Install the front bumper side support RH with the screw and the 2 clips.

9. INSTALL FRONT BUMPER SIDE SUPPORT LH

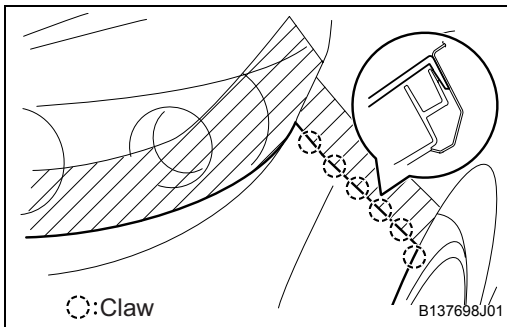


10. INSTALL FRONT BUMPER COVER

- (a) Engage the 6 claws on the right and left side, and temporarily install the front bumper cover.

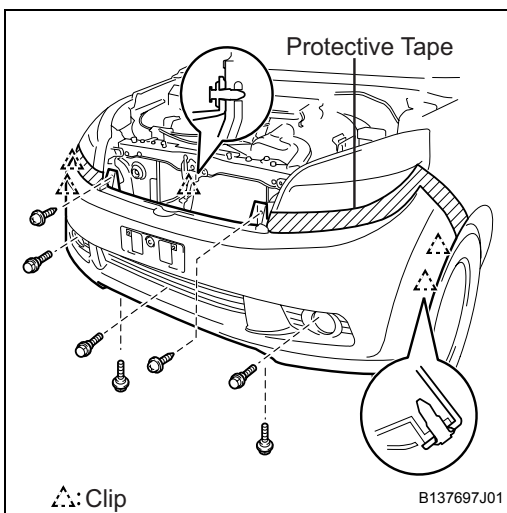


- (b) Install the front bumper cover with the 4 clips, the 5 bolts and the 2 screws.

Torque: 6.0 N*m (61 kgf*cm) (bolt)

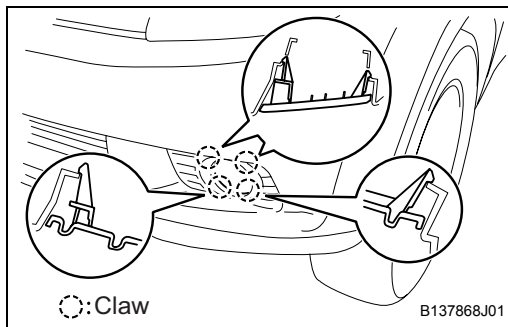

11. **REMOVE FOG LIGHT COVER LH (WITHOUT FOG LIGHT)**
(a) Engage the 4 claws and install the fog light cover RH.
12. **INSTALL FOG LIGHT COVER RH (WITHOUT FOG LIGHT)**
13. **INSTALL FOG LIGHT ASSEMBLY LH (WITH FOG LIGHT)** (See page LI-34)
14. **INSTALL FOG LIGHT ASSEMBLY RH (WITH FOG LIGHT)**

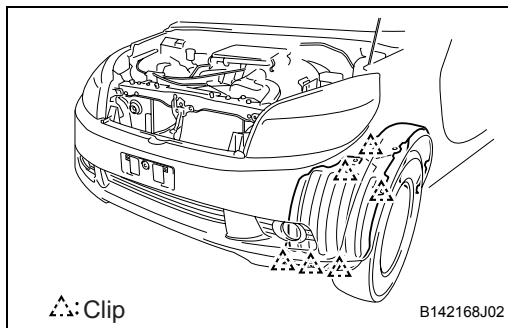

15. **INSTALL FRONT FENDER LINER LH**
(a) Install the front fender liner LH with the clip.
16. **INSTALL FRONT FENDER LINER RH**
17. **INSTALL FRONT WHEEL OPENING EXTENSION PAD NO. 2 (WITH OVER FENDER)** (See page ET-27)
18. **INSTALL FRONT FENDER MOULDING LH (WITH OVER FENDER)** (See page ET-27)
19. **INSTALL FRONT FENDER MOULDING RH (WITH OVER FENDER)**

