



ROOF HEADLINING ASSEMBLY


COMPONENTS

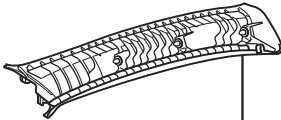


FRONT PILLAR GARNISH LH

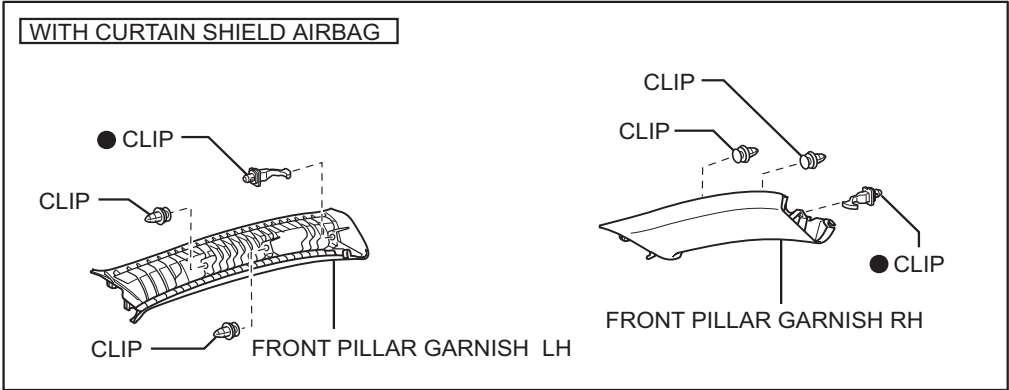

FRONT PILLAR GARNISH RH

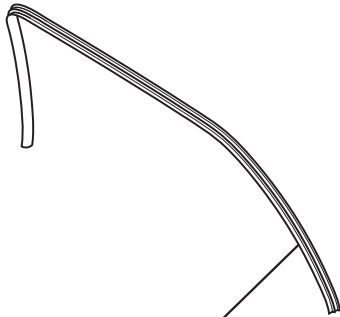


FRONT DOOR OPENING TRIM WEATHERSTRIP RH

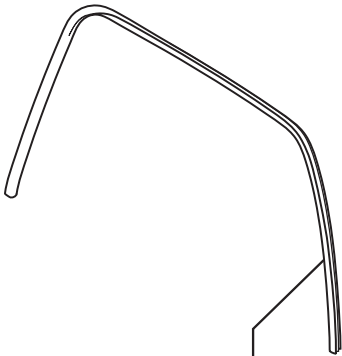


FRONT DOOR OPENING TRIM WEATHERSTRIP LH

●.....NON-REUSEABLE PART






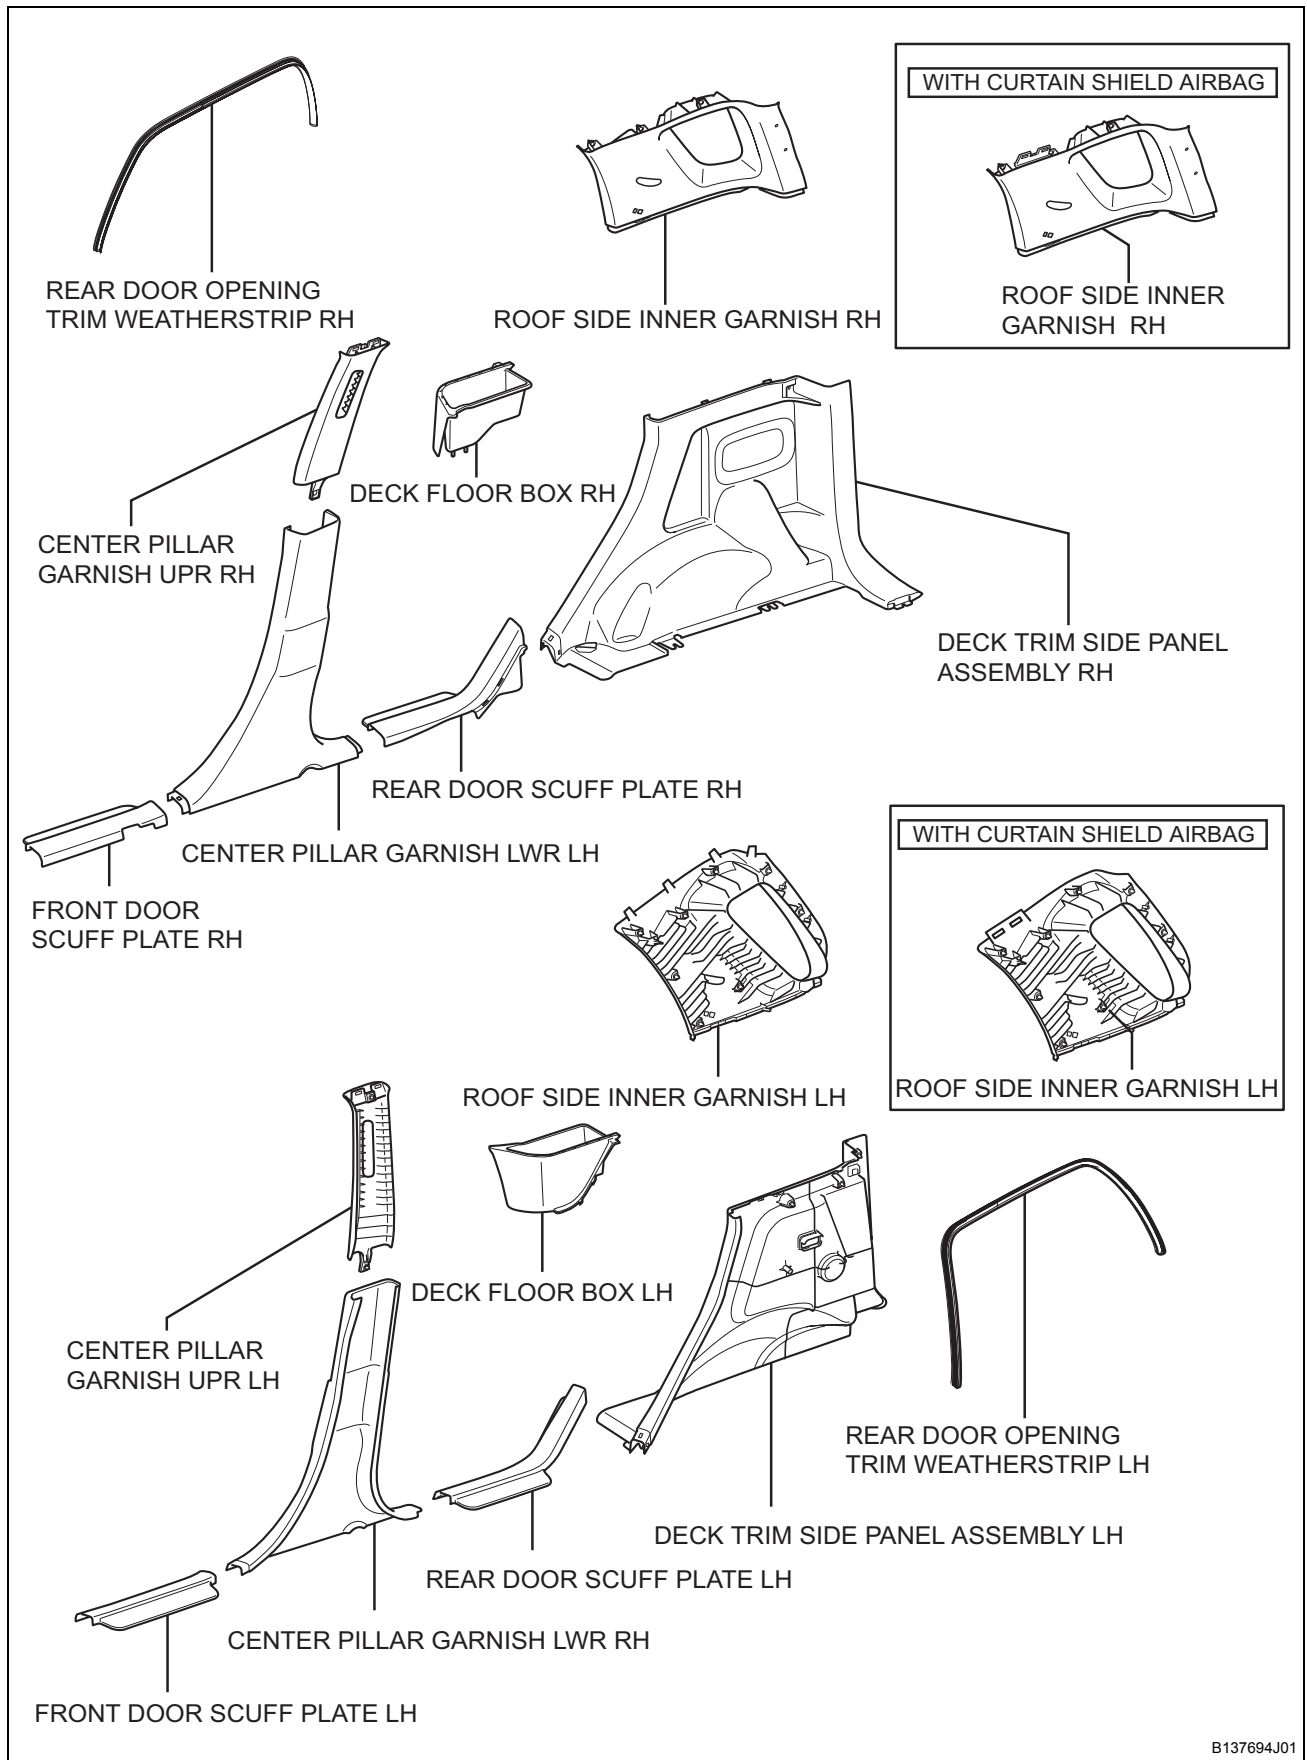

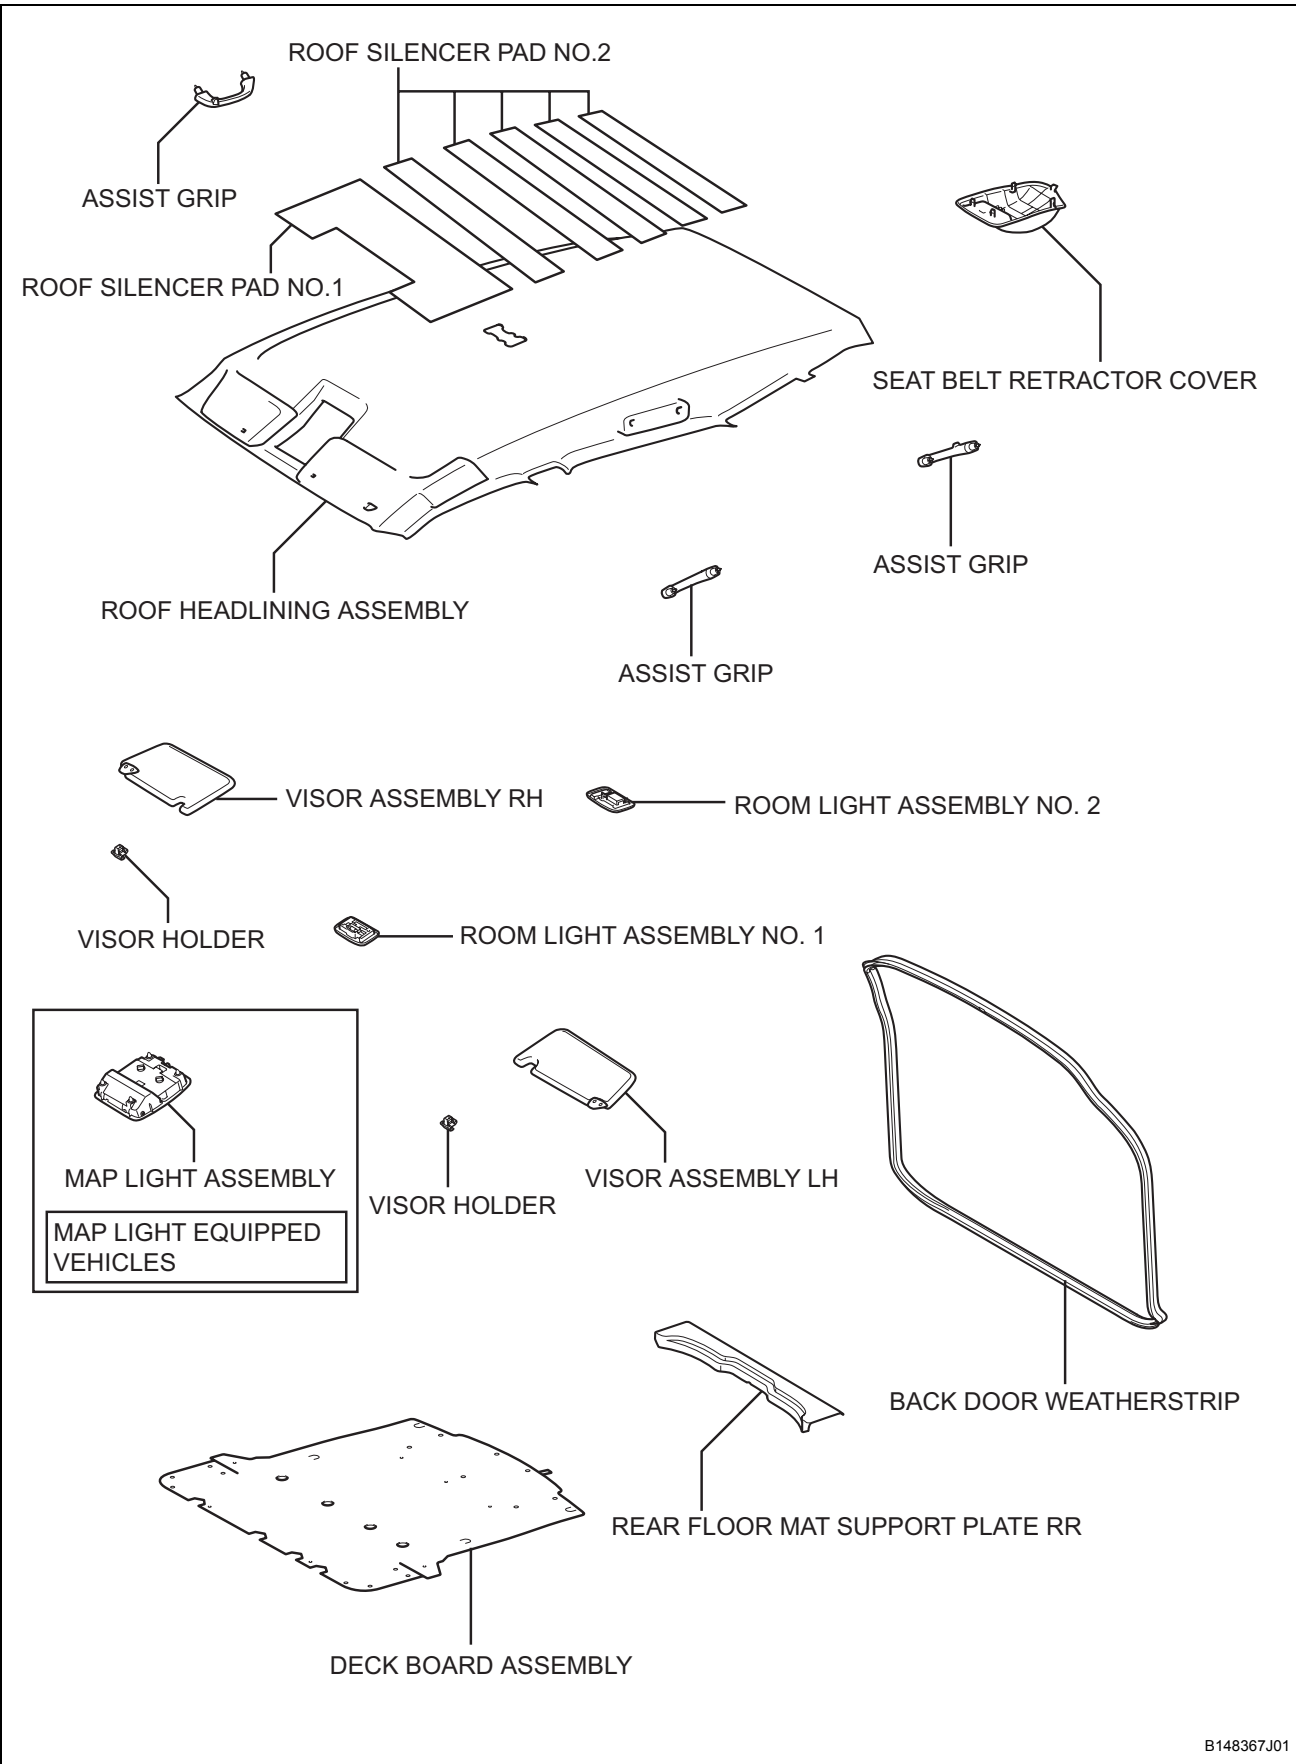


REMOVAL


1. **HANDLING AND OPERATING PRECAUTIONS**
(See Page RS-164)
2. **REMOVE FRONT DOOR SCUFF PLATE RH**(See page IP-10)
3. **REMOVE FRONT DOOR SCUFF PLATE LH**
4. **REMOVE DECK BOARD ASSEMBLY**
 - (a) Remove the 4 clips and roll back the rear seat carpet.
 - (b) Remove the 7 clips and the deck board assembly.

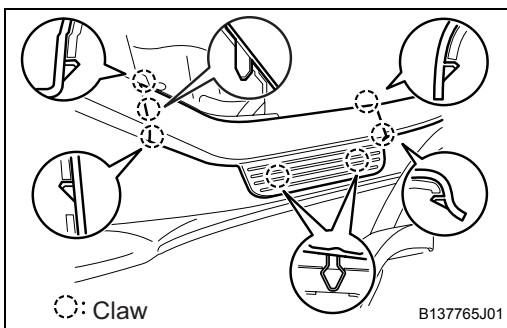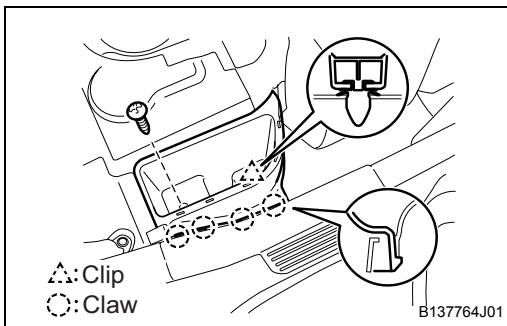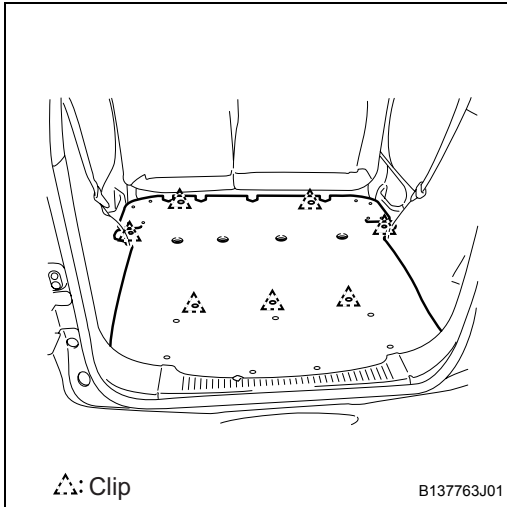


5. **REMOVE DECK FLOOR BOX RH**
 - (a) Remove the screw.
 - (b) Disengage the 4 claws and the clip, and remove the deck floor box RH.
6. **REMOVE DECK FLOOR BOX LH**
7. **REMOVE REAR DOOR SCUFF PLATE RH**
 - (a) Disengage the 7 claws and remove the rear door scuff plate RH.
8. **REMOVE REAR DOOR SCUFF PLATE LH**
9. **REMOVE BACK DOOR WEATHERSTRIP**

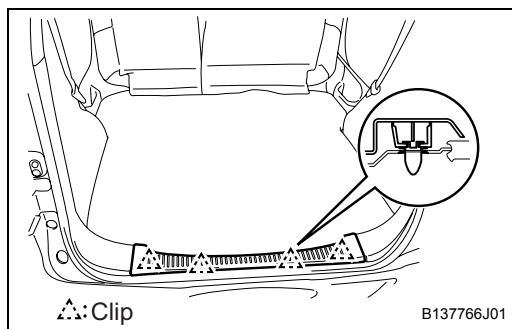**10. REMOVE REAR FLOOR MAT SUPPORT PLATE RR**

- (a) Disengage the 4 clips and remove the rear floor mat support plate RR.

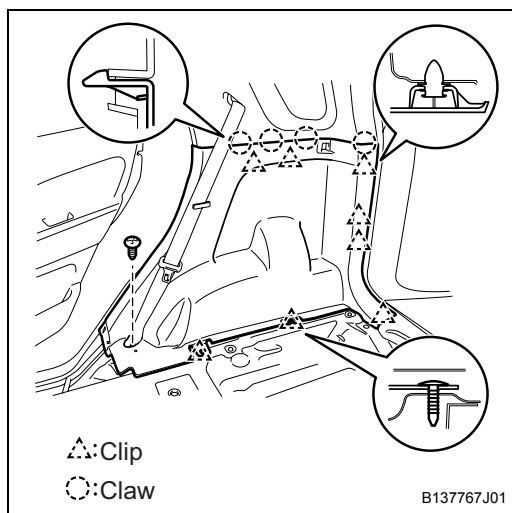
11. REMOVE CENTER PILLAR GARNISH LWR RH**12. REMOVE CENTER PILLAR GARNISH LWR LH****13. REMOVE DECK TRIM SIDE PANEL ASSEMBLY RH**

- (a) Remove the rear seat belt bolts and the 3 clips installed in the floor.
- (b) Disengage the 5 clips and 4 claws, and remove the deck trim side panel assembly.

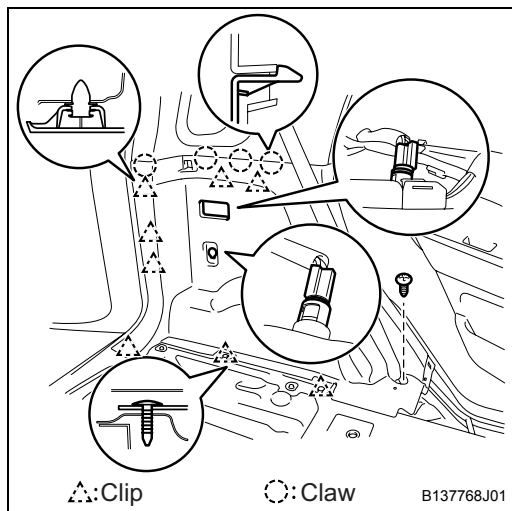
**14. REMOVE DECK TRIM SIDE PANEL ASSEMBLY LH**

- (a) Remove the rear seat belt bolts and the 3 clips installed in the floor.
- (b) Disengage the 5 clips and 4 claws, and remove the deck trim side panel assembly.
- (c) Disconnect the connector of the accessory socket and the deck light on the underside of the deck trim side panel assembly,


15. REMOVE FRONT DOOR OPENING TRIM WEATHERSTRIP RH**16. REMOVE FRONT DOOR OPENING TRIM WEATHERSTRIP LH****17. REMOVE REAR DOOR OPENING TRIM WEATHERSTRIP RH****18. REMOVE REAR DOOR OPENING TRIM WEATHERSTRIP LH****19. REMOVE FRONT PILLAR GARNISH RH (WITHOUT CURTAIN SHIELD AIRBAG) (See page IP-12)****20. REMOVE FRONT PILLAR GARNISH LH (WITHOUT CURTAIN SHIELD AIRBAG)****21. REMOVE FRONT PILLAR GARNISH RH (WITH CURTAIN SHIELD AIRBAG) (See page IP-13)****22. REMOVE FRONT PILLAR GARNISH LH (WITH CURTAIN SHIELD AIRBAG)****23. REMOVE SHOULDER BELT ANCHOR COVER (ADJUSTABLE ANCHOR VEHICLES) (See page SB-9)**

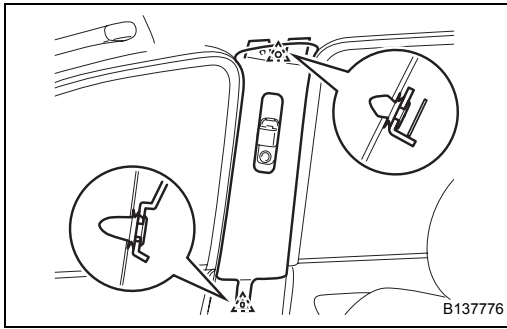

24. SEPARATE FRONT SEAT OUTER BELT ASSEMBLY RH (See page SB-9)
25. REMOVE CENTER PILLAR GARNISH UPR RH
 - (a) Disengage the 2 clips and remove the center pillar garnish UPR RH.
26. REMOVE SHOULDER BELT ANCHOR COVER (ADJUSTABLE ANCHOR VEHICLES)
27. SEPARATE FRONT SEAT OUTER BELT ASSEMBLY LH
28. REMOVE CENTER PILLAR GARNISH UPR LH

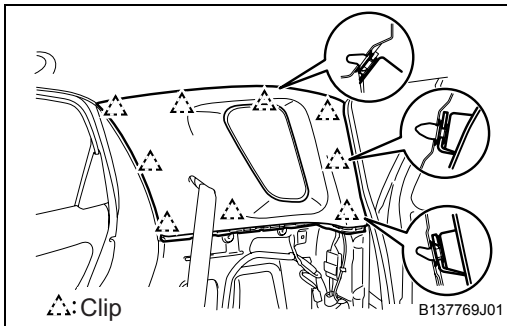


29. REMOVE ROOF SIDE INNER GARNISH RH (WITHOUT CURTAIN SHIELD AIRBAG)
 - (a) Disengage the 9 clips and remove the roof side inner garnish RH.
 - (b) Remove the roof side inner garnish RH by passing the anchor of the rear seat outer belt assembly RH through the garnish.
30. REMOVE ROOF SIDE INNER GARNISH LH (WITHOUT CURTAIN SHIELD AIRBAG)

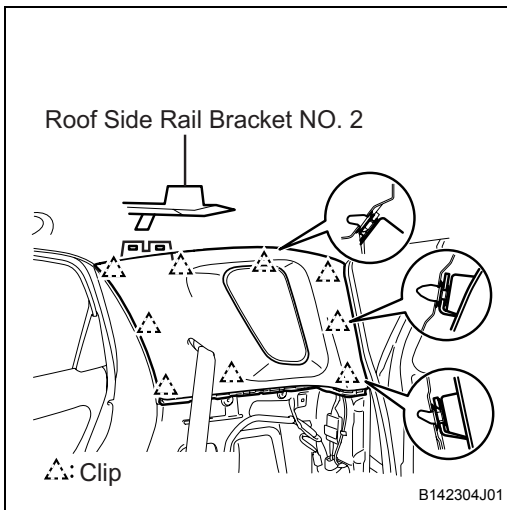


31. REMOVE ROOF SIDE INNER GARNISH RH (WITH CURTAIN SHIELD AIRBAG)
 - (a) Disengage the 9 clips and remove the roof side inner garnish RH.

NOTICE:
Make sure that the garnish does not get caught on the claw to the roof side rail bracket No. 2.

 - (b) Remove the roof side inner garnish RH by passing the anchor of the rear seat outer belt assembly RH through the garnish.
32. REMOVE ROOF SIDE INNER GARNISH LH (WITH CURTAIN SHIELD AIRBAG)

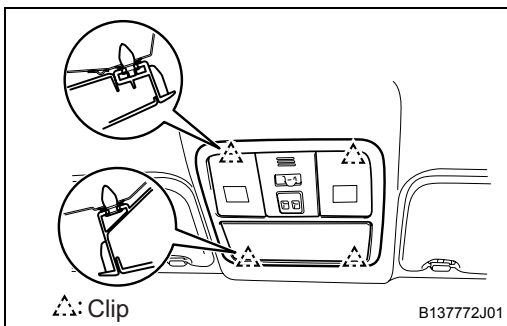


33. REMOVE MAP LIGHT ASSEMBLY (WITH MAP LIGHT)
 - (a) Using a clip remover wrapped in protective tape, disengage the 4 clips and remove the map light assembly.

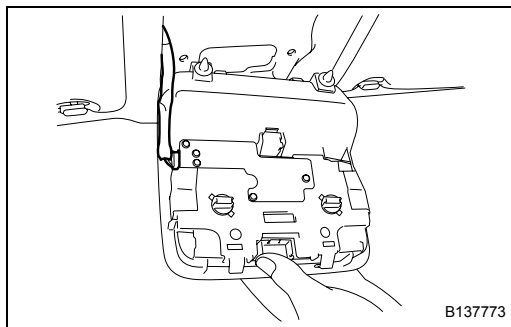

(b) Disconnect the connector.


34. REMOVE ROOM LIGHT ASSEMBLY NO. 1 (WITHOUT MAP LIGHT)

- (a) Using a clip remover wrapped in protective tape, remove the room light lens.
- (b) Remove the 2 screws and the room light assembly No. 1.
- (c) Disconnect the connector.

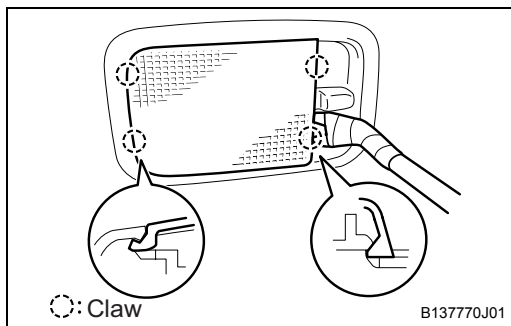


35. REMOVE ROOM LIGHT ASSEMBLY NO. 2

- (a) Using a clip remover wrapped in protective tape, remove the room light lens.

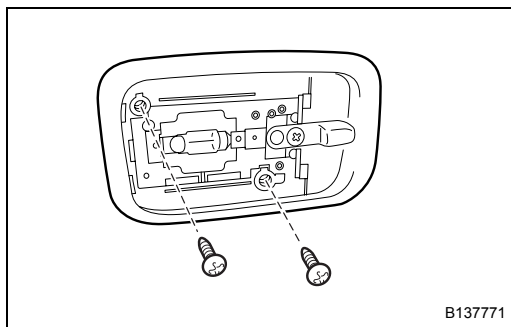

- (b) Remove the 2 screws and the room light assembly No. 2.

IR

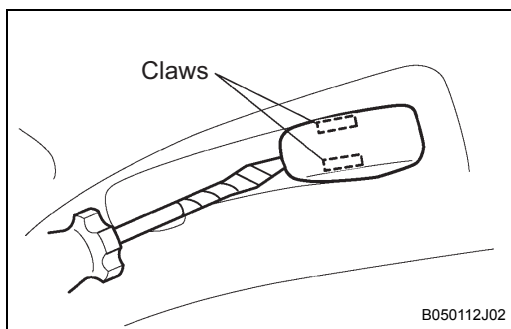


36. REMOVE THE ASSIST GRIP

- (a) Using a screwdriver wrapped in protective tape, disengage the 2 claws and turn over the 2 assist grip covers.
- (b) Remove the 2 screws and the assist grip.

HINT:


Remove the other two assist grips in the same manner.

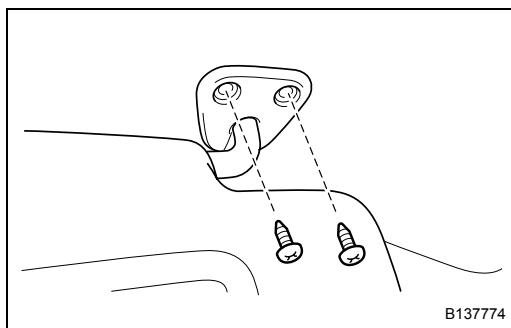

37. REMOVE VISOR ASSEMBLY RH

- (a) Remove the 2 screws and the visor assembly RH.

38. REMOVE VISOR ASSEMBLY LH

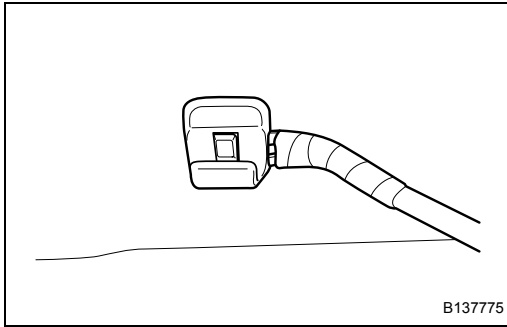**39. REMOVE VISOR HOLDER**


- (a) Using a clip remover wrapped in protective tape, remove the visor holder.

HINT:

Use the same procedure to remove the LH side.

40. REMOVE SEAT BELT RETRACTOR COVER (REAR CENTER THIRD POINT SEAT BELT)**41. REMOVE ROOF HEADLINING ASSEMBLY**

- (a) Detach the 5 clips.

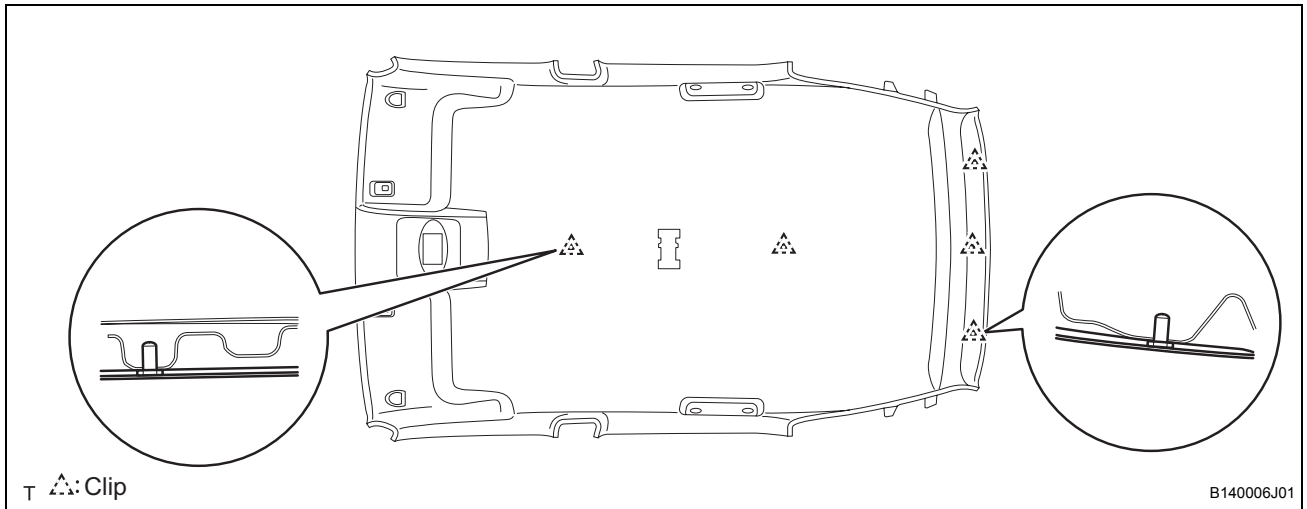

- (b) Take the removed roof headlining assembly out from the back door.

NOTICE:

Do not damage the roof headlining assembly or the body interior.

HINT:

Remove the roof headlining with the roof wire harness attached.


42. REMOVE SEAT BELT RETRACTOR COVER

- (a) Disengage the clip and 5 claws, and remove the seat belt retractor cover.


43. REMOVE ROOF SILENCER PAD NO. 1

HINT:

Removal of the roof silencer pad is performed when replacing the roof headlining assembly.

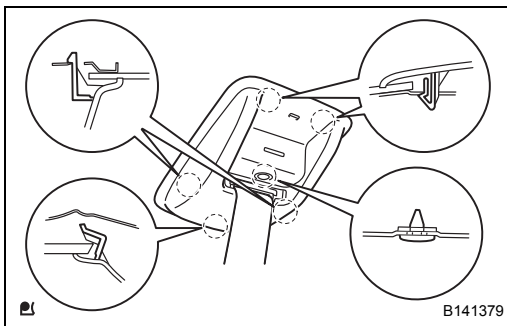

- (a) Remove the roof silencer pad from the position shown in the illustration.

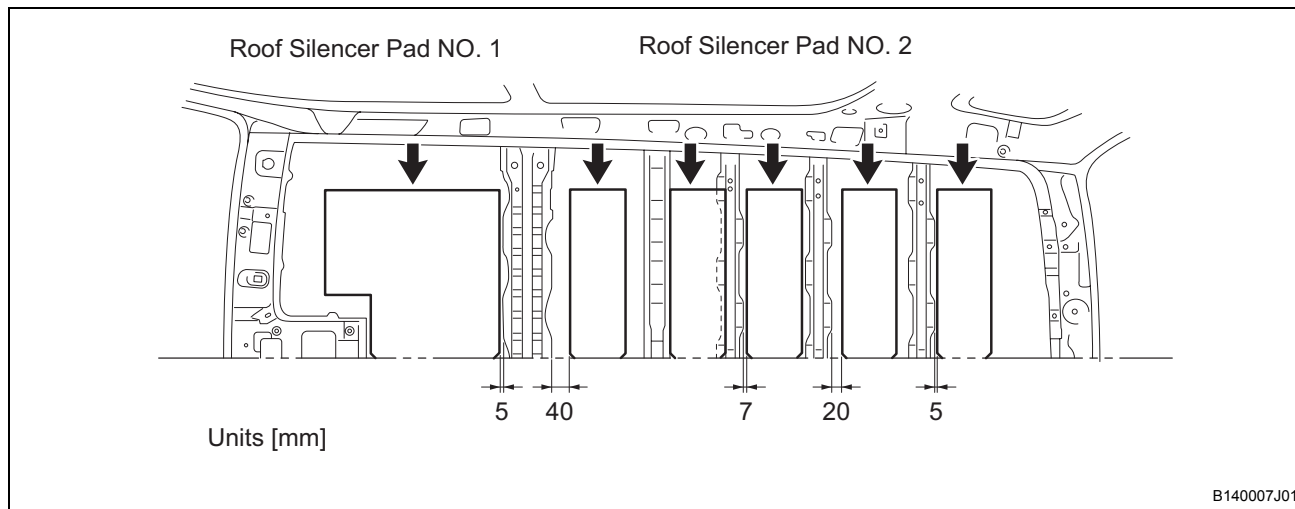

44. REMOVE ROOF SILENCER PAD NO. 2

45. REMOVE ROOF WIRE NO. 1

HINT:

Removal of the roof wire No. 1 is performed when replacing the room headlining assembly.


- (a) Remove the double-sided tape and then remove the roof wire No. 1.

INSTALLATION

1. INSTALL ROOF WIRE NO. 1

2. INSTALL ROOF SILENCER PAD NO. 1

- (a) Using double-sided tape, install the roof silencer pad No. 1 as shown in the illustration.

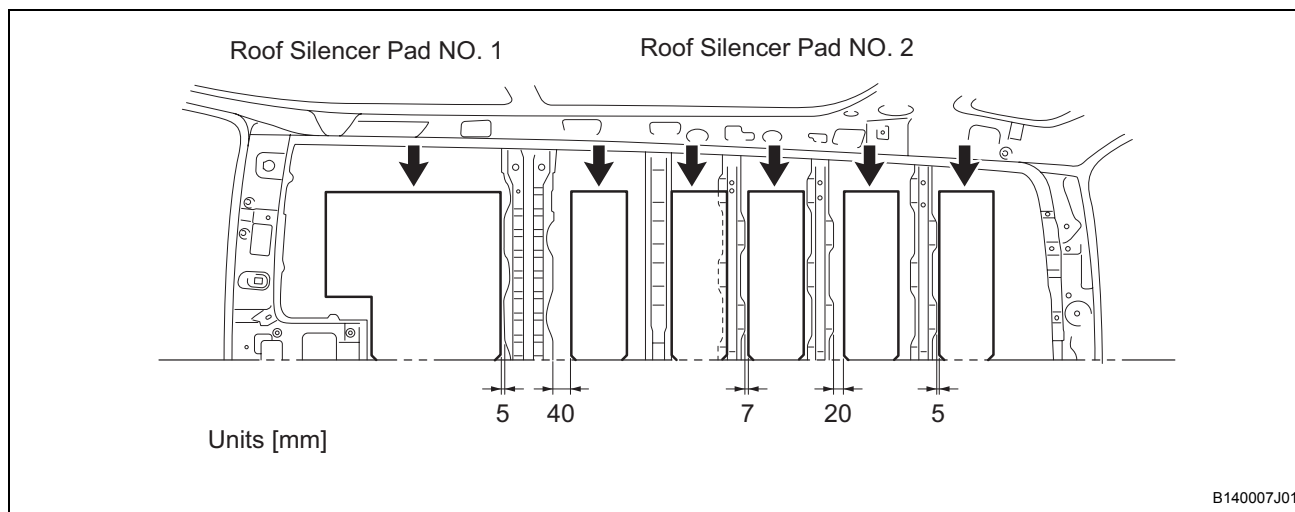

3. INSTALL ROOF SILENCER PAD NO. 2

- (a) Using double-sided tape, install the roof silencer pad No. 2 as shown in the illustration.

4. INSTALL ROOF HEADLINING ASSEMBLY**5. INSTALL VISOR HOLDER**


(a) Install the 2 visor holders.

6. INSTALL VISOR ASSEMBLY RH

(a) Install the visor assembly RH with the 2 screws.


7. INSTALL VISOR ASSEMBLY LH**8. INSTALL ASSIST GRIP**

(a) Install the 3 assist grips with the 2 bolts.

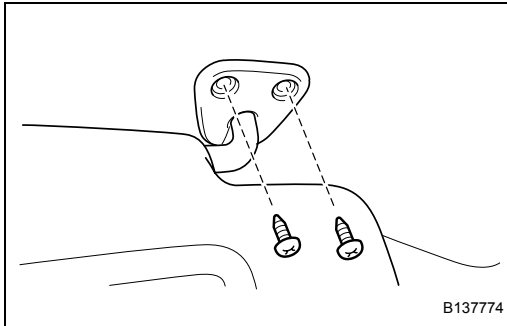
**9. INSTALL ROOM LIGHT ASSEMBLY NO. 2**

(a) Install the room light assembly with the 2 screws.

(b) Install the room light lens.

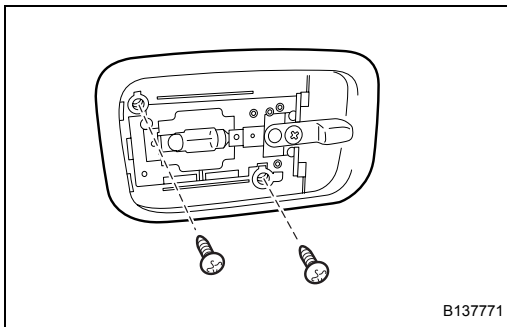**10. INSTALL MAP LIGHT ASSEMBLY (WITH MAP LIGHT)**

(a) Connect the connector.

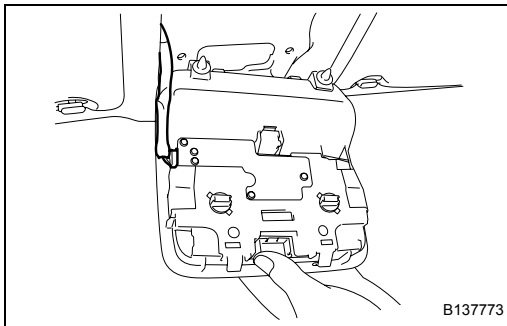


(b) Engage the 4 clips and install the map light assembly.


11. INSTALL ROOM LIGHT ASSEMBLY NO. 1 (WITHOUT MAP LIGHT)

(a) Connect the connector.

(b) Install the room light assembly No. 1 with the 2 screws.

(c) Attach the 4 claws to install the lens.

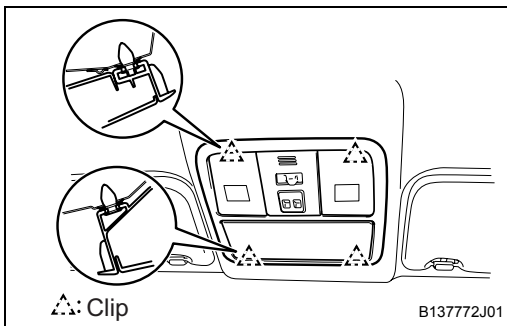**12. INSTALL FRONT PILLAR GARNISH RH (WITHOUT CURTAIN SHIELD AIRBAG) (See page IP-16)****13. INSTALL FRONT PILLAR GARNISH LH (WITHOUT CURTAIN SHIELD AIRBAG)****14. INSTALL FRONT PILLAR GARNISH RH (WITH CURTAIN SHIELD AIRBAG) (See page IP-16)****15. INSTALL FRONT PILLAR GARNISH LH (WITH CURTAIN SHIELD AIRBAG)**

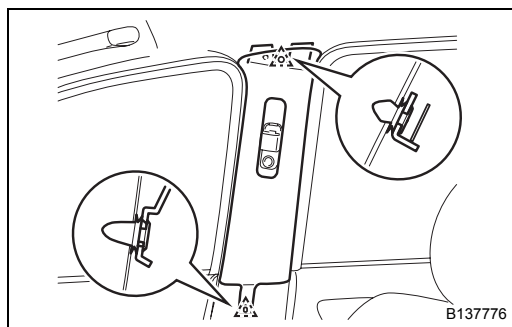

16. INSTALL CENTER PILLAR GARNISH UPR RH

(a) Pass the anchor to the front seat outer belt assembly RH through the garnish.

(b) Engage the 2 clips and install the center pillar garnish UPR RH.

17. INSTALL FRONT SEAT OUTER BELT ASSEMBLY RH (See page SB-13)

18. INSTALL SHOULDER BELT ANCHOR COVER (ADJUSTABLE ANCHOR VEHICLES)

19. INSTALL CENTER PILLAR GARNISH UPR LH

20. INSTALL FRONT SEAT OUTER BELT ASSEMBLY LH

21. INSTALL SHOULDER BELT ANCHOR COVER (ADJUSTABLE ANCHOR VEHICLES)

22. INSTALL ROOF SIDE INNER GARNISH RH (WITHOUT CURTAIN SHIELD AIRBAG)

(a) Pass the rear seat belt, engage the 9 clips, and install the roof side inner garnish RH.

23. INSTALL ROOF SIDE INNER GARNISH LH (WITHOUT CURTAIN SHIELD AIRBAG)

24. INSTALL ROOF SIDE INNER GARNISH RH (VEHICLES WITH CURTAIN SHIELD AIRBAGS)

25. INSTALL ROOF SIDE INNER GARNISH LH (WITH CURTAIN SHIELD AIRBAG)

26. INSTALL FRONT DOOR OPENING TRIM WEATHERSTRIP RH (See page IP-17)

27. INSTALL FRONT DOOR OPENING TRIM WEATHERSTRIP LH



28. INSTALL REAR DOOR OPENING TRIM WEATHERSTRIP RH


(a) Install the weatherstrip terminal by aligning it with the protruding part of the body.

29. INSTALL REAR DOOR OPENING TRIM WEATHERSTRIP LH

30. INSTALL CENTER PILLAR GARNISH LWR RH


31. INSTALL CENTER PILLAR GARNISH LWR LH

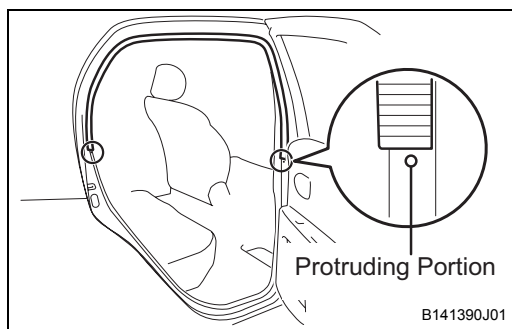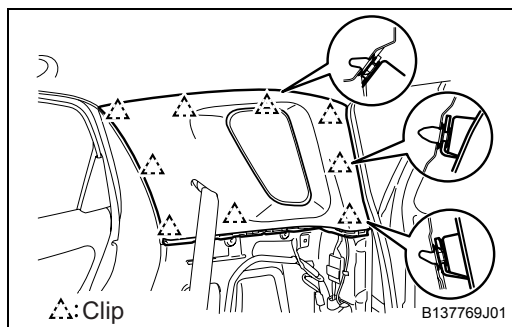

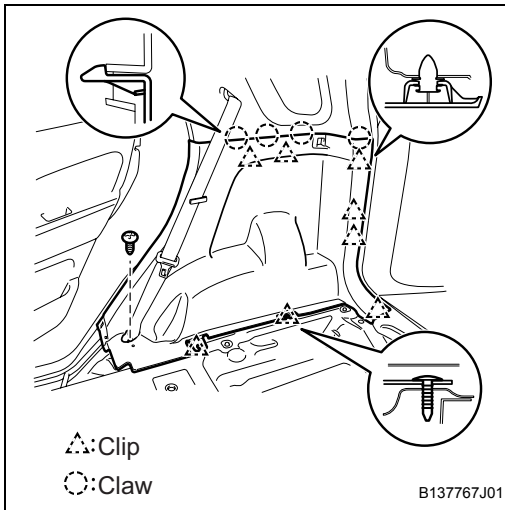**32. INSTALL DECK TRIM SIDE PANEL ASSEMBLY RH**


- (a) Engage the 4 claws and the 5 clips and install the deck trim side panel assembly RH.
- (b) Install the 3 clips into the floor.
- (c) Install the rear seat belt with the bolt.

Torque: 40.7 N*m (415 kgf*cm)

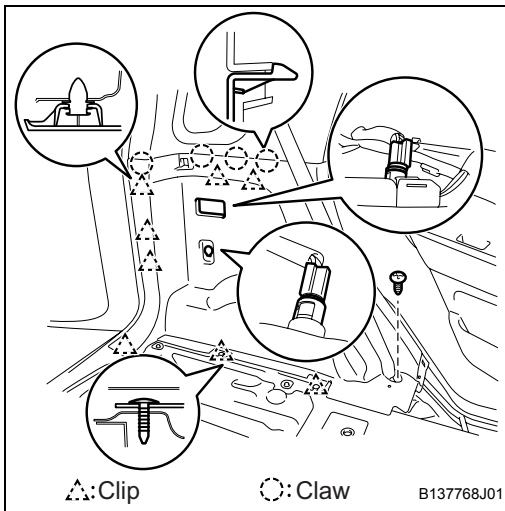
**33. INSTALL DECK TRIM SIDE PANEL ASSEMBLY LH**

- (a) Connect the deck light and the connector to the accessory socket.
- (b) Engage the 4 claws and the 5 clips and install the deck trim side panel assembly LH.
- (c) Install the 3 clips into the floor.
- (d) Install the rear seat belt with the bolt.

Torque: 40.7 N*m (415 kgf*cm)

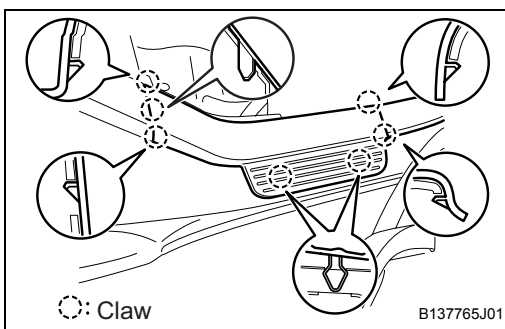
34. INSTALL FRONT DOOR SCUFF PLATE RH**35. INSTALL FRONT DOOR SCUFF PLATE LH****36. INSTALL REAR DOOR SCUFF PLATE RH**

- (a) Engage the 7 claws and install the rear door scuff plate RH.

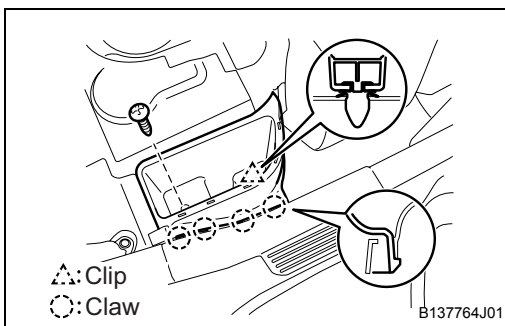
37. INSTALL REAR DOOR SCUFF PLATE LH**38. INSTALL DECK FLOOR BOX RH**

- (a) Engage the 4 claws and the clip and install the deck floor box RH.
- (b) Install the screw.

39. INSTALL DECK FLOOR BOX LH

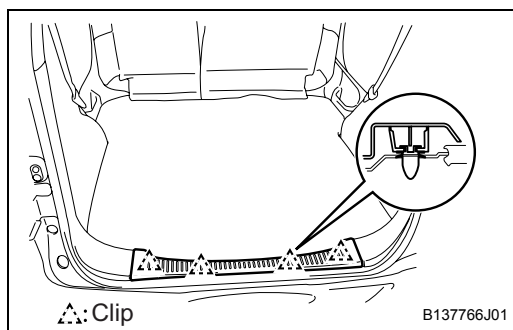**40. INSTALL REAR FLOOR MAT SUPPORT PLATE RR**

- (a) Engage the 4 clips and install the rear floor mat support plate RR.

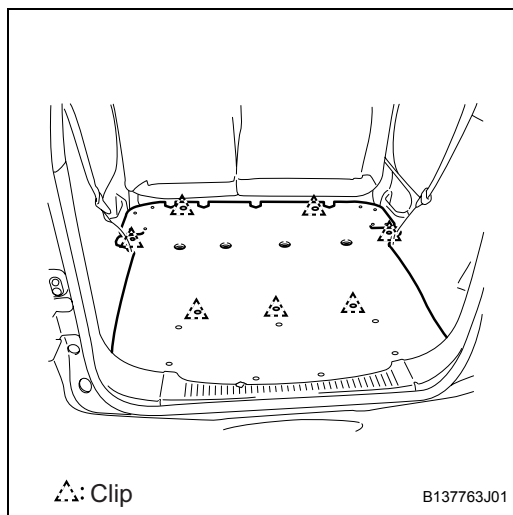**41. INSTALL DECK BOARD ASSEMBLY**

- (a) Install the deck board assembly with the 7 clips.
(b) Install the rear seat cover with the 4 clips.

42. INSTALL BACK DOOR WEATHERSTRIP