

Key - Remote control

Complete locking of the vehicle, cab and rear doors.

Complete unlocking of the vehicle, cab and rear doors.



2a ▶ 17



Door open warning light

If this comes on, a door has not been closed correctly.

Sliding side door

Pull the handle towards you then towards the rear and open the door guiding the rearward sliding until the point of resistance has been passed.

If fitted on your vehicle, do not open the left-hand side door while filling with fuel as this could damage the fuel filler flap.



2b ▶ 21-22

Usable dimensions



8 ▶ 136

Key

: chapter identification

▶ : page identification

Exterior

Hinged rear doors

This control permits opening to approximately 180°.



2 ▶ 23

Rear suspension

Two functions:

- Automatic correction.
- Manual correction.




3a ▶ 79

Parking assistance

In bad weather or in winter, check that the sensors are not covered with mud, ice or snow.



3b ▶ 86

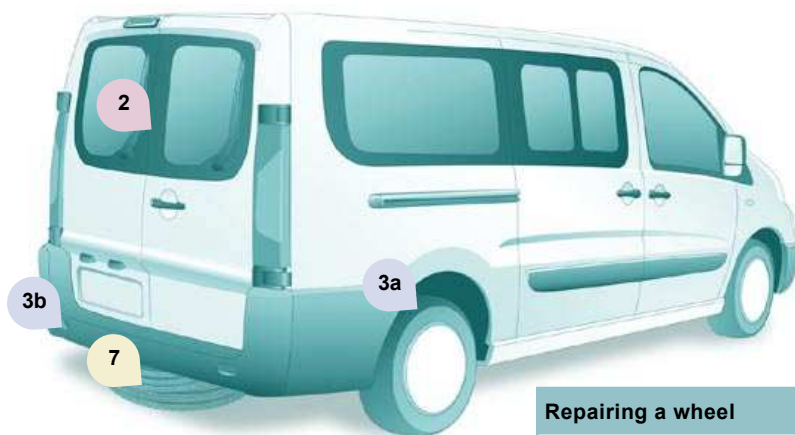

Repairing a wheel




7 ▶ 117

Changing a wheel



7 ▶ 119

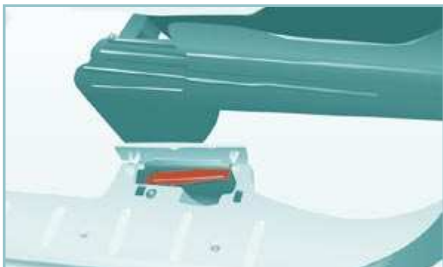

Opening the bonnet

Lift the cover at the foot of the left-hand seat and pull the control upwards.



Partially open the bonnet, lift the control and raise the bonnet.



Secure the strut in one of the two notches, according to the height required, to hold the bonnet open.

6


▶ 106



Towing eye

At the front, unclip the cover by pressing it at the bottom.


At the rear, unclip the cover using a coin or the flat part of the towing eye.

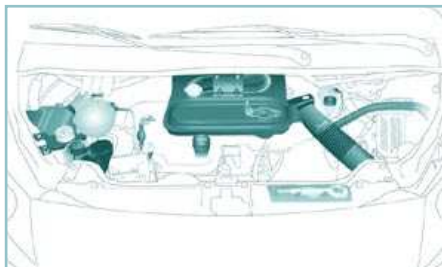

Diesel engines

Take care when working under the bonnet.

Refer to the "Levels" section of chapter 6 for advice on use of the fluids.

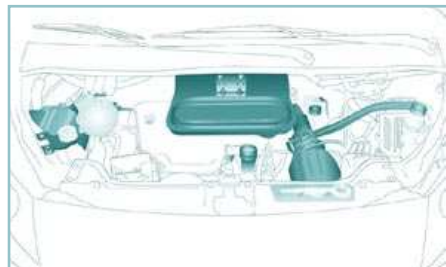

Petrol engine

6

▶ 107

6


▶ 108

7

▶ 134

**INSTRUMENTS AND CONTROLS**

1. Lights and direction indicators stalk.
2. Instrument panel with display.
3. Wipers, wash-wipe, trip computer controls.
4. Gear lever.
5. Ignition.
6. Audio equipment controls.
7. Driver's airbag, horn.
8. Steering wheel height and depth adjustment.
9. Headlamp beam adjustment.
10. Cruise control, speed limiter switch.
11. 12 volt accessories socket (120 W max) of the lighter type.
12. Ashtray.
13. Glove box, auxiliary socket, passenger airbag disarming switch.

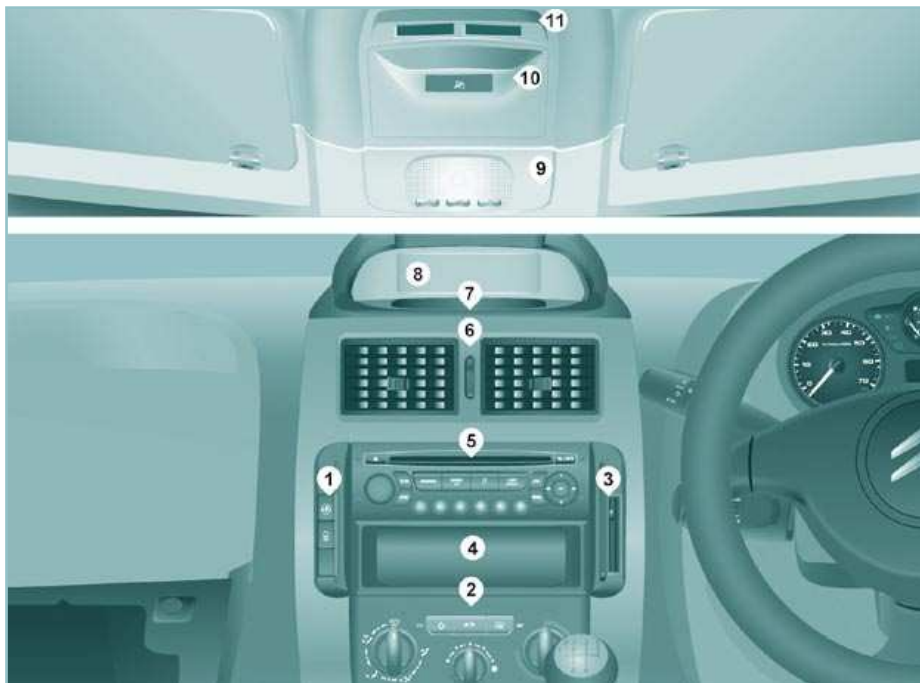

ADJUSTING THE TIME

Depending on the configuration of your vehicle, you have either:

- a centre console with display: refer to the "Adjusting the date and time" section of chapter 9,
- a centre console without display: refer to the "Instruments and controls" section of chapter 2.

CENTRE CONSOLE AND OVERHEAD STORAGE UNIT

1. Location of the controls:
 - locking of the electric child lock,
 - central locking/unlocking.
2. Heating and/or air conditioning controls.
3. Location of the ticket/card storage or controls:
 - deactivation of the ESP,
 - disarming of the interior protection alarm, alarm diode,
 - deactivation of the parking assistance.
4. CD changer or storage compartment.
5. Audio equipment or storage compartment.
6. Central adjustable vents.
7. Hazard warning lights button.
8. Display or storage compartment.
9. Courtesy light.
10. Passenger airbag disarmed warning light.
11. Location of the ticket/card storage, rear ventilation deactivation switch, heated seat controls.

SIT COMFORTABLY



1. Forwards-backwards adjustment.



2. Angle.



3. Height.



4. Lumbar.



5. Head restraint height.



Steering wheel

Adjust the height and depth of the steering wheel.

2 ▶ 36



Mirrors

Manual adjustments.



Electric windows

3 ▶ 84



Seat belts

Height adjustment.
Fastening.

4 ▶ 89




Electric adjustments, electric folding/
unfolding.

3 ▶ 82

SEE CLEARLY

12

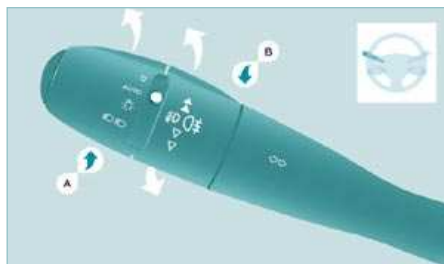

Lights stalk



Lights off.



Side lights.



Main beam headlamps (blue).


Dipped headlamps (green).

AUTO

AUTO, automatic switching
on of the lights.

3

▶ 37

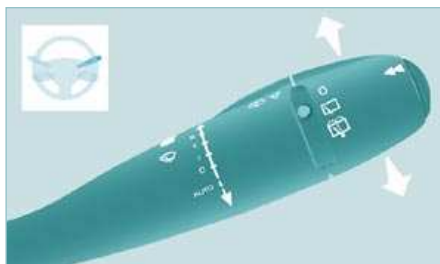

Wipers stalk

2 fast.

1 normal.

I intermittent.

0 off.

↓ single wipe.

**AUTO**, press the stalk down.

3

▶ 40



Changing bulbs

In bad weather or in winter, check that the
lights are not covered with mud or snow.

7

▶ 124

DRIVE SAFELY



NaviDrive

This audio equipment incorporates a hard disc with a capacity of 10 Gb, reserved for your music.

The Jukebox function permits the selective playing of up to 10 hours of music. The detailed map of Europe is stored on this hard disc, without the addition of a CD. It is displayed on the 16/9ths 7" colour display and offers a 3D view.

Via your SIM card, the GSM hands-free telephone also provides access to the CITROËN emergency team (subject to conditions).

9

USB Player

CITROËN recommends the use of a connection lead to connect your portable player to the USB.

In the right-hand drive configuration, the lead is essential.

9



Audio system

9



MyWay

This ergonomic audio equipment offers a map of Europe on SD Card, a Bluetooth telephone connection and the playing of MP3/WMA files.

9



Cruise control

The vehicle speed must be higher than 25 mph (40 km/h) with at least 4th gear engaged.

3

▶ 42



Speed limiter

The lowest speed which can be programmed is 20 mph (30 km/h).

3

▶ 45

CAB LAYOUT



Overhead storage unit

3 ▶ 74



Glove box

3 ▶ 72



Storage compartment


3 ▶ 72

REAR LAYOUT



Rear seats

3 ▶ 64

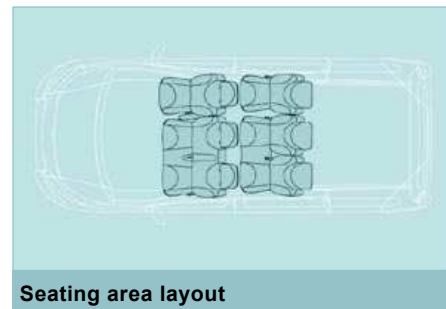

Seating area layout

3 ▶ 76

CHILD SAFETY



Configurations of the seats/bench seats

3 ▶ 71



Electric child lock

2 ▶ 22



Monitoring mirror

3 ▶ 83



Rear windows

3 ▶ 83



Safety auto-reverse

3 ▶ 84



Child seats


4 ▶ 96

VENTILATION



Manual

3 ▶ 48

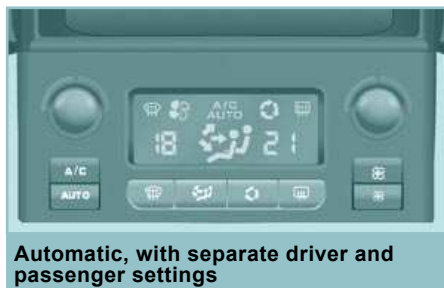


Automatic, with separate driver and passenger settings

3 ▶ 50

Recommended settings

For optimum use of the system, we recommend:

If I require...	Air distribution	Temperature	Air flow	Air recirculation	AC
Heating					-
Cooling					A/C
De-icing Demisting					

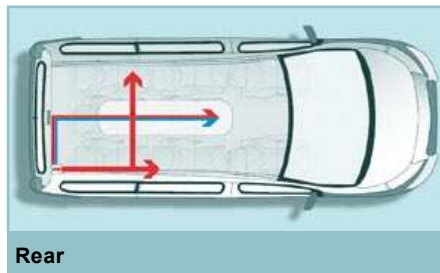

Rear

3 ▶ 56



ACCESS

REMOTE CONTROL

Central unlocking



Press this button to unlock your vehicle, cab and rear doors.

The direction indicators flash twice and the exterior mirrors unfold (unless folding was selected using the interior control, refer to the "Mirrors and windows" section of chapter 3).

Central locking



Press this button to lock your vehicle, cab and rear doors. The direction indicators flash once and the exterior mirrors fold.

If one of the doors is open or is not closed correctly, the central locking will not work.

Deadlocking

If your vehicle is fitted with deadlocking, **a second press** on the closed padlock on the remote control within five seconds after locking changes the locking to deadlocking. This is confirmed by fixed lighting of the direction indicators for approximately two seconds.

Deadlocking renders the exterior and interior door opening handles inoperative: do not leave anyone inside the vehicle when it is deadlocked.

If deadlocking is activated from inside the vehicle, it will change to normal locking when the vehicle is started.

Folding/unfolding the key



Press this button to release the key from its housing.

To fold the key, press the chromed button then fold the key into the housing. If you do not press the button, the mechanism may be damaged.

Good practice

Take care not to allow the remote control to come into contact with grease, dust, rain or a damp environment.

A heavy object attached to the key (keyring, ...) weighing on the shaft of the key in the switch, may cause a malfunction.



KEY

This locks and unlocks the locks on the vehicle and starts the engine.

REMOTE CONTROL

Changing the battery

Battery ref.: CR1620/3 volts.

The information "battery flat" is given by an audible signal, accompanied by a message on the display.

To replace the battery, unclip the casing using a coin at the ring.

If the remote control does not work after the battery has been changed, re-programme the remote control.



There is a risk of damage if the replacement battery does not conform.

Use only identical batteries or batteries of an equivalent type to those recommended by CITROËN dealers.

Do not discard the remote control batteries, they contain metals which are harmful to the environment.

Deposit them at a CITROËN dealership, or at any other approved collection point.

Programming the remote control

Following changing of the remote control battery or disconnection of the vehicle battery, the remote control may have to be reprogrammed. Wait at least one minute before using the remote control.

Insert the key in the ignition switch with the buttons (padlocks) of the remote control facing you.

Switch on the ignition.

Press the locking padlock for at least five seconds within the next ten seconds.

Switch off the ignition.

Wait at least one minute before using the remote control.

The remote control is now working again.

ELECTRONIC IMMOBILISER

All of the keys contain an electronic immobiliser device.

This device locks the engine supply system. It is activated automatically when the key is removed from the ignition.

After the ignition is switched on, a dialogue is established between the key and the electronic immobiliser system.

The metal part of the key must be unfolded correctly for correct dialogue to take place.

If you lose your keys

i Visit a CITROËN dealer with the vehicle's V5 registration document and your identification document.

A CITROËN dealer will be able to retrieve the key code and the transponder code so that a replacement key can be ordered.

Good practice

Do not make any modifications to the electronic immobiliser system.

Operating the remote control, even when it is in your pocket, may result in involuntary unlocking of the doors.

The simultaneous use of other high frequency equipment (mobile telephones, domestic alarms...), may interfere with the operation of the remote control temporarily.

The remote control does not operate while the key is in the ignition, even if the ignition is off.

As a safety precaution (with children on board), remove the key from the ignition when leaving the vehicle, even for a short time.

When purchasing a second-hand vehicle:

- have the keys memorised by a CITROËN dealer to ensure that the keys in your possession are the only ones which can start the vehicle.



ALARM

If fitted on your vehicle, this provides two types of protection:

- exterior protection: it sounds if a front/rear door or the bonnet is opened.
- interior protection: it sounds if the volume inside the passenger compartment changes (breaking of a window or a movement inside the vehicle).

Locking the vehicle with complete alarm

Setting the alarm

- Switch off the ignition and get out of the vehicle.
- Set the alarm within five minutes of getting out of the vehicle, by locking or deadlocking using the remote control. The red diode, located on the centre console, flashes once per second.

Disarming

- Unlock the vehicle with the remote control or switch on the ignition, the red diode goes out.

Locking the vehicle with exterior protection only

If, while you are away from the vehicle, you wish to leave a window partially open or a pet inside the vehicle, you should choose exterior protection only.

- Switch off the ignition.



- In the next ten seconds, press this button, located on the centre console, until the red diode is on continuously.
- Get out of the vehicle.
- Within the next five minutes, set the alarm by locking or deadlocking using the remote control (the red diode flashes once a second).



KEY

This locks and unlocks the locks on the vehicle and starts the engine.

REMOTE CONTROL

Changing the battery

Battery ref.: CR1620/3 volts.

The information "battery flat" is given by an audible signal, accompanied by a message on the display.

To replace the battery, unclip the casing using a coin at the ring.

If the remote control does not work after the battery has been changed, re-programme the remote control.



There is a risk of damage if the replacement battery does not conform.

Use only identical batteries or batteries of an equivalent type to those recommended by CITROËN dealers.

Do not discard the remote control batteries, they contain metals which are harmful to the environment.

Deposit them at a CITROËN dealership, or at any other approved collection point.

Programming the remote control

Following changing of the remote control battery or disconnection of the vehicle battery, the remote control may have to be reprogrammed. Wait at least one minute before using the remote control.

Insert the key in the ignition switch with the buttons (padlocks) of the remote control facing you.

Switch on the ignition.

Press the locking padlock for at least five seconds within the next ten seconds.

Switch off the ignition.

Wait at least one minute before using the remote control.

The remote control is now working again.

ELECTRONIC IMMOBILISER

All of the keys contain an electronic immobiliser device.

This device locks the engine supply system. It is activated automatically when the key is removed from the ignition.

After the ignition is switched on, a dialogue is established between the key and the electronic immobiliser system.

The metal part of the key must be unfolded correctly for correct dialogue to take place.

If you lose your keys

i Visit a CITROËN dealer with the vehicle's V5 registration document and your identification document.

A CITROËN dealer will be able to retrieve the key code and the transponder code so that a replacement key can be ordered.

Good practice

Do not make any modifications to the electronic immobiliser system.

Operating the remote control, even when it is in your pocket, may result in involuntary unlocking of the doors.

The simultaneous use of other high frequency equipment (mobile telephones, domestic alarms...), may interfere with the operation of the remote control temporarily.

The remote control does not operate while the key is in the ignition, even if the ignition is off.

As a safety precaution (with children on board), remove the key from the ignition when leaving the vehicle, even for a short time.

When purchasing a second-hand vehicle:

- have the keys memorised by a CITROËN dealer to ensure that the keys in your possession are the only ones which can start the vehicle.



ALARM

If fitted on your vehicle, this provides two types of protection:

- exterior protection: it sounds if a front/rear door or the bonnet is opened.
- interior protection: it sounds if the volume inside the passenger compartment changes (breaking of a window or a movement inside the vehicle).

Locking the vehicle with complete alarm

Setting the alarm

- Switch off the ignition and get out of the vehicle.
- Set the alarm within five minutes of getting out of the vehicle, by locking or deadlocking using the remote control. The red diode, located on the centre console, flashes once per second.

Disarming

- Unlock the vehicle with the remote control or switch on the ignition, the red diode goes out.

Locking the vehicle with exterior protection only

If, while you are away from the vehicle, you wish to leave a window partially open or a pet inside the vehicle, you should choose exterior protection only.

- Switch off the ignition.



- In the next ten seconds, press this button, located on the centre console, until the red diode is on continuously.
- Get out of the vehicle.
- Within the next five minutes, set the alarm by locking or deadlocking using the remote control (the red diode flashes once a second).

Good practice

Do not make any modifications to the electronic immobiliser system.

Operating the remote control, even when it is in your pocket, may result in involuntary unlocking of the doors.

The simultaneous use of other high frequency equipment (mobile telephones, domestic alarms...), may interfere with the operation of the remote control temporarily.

The remote control does not operate while the key is in the ignition, even if the ignition is off.

As a safety precaution (with children on board), remove the key from the ignition when leaving the vehicle, even for a short time.

When purchasing a second-hand vehicle:

- have the keys memorised by a CITROËN dealer to ensure that the keys in your possession are the only ones which can start the vehicle.



ALARM

If fitted on your vehicle, this provides two types of protection:

- exterior protection: it sounds if a front/rear door or the bonnet is opened.
- interior protection: it sounds if the volume inside the passenger compartment changes (breaking of a window or a movement inside the vehicle).

Locking the vehicle with complete alarm

Setting the alarm

- Switch off the ignition and get out of the vehicle.
- Set the alarm within five minutes of getting out of the vehicle, by locking or deadlocking using the remote control. The red diode, located on the centre console, flashes once per second.

Disarming

- Unlock the vehicle with the remote control or switch on the ignition, the red diode goes out.

Locking the vehicle with exterior protection only

If, while you are away from the vehicle, you wish to leave a window partially open or a pet inside the vehicle, you should choose exterior protection only.

- Switch off the ignition.



- In the next ten seconds, press this button, located on the centre console, until the red diode is on continuously.
- Get out of the vehicle.
- Within the next five minutes, set the alarm by locking or deadlocking using the remote control (the red diode flashes once a second).

Triggering

The siren sounds, the direction indicators flash for approximately 30 seconds and the red diode flashes rapidly.

- To switch it off, insert the key and switch on the ignition.

When the alarm has been triggered ten times in succession (when triggered for the eleventh time) it is deactivated. Repeat the rules for setting the alarm.

Locking the vehicle without alarm

- Insert the key in the lock on the driver's door and lock it.

Do not set the alarm when washing your vehicle.

Failure of the remote control

When the alarm is set but the remote control does not operate:

- Unlock the doors with the key and open the door. The alarm is triggered.
- Switch on the ignition in the next ten seconds. The alarm is disarmed.

Incorrect operation

When the ignition is switched on, if the red diode remains on for ten seconds, there is a fault in the siren connection.

Contact a CITROËN dealer to have the system checked.


Automatic setting of the alarm

Depending on the country in which the vehicle is sold, the alarm is set automatically approximately 2 minutes after the last door is closed.

To prevent triggering of the alarm when a door is opened, it is imperative to press the remote control unlocking button again.



Do not make any modifications to the alarm system as this could cause faults.

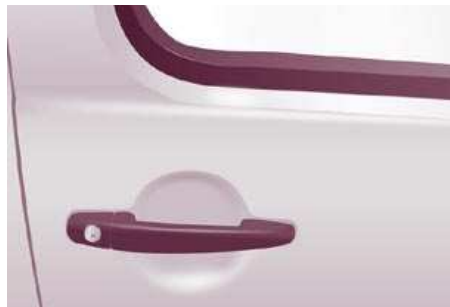

DOORS

From the outside

Use the remote control to lock/unlock the vehicle.

Insert the metal part of the key in the lock on the driver's side if the remote control does not work.

From the inside



The first press permits central locking of the vehicle.

A second press permits central unlocking of the vehicle.

The control does not work if the vehicle has been locked using the remote control or the key, from the outside.

Triggering

The siren sounds, the direction indicators flash for approximately 30 seconds and the red diode flashes rapidly.

- To switch it off, insert the key and switch on the ignition.

When the alarm has been triggered ten times in succession (when triggered for the eleventh time) it is deactivated. Repeat the rules for setting the alarm.

Locking the vehicle without alarm

- Insert the key in the lock on the driver's door and lock it.

Do not set the alarm when washing your vehicle.

Failure of the remote control

When the alarm is set but the remote control does not operate:

- Unlock the doors with the key and open the door. The alarm is triggered.
- Switch on the ignition in the next ten seconds. The alarm is disarmed.

Incorrect operation

When the ignition is switched on, if the red diode remains on for ten seconds, there is a fault in the siren connection.

Contact a CITROËN dealer to have the system checked.


Automatic setting of the alarm

Depending on the country in which the vehicle is sold, the alarm is set automatically approximately 2 minutes after the last door is closed.

To prevent triggering of the alarm when a door is opened, it is imperative to press the remote control unlocking button again.



Do not make any modifications to the alarm system as this could cause faults.

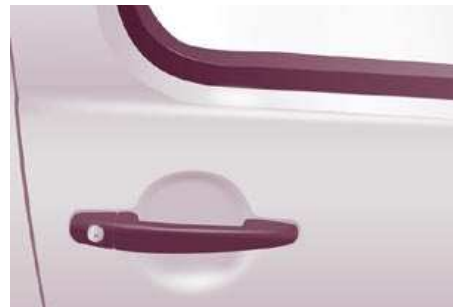

DOORS

From the outside

Use the remote control to lock/unlock the vehicle.

Insert the metal part of the key in the lock on the driver's side if the remote control does not work.

From the inside



The first press permits central locking of the vehicle.

A second press permits central unlocking of the vehicle.

The control does not work if the vehicle has been locked using the remote control or the key, from the outside.



The doors can still be opened from the inside.

The indicator light on the control:



- flashes if the accesses are locked when stationary with the engine off,



- comes on if the accesses are locked and from the time the ignition is switched on.



Protection against attack



The system automatically locks all of the doors when you reach approximately 6 mph (10 km/h).

Activation/deactivation of the function



With the ignition on, a long press on this button activates or deactivates the function.

Opening warning light



If this warning light comes on, check that the cab doors and the rear or side doors are closed correctly.



SLIDING SIDE DOOR

If fitted on your vehicle, do not open the **left-hand** side door while filling with fuel as you risk damaging the fuel filler flap.

You can lock this door using the child lock.

Take care not to block the guide space on the floor to allow the door to slide correctly.



The doors can still be opened from the inside.

The indicator light on the control:



- flashes if the accesses are locked when stationary with the engine off,



- comes on if the accesses are locked and from the time the ignition is switched on.



Protection against attack



The system automatically locks all of the doors when you reach approximately 6 mph (10 km/h).

Activation/deactivation of the function



With the ignition on, a long press on this button activates or deactivates the function.

Opening warning light



If this warning light comes on, check that the cab doors and the rear or side doors are closed correctly.



SLIDING SIDE DOOR

If fitted on your vehicle, do not open the **left-hand** side door while filling with fuel as you risk damaging the fuel filler flap.

You can lock this door using the child lock.

Take care not to block the guide space on the floor to allow the door to slide correctly.



From the outside

Pull the handle towards you then towards the rear.

From the inside

To unlock and open, push the handle towards the rear. Ensure that the door opens fully to lock the device at the base of the door.

Locking/electric child lock

This prevents opening of the side doors from the inside.



With the ignition on, press this button, the diode is lit accompanied by a message on the display.

This system is independent of the central locking control.

Good practice

Do not drive with the sliding side door open. Always remove the key from the ignition when leaving the vehicle, even for a short time.

Each time you switch on the ignition, check whether the child lock is active (diode lit). In the event of a serious impact, the electric child lock is deactivated automatically.



Operation in the event of a battery failure

Front and side passenger doors

In the event of a malfunction of the battery or of the central locking, use the lock to lock the doors mechanically.

- To open the door and get out of the vehicle, pull the interior control.
- To lock the door, insert the key in the lock, located on the edge of the door, then turn it **one eighth of a turn**.

Driver's door

- Insert the key in the lock, then turn it to the right to lock or to the left to unlock.



HINGED REAR DOORS

From the outside

The two hinged doors open to 90°.

To open, pull the handle towards you then pull the lever to open the left-hand door.


To close, start with the left-hand door then close the right-hand door.

Opening to 180°

A retractable check strap system permits extension of the opening from 90° to 180°.


Disengage the check strap towards you when the door is partially open.

The check strap will re-attach automatically on closing.

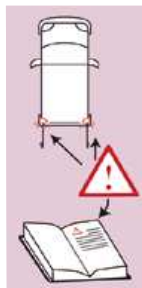

When parked with the rear doors open to 90°, the doors mask the rear lights.

To signal your position to road users travelling in the same direction who may not have noticed that you have stopped, use a warning triangle or any other device stipulated by the legislation and regulations of your country.

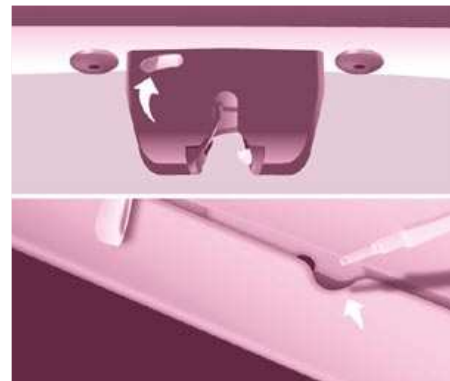

TAILGATE

From the outside

If fitted on your vehicle, locking/unlocking is via the remote control.

To open, press the control then raise the tailgate.

A strap is provided to secure the tailgate in the upper position.

From inside

Emergency control

In the event of a central unlocking operating fault, this permits unlocking of the tailgate from the inside.

Fold the rear seats to gain access to the lock. Insert a small screwdriver in this opening to unlock the tailgate.



INSTRUMENTS AND CONTROLS INSTRUMENT PANEL

1. Distance recorder in kilometres/miles.
2. Display.
3. Fuel level, coolant temperature.
4. Rev counter.
5. Instrument panel lighting rheostat.
6. Trip distance recorder/service indicator zero reset.



Instrument panel display

- Speed limiter/cruise control.
- Kilometres/Miles travelled.
- Service indicator, engine oil level indicator, total kilometres/miles.
- Presence of water in the diesel filter.
- Diesel pre-heating.



Warning light and controls on the overhead storage unit

- Passenger airbag disarmed warning light.
- Driver/passenger heated seat controls (version with 2 front seats).
- Rear ventilation activation/deactivation control.



Instrument panel without display

ADJUSTING THE TIME

Centre console without display



To adjust the time of the clock on the instrument panel, use the left-hand button on the instrument panel then carry out the operations in the following order:

- turn to the left: the minutes flash,
- turn to the right to increase the minutes (hold the button to the right for rapid scrolling),
- turn to the left: the hours flash,
- turn to the right to increase the hours (hold the button to the right for rapid scrolling),
- turn to the left: 24 H or 12 H is displayed,
- turn to the right to select 24 H or 12 H,
- turn to the left to complete the time adjustment.

After approximately 30 seconds without any action, the display returns to the normal display.



Centre console with display



The display - time sequence is linked according to model (version). The access to the Date is only active when the model version offers a date in words.



To adjust the time indicated on the display, refer to the "Adjusting the date and time" section of chapter 9.



Instrument panel without display

ADJUSTING THE TIME

Centre console without display



To adjust the time of the clock on the instrument panel, use the left-hand button on the instrument panel then carry out the operations in the following order:

- turn to the left: the minutes flash,
- turn to the right to increase the minutes (hold the button to the right for rapid scrolling),
- turn to the left: the hours flash,
- turn to the right to increase the hours (hold the button to the right for rapid scrolling),
- turn to the left: 24 H or 12 H is displayed,
- turn to the right to select 24 H or 12 H,
- turn to the left to complete the time adjustment.

After approximately 30 seconds without any action, the display returns to the normal display.



Centre console with display



The display - time sequence is linked according to model (version). The access to the Date is only active when the model version offers a date in words.



To adjust the time indicated on the display, refer to the "Adjusting the date and time" section of chapter 9.

WARNING LIGHTS

Each time the engine is started: a series of warning lights comes on applying a check auto-test. They are switched off almost immediately. When the engine is running: the warning light becomes a warning if it remains on continuously or flashes. This initial warning may be accompanied by an audible signal and a message on the display.

Do not ignore these warnings

Warning light		is	indicates	Solution - action
	STOP	lit, associated with another warning light and accompanied by a message on the display.	major faults linked with the "Brake fluid level", "Engine oil pressure and temperature", "Coolant temperature", "Electronic brake force distribution" and "Power steering" warning lights.	You must stop, park, switch off the ignition and call a CITROËN dealer.
	Handbrake/ Brake fluid level/EBFD	lit.	handbrake applied or not released correctly.	Releasing the handbrake switches off the warning light.
		lit.	low brake fluid level.	Top up using a fluid recommended by CITROËN.
		remaining on, even though the level is correct and associated with the ABS warning light.	failure of the electronic brake force distribution.	You must stop, park, switch off the ignition and call a CITROËN dealer.
	Engine oil pressure and temperature	lit while driving.	insufficient pressure or temperature too high.	Park, switch off the ignition and allow to cool. Visually check the level. Chapter 6, "Levels" section.
		remaining on, even though the level is correct.	major fault.	Call a CITROËN dealer.

Warning light		is	indicates	Solution - action
	Coolant temperature and level	lit with needle in the red zone.	abnormal increase in temperature.	Park and switch off the ignition then allow to cool. Visually check the level.
		flashing.	drop in coolant level.	Chapter 6, "Levels" section. Contact a CITROËN dealer.
	Service	lit temporarily.	minor faults or warnings.	Consult the warnings log on the display or on the screen. See chapter 9, "Trip computer" section then "Warnings log". Depending on the seriousness of the fault, contact a CITROËN dealer.
		remaining on.	major faults.	
	Row 1 seat belt not fastened	lit then flashing.	the driver or a front passenger has not fastened his seat belt.	Pull the strap then insert the tongue in the buckle.
		accompanied by an audible signal then remains on.	the vehicle is moving with the driver or front passenger seat belt not fastened.	Check that the seat belt is fastened by pulling the strap. Chapter 4, "Seat belts" section. The driver must ensure that all passengers have fastened their seat belt and use it correctly.

Instruments and controls

Warning light		is	indicates	Solution - action
	Front/side/curtain airbag	flashing or remaining on.	failure of an airbag.	Have the system checked by a CITROËN dealer without delay. Chapter 4, "Airbags" section.
	Front passenger airbag disarmed	lit.	intentional disarming of this airbag in the presence of a rear facing child seat.	Chapter 4, "Airbags-children on board" section.
	Low fuel level	lit with gauge needle in the red zone.	that when it first comes on approximately 8 litres of fuel remain.	It is essential to fill the tank to avoid running out of fuel. Never continue to drive until you run out of fuel, this could damage the emission control and injection systems. Tank capacity: approximately 80 litres
		remaining on each time the ignition is switched on.	an insufficient top-up of the fuel.	
		flashing.	cutting off of the supply following a serious impact.	Restore the supply. Chapter 6, "Fuel" section.
	EOBD emission control system	flashing or remaining on.	failure of the system.	Have the system checked by a CITROËN dealer as soon as possible.
	Battery charge	lit.	fault in the charging circuit.	Check the battery terminals, ... Chapter 7, "Battery" section.
		flashing.	placing of the active functions on standby (economy mode).	Chapter 7, "Battery" section.
		remaining on, in spite of the checks.	faulty circuit, injection or ignition malfunction.	Call a CITROËN dealer.

Warning light	is	indicates	Solution - action
 Power steering	lit.	system malfunction.	The vehicle retains conventional steering without assistance. Have the system checked by a CITROËN dealer.
 Opening detection	lit and accompanied by a message on the display.	access not closed correctly.	Check that the cab doors, the rear and side doors and the bonnet are closed (if your vehicle is fitted with an alarm).
 Rear suspension with pneumatic compensation	flashing.	abnormal difference between the detected sill height and the optimum sill height.	In automatic correction mode: drive slowly (approximately 6 mph (10 km/h)) until the warning light is switched off. In manual correction mode: return the sill which is still at the upper or lower limit to an optimum height. Chapter 3, "Rear suspension" section.
	lit on starting or while driving.	failure of the pneumatic compensation.	You must stop. Call a CITROËN dealer.
 ABS	remaining on.	failure of the anti-lock braking system.	The vehicle retains conventional braking without assistance but you are advised to stop. Call a CITROËN dealer.
 ESP	flashing.	triggering of regulation by the ESP.	The system optimises drive and permits improvement of the directional stability of the vehicle. Chapter 4, "Driving safety" section.
	remaining on.	system malfunction. E.g.: under-inflation of the tyres.	E.g. Check the pressure of the tyres. Have them checked by a CITROËN dealer.
	remaining on with the diode on the button (on the fascia) lit.	deactivation of the system at the request of the driver.	Operation of the system is deactivated. Reactivation is automatic above 30 mph (50 km/h) or after pressing the button (on the fascia).

Instruments and controls

Warning light		is	indicates	Solution - action
	Brake pads	lit.	brake pad wear.	Have the pads replaced by a CITROËN dealer.
	Dipped headlamps/ Daytime lights	lit.	manual selection or automatic lighting.	Rotate the ring on the lights stalk to the second position.
			lighting of the dipped headlamps from the time the ignition is switched on - daytime lights.	Depending on the country in which the vehicle is sold. Chapter 3, "Steering wheel controls" section.
	Main beam headlamps		pulling of the stalk towards you.	Pull the stalk to return to dipped headlamps.
	Direction indicators	flashing with buzzer.	change of direction via the lights stalk, to the left of the steering wheel.	To the Right: control to be pushed upwards. To the Left: control to be pushed downwards.
	Front fog lamps	lit.	manual selection.	The fog lamps only operate if the side lights or dipped headlamps are on.
	Rear fog lamps	lit.	manual selection.	The fog lamps only operate if the side lights or dipped headlamps are on. In conditions of normal visibility, take care to switch them off on penalty of being booked. "This light is a dazzling red."
	Particle emission filter	lit.	a malfunction of the particle emission filter (diesel additive level, risk of clogging, ...).	Have the filter checked by a CITROËN dealer. Chapter 6, "Checks" section.

Display		is	indicates	Solution - action
	Cruise control	lit.	cruise control selected.	Manual selection. Chapter 3, "Steering wheel controls" section.
	Speed limiter	lit.	speed limiter selected.	Manual selection. Chapter 3, "Steering wheel controls" section.
	Diesel pre-heating	lit.	climatic conditions requiring pre-heating.	Wait until the warning light is switched off before operating the starter.
	Particle emission filter	lit.	a malfunction of the particle emission filter (diesel additive level, risk of clogging, ...).	Have the filter checked by a CITROËN dealer. Chapter 6, "Checks" section.
	Presence of water in the diesel filter	lit and accompanied by a message on the display.	water in the diesel filter.	Have the filter bled by a CITROËN dealer without delay. Chapter 6, "Checks" section.
	Service spanner	lit.	service due shortly.	Refer to the list of checks in the servicing booklet. Have the service carried out by a CITROËN dealer.
	Time	displayed.	adjustment of the time.	Use the left-hand button on the instrument panel. Chapter 2, at the beginning of the "Instruments and controls" section.



FUEL GAUGE

The fuel level is tested each time the key is turned to the "running" position.

The gauge is positioned on:

- **1:** the fuel tank is full, approximately 80 litres.
- **0:** the reserve is now being used, the warning light comes on continuously.

The reserve when the warning first comes on is approximately 8 litres.



Refer to the "Fuel" section of chapter 6.



COOLANT TEMPERATURE

The needle is positioned before the red zone: normal operation.

In arduous conditions of use or hot climatic conditions, the needle may move close to the red graduations.

What you should do if the needle enters the red zone:

Reduce your speed or let the engine run at idle.

What you should do if the warning light comes on:

- stop immediately, switch off the ignition. The fan may continue to operate for a certain time up to approximately 10 minutes,
- wait for the engine to cool down in order to check the coolant level and top it up if necessary.

As the cooling system is pressurised, follow this advice in order to avoid any risk of scalding:

- wait at least one hour after switching off the engine before carrying out any work,
- unscrew the cap by 1/4 turn to allow the pressure to drop,
- when the pressure has dropped, check the level on the expansion bottle,
- if necessary, remove the cap to top up.

If the needle remains in the red zone, have the system checked by a CITROËN dealer.



Refer to the "Levels" section of chapter 6.

EMISSION CONTROL



EOBD (European On Board Diagnostics) is a diagnostics system which complies with, among others, the standards concerning authorised emissions of:

- CO (carbon monoxide),
- HC (unburnt hydrocarbons),
- NOx (nitrogen oxides) or particles, detected by oxygen sensors placed upstream and downstream of the catalytic converters.

Therefore, the driver is warned of any malfunction of this emission control system by the lighting of this specific warning lamp on the instrument panel.

There is a risk of damage to the catalytic converter. Have it checked by a CITROËN dealer.

SERVICE INDICATOR

This programme's service intervals according to the use of the vehicle.

Operation

A few moments after the ignition has been switched on, the spanner indicating a service operation lights up; the display for the total distance recorder tells you (in round figures) the distance remaining before the next service.

The points at which a service is due are calculated from the last indicator zero reset.

The point at which a service is due is determined by two parameters:

- the distance travelled,
- the time which has elapsed since the last service.

 The distance remaining before the next service may be weighted by the time factor, depending on the driver's driving habits.

More than 1 000 miles/km before the next service is due

Example: 4 800 miles/km remain before the next service is due. When the ignition is switched on and for a few seconds, the display shows:



A few seconds after the ignition is switched on, the oil level is displayed, then the total distance recorder resumes normal operation showing the total and trip distances.

Less than 1 000 miles/km before the next service is due

Each time the ignition is switched on and for a few seconds, the spanner flashes and the number of miles/kilometres remaining is displayed:



A few seconds after the ignition is switched on, the oil level is displayed, then the total distance recorder resumes normal operation and the spanner remains lit. This indicates that a service should be carried out shortly.

Service overdue



Each time the ignition is switched on and for a few seconds, the spanner flashes and the excess distance is displayed.

 With the engine running the spanner remains lit until the service has been carried out.

First of the two terms reached: the spanner also lights up if the two-year interval has elapsed.

EMISSION CONTROL



EOBD (European On Board Diagnostics) is a diagnostics system which complies with, among others, the standards concerning authorised emissions of:

- CO (carbon monoxide),
- HC (unburnt hydrocarbons),
- NOx (nitrogen oxides) or particles, detected by oxygen sensors placed upstream and downstream of the catalytic converters.

Therefore, the driver is warned of any malfunction of this emission control system by the lighting of this specific warning lamp on the instrument panel.

There is a risk of damage to the catalytic converter. Have it checked by a CITROËN dealer.

SERVICE INDICATOR

This programmes service intervals according to the use of the vehicle.

Operation

A few moments after the ignition has been switched on, the spanner indicating a service operation lights up; the display for the total distance recorder tells you (in round figures) the distance remaining before the next service.

The points at which a service is due are calculated from the last indicator zero reset.

The point at which a service is due is determined by two parameters:

- the distance travelled,
- the time which has elapsed since the last service.

 The distance remaining before the next service may be weighted by the time factor, depending on the driver's driving habits.

More than 1 000 miles/km before the next service is due

Example: 4 800 miles/km remain before the next service is due. When the ignition is switched on and for a few seconds, the display shows:



A few seconds after the ignition is switched on, the oil level is displayed, then the total distance recorder resumes normal operation showing the total and trip distances.

Less than 1 000 miles/km before the next service is due

Each time the ignition is switched on and for a few seconds, the spanner flashes and the number of miles/kilometres remaining is displayed:



A few seconds after the ignition is switched on, the oil level is displayed, then the total distance recorder resumes normal operation and the spanner remains lit. This indicates that a service should be carried out shortly.

Service overdue



Each time the ignition is switched on and for a few seconds, the spanner flashes and the excess distance is displayed.

 With the engine running the spanner remains lit until the service has been carried out.

First of the two terms reached: the spanner also lights up if the two-year interval has elapsed.

Zero re-set

Your CITROËN dealer carries out this operation after each service.

However, if you carry out the service yourself, the re-set procedure is as follows:

- switch off the ignition,
- press and hold the trip recorder reset button,
- switch on the ignition.

The display begins a countdown.

When the display shows "**=0**", release the button; the spanner disappears.

 After this operation, if you wish to disconnect the battery, lock the vehicle and wait for at least five minutes, otherwise the zero re-set will not be registered.

Engine oil level indicator

When the ignition is switched on, the engine oil level is indicated for a few seconds, after the service information.



Oil level correct



Lack of oil

Flashing of "OIL", linked with the service warning light, accompanied by an audible signal and a message on the display, indicates a lack of oil which could damage the engine.

If the lack of oil is confirmed by a check using the dipstick, it is essential that the level is topped up.



Oil level gauge fault

Flashing of "OIL--" indicates a malfunction of the engine oil level gauge. Consult a CITROËN dealer.



The level read will only be correct if the vehicle is on level ground and the engine has been off for more than 15 minutes.



Dipstick

A = maximum, never exceed this level as a surplus of oil may damage the engine.

Contact a CITROËN dealer without delay.

B = minimum, top up the level via the oil filler cap, using the type of oil suited to your engine.



Trip recorder zero reset button

With the ignition on, press the button until the zeros appear.



Lighting rheostat

With the lights on, press the button to vary the intensity of the lighting of the instruments and controls. When the lighting reaches the minimum (or maximum) setting, release the button then press it again to increase (or reduce) the brightness. As soon as the lighting is of the required brightness, release the button.

Zero re-set

Your CITROËN dealer carries out this operation after each service.

However, if you carry out the service yourself, the re-set procedure is as follows:

- switch off the ignition,
- press and hold the trip recorder reset button,
- switch on the ignition.

The display begins a countdown.

When the display shows "**=0**", release the button; the spanner disappears.

 After this operation, if you wish to disconnect the battery, lock the vehicle and wait for at least five minutes, otherwise the zero re-set will not be registered.

Engine oil level indicator

When the ignition is switched on, the engine oil level is indicated for a few seconds, after the service information.



Oil level correct



Lack of oil

Flashing of "**OIL**", linked with the service warning light, accompanied by an audible signal and a

message on the display, indicates a lack of oil which could damage the engine.

If the lack of oil is confirmed by a check using the dipstick, it is essential that the level is topped up.



Oil level gauge fault

Flashing of "**OIL--**" indicates a malfunction of the engine oil level gauge. Consult a CITROËN dealer.



The level read will only be correct if the vehicle is on level ground and the engine has been off for more than 15 minutes.



Dipstick

A = maximum, never exceed this level as a surplus of oil may damage the engine.

Contact a CITROËN dealer without delay.

B = minimum, top up the level via the oil filler cap, using the type of oil suited to your engine.



Trip recorder zero reset button


With the ignition on, press the button until the zeros appear.



Lighting rheostat

With the lights on, press the button to vary the intensity of the lighting of the instruments and controls. When the

lighting reaches the minimum (or maximum) setting, release the button then press it again to increase (or reduce) the brightness. As soon as the lighting is of the required brightness, release the button.

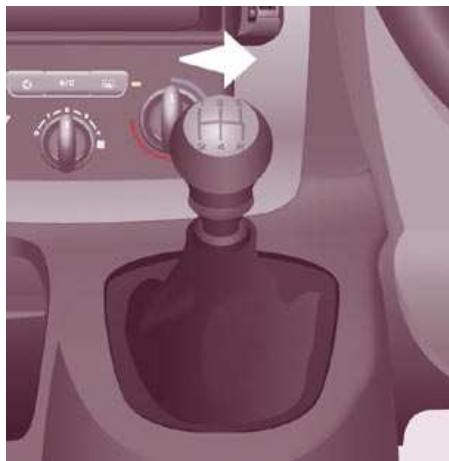

5-speed gearbox



6-speed gearbox

GEARBOXES AND STEERING WHEEL

To change gear easily, always press the clutch pedal fully.

To prevent the mat from becoming caught under the pedal:

- ensure that the mat is positioned correctly,
- never fit one mat on top of another.

When driving, avoid leaving your hand on the gear knob as the force exerted, even if slight, may wear the internal components of the gearbox over time.

Reverse gear

In the 6-speed configuration, raise the collar under the gear knob to engage reverse gear. Never engage reverse gear before the vehicle is completely stationary.

The lever should be moved slowly to reduce the noise on engaging reverse gear.



GEAR SHIFT INDICATOR



In order to drive as fuel efficiently as possible with a manual gearbox, this indicator lamp indicates to the driver to change up.

The driver remains responsible for deciding whether or not to follow this indication, since the indicator lamp comes on without taking into account the configuration of the road, the amount of traffic and safety factors.

The lighting of this indicator lamp cannot be deactivated.

i When reverse gear is engaged and when changing down whilst decelerating, the function is disabled.

This equipment will become available during the year.

Gearboxes and steering wheel



STEERING WHEEL HEIGHT AND DEPTH ADJUSTMENT

When the vehicle is stationary, unlock the steering wheel by lowering the lever.

Adjust the height and depth of the steering wheel, then lock by pushing the lever fully upwards.

Starting and stopping



STARTING AND STOPPING

Running and accessories position.

To unlock the steering, turn the steering wheel gently while turning the key, without forcing. In this position, certain accessories can be used.

Starting position.

The starter is operated, the engine turns over, release the key.

STOP position: steering lock.

The ignition is off. Turn the steering wheel until the steering locks. Remove the key.

Good practice when starting



Diesel pre-heating warning light

If the temperature is high enough, the warning light comes on for less than one second, you can start without waiting.

In cold weather, wait for this warning light to switch off then operate the starter (Starting position) until the engine starts.

Door or bonnet open warning light



If this comes on, a door or the bonnet is not closed correctly, check!



Key

Take care to prevent the key from coming into contact with grease, dust, rain or a damp environment.

A heavy object attached to the key (key ring, ...) weighing the key down in the ignition switch may cause a malfunction.

Good practice when stopping

Minimise engine and gearbox wear

 
When switching off the ignition, let the engine run for a few seconds to allow the turbocharger (Diesel engine) to return to idle. Do not press the accelerator when switching off the ignition.

There is no need to engage a gear after parking the vehicle.



STEERING MOUNTED CONTROLS

DIRECTION INDICATORS (flashing)



Left: downwards passing the point of resistance.

Right: upwards passing the point of resistance.

LIGHTING CONTROL

Front and rear lights

Selection is by turning ring A.



Checking by means of the indicator lights on the instrument panel is described in the "Instruments and controls" section of chapter 2.



Lights off

AUTO

Automatic lights if your vehicle is fitted with a brightness sensor.



Side lights




Dipped beam (green)
Main beam (blue)

Dipped beam/main beam change

Pull the stalk fully towards you.


Lights-on buzzer

When the ignition is switched off, when the driver's door is opened, a buzzer sounds if you have left your lights on.

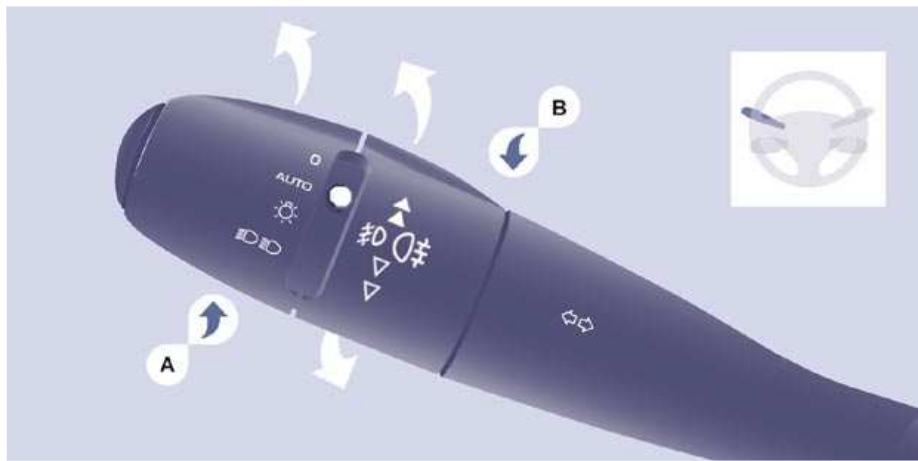

STEERING MOUNTED CONTROLS

 DIRECTION INDICATORS (flashing)



Left: downwards passing the point of resistance.

Right: upwards passing the point of resistance.

LIGHTING CONTROL

Front and rear lights

Selection is by turning ring A.



Checking by means of the indicator lights on the instrument panel is described in the "Instruments and controls" section of chapter 2.



Lights off

AUTO

Automatic lights if your vehicle is fitted with a brightness sensor.



Side lights



Dipped beam (green)
Main beam (blue)

Dipped beam/main beam change

Pull the stalk fully towards you.

Lights-on buzzer

When the ignition is switched off, when the driver's door is opened, a buzzer sounds if you have left your lights on.

Steering mounted controls

Front and rear fog lights



Rotate ring **B** forwards to switch on and rearwards to switch off. The status is confirmed by the light on the instrument panel.

These operate with the side lights and the dipped beam headlamps.



Front fog lights (green, 1st rotation of the ring forwards).



Front fog lights (green) and rear fog lights (amber, 2nd rotation of the ring forwards).



To switch off the front and rear fog lights, turn the ring rearwards twice in succession.



In clear weather or in rain, both day and night, rear fog lights dazzle and are prohibited.

Do not forget to switch them off when they are no longer needed.

Automatic switching on of the lights switches off the rear fog lamps, but the front fog lamps remain on.

Daytime lights

Depending on the country in which the vehicle is sold, the vehicle may be equipped with daytime lights. The dipped headlamps come on when the vehicle is started.



This warning light comes on on the instrument panel.



The instruments and controls (instrument panel, display, air conditioning control panel, ...) are only lit on switching to the automatic switching on of the lights mode or when the lights are switched on manually.

Automatic switching on of the lights

AUTO

The side lights and dipped beam headlamps switch on automatically if the light is poor, or during operation of the windscreen wipers. They switch off as soon as the light becomes bright enough or the windscreen wipers stop.

This function is not compatible with the daytime lights.

 In foggy weather or in snow, the brightness sensor can detect sufficient light. As a consequence, the lights will not come on automatically. If necessary, you must switch on the dipped headlamps manually.

 Do not cover the brightness sensor located on the windscreen, behind the mirror. It is used for the automatic switching on of the lights and for the automatic wipers.

Activation

Turn the ring to the **AUTO** position. The activation of this function is accompanied by a message on the display.

Deactivation

Turn the ring forwards or rearwards. The deactivation of this function is accompanied by a message on the display.

The function is deactivated temporarily when you use the manual lights stalk.

If the brightness sensor does not function correctly, the lights come on accompanied by the service warning light, an audible signal and a message on the display.

Consult a CITROËN dealer.



HEADLAMP BEAM

Depending on the load in your vehicle, the beam setting must be adjusted.


0 - 1 or 2 people in the front seats.

1 - 5 people.

2 - 6 to 9 people.

3 - Driver + maximum authorised loads.

Initial setting is position 0.

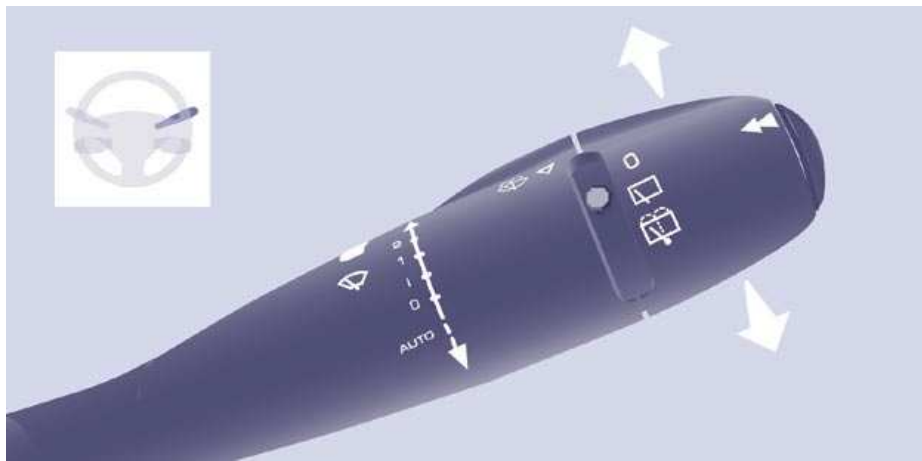

WINDSCREEN WIPER STALK

Manual windscreen wipers

- 2** Fast wipe (heavy rain).
- 1** Normal wipe (moderate rain).
- I** Intermittent wipe.
- 0** Off.
- ↓ Single wipe (press downwards).

In the Intermittent position, the wiping speed is in proportion to the vehicle speed.

Whenever the ignition has been switched off for more than one minute, with the windscreen wiper stalk in position 2, 1 or I, the stalk must be reactivated:

- move the stalk to any position,
- then move it back to the required position.

Wash-wipe and headlamp wash

Pull the stalk towards you, the wash-wipe is accompanied by a timed sweep of the wipers.

The headlamp wash is linked with the wash-wipe, it is triggered if the dipped headlamps are on.



To top up the levels, refer to the "Levels" section of chapter 6.

Automatic windscreen wipers



Do not cover the rain sensor, located in the centre of the windscreen, behind the mirror.

In the **AUTO** position, the windscreen wipers operate automatically and adapt their speed to the intensity of the rainfall.

When not in **AUTO** mode, for the other positions, refer to the manual windscreen wipers section.

Activation

Press the control downwards. Activation of the function is accompanied by a message on the display.

The automatic windscreen wipers function must be reactivated if the ignition has been switched off for more than one minute, by pressing the stalk downwards.

Deactivation/Switching off

Place the windscreen wipers stalk in position **I**, **1** or **2**. Deactivation of the function is accompanied by a message on the display.

In the event of malfunction of the automatic windscreen wipers, the windscreen wipers will operate in intermittent mode. Contact a CITROËN dealer to have the system checked.




When using an automatic car wash, switch off the ignition to avoid triggering of the automatic wiping.

In winter, it is advisable to wait for the windscreen to completely clear of ice before operating the automatic wipe.

Special position of the windscreen wipers

In the minute following switching off of the ignition, any action on the stalk positions the wipers against the windscreen uprights.

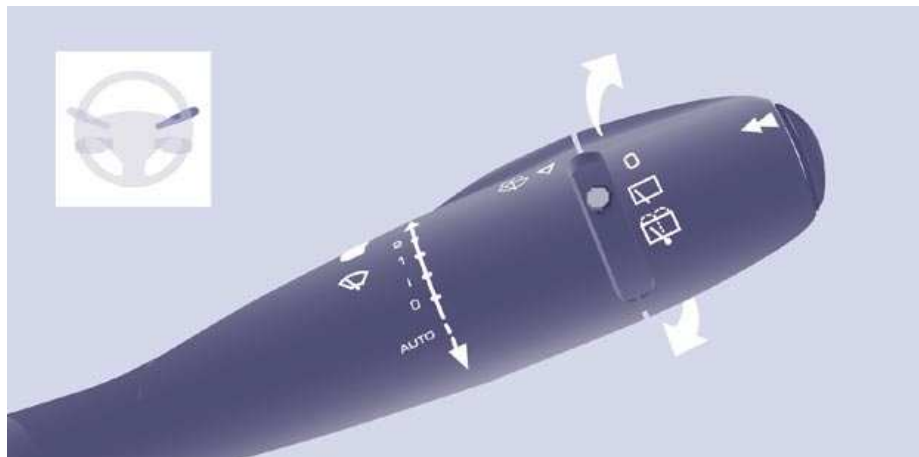

This action enables you to position the wiper blades for winter parking, cleaning or replacement.



Refer to the "Changing a windscreen wiper blade" section of chapter 7.

To park the wipers in their normal position after this has been done, switch on the ignition and move the stalk.



Rear windscreen wiper

Turn the ring to the first notch.



Rear windscreen wash

Turn the ring past the first notch: the windscreen wash then the windscreen wiper operate for a fixed time.



In winter, in the event of a considerable amount of snow or ice, switch on the rear screen demister. Once de-icing is complete, remove the snow or ice which has accumulated on the rear wiper blade. You can then operate the rear windscreen wiper.

Steering mounted controls



CRUISE CONTROL "CRUISE"

"This is the speed at which the driver wishes to drive".

This aid to driving in free-flowing traffic enables the vehicle to maintain the speed programmed by the driver, unless a steep gradient makes this impossible.

In order for it to be programmed or activated, the vehicle speed must be greater than 25 mph (40 km/h) with at least 4th gear engaged.

This cruise control shows the function selection status on the instrument panel and displays the programmed speed:



Function selected, displaying of the "Cruise Control" symbol.



Function deactivated, **OFF** (example at 107 km/h).



Function activated (example at 107 km/h).



Vehicle speed above (e.g. 118 km/h), the programmed speed is displayed flashing.



Operating fault detected, **OFF** - the dashes flash.



Selecting the function

- Place the switch in the **CRUISE** position. The cruise control is selected but is not yet active and no speed has been programmed.



First activation/ programming a speed

- Reach the chosen speed by pressing the accelerator.
- Press the **SET** - or **SET +** button.


This programmes/activates the reference speed and the vehicle will maintain this speed.



Temporary exceeding of the speed

It is possible to **accelerate** and drive momentarily at a speed greater than the programmed speed. The value programmed flashes.

When the accelerator pedal is released, the vehicle will return to the programmed speed.

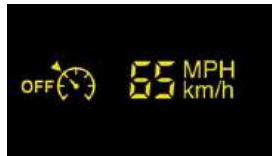

Deactivation (off)

- Press this button or the brake or clutch pedal.



Reactivation

- Following deactivation of the cruise control, press this button. Your vehicle will return to the last programmed speed. Alternatively, you can repeat the "first activation" procedure.

Steering mounted controls



Changing the programmed speed

There are two methods of memorising a speed higher than the previous one:

Without using the accelerator:

- press the **Set +** button.

A brief press increases the speed by 1 mph (km/h).

A maintained press increases the speed in steps of 5 mph (km/h).

Using the accelerator:

- exceed the memorised speed until the speed required is reached,
- press the **Set +** or **Set -** button.

To memorise a speed lower than the previous one:

- press the **Set -** button.

A brief press decreases the speed by 1 mph (km/h).

A maintained press decreases the speed in steps of 5 mph (km/h).



Switching the function off

- Place the dial in position **0** or switch off the ignition to switch everything off.

Cancelling the programmed reference speed

When the vehicle becomes stationary, after switching off the ignition, the system no longer memorises a speed.



Operating fault

The programmed speed is cleared then replaced by three dashes. Contact a CITROËN dealer to have the system checked.

Good practice

When changing the programmed reference speed by means of a maintained press, pay attention as the speed can increase or decrease rapidly.

Do not use the cruise control on slippery roads or in heavy traffic.

In the event of a steep slope, the cruise control cannot prevent the vehicle from exceeding the programmed speed.

In any event, the cruise control cannot replace the need to observe the speed limits, nor can it replace the need for vigilance and responsibility on the part of the driver.

It is advisable to leave your feet near the pedals.

To avoid any jamming under the pedals:

- ensure that the mat and its fixings on the floor are positioned correctly,
- never place one mat on top of another.



SPEED LIMITER "LIMIT"

"This is the selected speed which the driver does not wish to exceed".

This selection is made with the engine running while stationary or with the vehicle moving. The minimum speed which can be programmed is 20 mph (30 km/h).

The speed of the vehicle responds to the pressure of the driver's foot as far as the accelerator pedal point of resistance which indicates that the programmed speed has been reached.

However, pressing the pedal beyond this point of resistance to the floor permits exceeding of the programmed speed. To resume use of the limiter, simply reduce the pressure on the accelerator pedal gradually and return to a speed below that programmed.

The operating actions may be carried out when stationary, with the engine running, or with the vehicle moving.

This speed limiter shows the function selection status on the instrument panel and displays the programmed speed:



Function selected, displaying of the "Speed Limiter" symbol.



Function deactivated, last programmed speed - OFF (example at 65 mph (107 km/h)).



Function activated (example at 65 mph (107 km/h)).



Vehicle speed above (example 70 mph (118 km/h)), the programmed speed is displayed flashing.



Operating fault detected, **OFF** - the dashes flash.

Steering mounted controls



Selecting the function

- Place the dial in the **LIMIT** position. The limiter is selected but is not yet active. The display indicates the last programmed speed.



Programming a speed

A speed can be programmed without activating the limiter but with the engine running.

To memorise a speed higher than the previous one:

- press the **Set +** button.

A brief press increases the speed by 1 mph (km/h).

A maintained press increases the speed in steps of 5 mph (km/h).

To memorise a speed lower than the previous one:

- press the **Set -** button.

A brief press decreases the speed by 1 mph (km/h).

A maintained press decreases the speed in steps of 5 mph (km/h).

Activation/Deactivation (off)

Pressing this button once activates the limiter, pressing the button again deactivates it (OFF).



Exceeding the programmed speed

Pressing the accelerator pedal in order to exceed the programmed speed will have no effect unless you press the pedal **firmly** beyond the **point of resistance**.

The limiter is deactivated temporarily and the programmed speed flashes.

To return to the limiter function, reduce your speed to below the programmed speed.

Flashing of the speed

The speed flashes:

- following forcing of the accelerator point of resistance,
- when the limiter cannot prevent an increase in the vehicle speed due to the profile of the road or on a steep descent,
- in the event of sharp acceleration.



Switching the function off

- Place the dial in position **0** or switch off the ignition to switch the system off.

The last programmed speed remains in the memory.



Operating fault

The programmed speed is cleared then replaced by three dashes.

Contact a CITROËN dealer to have the system checked.

Good practice

In any event, the speed limiter cannot replace the need to observe speed limits, nor can it replace the need for vigilance and responsibility on the part of the driver.

Always pay attention to the profile of the road and sharp acceleration and stay in complete control of your vehicle.

To avoid any jamming under the pedals:

- ensure that the mat and its fixings on the floor are positioned correctly,
- never place one mat on top of another.



VENTILATION

WITH MANUAL ADJUSTMENT

If your vehicle is fitted with these controls, they are located on the control panel of the fascia centre console.

Air conditioning A/C

If fitted on your vehicle, the air conditioning can only operate with the engine running.

A/C

Pressing the button triggers the operation of the air conditioning, the diode is lit. Pressing the button again switches the function off and the diode is switched off.

The air conditioning does not operate if the air flow is set to 0.

Temperature adjustment

Control positioned:



- in the blue zone, triggers cool air,



- in the red zone, triggers heating of the interior ambient air.

Air flow



The force of the blown air, from the vents, varies from 1 to the strongest 4. Position 0 switches it off. Remember to adjust this control in order to reach the ambient air comfort level.

Air distribution

The air supply distribution is directed by the control turned towards:



the side vents and the central vents,



the side vents, the central vents and the footwells,



the footwells,



the windscreen and the footwells,



the windscreen.



The air distribution can be modulated by placing the control in the intermediate positions, marked "•".

Intake of exterior air



The diode on the button is off. This is the preferred operating position.

Recirculation of interior air



The diode on the button is lit. Recirculation temporarily prevents exterior odours and smoke from entering the passenger compartment.

Used with the air conditioning switched on and setting of the force of blown air (from 1 to 4), recirculation enables you to obtain the required ambient air comfort level more quickly with both hot or cold settings.

This position should only be temporary.

When your ambient air comfort level has been reached, return to the intake of exterior air position to permit renewal of the air in the passenger compartment and avoid misting. This operating mode is preferable.

Recommended settings

For optimum operation of the manual system, the settings below are recommended:

If I require...	Air distribution	Temperature	Air flow	Air recirculation	Air conditioning A/C
Heating					—
Cooling					A / C
Deicing Demisting					A / C



AUTOMATIC AIR CONDITIONING WITH SEPARATE ADJUSTMENTS

If your vehicle is fitted with this control panel, it is located on the centre console.

Good practice

For maximum cooling or heating of the passenger compartment, it is possible to exceed the value 15 by turning until LO is displayed or the value 27 by turning until HI is displayed.

For optimum comfort, the difference between the value displayed for the driver and for the passenger should not be greater than 3.

On entering the vehicle, the inside temperature may be much colder (or warmer) than is comfortable. There is no advantage in changing the value displayed in order to quickly reach the level of comfort required. The system will use its maximum performance to reach the comfort value set.

Automatic operation

AUTO comfort programme

This is the normal air conditioning system operating mode.



Press this button, the **AUTO** symbol is displayed.

In accordance with the comfort value selected, the system controls the distribution, the flow and the intake of air to guarantee comfort and a sufficient circulation of air in the passenger compartment. No further action on your part is required. No further action on your part is required.

When the engine is cold, to prevent an excessive diffusion of cold air, the ventilation will reach its optimum level gradually.

For your comfort, the settings are stored when the ignition is switched off and are reinstated the next time the vehicle is started, if the temperature in the passenger compartment has not changed significantly; otherwise, operation resumes in automatic mode.

Driver or passenger side comfort value

The value indicated on the display corresponds to a level of comfort and not a temperature in degrees Celsius or Fahrenheit.



Turn this control to the left or to the right to decrease or increase the value. A setting around the value 21 provides optimum comfort. However, depending on your requirements, a setting between 18 and 24 is usual.



Do not cover the sunshine sensor, located on the windscreen behind the mirror, it is used for regulation of the air conditioning.

Manual operation

You can, according to your requirements, make a different selection from that offered by the system by changing a setting. The other functions will still be controlled automatically. Pressing the **AUTO** button restores fully automatic operation.



Air distribution

Pressing this button several times in succession directs the air flow towards:

- the windscreen,
- the windscreen and footwells,
- the footwells,
- the side vents, central vents and footwells,
- the side vents and central vents.



Air flow

Press the **small fan** button to reduce the flow or the **large fan** button to increase the flow.

On the display, the blades of the fan darken when the flow is increased.



Deactivating the system

Press the air flow **small fan** button until the fan symbol disappears.

This action deactivates all of the system's functions, with the exception of the air recirculation and rear screen demisting (if fitted on your vehicle). Your comfort setting is no longer maintained and is switched off.



For your comfort, do not deactivate the system for long periods. Pressing the **large fan** button or the **AUTO** button reactivates the system with the values set before it was deactivated.



Intake of exterior air/ Recirculation of interior air

Press this button to recirculate the interior air. The recirculation symbol is displayed.

Recirculation prevents exterior odours and smoke from entering the passenger compartment. Avoid prolonged operation in interior air recirculation mode (risk of condensation, odour and humidity).

Pressing this button again activates the intake of exterior air.



Switching the air conditioning On/Off

Press this button, the **A/C** symbol is displayed and the air conditioning is activated.

Pressing this button again switches off the air cooling.

CORRECT USE OF THE VENTILATION AND AIR CONDITIONING

Vents

"Leave them open"

For optimum distribution and diffusion of hot or cool air in the passenger compartment, there are adjustable central and side vents which can be directed sideways (right or left) towards the top of the body. For your comfort while driving, do not close them, direct the flow of air towards the windows instead.

The air vents directed towards the floor of the vehicle complete the equipment.

Passenger compartment filter, carbon filter

Ensure that this filter is in good condition and have all of the filter elements replaced regularly.



Refer to the "Checks" section of chapter 6.

Air conditioning

In all seasons, the air conditioning should only be used with the windows closed. However, if the interior temperature remains high after a prolonged period parked in the sun, do not hesitate to ventilate the passenger compartment for a few minutes.



Use the AUTO mode as much as possible as it permits optimised control of all of the functions: air flow, passenger compartment comfort temperature, air distribution, air intake mode or air recirculation in the passenger compartment. Operate the air conditioning system for 5 to 10 minutes, once or twice a month, to keep it in perfect working order.

It is normal that the condensation created by the air conditioning system results in a flow of water which may form a puddle under the vehicle when parked.

If the system does not produce cold air, do not use it and consult a CITROËN dealer.

Ventilation



DE-ICING AND DEMISTING

Manual mode



Direct the control to this air distribution setting.



Direct the control to this temperature setting.



Increase the air flow setting.



Press the air conditioning.



Returning to exterior air intake open permits renewal of the air in the passenger compartment (diode off).




De-icing the rear screen and/or mirrors

Pressing this button, with the engine running, activates the rapid demisting - de-icing of the rear screen and/or electric mirrors.

This function switches off:

- when the button is pressed,
- when the engine is switched off,
- automatically to prevent excessive energy consumption.

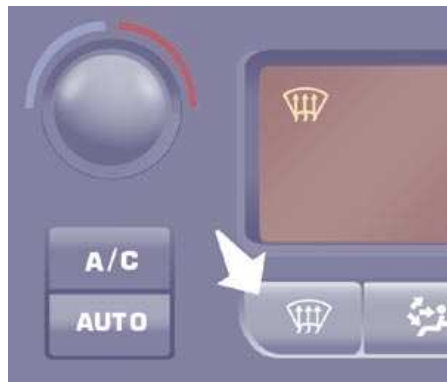

Automatic air conditioning: visibility programme

The comfort programme (AUTO) may not be sufficient to quickly demist or de-ice the windows (humidity, several passengers, ice). In this case, select the visibility programme. The visibility programme indicator light comes on.

It activates the air conditioning, the air flow, the de-icing of the rear screen and provides optimum distribution of the ventilation to the windscreen and side windows.

It deactivates the air recirculation.



REAR VENTILATION

If your vehicle is fitted with an additional air conditioning unit, located in the rear of the vehicle. The distribution rail located in the roof and the 6 individualised diffusion vents provide a perfect diffusion of the ambient air selected.

The warm air diffused at the floor, from the front air conditioning unit, is distributed at the feet of the rear passengers of the 2nd row.

A warm air diffusion vent, located on the specific unit, completes the assembly for the feet of the rear passengers of the 3rd row.

Activation/Deactivation



This button, located on the overhead storage unit, enables you to activate/deactivate the operation of the rear controls from the driver's seat or the front passenger seat.

The first press activates (green diode lit).

A second press deactivates (diode off).

Air flow



The force of the blown air, via the vents, varies from 1 to the strongest 4.

To obtain a comfortable level of ambient air, remember to adjust this control.


To deactivate the blower, place the control in position 0.



Temperature adjustment

Control positioned:

- on the blue, triggers cool air,
- on the red, triggers heating of the ambient air.

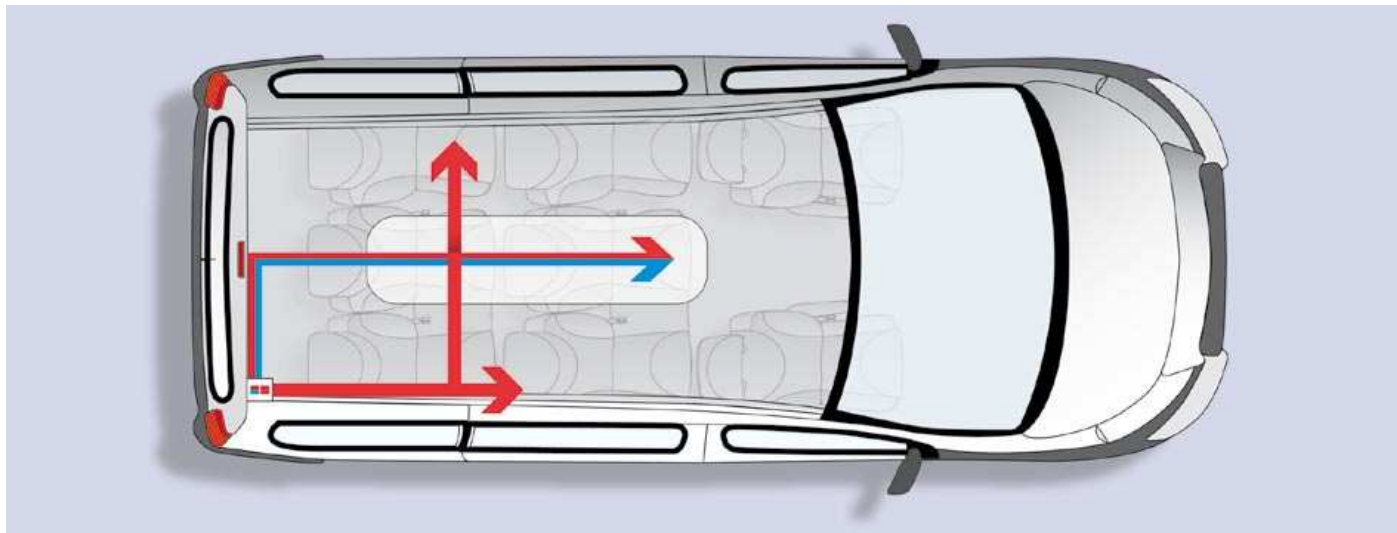

Rear ventilation

ADDITIONAL HEATING

Coolant circuit heater

This is an additional and autonomous system which heats the diesel engine hot coolant loop to make starting easier.

It improves the de-icing and demisting performance.

Vehicles fitted with an HDi engine may be fitted with a heater. When the engine is at idle or the vehicle is stationary, it is normal to notice a high-pitched whistling noise and a slight emission of smoke and odour.

Good practice

58

To avoid any risk of poisoning or asphyxiation, the heater must not be used, even for short periods, in an enclosed space such as a garage or workshop which is not fitted with an exhaust gas extraction system.

Do not park the vehicle on an inflammable surface (dry grass, dead leaves, paper...), there is a risk of fire.

The temperature near the heater must not exceed 120 °C. A temperature higher than this (for example in the case of painting in an oven) could damage the components of the electronic circuits.

The heater is supplied by the vehicle's fuel tank. Ensure that the fuel gauge indicator light is not at reserve.



Have the heater checked at least once a year at the beginning of winter. Maintenance and repairs should only be carried out by a CITROËN dealer. Use recommended replacement parts only.




FRONT SEATS

Depending on the version and configuration of your vehicle, different front seats are fitted, either:


- a driver's seat and a passenger seat,
- an individual driver's seat and a two-seat passenger bench.

Depending on the models, the following adjustments are available:

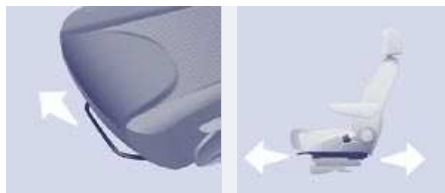

1 - Forwards/backwards adjustment

Lift the bar and slide the seat forwards or backwards.

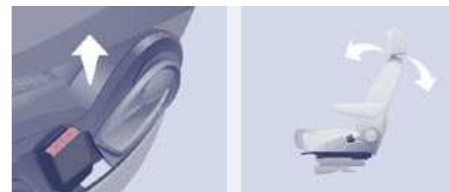

2 - Seat back angle adjustment

Pull the lever upwards and set the required angle.



3 - Driver's seat height adjustment

Depending on the version and configuration of your vehicle, you have either:

- a passive adjustment: pull the handle upwards then take your weight off the seat to raise, or push on the seat to lower,



- an active adjustment: manoeuvre the handle upwards or downwards until the desired position is reached.



4 - Driver's seat lumbar adjustment

Move the lever up or down to obtain the required position.



Head restraint height adjustment

To raise or lower the restraint, pull it forwards, then slide it.

The adjustment is correct when the upper edge of the head restraint is level with the top of the head.

To remove it, set it in the high position, press the tabs and pull upwards and forwards at the same time.

To re-install, engage the head restraint rods in the holes, making sure they are aligned with the seat back.



Never drive with the head restraints removed; they must be in place and correctly adjusted.



Adjustable armrest

To place the armrest in its rest position:

- raise it until it is in the centreline of the seat back.

To place the armrest in a position for use:

- fold it down fully,
- raise it slowly to the required position,
- if you pass the required position, raise it fully then repeat the operations above.


Front heated seat controls



Press the corresponding control, located on the overhead storage unit.

The temperature is controlled automatically.

Pressing a second time stops operation.

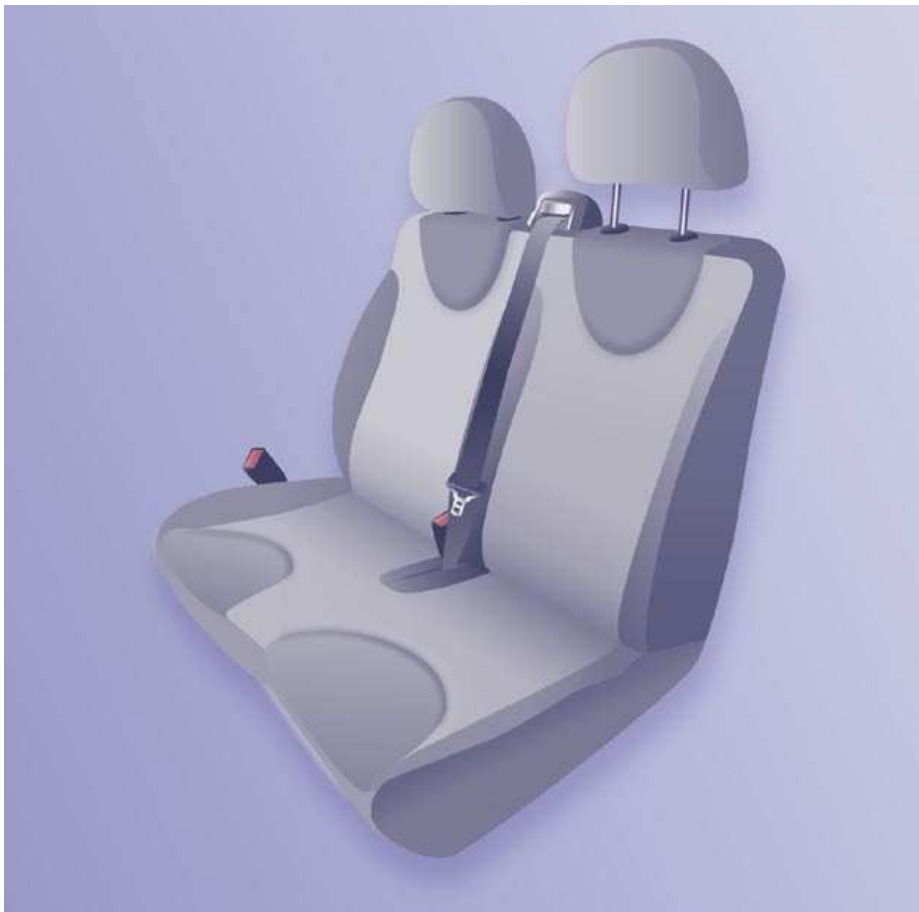

2-SEAT FRONT BENCH

If your vehicle is fitted with this bench seat, it is fixed and has a 3rd seat belt.

Head restraint

Press the tab to adjust the height of the head restraint.

To remove the head restraint, press the tabs and raise the head restraint.

The adjustment is correct when the upper edge of the head restraint is level with the top of the head.

Never drive with the head restraints removed; they must be in place and adjusted correctly.

Seat back pockets

If your vehicle is fitted with these, they are located on the backs of the front seats.





REAR SEATS

Depending on the version and configuration of your vehicle, you have different types of rear seat.

The individual seat is always located on the right-hand side and the bench on the left-hand side (in the direction of travel).



Individual passenger seat

This seat and the 2-seat bench are interdependent. Any handling operation must begin with the individual seat.

Two models are offered:

Type 1: an individual seat which can be raised permitting access to the rear space.



Type 2: an individual seat the back of which can be folded to the table position then raised, facilitating access to the rear space.



Two-seat bench

Three models are offered:

Type 1: a two-seat cushion with fixed seat back.



Type 2: two seats with folding seat backs and seat cushion which can be raised.



Characteristics depending on the type of seat


Seat fitted with this control: the seat back can be tilted.




Seat fitted with this control: the seat back can be folded and coupled with the raising control.



Type 3: a two-seat cushion with individual tilting seat backs which can be folded to the table position and cushion which can be raised.

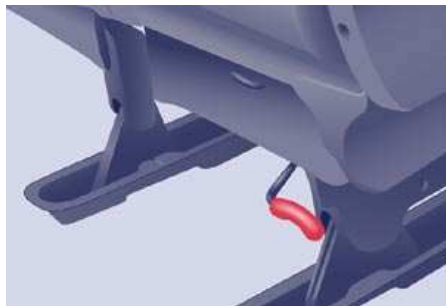

Seat fitted with this control: the seat back can be tilted and raised.

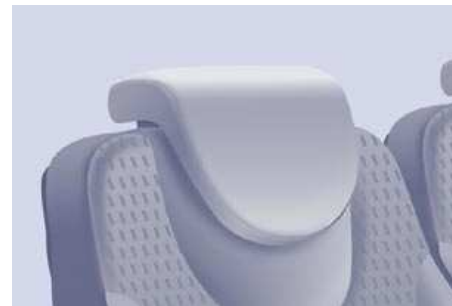

"Comma" type head restraint.




This armrest may be offered.



The seat backs of the centre seats are designed with cup holder and storage recesses.



The seat backs of the outer seats are fitted with a storage net.

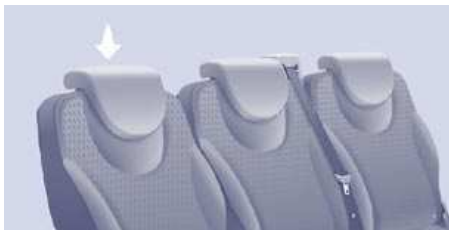

Handling

Enter, exit the vehicle: raise the seat

Always start with the individual seat located on the right-hand side and place the head restraint in the low position.

Folding the seat back to the table position

(centre seat example)

- Place the head restraints in the low position.
- Raise this handle to unlock the seat back (from the rear, lower the handle).
- Tilt the seat back onto the seat cushion.

Seat and bench of type 1:

- Raise the seat.



- Unlock the front feet using this handle.
- Disengage the seat from its anchorages.
- Remove the seat from the vehicle via the side door in row 2 and via the rear in row 3.

Seat and bench of type 2/type 3:

- Fold the seat back to the table position using this handle.
- Raise the seat.

- Unlock the front feet using this handle.
- Disengage the seat from its anchorages.
- Remove the seat from the vehicle via the side door in row 2 and via the rear in row 3.



Installing the seat

Always install the bench first.

- Check that there are no objects obstructing the anchorages and preventing correct locking of the feet.
- Engage the front feet in the anchorages on the floor.

- Lock the front feet using this handle.
- Tilt the seat towards the rear until the rear feet lock. Be aware of the feet of passengers when tilting.

For the type 2 seat and the type 2/3 bench: fold up the seat back.



Correct anchoring of the front feet



Check that the seat is locked correctly on the floor when it is returned to the sitting position.

Precautions

Following the various handling operations:

- do not remove a head restraint without storing it to a support,
- check that the seat belts are always accessible to the passenger and easy to fasten,
- a passenger must not take his seat without adjusting his seat's head restraint correctly and adjusting and fastening his seat belt.



Etiquette

While driving, it is prohibited to have a passenger:


- in row 3 if the seat back in front (row 2) is in the table position.
- in row 3 if the seat/bench in front (row 2) is in the folded position.
- on the centre seat if the right-hand side seat is in the folded position.

SEAT AND BENCH CONFIGURATIONS


Examples of various layouts combining comfort and practicality

-  The various operations must be carried out while stationary.
-  Do not fit seats in the 3rd row without first fitting the corresponding seatbelts.


5 seats

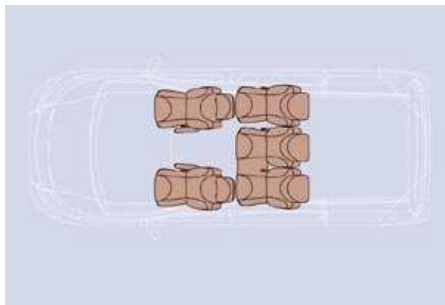


6 seats

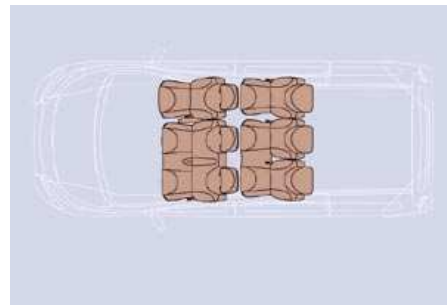


7 seats

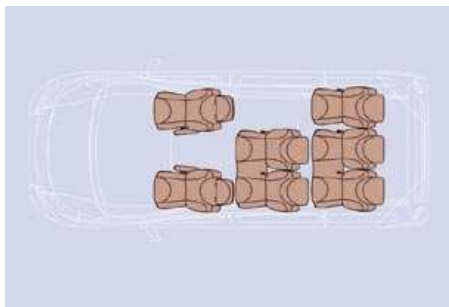

8 seats

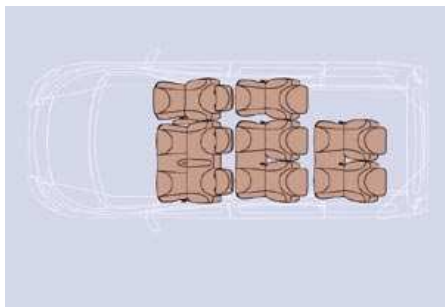

9 seats

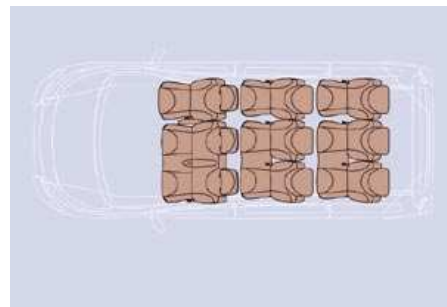



PRACTICAL INFORMATION

CAB LAYOUT

Depending on the vehicle's equipment, the various fittings below enhance your cab.

Sun visor

To prevent dazzle from ahead, fold the sun visor down.

A pocket is provided in the driver's sun visor for storing toll cards, tickets, ...




Glove box

This is fitted with a lock, you can lock it using the key.

It contains three sockets for the connection of portable electronic equipment (video equipment, ...) if the vehicle is fitted with a colour display.

It also contains can holders and compartments for storing maps, a packet of cigarettes, an A4 format document, a pen, etc.

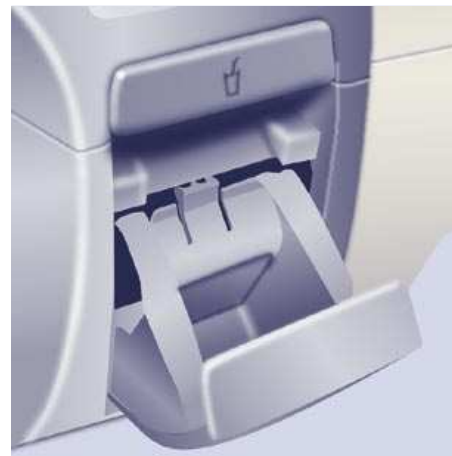

Storage compartment

**Ashtray****12 volt socket**

The maximum power of the socket, which is of the lighter type, is 120 W.

**Storage tray and bottle holder (1.5 L)****Cup holder**

Any liquid transported in the vehicle in a cup (mug or similar), which may spill, presents a risk of damage on contact with the instrument panel and centre console controls. "Take care".



Ticket storage

According to the configuration of the vehicle.



Overhead storage unit

This is located above the sun visors and has two compartments, with or without a cover, for storing a jumper, a file, ...

Be aware that storing a hard object in direct contact with the compartment may result in noise.



Front courtesy light

SEATING AREA COURTESY LIGHTS

Automatic switching on/off

The front courtesy light comes on when the key is removed from the ignition.

All of the courtesy lights come on when the vehicle is unlocked, when one of the corresponding doors is opened and for location of the vehicle using the remote control.

They switch off gradually after the ignition is switched on and when the vehicle is locked.



Permanently on, ignition on.



Rear courtesy light




Front: comes on when one of the front or rear doors is opened.



Row 2 and row 3: comes on when one of the rear doors or the boot is opened, if fitted on your vehicle.



Permanently off.

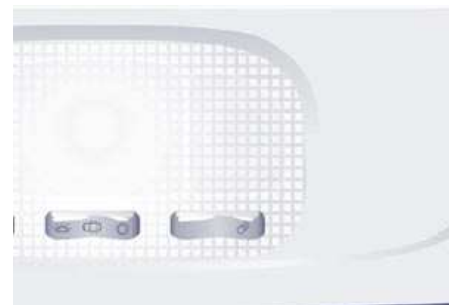

Individual reading light

i If fitted on the vehicle, these are switched on and off by means of a manual switch, with the ignition on.

Areas for toll cards/car park tickets

The athermic windscreen has two non-reflective zones located either side of the base of the interior mirror.

They are intended for affixing toll cards and/or car park tickets.

Mat fitting/removal

When removing the front mat, push the seats as far back as possible and remove the fixings.

When refitting, position the mat correctly on the pins and clip the fixings. Check that the mat is secured correctly.

To prevent the mat from becoming caught under the pedals:

- only use mats suited to the fixings already present in the vehicle. It is imperative that these fixings are used.
- never fit one mat on top of another.



SEATING AREA LAYOUT

Depending on the vehicle's equipment, the various fittings below enhance your seating area.

Grab handle



12 volt socket

This operates with the ignition on.
Maximum power: 120 W.

Cup holders

Any liquid transported in a cup (mug or similar), which may spill, presents a risk.
"Take care".

Areas for toll cards/car park tickets

The athermic windscreen has two non-reflective zones located either side of the base of the interior mirror.

They are intended for affixing toll cards and/or car park tickets.

Mat fitting/removal

When removing the front mat, push the seats as far back as possible and remove the fixings.

When refitting, position the mat correctly on the pins and clip the fixings. Check that the mat is secured correctly.

To prevent the mat from becoming caught under the pedals:

- only use mats suited to the fixings already present in the vehicle. It is imperative that these fixings are used.
- never fit one mat on top of another.



SEATING AREA LAYOUT

Depending on the vehicle's equipment, the various fittings below enhance your seating area.

Grab handle



12 volt socket

This operates with the ignition on.
Maximum power: 120 W.

Cup holders

Any liquid transported in a cup (mug or similar), which may spill, presents a risk.
"Take care".




Nets on the back of the outer seats



Fittings/storage compartments

Storage tray and bottle holder (0.5 L)

Coat hooks

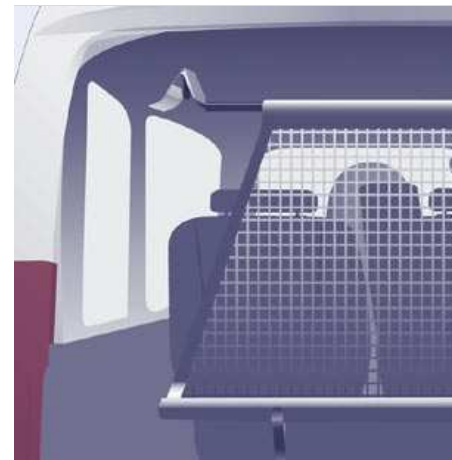

Load retaining net fixing

Raise the flap to gain access to the load retaining net fixings.



Stowing rings

Use the stowing rings on the rear floor to fix the net, your loads or luggage.

For safety reasons, on sharp braking, it is recommended that heavy objects are placed as far forward as possible.



You are advised to immobilise the load by securing it firmly using the stowing rings on the floor.




Load space cover

To install:

- position one end of the load space cover roller in its notch,
- compress the opposite end of the roller and put it in place,
- release it so that it engages,
- unroll the load space cover to the pillars,
- fix the two hooks on the pillars.

To remove:

- pull the load space cover towards you to disengage it from its fixings,
- reinsert the load space cover in its roller,
- compress it and remove it from its support.

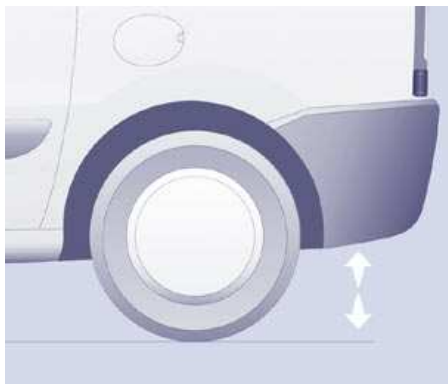

REAR SUSPENSION

Two types of suspension are offered.

Metal suspension

This equipment adopts long movement limiters which make it possible to guarantee stable behaviour both when loaded and when empty. No action on your part is required except to ensure that maintenance is carried out and that the authorised loads are complied with.

Rear suspension with pneumatic compensation

If fitted on your vehicle, this type of suspension regulates the variations in the height of the rear platform of your vehicle irrespective of the weight of the load, within the limit of the authorised values. On board,

the increasing or lightening of the load on the vehicle's platform is detected by two height sensors. When all of the doors are closed, the sensors trigger the automatic compensation and determine the optimum height of the sill for the vehicle's driving conditions.

Two functions



1. Automatic correction
2. Manual correction

1 - Automatic correction of the height of the rear sill

The pneumatic suspension automatically regulates the variations in the height of the rear platform of your vehicle.



A red warning light on your instrument panel flashes if the height is not at its optimum level and requires correction, drive slowly until this warning light is switched off.

The automatic compensation is temporarily inactive:

- if a door/the tailgate is open,
- when braking or when stopped at a red light (brake pedal pressed).

Deactivation of the automatic correction

The control which permits deactivation of the automatic control is located on the right-hand side, at the rear of the vehicle.



With the vehicle stationary:

- press and hold,
- release the control.

Deactivation is confirmed by the diode which is lit. It remains lit for approximately 30 seconds.



You must deactivate the automatic correction manually in the following situations:

- when working underneath the vehicle,
- when changing a wheel,
- when the vehicle is being transported by lorry, train, ferry, boat, ...

Return to automatic correction



With the vehicle stationary:

- press and hold,
- release the control.

Return to automatic correction is confirmed by the diode which is switched off.

According to the configurations, a bleep may be heard during these operations.



2 - Manual correction of the height of the rear sill

If your vehicle is fitted with this adjustment, the control is located on the right-hand side at the rear of the vehicle.

This manual adjustment permits "lowering" or "raising" of the height of the sill of the rear platform to facilitate operations in a parking area.

This adjustment of the height of the sill is restricted by a lower limit and an upper limit.

Carry out these operations with the vehicle still stationary and:

- with the front and side doors closed,
- with the handbrake applied,
- do not leave your foot on the brake pedal.

First use

To initialise the function, press the control for approximately 2 seconds.



Lower: downwards adjustment of the platform sill

Press the control downwards continuously.

Release the button to stop the movement, "3 bleeps" indicate that you have reached the maximum limit, the movement stops automatically.



Raise: upwards adjustment of the platform sill

Press the control upwards continuously.

Release the button to stop the movement, "3 bleeps" indicate that you have reached the maximum limit, the movement stops automatically.

Return to the optimum sill height

Press the control up or down twice in succession, the opposite of the position of the load sill.

Operating faults

If the load sill is not adjusted when the control is pressed, "3 bleeps" indicate a malfunction for the following reasons:

- foot on the brake pedal with the key in the ignition,
- excessive use of the manual correction,
- low battery charge,
- failure of the system.

If the audible signal persists, contact a CITROËN dealer.

Deactivation of the manual correction



With the vehicle stationary:

- press and hold,
- release the control.

Deactivation is confirmed by the diode which is lit. It remains lit for approximately 30 seconds.

Return to manual correction



With the vehicle stationary:

- press and hold,
- release the control.

Return to manual correction is confirmed by the diode which is switched off. According to the configurations, a bleep may be heard during these operations.



You must deactivate the manual correction in the following situations:

- when working underneath the vehicle,
- when changing a wheel,
- when the vehicle is being transported by lorry, train, ferry, boat, ...

Good practice

When stationary and with the ignition key removed, excessive use of the system consumes battery charge.

Driving with the height of the rear platform:

- too low, risks damaging the technical components underneath the vehicle,
- too high, risks unstable driving.

If you start and the warning light flashes, to switch it off:

- correct the position of the manual control which is still at the lower or upper limit,
- or drive slowly at above 6 mph (10 km/h), until the compensation returns to automatic mode.

Parking for a long duration

Avoid parking for a long duration on ground which could present a potential obstacle as your vehicle could lower.

Following a long period out of use, the height of the platform may change due to the automatic compensation on unlocking or on opening one of your vehicle's doors.

Warning light



Refer to the "Instruments and controls" section of chapter 2.



MIRRORS AND WINDOWS

MIRRORS

If fitted on your vehicle, the mirror is supplemented by a 2nd lower mirror. This mirror is spherical to broaden the field of side vision. Objects observed are, in reality, closer than they appear. Therefore, take this into account in order to judge the distance correctly.

Electric exterior mirrors

- Move switch **A** to the right or to the left to select the corresponding mirror.
- Move knob **B** in all four directions to adjust.
- Return switch **A** to the centre position.



Electric folding

If your vehicle is fitted with this function, the mirrors can be folded electrically from the inside, with the vehicle parked and the ignition on:

- Place switch **A** in the centre position.
- Pull switch **A** rearwards.

From the outside, lock the vehicle using the remote control or the key.

Electric unfolding

The electric unfolding of the mirrors is possible with the remote control or the key on unlocking the vehicle, unless folding was selected using switch **A**. In this case, pull the switch rearwards from the centre position again.



The folding/unfolding on locking/unlocking can be deactivated. Consult a CITROËN dealer.

Heated mirrors

If your vehicle is fitted with this function, press the rear screen demisting button.

Manual exterior mirrors

Move the lever in all four directions to adjust.

When the vehicle is parked, the exterior mirrors can be folded back manually.

If the mirror casing has come out of its initial location, with the vehicle stationary, reposition the mirror casing manually or use the electric folding switch.

There is no risk of breakage even in the presence of ice.



Manual interior mirror

The interior mirror has two positions:

- day (normal),
- night (anti-dazzle).

To change from one to the other, push or pull the lever on the lower edge of the mirror.



MONITORING MIRROR

This mirror, placed on top of the central mirror, enables the driver or front passenger to observe all the rear seats.

Fitted on its own ball joint, it's manual adjustment is simple and provides a view of the rear interior of the vehicle.

It can also be adjusted for improved visibility during manoeuvres or when overtaking.



REAR WINDOWS

2nd row side windows


If fitted on your vehicle, the 2nd row side windows can be opened.

Squeeze the two controls then move the window sideways. 4 notches are available.

While driving, the window must be closed or secured on one of the 4 notches.

3rd row rear quarter lights

These are fixed.

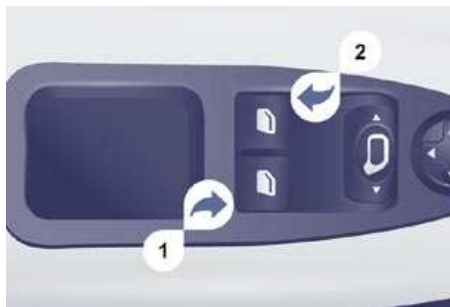

ELECTRIC WINDOWS

1. Driver's electric window control
2. Passenger electric window control


There are two operating modes:

Manual mode

Press or pull the control, without passing the point of resistance. The window stops when you release the control.

Automatic mode

Press or pull the control, beyond the point of resistance. The window opens or closes fully when the control is released. Pressing the control again stops the movement of the window.

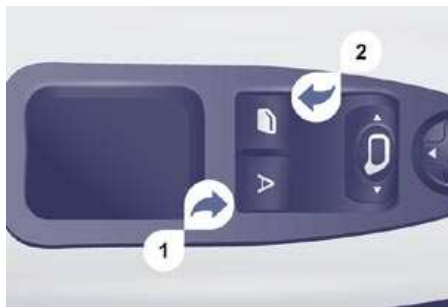

The electrical functions of the electric windows are deactivated:

- approximately 45 seconds after the ignition is switched off,
- after one of the front doors is opened, if the ignition is off.

Safety auto-reverse

If your vehicle is fitted with the safety auto-reverse function, when the window rises and meets an obstacle, it stops and partially lowers.

In the event of unwanted opening of the window on closing, press the control until the window is fully open. Within the next 4 seconds, pull the control until the window is fully closed.

The safety auto-reverse does not operate during these operations.

Reinitialisation

Following reconnection of the battery, the safety auto-reverse function must be reinitialised.

Lower the window fully, then raise it, it will rise in steps of a few centimetres each time the control is pressed. Repeat the operation until the window is fully closed.

Continue to press the control for at least one second after the window closed position has been reached.

The safety auto-reverse does not operate during these operations.


Good practice

If the electric windows meet an obstacle during operation, you must reverse the movement of the window. To do this, press the control concerned.

When the driver operates the passenger electric window controls, he must ensure that no one is preventing correct closing of the windows.

The driver must ensure that the passengers use the electric windows correctly.

Be aware of children when operating the windows.

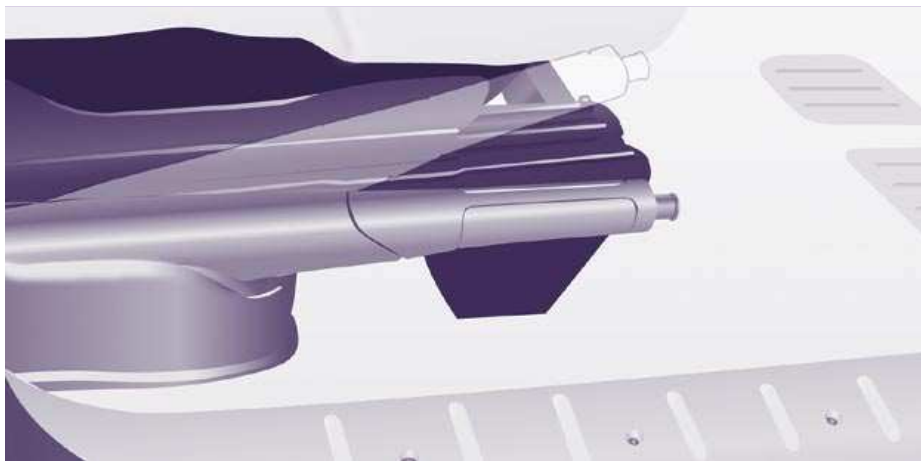

DRIVING SAFELY

PARKING BRAKE

Applying

Pull the parking brake to immobilise your vehicle.

Check that the parking brake is applied firmly before leaving the vehicle.




If the parking brake is still on or has not been released properly, this is indicated by this warning lamp which comes on on the instrument panel.

When parking on a slope, direct your wheels towards the pavement and pull the parking brake lever up.

There is no advantage in engaging a gear after parking the vehicle, particularly if the vehicle is loaded.

Releasing

Pull the lever and press the button to lower the parking brake lever.

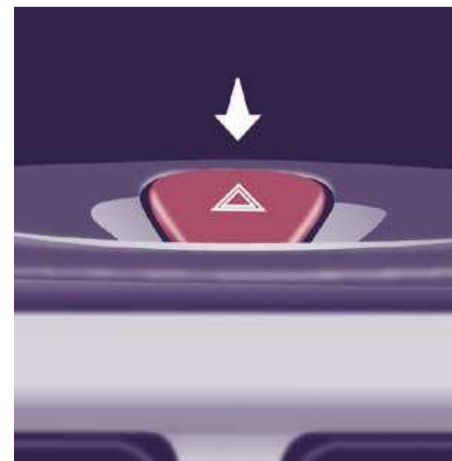


HAZARD WARNING LAMPS

Press this button, the direction indicators flash.

They can operate with the ignition off.

The hazard warning lamps should only be used in dangerous situations, when stopping in an emergency or when driving in unusual conditions.

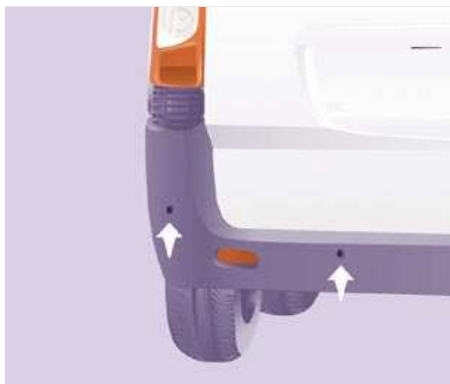

REAR PARKING ASSISTANCE

The audible and/or visual rear parking assistance consists of four proximity sensors, installed in the rear bumper. The sensors detect any obstacle which enters the field: person, vehicle, tree, fence, behind the vehicle during the manoeuvre.


Certain objects detected at the beginning of the manoeuvre will no longer be detected at the end of the manoeuvre due to the blind spots between and below the sensors. Examples: stake, roadworks cone or pavement post.



Engage reverse gear

An audible signal confirms the activation of the system by engaging reverse gear. The proximity information is indicated by an audible signal which becomes more rapid as the vehicle approaches the obstacle. When the distance between the rear of the vehicle and the obstacle is less than approximately thirty centimetres, the audible signal becomes continuous.

Display on the screen

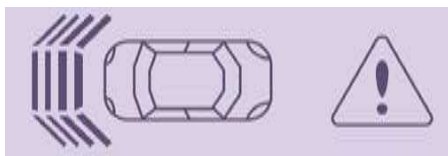

Stop the assistance

Change to neutral.

Activation/Deactivation



You can activate or deactivate the system by pressing this button.

The activation or deactivation of the system is stored when the vehicle stops.

Operating fault

In the event of an operating fault, when reverse gear is engaged the diode on the button comes on, accompanied by an audible signal and a message on the display. Consult a CITROËN dealer.

Good practice

In bad weather or in winter, ensure that the sensors are not covered with mud, ice or snow.

The system will be deactivated automatically if a trailer is being towed or if a bicycle carrier is fitted (vehicle fitted with a towbar or bicycle carrier recommended by CITROËN).

The parking assistance cannot, in any circumstances, take the place of the vigilance and responsibility of the driver.



HORN

Press the centre of the steering wheel.

ANTI-LOCK BRAKING SYSTEM (ABS - EBFD)

The ABS and EBFD (electronic brake force distribution) systems improve the stability and manoeuvrability of your vehicle on braking, in particular on poor or slippery surfaces.

The ABS prevents locking of the wheels, the EBFD provides control of the braking pressure wheel by wheel.

Good practice

The anti-lock braking system comes into operation automatically when there is a risk of wheel lock. It does not reduce the braking distance.

On very slippery surfaces (ice, oil, etc...) the ABS may increase the braking distance. When braking in an emergency, do not hesitate to press the brake pedal firmly, without releasing the pressure, even on a slippery surface, you will then be able to continue to manoeuvre the vehicle to avoid an obstacle.

Normal operation of the ABS may be felt by slight vibration of the brake pedal.

When changing wheels (tyres and rims), ensure that these are recommended by CITROËN.



If this warning light comes on, accompanied by an audible signal and a message on the display, it indicates a malfunction of the ABS which could result in a loss of control of the vehicle on braking.



If this warning light comes on, together with the brake and STOP warning lights, accompanied by an audible signal and a message on the display, it indicates a malfunction of the electronic brake force distribution which could result in a loss of control of the vehicle on braking.

Stop immediately.

In both cases, contact a CITROËN dealer.


EMERGENCY BRAKING ASSISTANCE SYSTEM (EBA)

In an emergency, this system enables the optimum braking pressure to be reached more quickly, press the pedal firmly without releasing it.

It is triggered by the speed at which the brake pedal is activated.

This alters the resistance of the brake pedal under your foot.

To prolong the operation of the emergency braking assistance system: keep your foot on the brake pedal.

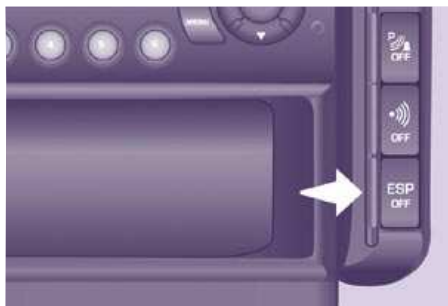

TRACTION CONTROL (ASR) AND DYNAMIC STABILITY CONTROL (ESP)

These systems are linked and complement the ABS.

The ASR system is very useful for maintaining optimum drive and avoiding losses of control of the vehicle on acceleration.

The system optimises drive to prevent the wheels skidding, by acting on the brakes of the drive wheels and on the engine. It also allows the directional stability of the vehicle to be improved on acceleration.

Use the ESP to hold your course without attempting to countersteer.

If there is a variation between the trajectory followed by the vehicle and that required by the driver, the ESP system automatically

acts on the engine and the brake of one or more wheels, in order to put the vehicle back on course.

Operation of the ASR and ESP systems

**ESP
OFF**

The LED flashes when the ASR or ESP is triggered.

Disarming the ASR/ESP systems

In certain exceptional conditions (starting the vehicle when stuck in mud or snow, or on loose ground...), it could prove useful to disarm the ASR and ESP systems to make the wheels spin and regain grip.

- Press the button, located on the centre console.
- The indicator light comes on: the ASR and ESP systems no longer act.

They engage again:

- automatically above 30 mph (50 km/h),
- manually by pressing the button again.

Operating check



When a malfunction of the systems occurs, the indicator light comes on, accompanied by an audible signal and a message on the display.

Contact a CITROËN dealer to have the system checked.

The warning light may also come on if the tyres are under-inflated. Check the pressure of each tyre.

Good practice

The ASR/ESP systems offer increased safety during normal driving, but should not incite the driver to take risks or to drive at high speed.

The operation of these systems is ensured if the recommendations of the manufacturer regarding the wheels (tyres and rims), the braking components, the electronic components and the fitting and repair procedures within the CITROËN network are observed.

After an impact, have these systems checked by a CITROËN dealer.



SEAT BELTS

Height adjustment


Squeeze the control with the return and slide the assembly on the driver's seat side and on the individual passenger seat side.

If your vehicle is fitted with a front bench, the height of the seat belt associated with the centre seat cannot be adjusted.

Fastening

Pull the strap, then insert the tongue into the buckle.

Check that the seat belt is fastened correctly by pulling the strap.

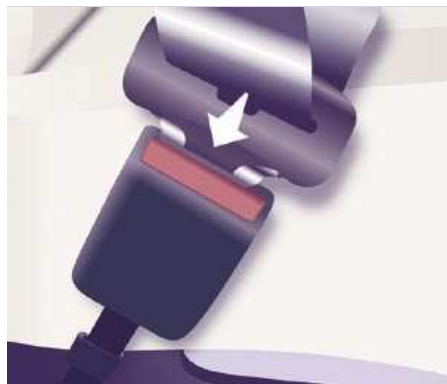

Unfastening

Press the red button.



Driver's seat belt not fastened warning light

When the vehicle is started, this warning light comes on if the driver has not fastened his seat belt.



Passenger seat belt not fastened warning light

If your vehicle is fitted with a front passenger seat, when the vehicle is started, this warning light comes on if the passenger has not fastened his seat belt.

Good practice

The driver must ensure that passengers use the seat belts correctly and that they are all strapped in securely before moving off.

Wherever you are seated in the vehicle, always fasten your seat belt, even for short journeys.

The seat belts are fitted with an inertia reel which automatically adjusts the length of the strap to your size.

Do not use accessories (clothes pegs, clips, safety pins, etc.) which permit a clearance with the seat belt straps.

Ensure that the seat belt is rolled up correctly after use.

After folding or moving a seat or a rear bench seat, ensure that the seat belt is rolled up correctly and that the buckle is ready to accommodate the tongue.

Depending on the nature and seriousness of any impact, the pretensioning device may be triggered before and independently of inflation of the airbags. It instantly tightens the seat belts against the body of the occupants.

Triggering of the pretensioners is accompanied by a slight discharge of harmless smoke and a noise, due to the activation of the pyrotechnic cartridge incorporated in the system.

Seat belts

The force limiter reduces the pressure of the seat belt against the body of the occupants.

The pretensioning seat belts are active when the ignition is switched on.

The inertia reels are fitted with a device which automatically locks the strap in the event of a collision or emergency braking or if the vehicle rolls over.

You can unfasten the seat belt by pressing the red button on the buckle. Guide the seat belt after unfastening.

The airbag warning light comes on if the pretensioners are triggered. Consult a CITROËN dealer.

In order to be effective, a seat belt must:

- restrain one person only,
- must not be twisted, check by pulling in front of you with an even movement,
- be tightened as close to the body as possible.

The upper part of the seat belt should be positioned in the hollow of the shoulder.

The lap part should be placed as low as possible on the pelvis.

Do not invert the seat belt buckles as they will not fulfil their role completely. If the seats are fitted with armrests, the lap part of the seat belt should always pass under the armrest.

Check that the seat belt is fastened correctly by pulling the strap firmly.

Recommendations for children:

- use a suitable child seat if the passenger is less than 12 years old or shorter than one metre fifty,
- never allow a child to travel on your lap, even with the seat belt fastened.



For further information regarding child seats, refer to the "Children on board" section of chapter 4.

In accordance with current safety regulations, your CITROËN dealer guarantees all work or any checks, from testing to maintenance, on your seat belt equipment.

Have the seat belts checked regularly (even after a minor impact) by a CITROËN dealer: they must not show any signs of wear, cutting or fraying and they must not be transformed or modified.



Clean the seat belt straps with soapy water or a textile cleaning product, sold by CITROËN dealers.

FRONT SEAT BELTS

With front airbags

The front seats are fitted with pretensioners and force limiters.

Without front airbag

If your vehicle is fitted with a front bench without front airbag, the centre passenger's seat belt does not have a pretensioner.


REAR SEAT BELTS

If your vehicle is fitted with an individual seat and a 2-seat bench, the 3 seats are fitted with three-point seat belts and inertia reels.

The centre seat has its seat belt guide and inertia reel integrated with the seat back.



In rows 2 and 3, take care to fasten the correct seat belt in the correct buckle. Do not invert the seat belt or the buckle of the side seats with the buckle or the seat belt of the centre seat.

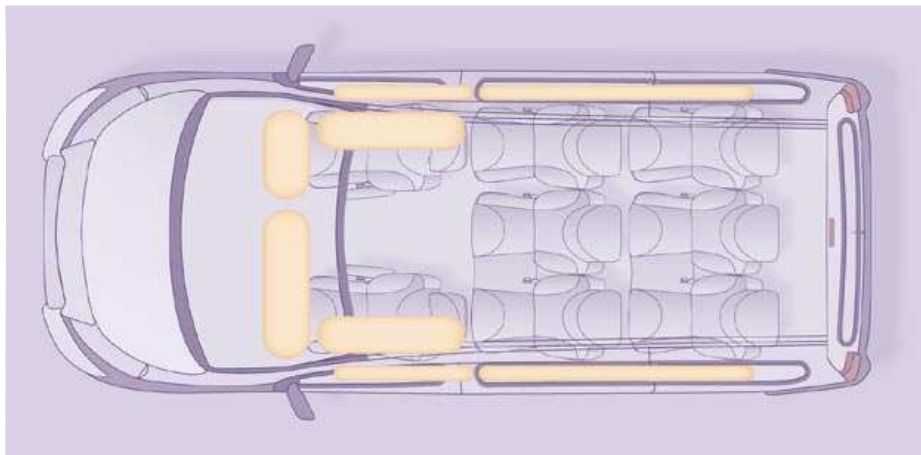

AIRBAGS

The airbags have been designed to maximise the safety of the occupants (with the exception of the centre seats of rows 2 and 3) in the event of a serious collision; they work in conjunction with the force limiting seat belts.

In the event of a serious collision, the electronic detectors record and analyse the front and side impacts suffered in the impact detection zones:

- in the event of a serious impact, the airbags inflate instantly and protect the occupants of the vehicle.

Immediately after the impact, the airbags deflate rapidly, so that they do not hinder the visibility of the occupants nor their possible exit from the vehicle.

- in the event of a minor or rear impact and in certain roll-over conditions, the airbags will not be deployed; the seat belt alone is sufficient to provide maximum protection in these situations.

The seriousness of the collision depends on the nature of the obstacle and the speed of the vehicle at the moment of impact.

i Airbags only operate when the ignition is switched on.

This equipment only operates once. If a second impact occurs (during the same or a subsequent accident), the airbag will not operate.

The triggering of an airbag or airbags is accompanied by a slight discharge of harmless smoke and a noise, due to the activation of the pyrotechnic cartridge incorporated in the system.

This smoke is not harmful, but sensitive individuals may experience some irritation.

The noise of the detonation may result in a slight loss of hearing for a short time.



+ It is imperative that the passenger airbag is disarmed if a child seat is installed facing rearwards. Refer to the "Children on board" section of chapter 4.

Good practice

Sit in a normal upright position.

Wear a correctly adjusted seat belt.

Do not leave anything between the occupants and the airbags (a child, pet, object...). This could hamper the operation of the airbags or injure the occupants.

After an accident or if the vehicle has been stolen or broken into, have the airbag systems checked.

All work on the airbag system is strictly forbidden unless it is carried out by qualified personnel of the CITROËN network.

Even if all of the precautions mentioned are observed, a risk of injury or of minor burns to the head, chest or arms when an airbag is triggered cannot be ruled out. In fact, the bag inflates almost instantly (within a few milliseconds) then deflates within the same time discharging the hot gas via openings provided for this purpose.

Side airbags

Only put recommended covers on the seats. These will not hinder inflation of the side airbags. Consult a CITROËN dealer.

Do not fix or glue anything to the seat backs. This could cause injury to the chest or arms when the side airbag inflates.

Do not sit with the upper part of the body any nearer to the door than necessary.

Front airbags

Do not drive holding the steering wheel by its spokes or resting your hands on the centre part of the wheel.

Do not allow passengers to place their feet on the fascia, they risk serious injury if the airbag is triggered.


Smoke as little as possible as deployment of the airbags can cause burns or the risk of injury from a cigarette or pipe.

Never remove or pierce the steering wheel or hit it violently.

Curtain airbags

Do not fix or glue anything to the roof. This could cause injury to the head when the curtain airbag inflates.

Do not remove the grab handles installed on the roof, they play a part in securing the curtain airbags.

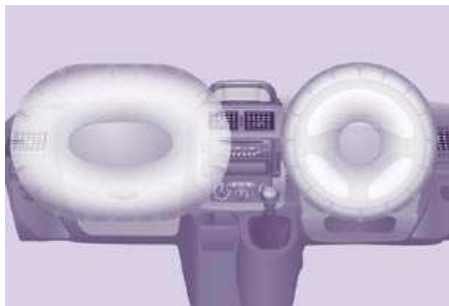

Front airbags

The front airbags are incorporated in the centre of the steering wheel for the driver and in the fascia for the front passenger.

Activation

They are deployed simultaneously, unless the passenger's front airbag has been disarmed, in the event of a serious front impact applied to all or part of the front impact zone **A** in the longitudinal centreline of the vehicle on a horizontal plane directed from the front towards the rear of the vehicle.

The front airbag inflates between the front occupant of the vehicle and the fascia to cushion his forward movement.



Disarming

The passenger's front airbag alone can be disarmed:

- **With the ignition switched off**, insert the key into the passenger airbag disarming switch,
- turn it to the **"OFF"** position,
- then remove the key keeping the slot in this position.



The airbag warning light on the instrument panel is lit throughout the period of disarming.



To ensure the safety of your child, it is essential to disarm the passenger airbag when you install a rear-facing child seat on the front passenger seat. Otherwise, the child would risk being killed or seriously injured if the airbag were to inflate.

Reactivation

In the **"OFF"** position, the passenger airbag will not be triggered in the event of an impact. As soon as the child seat is removed, turn the airbag slot to the **"ON"** position to re-activate the airbag and thus ensure the safety of your passenger in the event of an impact.


Front airbag fault



If this warning light comes on, accompanied by an audible signal and a message on the display, contact a CITROËN dealer to have the system checked.



If the two airbag warning lights are lit continuously, do not install a rear-facing child seat. Consult a CITROËN dealer.

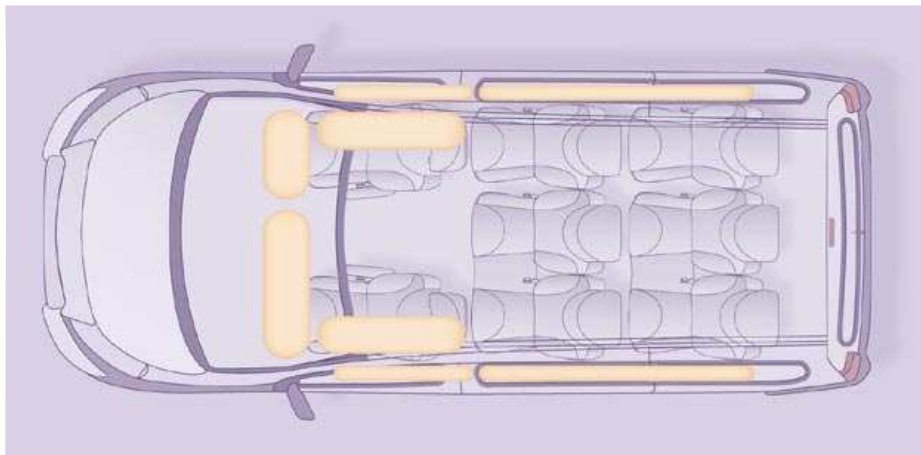

AIRBAGS

The airbags have been designed to maximise the safety of the occupants (with the exception of the centre seats of rows 2 and 3) in the event of a serious collision; they work in conjunction with the force limiting seat belts.

In the event of a serious collision, the electronic detectors record and analyse the front and side impacts suffered in the impact detection zones:

- in the event of a serious impact, the airbags inflate instantly and protect the occupants of the vehicle.

Immediately after the impact, the airbags deflate rapidly, so that they do not hinder the visibility of the occupants nor their possible exit from the vehicle.

- in the event of a minor or rear impact and in certain roll-over conditions, the airbags will not be deployed; the seat belt alone is sufficient to provide maximum protection in these situations.

The seriousness of the collision depends on the nature of the obstacle and the speed of the vehicle at the moment of impact.

i Airbags only operate when the ignition is switched on.

This equipment only operates once. If a second impact occurs (during the same or a subsequent accident), the airbag will not operate.

The triggering of an airbag or airbags is accompanied by a slight discharge of harmless smoke and a noise, due to the activation of the pyrotechnic cartridge incorporated in the system.

This smoke is not harmful, but sensitive individuals may experience some irritation.

The noise of the detonation may result in a slight loss of hearing for a short time.



+ It is imperative that the passenger airbag is disarmed if a child seat is installed facing rearwards. Refer to the "Children on board" section of chapter 4.

Good practice

Sit in a normal upright position.

Wear a correctly adjusted seat belt.

Do not leave anything between the occupants and the airbags (a child, pet, object...). This could hamper the operation of the airbags or injure the occupants.

After an accident or if the vehicle has been stolen or broken into, have the airbag systems checked.

All work on the airbag system is strictly forbidden unless it is carried out by qualified personnel of the CITROËN network.

Even if all of the precautions mentioned are observed, a risk of injury or of minor burns to the head, chest or arms when an airbag is triggered cannot be ruled out. In fact, the bag inflates almost instantly (within a few milliseconds) then deflates within the same time discharging the hot gas via openings provided for this purpose.

Side airbags

Only put recommended covers on the seats. These will not hinder inflation of the side airbags. Consult a CITROËN dealer.

Do not fix or glue anything to the seat backs. This could cause injury to the chest or arms when the side airbag inflates.

Do not sit with the upper part of the body any nearer to the door than necessary.

Front airbags

Do not drive holding the steering wheel by its spokes or resting your hands on the centre part of the wheel.

Do not allow passengers to place their feet on the fascia, they risk serious injury if the airbag is triggered.

Smoke as little as possible as deployment of the airbags can cause burns or the risk of injury from a cigarette or pipe.

Never remove or pierce the steering wheel or hit it violently.

Curtain airbags

Do not fix or glue anything to the roof. This could cause injury to the head when the curtain airbag inflates.

Do not remove the grab handles installed on the roof, they play a part in securing the curtain airbags.

Airbags



Side airbags


If fitted on your vehicle, this is a system which protects the driver and front passenger in the event of a serious side impact in order to limit the risk of injury to the chest.

Each side airbag is incorporated in the front seat back frame, on the door side.

Activation

It is triggered unilaterally in the event of a serious side impact applied to all or part of the side impact zone **B**, perpendicular to the longitudinal centreline of the vehicle on a horizontal plane and directed from the outside towards the inside of the vehicle.

The side airbag inflates between the front occupant of the vehicle and the corresponding door trim pad.

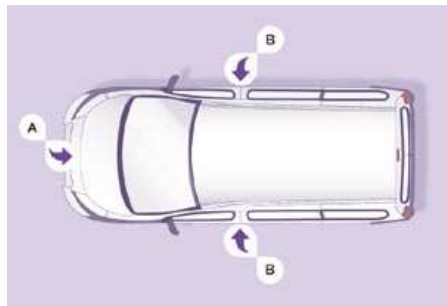

Impact detection zones

- A.** Front impact zone.
- B.** Side impact zone.

i In the event of a minor impact or bump on the side of the vehicle or if the vehicle rolls over, the airbag may not be triggered.

The airbag is not triggered in the event of a rear or front collision.

Operating fault



If this warning light comes on on the instrument panel, accompanied by an audible signal and a message on the display, contact a CITROËN dealer to have the system checked. The airbags may no longer be triggered in the event of a serious impact.

Curtain airbags

This is a system which protects the driver and passengers (with the exception of the centre seats of rows 2 and 3) in the event of a serious side impact in order to limit the risk of head injuries.

Each curtain airbag is incorporated in the pillars and the upper part of the passenger compartment.

Activation

It is triggered at the same time as the corresponding side airbag in the event of a serious side impact applied to all or part of the side impact zone **B**, perpendicular to the longitudinal centreline of the vehicle on a horizontal plane and directed from the outside towards the inside of the vehicle.


The curtain airbag inflates between the front or rear occupant of the vehicle and the windows.

GENERAL POINTS RELATING TO CHILD SEATS

Although one of CITROËN's main criteria when designing your vehicle, the safety of your children also depends on you.

For maximum safety, please follow these precautions:

- all children under the age of 12 or less than one metre fifty tall must travel in approved child seats suited to their weight, on seats fitted with a seat belt or ISOFIX mountings.
- statistically, the safest seats in your vehicle for the transportation of children are the rear seats,
- a child weighing less than 9 kg must travel in the "rearwards-facing" position both in the front and in the rear,
- the passenger must not travel with a child on his lap.

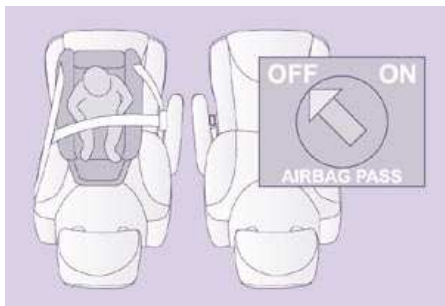


CHILD SEAT IN THE FRONT

"Rearwards-facing"

Recommended on the rear seats up to the age of 2.

When a "rearwards-facing" child seat is installed on the front passenger seat, it is essential that the passenger airbag is disarmed. Otherwise, the child would risk being seriously injured or killed if the airbag were to inflate.

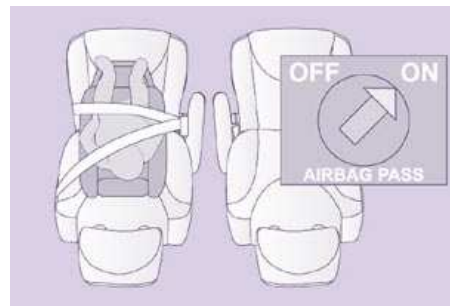

"Forwards-facing"

Recommended on the rear seats over the age of 2.

When a "forwards-facing" child seat is installed on the front passenger seat, leave the passenger airbag armed.

The rules for carrying children are specific to each country. Consult the current legislation in your country.

Please consult the list of seats approved in your country. The Isofix mountings, the rear seats, the passenger airbag and the deactivation of this airbag depend on the version sold.



i The child seats function and the passenger airbag disarming function are common to the entire CITROËN range. If the passenger airbag is not disarmed, the installation of a "rearwards-facing" child seat in the front is strictly prohibited.

+ Refer to chapter 4, "Airbags" section.



"ISOFIX" MOUNTINGS

Your vehicle has been approved in accordance with the new ISOFIX regulation. If fitted on your vehicle, the regulation ISOFIX mountings are located by labels.



The mountings comprise three rings for each seat:

- two front rings, located between the vehicle seat back and cushion, indicated by a label,
- a rear ring, for securing the upper strap referred to as the TOP TETHER, indicated by another label.

This ISOFIX mounting system guarantees you fast, reliable and safe fitting of the child seat in your vehicle.

The ISOFIX child seats are fitted with two locks which are secured easily on the two front rings.

Some also have an upper strap which is attached to the rear ring.

To attach this strap, raise the vehicle seat's head restraint then pass the hook between its rods. Then fix the hook on the rear ring and tighten the upper strap.

The incorrect installation of a child seat in a vehicle compromises the child's protection in the event of an accident.

For information regarding the ISOFIX child seats which can be installed in your vehicle, consult the summary table for the location of the ISOFIX child seats.



i The child seats function and the passenger airbag disarming function are common to the entire CITROËN range. If the passenger airbag is not disarmed, the installation of a "rearwards-facing" child seat in the front is strictly prohibited.

+ Refer to chapter 4, "Airbags" section.



"ISOFIX" MOUNTINGS

Your vehicle has been approved in accordance with the new ISOFIX regulation. If fitted on your vehicle, the regulation ISOFIX mountings are located by labels.



The mountings comprise three rings for each seat:

- two front rings, located between the vehicle seat back and cushion, indicated by a label,
- a rear ring, for securing the upper strap referred to as the TOP TETHER, indicated by another label.

This ISOFIX mounting system guarantees you fast, reliable and safe fitting of the child seat in your vehicle.

The ISOFIX child seats are fitted with two locks which are secured easily on the two front rings.

Some also have an upper strap which is attached to the rear ring.

To attach this strap, raise the vehicle seat's head restraint then pass the hook between its rods. Then fix the hook on the rear ring and tighten the upper strap.

The incorrect installation of a child seat in a vehicle compromises the child's protection in the event of an accident.

For information regarding the ISOFIX child seats which can be installed in your vehicle, consult the summary table for the location of the ISOFIX child seats.

ISOFIX CHILD SEAT RECOMMENDED BY CITROËN AND APPROVED FOR YOUR VEHICLE

98

ISOFIX RÖMER Duo Plus
(size category **B1**)

Group 1: from 9 to 18 kg



Installed in the forward facing position.

Fitted with an upper strap to be secured on the ISOFIX upper ring,
referred to as the TOP TETHER.

Three seat body angles: sitting, reclining, lying.

This child seat can also be used on seats which are not fitted with ISOFIX mountings.

In this case, it must be attached to the vehicle seat using the three point seat belt.

Follow the instructions for fitting the child seat given in the seat manufacturer's installation guide.

SUMMARY TABLE FOR THE INSTALLATION OF ISOFIX CHILD SEATS

This table indicates the options for the installation of ISOFIX child seats on the vehicle seats fitted with ISOFIX mountings.

In the case of the universal and semi-universal ISOFIX child seats, the child seat's ISOFIX size category, determined by a letter from **A** to **G**, is indicated on the child seat next to the ISOFIX logo.

Weight of the child/indicative age									
	Less than 10 kg (group 0) Up to 6 months approx		Less than 10 kg (group 0) Less than 13 kg (group 0+) Up to 1 year approx			From 9 to 18 kg (group 1) From 1 to 3 years approx			
Type of ISOFIX child seat	Infant car seat		"rear facing"			"rear facing"		"forward facing"	
ISOFIX size category	F	G	C	D	E	C	D	A	B B1
Row 2 rear side seats with individual seats in Row 1	IL-SU		IL-SU			IL-SU		IUF, IL-SU	
Row 2 rear side seats with 2-seat bench in Row 1	IL-SU		X	IL-SU		X	IL-SU		IUF, IL-SU
Rear seats in Row 3	IL-SU		X	IL-SU		X	IL-SU		IUF, IL-SU

IUF: Seat suitable for the installation of an ISOFIX child seat of the universal category. "Forward facing" ISOFIX child seat fitted with an upper strap secured to the upper ring of the vehicle seats equipped with ISOFIX mountings.

IL-SU: Seat suitable for the installation of a semi-universal ISOFIX child seat. "Forward facing" ISOFIX child seat fitted with a stay. "Rear facing" ISOFIX child seat or infant car seat, fitted with an upper strap or a stay.

X: No restraining system for children.

Infant car seat: this is fixed to the lower rings of a seat equipped with ISOFIX mountings and occupies two rear seats.




CHILD SEATS RECOMMENDED BY CITROËN

CITROËN offers a complete range of recommended child seats which are **secured using a three point seat belt**:

Group 0: from birth to 10 kg Group 0+: from birth to 13 kg		Groups 1, 2 and 3: from 9 to 36 kg	
	L1 "ROMER Baby-Safe Plus" Installed in the rear-facing position		L2 "KIDDY Life" Use of the restraining cushion is compulsory for the transportation of young children (from 9 to 18 kg).
Groups 2 and 3: from 15 to 36 kg			
	L3 "RECARO Start"		L4 "KLIPPAN Optima" From the age of 6 years (approximately 22 kg), the booster is used on its own.
	L5 "RÖMER KIDFIX" Can be fixed on the vehicle's ISOFIX mountings. The child is restrained by the seat belt.		

INSTALLING CHILD SEATS ATTACHED USING THE SEAT BELT

  This table indicates the options for installing child seats secured using a seat belt and universally approved in accordance with the weight of the child and the seat in the vehicle.

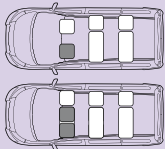Seat			Weight of the child and indicative age			
			Under 13 kg (groups 0 (a) and 0+) Up to approx 1 year	From 9 to 18 kg (group 1) 1 to 3 years approx	From 15 to 25 kg (group 2) 3 to 6 years approx	From 22 to 36 kg (group 3) 6 to 10 years approx
Row 1 (b)		Individual seat	U	U	U	U
		Bench, side seat	U	U	U	U
		Bench, centre seat	L1	L2	L2, L3, L4	L2, L3, L4
Row 2		Side seats	U	U	U	U
		Centre seat	U	U	U	U
Row 3		Side seats	U	U	U	U
		Centre seat	U	U	U	U

a: Group 0: from birth to 10 kg. Infant car seats and "car cots" cannot be installed on the front passenger seat.

b: consult the legislation in force in your country before installing your child on this seat.

U: seat suitable for the installation of a child seat secured using a seat belt and universally approved, "rear facing" and/or "forward facing".

ADVICE ON CHILD SEATS

The incorrect installation of a child seat in a vehicle compromises the child's protection in the event of an accident.

Remember to fasten the seat belts or the child seat harnesses **keeping the slack** in relation to the child's body **to a minimum**, even for short journeys.

For optimum installation of the "forward facing" child seat, ensure that the back of the child seat is in contact with the back of the vehicle's seat and that the head restraint does not cause any discomfort.

If the head restraint has to be removed, ensure that it is stored or attached securely to prevent it from being thrown around the vehicle in the event of sharp braking.

Children under the age of 10 must not travel in the "forward facing" position on the front passenger seat, unless the rear seats are already occupied by other children, cannot be used or are absent.

Deactivate the passenger airbag when a "rear facing" child seat is installed on the front seat.

Otherwise, the child would risk being seriously injured or killed if the airbag were to inflate.

As a safety precaution, do not leave:

- one or more children alone and unsupervised in a vehicle,
- a child or an animal in a vehicle which is exposed to the sun, with the windows closed,
- the keys within reach of children inside the vehicle.

To prevent accidental opening of the doors, use the "Child Lock".

Take care not to open the rear windows by more than one third.

To protect young children from the rays of the sun, fit side blinds to the rear windows.

Installing a booster seat

The chest part of the seat belt must be positioned on the child's shoulder without touching the neck.

Ensure that the lap part of the seat belt passes correctly over the child's thighs.

CITROËN recommends the use of a booster seat which has a back, fitted with a seat belt guide at shoulder level.



TOWING A TRAILER, CARAVAN, BOAT, ETC...

+ For more information about weights, refer to the administrative documents (V5 registration document, ...) or to the "Weights" section of chapter 8.

Driving advice

A towed vehicle must free wheel: gearbox in neutral.

Distribution of loads

Distribute the load in the trailer so that the heaviest objects are as close as possible to the axle and the nose weight is close to the maximum authorised without, however, exceeding it.

Cooling

Towing a trailer on a slope increases the coolant temperature.

As the fan is electrically controlled, its cooling capacity is not dependent on the engine speed.

Towing a trailer

On the contrary, use a high gear to lower the engine speed and reduce your speed.

In all cases, pay attention to the coolant temperature.

Good Practice

In certain cases of particularly arduous use (towing the maximum load up a steep slope in high temperatures), the engine automatically limits its power. In this case, the automatic cutting off of the air conditioning allows the engine power to be recovered.



If the coolant temperature warning light comes on, stop the vehicle and switch off the engine as soon as possible.



See the "Levels" section of chapter 6.



Tyres

Check the tyre pressures of the towing vehicle (see the "Identification features" section of chapter 8) and of the trailer, observing the recommended pressure.

Brakes

Towing increases the braking distance. Drive at a moderate speed, change down early and brake gradually.

Side wind

Sensitivity to side wind is increased. Drive smoothly and at a moderate speed.

ABS/ESP

The ABS or ESP systems only control the vehicle, not the trailer or caravan.

Rear parking assistance

The assistance does not function while the vehicle is towing.

Towbar

We recommend the use of original CITROËN towbars and their harnesses, which have been tested and approved from the design stage of your vehicle, and that you entrust the fitting of this equipment to a CITROËN dealer.

If this equipment is not fitted by a CITROËN dealer, it is imperative that it is fitted using the electrical pre-equipment installed at the rear of the vehicle and in accordance with the manufacturer's instructions.

In accordance with the general instructions a reminder of which has been given above, we draw your attention to the risk linked with fitting a towbar or electrical accessory not recommended by CITROËN. Fitting such equipment could result in the failure of your vehicle's electronic system. Please contact a CITROËN dealer for information before fitting this type of equipment.



OTHER ACCESSORIES

These accessories and parts, having been tested and approved for reliability and safety, are all adapted to your vehicle. A wide range of recommended products and original parts are offered.

Another range is also available, structured around comfort, leisure and maintenance: Anti-theft alarm, window engraving, first aid kit, high visibility safety jacket, rear parking assistance, warning triangle, ...

Front seat covers compatible with airbags, benches, rubber mats, carpet mats, boot tray, roof bars, side blinds, snow chains.

To prevent the mat from becoming caught under the pedals:

- ensure that the mat and its fixings are positioned correctly,
- never fit one mat on top of another.

Audio equipment, hands-free kit, speakers, CD changer, navigation, ...

Regardless of the audio and telematic equipment offered on the market, the technical constraints linked with the fitting of equipment of these families of products mean that the special features of the equipment and its compatibility with the capacities of your vehicle's standard equipment must be taken into account. Please contact a CITROËN dealer for information before fitting such equipment.

Installation of radiocommunication transmitters

Before installing accessory radiocommunication transmitters with an external aerial on your vehicle, you are advised to contact a representative of the CITROËN marque.

The CITROËN Network will inform you of the specifications (frequency band, maximum output power, aerial position, specific installation conditions) of the transmitters which can be fitted, in accordance with the Motor Vehicle Electromagnetic Compatibility Directive (2004/104/CE).

Trims, front mud flaps, rear mud flaps, spoilers, sill, ...

Screenwash, interior and exterior cleaning and maintenance products, replacement bulbs, ...



The fitting of electrical equipment or accessories which are not recommended by CITROËN may result in a failure of your vehicle's electronic system. Please note this specific warning. You are advised to contact a representative of the Marque to be shown the range of recommended equipment and accessories. Depending on the country in which the vehicle is sold or operated, it is compulsory to have a high visibility safety jacket, warning triangle and replacement bulbs available in the vehicle.

Opening the bonnet



OPENING THE BONNET

From inside:

- lift the cover located at the foot of the front left seat.
- pull the control upwards.

From outside: partially open the bonnet, lift the catch and raise the bonnet.

Bonnet strut

Secure the strut in one of the two notches, according to the height required, to hold the bonnet open.

Before closing the bonnet, replace the strut in its housing.

To close


Lower the bonnet and release it at the end of its travel. Check that the bonnet is properly locked.

"Bonnet open" warning

This warning is linked to the **alarm option** only.




With the engine running or the vehicle moving, a warning light and a diagram on the display, accompanied by an audible signal, warn you that the bonnet is not properly closed.

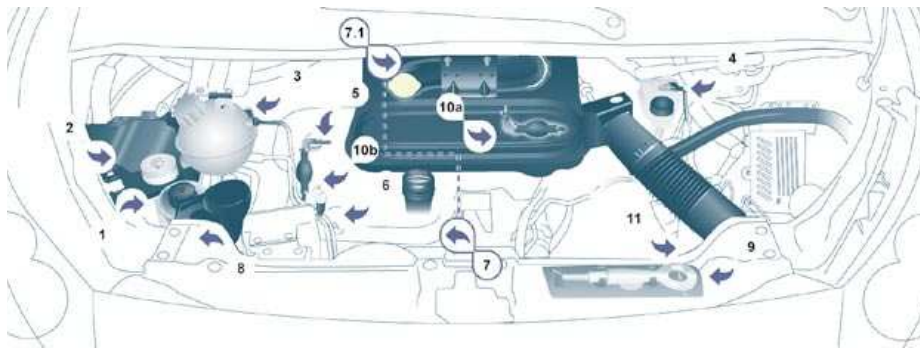

UNDER THE BONNET

DIESEL ENGINES

- | | |
|---|---|
| 1 - Windscreen/headlamp wash reservoir. | 8 - Power steering reservoir. |
| 2 - Fuse box. | 9 - Removable towing eye. |
| 3 - Coolant reservoir. | 10 - Repriming pump |
| 4 - Brake and clutch fluid reservoir. | (a: 1.6 litre HDi; b: 2 litre HDi). |
| 5 - Air filter. | 11 - Engine oil filling funnel (2 litre HDi). |
| 6 - Dipstick. | |
| 7 - Engine oil filler cap. | |

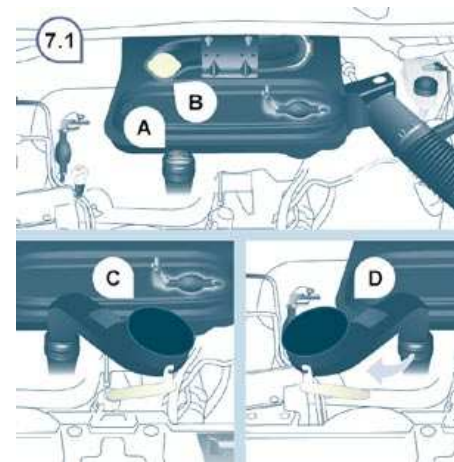

7.1 - Engine oil filler cap.

If your vehicle is fitted with this oil filler tube, proceed as follows:

A - Remove the oil filler cap.

B - Remove the filler tube from its location.

C - Place the filler tube in the filler opening as shown on the illustration.

D - Turn it a 1/4 of a turn to the left to lock it then top up the oil.

To refit, proceed in the reverse order without forgetting to retighten the cap **A** correctly.

Under the bonnet



PETROL ENGINE

- | | | |
|--|--------------------------------------|------------------------------|
| 1. Windscreen/headlamp wash reservoir. | 4. Brake and clutch fluid reservoir. | 7. Engine oil filler cap. |
| 2. Fuse box. | 5. Air filter. | 8. Power steering reservoir. |
| 3. Coolant reservoir. | 6. Dipstick. | 9. Removable towing eye. |

LEVELS


i These regular maintenance operations will keep your vehicle in good running order. Consult the instructions at CITROËN dealerships or in the servicing booklet enclosed in the handbook pack.

👁 If you have to remove/refit the engine style cover, handle it with care to avoid damaging the fixing clips.

Oil level

Check the level regularly and top up between changes.

Check the level with the vehicle level, engine cold, using the dipstick.

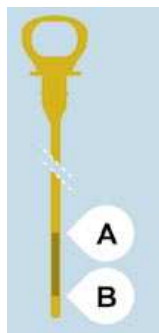

Dipstick


There are two marks on the dipstick:

A = maximum

If you fill past this mark, contact a CITROËN dealer.

B = minimum

Never allow the level to fall below this mark.

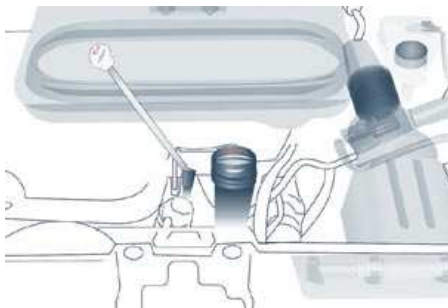

To maintain the reliability of engines and emission control systems, the use of additives in engine oil is prohibited.

Oil change

It is imperative that this is carried out at the intervals specified and the viscosity grade of the oil selected must fulfil the requirements in accordance with the manufacturer's servicing schedule. Consult the instructions at CITROËN dealerships.

Remove the dipstick before filling.

For the 2 litre HDi engine, use the funnel supplied when filling via the sump opening.

Check the level after filling (never exceed the max mark).

Screw the cap back onto the sump before closing the bonnet.

Viscosity selection

In all cases, the oil selected must meet the manufacturer's requirements.



Changing the brake fluid

The brake fluid must be changed at the intervals stated, according to the manufacturer's servicing schedule.

Use fluids recommended by the manufacturer, which fulfil DOT4 standards.

The level must be between the MIN and MAX marks on the reservoir.

If fluid has to be added frequently, this indicates a failure which must be checked by a CITROËN dealer as soon as possible.

Warning lights

+ Checking by means of the warning lights on the instrument panel is described in chapter 2, refer to the "Instruments and controls" section.

Cooling system

Only use the fluid recommended by the manufacturer.

Otherwise, you risk seriously damaging your engine.

When the engine is warm, the temperature of the coolant is controlled by the engine fan. As this fan can operate with the ignition key removed and because the cooling system is pressurised, wait for at least one hour after the engine has stopped before carrying out any work.

Slacken the cap by 1/4 of a turn to release the pressure to prevent any risk of scalding.

When the pressure has dropped, remove the cap and top up the level with coolant.

If fluid has to be added frequently, this indicates a failure which must be checked by a CITROËN dealer as soon as possible.

Topping up

The level must be between the MIN and MAX marks on the expansion bottle. If more than 1 litre of fluid is required to top up the level, have the system checked by a CITROËN dealer.

Power steering fluid level

The vehicle must be parked on level ground with the engine cold. Unscrew the cap integrated with the gauge and check the level which must be between the MIN and MAX marks.

Windscreen wash and headlamp wash level

For best quality cleaning and for your safety, we would advise that you use products of the CITROËN Universal range.

Capacity of the screenwash reservoir: approximately 4.5 litres.

If your vehicle is fitted with headlamp washers, the capacity of the reservoir is 7.5 litres.

To guarantee optimum cleaning and prevent freezing, this fluid must not be topped up or replaced with water.



Diesel additive level (Diesel with particle emission filter)

The minimum level of this additive is indicated by lighting of the service warning light, accompanied by an audible signal and a message on the display.

When this occurs with the engine running it is due to the start of saturation of the particle emission filter (exceptionally prolonged urban type driving conditions: low speed, long traffic jams, ...).

In order to regenerate the filter, you are advised to drive at a speed higher than 40 mph (60 km/h) for at least five minutes as soon as possible, when traffic conditions permit (until the message disappears and the service warning light is switched off). During regeneration of the particle emission filter, relay noise may be heard under the fascia.

If the message is still displayed and if the service warning light remains on, contact a CITROËN dealer.

Topping up

It is imperative that this additive is topped up by a CITROËN dealer without delay.

CHECKS

Battery

At the start of winter, have your battery checked by a CITROËN dealer.

Brake pads

Brake pad wear depends on the style of driving, in particular for vehicles which are used in town, over short distances. It may be necessary to check the thickness of the pads, even between services.

Unless there is a leak on the circuit, a drop in the brake fluid level indicates that the brake pads are worn.

Brake disc/drum wear status

For any information relating to checking the brake disc/drum wear status, contact a CITROËN dealer.

Handbrake

Where the handbrake travel is too great or there is a reduction in the performance of the system, the handbrake should be adjusted, even between services.

Have the system checked by a CITROËN dealer.

Oil filter

Change the filter regularly, in accordance with the servicing schedule.

Carbon filter and passenger compartment filter

The carbon filter permits continuous and effective filtering of dust.

If the passenger compartment filter becomes clogged, this may reduce the performance of the air conditioning system and generate unpleasant odours.

We recommend the use of a combined passenger compartment filter. By means of its second special active filter, it contributes to the purification of the air breathed by the occupants and the cleanness of the passenger compartment (reduction of allergic symptoms, unpleasant odours and greasy deposits).

Refer to the servicing booklet to find out the replacement interval for these components.

Depending on the environment (dusty atmosphere...) and the use of the vehicle (urban driving...), change them twice as often if necessary.



Refer to the "Under the bonnet" section of chapter 6.

Particle emission filter (Diesel)



It is imperative that particle emission filter maintenance is carried out by a CITROËN dealer.

On acceleration after the vehicle has been running for a prolonged period at very low speed or at idle, you may, in exceptional circumstances, notice the emission of water vapour at the exhaust. This water vapour does not have any adverse effect on vehicle handling or the environment.



1.6 litre HDi

Bleeding the water contained in the diesel filter




If this warning light comes on, bleed the filter. Otherwise bleed regularly each time the engine is drained.

To evacuate the water, unscrew the bleed screw located on the filter.

Operate until all of the water in the transparent pipe has been drained out then tighten the bleed screw.

HDi engines use advanced technology.

All work requires a special qualification which is guaranteed by a CITROËN dealer.

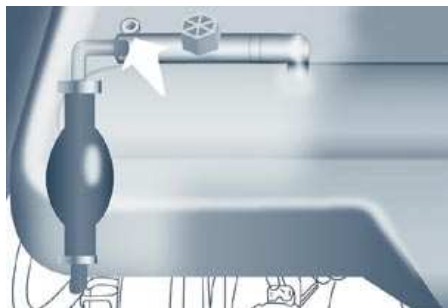

2 litre HDi

Manual gearbox

Have the level checked in accordance with the manufacturer's servicing schedule.

i To check the main levels and certain components, in accordance with the manufacturer's servicing schedule, refer to the pages of the servicing booklet which correspond to your vehicle's engine.

i Only use products recommended by CITROËN or products of equivalent quality and specification.

In order to optimise the operation of units as important as the braking system, CITROËN selects and offers specific products.

In order to avoid damaging the electrical units, high pressure washing to clean the engine compartment is strictly prohibited.



FILLING WITH FUEL

Low fuel level



When this warning light first comes on and when the needle is at the start of the red zone, the minimum fuel tank level has been reached.

At this moment, you have **approximately 8 litres** of fuel remaining.

Fill up without delay to avoid running out of fuel.



Never continue to drive until you run out of fuel as this may damage the emission control and injection systems.

Filling with fuel

The fuel tank must be filled **with the engine off**.



When filling with fuel, do not open the left-hand side door, if fitted on your vehicle, as there is a risk of damage to the fuel filler flap.



You can lock this door using the electric child lock. Refer to the "Accesses" section of chapter 2.

- Open the fuel filler flap.
Insert the key, then turn it a quarter turn.
- Remove the cap and hook it onto the clip located on the inside of the flap.

It is normal to hear an air intake noise when the cap is opened as there is a vacuum linked with the sealing of the fuel circuit.

A label affixed to the inside of the flap reminds you of the type of fuel to be used.

More than 8 litres of fuel must be added in order to be registered by the fuel gauge.

When filling the fuel tank, do not continue after the 3rd cut-off of the nozzle. This could cause malfunctions.

The capacity of the fuel tank is approximately 80 litres.

- After filling the fuel tank, lock the cap and close the flap.

Quality of the fuel used for Diesel engines

The Diesel engines are perfectly compatible with biofuels which conform to current and future European standards (Diesel fuel which complies with standard EN 590 mixed with a biofuel which complies with standard EN 14214) available at the pumps (containing up to 7 % Fatty Acid Methyl Ester).

The B30 biofuel can be used in certain Diesel engines; however, this use is subject to strict application of the special servicing conditions. Consult a CITROËN dealer.

The use of any other type of (bio)fuel (vegetable or animal oils, pure or diluted, domestic fuel...) is strictly prohibited (risk of damage to the engine and fuel system).

Quality of the fuel used for petrol engines

The petrol engines are perfectly compatible with E10 type petrol biofuels (containing 10 % ethanol), conforming to European standards EN 228 and EN 15376.

E85 type fuels (containing up to 85 % ethanol) are reserved exclusively for vehicles marketed for the use of this type of fuel (BioFlex vehicles). The quality of the ethanol must comply with European standard EN 15293.

For Brazil only, special vehicles are marketed to run on fuels containing up to 100 % ethanol (E100 type).



DIESEL



**SP95
E10**



SP98

FUEL CIRCUIT DISARMED

In a serious collision, a mechanism automatically prevents fuel from reaching the engine.



The flashing of this warning light is accompanied by a message on the display.

Check that there is no odour or leakage of fuel outside the vehicle and re-establish the fuel supply:

- switch off the ignition (STOP position),
- remove the key,
- put the key back in the ignition,
- switch on the ignition and start.

DIESEL REPRIMING PUMP

If you should run out of fuel, it is necessary to re-prime the circuit:

- fill the fuel tank with at least five litres of diesel,
- squeeze and release the manual re-priming pump, under the bonnet under the protective cover, until fuel appears in the transparent pipe,
- operate the starter until the engine starts.

Quality of the fuel used for Diesel engines

The Diesel engines are perfectly compatible with biofuels which conform to current and future European standards (Diesel fuel which complies with standard EN 590 mixed with a biofuel which complies with standard EN 14214) available at the pumps (containing up to 7 % Fatty Acid Methyl Ester).

The B30 biofuel can be used in certain Diesel engines; however, this use is subject to strict application of the special servicing conditions. Consult a CITROËN dealer.

The use of any other type of (bio)fuel (vegetable or animal oils, pure or diluted, domestic fuel...) is strictly prohibited (risk of damage to the engine and fuel system).

Quality of the fuel used for petrol engines

The petrol engines are perfectly compatible with E10 type petrol biofuels (containing 10 % ethanol), conforming to European standards EN 228 and EN 15376.

E85 type fuels (containing up to 85 % ethanol) are reserved exclusively for vehicles marketed for the use of this type of fuel (BioFlex vehicles). The quality of the ethanol must comply with European standard EN 15293.

For Brazil only, special vehicles are marketed to run on fuels containing up to 100 % ethanol (E100 type).



DIESEL



**SP95
E10**



SP98

FUEL CIRCUIT DISARMED

In a serious collision, a mechanism automatically prevents fuel from reaching the engine.



The flashing of this warning light is accompanied by a message on the display.

Check that there is no odour or leakage of fuel outside the vehicle and re-establish the fuel supply:

- switch off the ignition (STOP position),
- remove the key,
- put the key back in the ignition,
- switch on the ignition and start.

DIESEL REPRIMING PUMP

If you should run out of fuel, it is necessary to re-prime the circuit:

- fill the fuel tank with at least five litres of diesel,
- squeeze and release the manual re-priming pump, under the bonnet under the protective cover, until fuel appears in the transparent pipe,
- operate the starter until the engine starts.

BATTERY

This is housed in a compartment located underneath the floor, in front of the front right seat.

To charge the battery using a battery charger

- Disconnect the battery,
- Follow the instructions for use given by the battery charger manufacturer,
- Reconnect starting with the negative (-) terminal,
- Check that the terminals and connectors are clean. If they are covered with sulphate (white or greenish deposit), disconnect them and clean them.

To start the vehicle from another battery

- Connect the red cable to the positive (+) terminals of the two batteries,
- Connect one end of the green or black cable to the negative (-) terminal of the slave battery,
- Connect the other end of the green or black cable to an earth point on the broken down vehicle as far as possible from the battery,
- Operate the starter, let the engine run,
- Wait for the engine to return to idle, then disconnect the cables.



It is advisable to disconnect the battery if the vehicle is not to be used for a period of more than one month.

Before disconnecting the battery, you must wait for 2 minutes after switching off the ignition.

Never disconnect a terminal when the engine is running.

Never charge a battery without first disconnecting the terminals.

After every reconnection of the battery, switch on the ignition and wait 1 minute before starting to allow the electronic systems to be initialised. If slight difficulties are experienced after this, please contact a CITROËN dealer.

ECONOMY MODE

After the engine has stopped, with the key in the ignition position, certain functions (windscreen wiper, electric windows, courtesy lights, audio equipment, etc.) can only be used for a cumulative duration of thirty minutes, to prevent discharging of the battery.

Once the thirty minutes are over, the active functions are put on standby and the battery warning light flashes accompanied by a message on the display.

To resume the use of these functions immediately, start the engine and let it run for a few minutes.

The time available will then be double the time for which the engine was left running. However, this time will always be between five and thirty minutes.

A flat battery will prevent the engine from starting.



PUNCTURE REPAIR KIT

The kit is located at the rear left of the vehicle.

The temporary tyre repair kit consists of a compressor and a bottle (containing a sealant).

i Vehicles supplied with a temporary puncture repair kit do not have a spare wheel or tooling (jack, wheelbrace, ...).

Using the kit

- Switch off the ignition,
- affix the speed limitation sticker to the vehicle's steering wheel to remind you that a wheel is in temporary use,
- check that the switch **A** is at position "0",
- connect the pipe of the bottle **1** to the valve of the tyre to be repaired,
- connect the compressor's electrical plug to the vehicle's 12 V socket,
- start the vehicle and let the engine run,
- switch on the compressor by pressing the switch **A** to position "1" until the tyre pressure reaches 2.0 bars,

- remove the compressor, unclip and store the bottle in a sealed bag to avoid staining your vehicle with traces of fluid,
- drive immediately, for approximately two miles (three kilometres), at reduced speed (between 12 and 37 mph (20 and 60 km/h)), to seal the puncture,
- stop to check the repair and the pressure,

i If, after approximately five to ten minutes, you are not able to obtain this pressure, the tyre cannot be repaired; contact a CITROËN dealer for roadside assistance.

Repairing a wheel



- connect the compressor pipe directly to the valve of the repaired wheel.
- connect the compressor's electrical plug to the vehicle's 12 V socket again,
- start the vehicle again and let the engine run,

- adjust the pressure using the compressor (to inflate: switch **A** in position "1"; to deflate: switch **A** in position "0" and press button **B**), in accordance with the vehicle's tyre pressure label (located on the door aperture, on the driver's side), then remember to check that the leak has been sealed correctly (no further loss of pressure after several miles (kilometres)),
- remove the compressor, then stow the complete kit,
- drive at reduced speed (50 mph (80 km/h) max) limiting the distance travelled to approximately 125 miles (200 km),
- visit a CITROËN dealer as soon as possible to have the tyre repaired or replaced by a technician.



Warning, the bottle of fluid contains ethylene-glycol, this product is harmful if swallowed and causes irritation to the eyes. Keep this product out of reach of children.

The expiry date of the fluid is indicated under the bottle.

The bottle is intended for a single use; once opened, it must be replaced.

After use, do not discard the bottle into the environment, take it to a CITROËN dealer or to a specialised waste disposal site.

Do not forget to obtain a new bottle of sealant available from CITROËN dealers.



CHANGING A WHEEL

If your vehicle is equipped with a spare wheel located underneath the vehicle, follow these instructions.

- ### 1. PARKING THE VEHICLE
- It is imperative that you ensure that the occupants get out of the vehicle and wait in a safe location.
 - If possible, park the vehicle on level, stable and non-slippery ground.
 - Apply the handbrake, switch off the ignition and engage first or reverse gear.
 - If available, place a chock under the wheel diagonally opposite the one to be changed.

On certain types of ground and/or if considerable loads are being transported, the vehicle must be raised in order to disengage the spare wheel from the carrier. Call a CITROËN dealer.

 If your vehicle is fitted with suspension with pneumatic compensation, please deactivate the system. Refer to the "Rear suspension" section of chapter 3.



2. TOOLS

- If fitted on your vehicle, open the plastic flap located at the rear left of the vehicle.
- Unscrew the nut then take out the jack and the wheel brace.

1. Wheel brace.
2. Jack.
3. Alloy wheel embellisher remover.

 The jack and the tool kit are specific to your vehicle. Do not use them for other purposes.

Changing a wheel



3. SPARE WHEEL

- Gain access to the spare wheel from the rear.

i You can switch on the courtesy light to increase the light.



- Open the rear doors.



- Open the cover, located on the sill, to access the carrier bolt.



- Unscrew the bolt using the wheel brace until the carrier is lowered fully.




- Detach the carrier from the hook and place the spare wheel near the wheel to be changed.




4. OPERATING PROCEDURE

- Remove the trim pulling it using the embellisher remover.
- Loosen the wheel bolts and start unscrewing them.
- Place the jack in contact with the locating point provided, the one which is closest to the wheel to be changed. Ensure that the jack is straight and that the base of the jack is fully in contact with the ground.
- Extend the jack to lift the wheel clear of the ground.
- Resume and complete the unscrewing of the wheel bolts.
- Remove the bolts and remove the wheel.

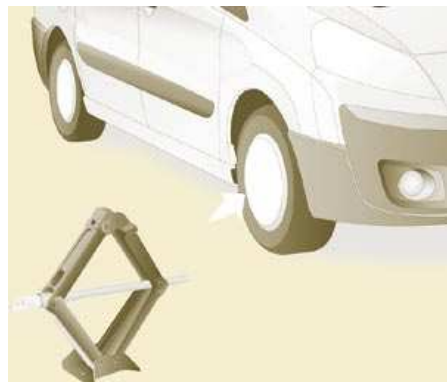

Do not extend the jack until you have started unscrewing the bolts on the wheel to be changed and have placed the chock under the wheel diagonally opposite.

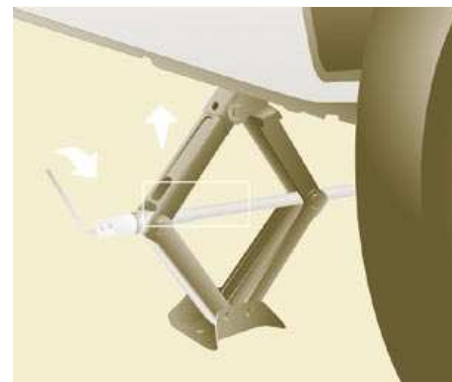


Special tools for vehicles fitted with alloy wheels

If your vehicle has wheels with alloy rims:

- The embellisher is removed using the alloy wheel embellisher remover.
- Each wheel is fitted with an anti-theft bolt.
- These bolts can be loosened using your anti-theft socket (given to you on delivery of your vehicle) and the wheelbrace.

Changing a wheel

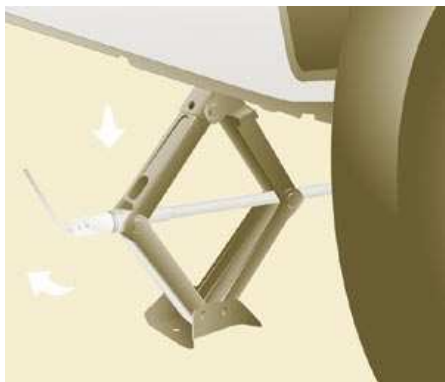

5. FITTING THE SPARE WHEEL

- Position the wheel on the hub and start tightening the wheel bolts by hand.
- Carry out an initial tightening of the bolts using the wheelbrace.
- Lower the vehicle completely by folding the jack, then remove the jack.
- Tighten the bolts again using the wheelbrace, tighten them fully without forcing them.
- Place the wheel to be repaired in the carrier.
- Secure the carrier on the hook then raise the carrier using the bolt and the wheel brace. Check that the wheel and the carrier are flush against the floor of the vehicle.
- Remember to close the flap, located on the sill.
- Store the trim in the vehicle.



Never go underneath the vehicle when it is supported only by the jack.

Never use a screwdriver in place of the wheelbrace.

6. REFITTING THE REPAIRED WHEEL

The wheel is refitted as described in step 5, not forgetting to refit the wheel trim.

+ Refer to the "Identification features" section of chapter 8 to locate the tyre label.


i The spare wheel is not designed to be used over long distances. Have the tightening of the bolts and the tyre pressure checked by a CITROËN dealer as soon as possible. Also, have the original wheel repaired and refitted by a CITROËN dealer as soon as possible.



REMOVABLE SNOW SCREEN

According to country, the removable snow screen is installed on the lower part of the front bumper to prevent the accumulation of snow at the radiator cooling fan.

Do not forget to remove the snow screen when the exterior temperature is higher than 10 °C (no risk of snowfall) and when towing.

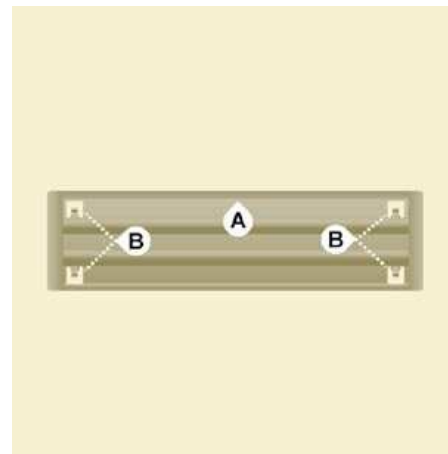

FITTING

- Offer up the snow screen facing its centring pin **A** on the front bumper.
- Put it in place by pressing at each clip **B** located in the four corners.

REMOVAL

- Pass a screwdriver into the hole located near each of the clips.
- Use the screwdriver as a lever to unclip the four clips **B** in turn.

6. REFITTING THE REPAIRED WHEEL

The wheel is refitted as described in step 5, not forgetting to refit the wheel trim.

 Refer to the "Identification features" section of chapter 8 to locate the tyre label.

 
 The spare wheel is not designed to be used over long distances. Have the tightening of the bolts and the tyre pressure checked by a CITROËN dealer as soon as possible. Also, have the original wheel repaired and refitted by a CITROËN dealer as soon as possible.



REMOVABLE SNOW SCREEN

According to country, the removable snow screen is installed on the lower part of the front bumper to prevent the accumulation of snow at the radiator cooling fan.

Do not forget to remove the snow screen when the exterior temperature is higher than 10 °C (no risk of snowfall) and when towing.



FITTING

- Offer up the snow screen facing its centring pin **A** on the front bumper.
- Put it in place by pressing at each clip **B** located in the four corners.

REMOVAL

- Pass a screwdriver into the hole located near each of the clips.
- Use the screwdriver as a lever to unclip the four clips **B** in turn.

 
Changing a bulb



CHANGING A BULB


TYPES OF BULB

Various types of bulb are installed on your vehicle. To remove them:




Type A

 Entirely glass bulb: pull gently as it is fitted by pressure.



Type B

Bayonet bulb: press on the bulb then turn it anticlockwise.

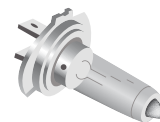


Type C

Halogen bulb: release the retaining spring from its housing.



 Halogen bulbs must be changed after the headlamp has been off for several minutes (risk of serious burns). Do not touch the bulb directly with your fingers, use lint-free cloths.

When each operation has been completed, check the operation of the lights.

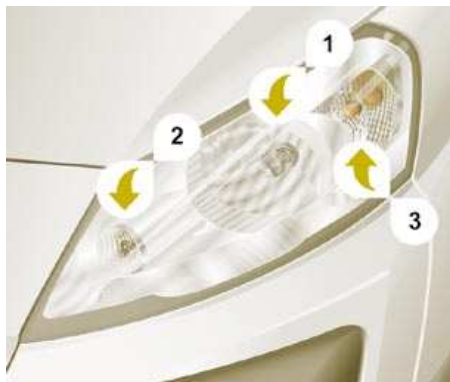

FRONT LIGHTS

Open the bonnet. To access the bulbs, reach behind the headlamp unit.

Carry out the operations in reverse order to refit each bulb.

1. Dipped headlamps/Main beam headlamps

Type C, H4 - 55 W

- Remove the centre cover by pulling the flexible rubber tab.
- Disconnect the electrical connector.
- Release the retaining spring.
- Change the bulb taking care to align the metal part with the grooves on the light.



2. Side lights

Type A, W 5 W - 5 W

- Remove the cover by pulling the flexible rubber tab.
- Remove the bulb holder fitted by pressure by pulling the connector.
- Change the bulb.
- Ensure that the cover is refitted correctly over its entire periphery to guarantee sealing.



3. Direction indicators

Type B, PY 21 W - 21 W (amber)

- Turn the bulb holder a quarter turn anticlockwise.
- Remove the bulb by pressing it lightly while turning it anticlockwise.
- Change the bulb.

4. Fog lamps

Type C, H1 - 55 W

Consult a CITROËN dealer.

Changing a bulb



DIRECTION INDICATOR SIDE REPEATER

Type A, WY 5 W (amber)

- Push the repeater towards the rear and disengage it.
- Support the connector and turn the bulb holder a quarter turn to the left.
- Turn the bulb a quarter turn to the left, remove it and change it.
- When refitting, engage the repeater towards the rear and bring it towards the front.

Amber coloured bulbs (direction indicators and side repeaters) must be replaced with bulbs of identical specification and colour.



Front/Rear

COURTESY LIGHTS


Type A, 12 V 5 W - 5 W

- Unclip the lens by sliding a screwdriver in the slots on each side of the courtesy light.
- Pull the bulb and change it.
- Clip the lens in its housing and ensure that it is secured correctly.

High pressure washing



When using this type of washing on stubborn dirt, do not persist on the headlamps, the lights and their surrounds to avoid damaging their coating and their seal.

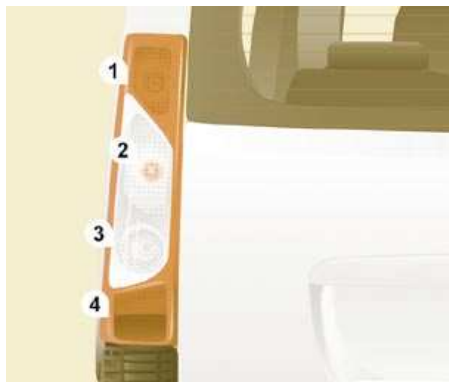

REAR LIGHTS

For further information concerning the bulbs, refer to the "Types of bulb".

1. Brake lights/side lights

Type B, P21/5W - 21/5W

2. Direction indicators

Type B, PY21W - 21W (amber)

3. Reversing lights

Type B, P21W - 21W

4. Fog lamps

Type B, P21W - 21W



- Identify the faulty bulb then open the rear doors to 180°. Refer to the "Accesses" section of chapter 2.
- Remove the two fixing nuts. Pull the lens block from the outside.
- Holding the light, disconnect the electrical connector.



- Move aside the 8 tabs then extract the bulb holder.
- Remove the faulty bulb by pressing it lightly while turning it anticlockwise.
- Change the bulb.

When refitting, take care to correctly reposition:

- the 8 tabs,
- the two white lugs in the two rubber holes to maintain the sealing of the light,
- the supply wire to avoid trapping it.

Changing a bulb



NUMBER PLATE LIGHTS

Type A, W5W - 5W

With tailgate

- Move aside the plastic lens using a screwdriver, on the point indicated by the arrow.
- Change the bulb.
- Replace the plastic lens and press on it.

With hinged doors

- Unclip the interior trim.
- Disconnect the connector by moving aside its tab.
- Remove the plastic cover.
- Turn the bulb holder a quarter turn anticlockwise.
- Change the bulb.



THIRD BRAKE LIGHT

Type A, W5W - 5W

Light located on the outside (hinged doors)

- Unscrew the two screws using a Torx™ screwdriver with 20 socket.
- Remove the light.
- Change the bulb.



Type B, P21W - 21W

Light located on the inside (tailgate)

- Unscrew the two screws using a Torx™ screwdriver with 20 socket.
- Remove the plastic cover.
- Remove the bulb holder moving aside the two tabs.
- Remove the faulty bulb by pressing it lightly while turning it anticlockwise.
- Change the bulb.

CHANGING A FUSE

The three fuse boxes are placed:

- in the fascia panel on the right-hand side (behind the storage compartment, retractable),
- in the passenger compartment (battery compartment),
- under the bonnet.

The descriptions communicated are only the fuses which can be changed by the user using the pliers and replacement fuses located behind the fascia panel storage compartment on the right-hand side. For any other operations, visit a CITROËN dealer.


i Intended for professionals: for complete fuse and relay information, consult the "Methods" diagram via the Network.



Removing and fitting a fuse

Before changing a fuse, the cause of the fault must be found and rectified.


- Use the pliers.

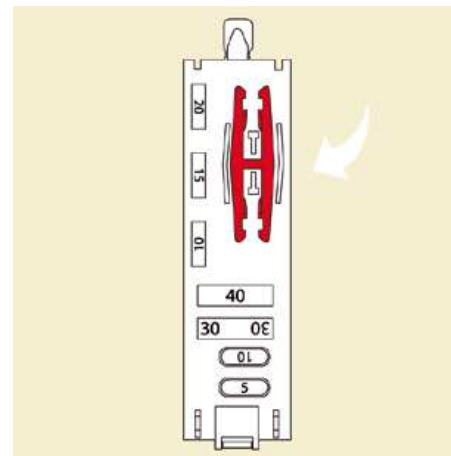

Always replace a faulty fuse with a fuse of the same rating.

CITROËN will not accept responsibility for the cost incurred in repairing your vehicle or for rectifying malfunctions resulting from the installation of auxiliary accessories not supplied and not recommended by CITROËN and not installed in accordance with its instructions, in particular when the combined consumption of all of the additional equipment connected exceeds 10 milliamperes.


Changing a fuse

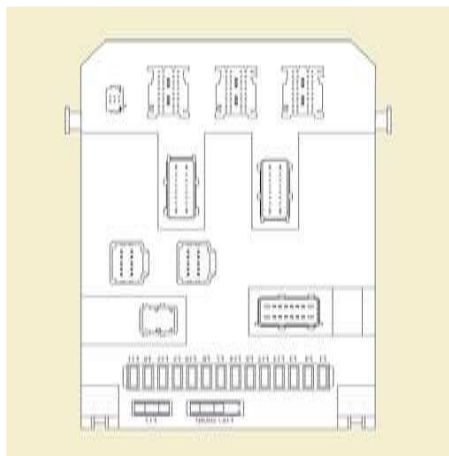

RIGHT-HAND SIDE FASCIA PANEL FUSES

- Tilt the storage compartment then pull it firmly to access the fuses.

Fuses	A (amps)	Allocation
1	15	Rear wiper
2	-	Free
3	5	Airbag control unit
4	10	Steering wheel angle sensor, Diagnostic socket, ESP sensor, Manual ventilation, Clutch switch, Headlamp beam height, Particle emission filter pump
5	30	Electric mirrors, Passenger electric window motor
6	30	Front electric windows supply
7	5	Courtesy lights and glove box light
8	20	Multifunction display, Anti-theft alarm siren, Audio equipment, Compact disc changer, Audio/telephone, Trailer fuse box (accessory)
9	10	Row 2 accessories socket
10	30	Rear ride height corrector, Steering wheel switching, Instrument panel
11	15	Diagnostic socket, Ignition switch
12	15	Hands-free kit, Airbag control unit, Parking assistance control unit
13	5	Engine fuse box, Trailer fuse box
14	15	Rain sensor, Rear ventilation, Automatic air conditioning, Instrument panel
15	30	Locking/unlocking/deadlocking of the accesses
16	-	Free
17	40	Heated rear screen, Heated mirrors

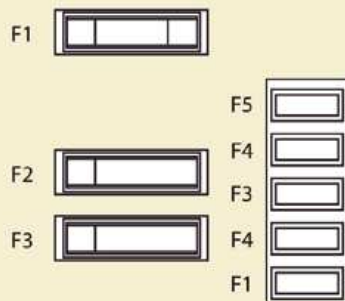


PASSENGER COMPARTMENT FUSES

- Unclip the battery compartment cover.
- Remove the red battery terminal (+).

When you have finished, close the cover carefully.

Fuses	A (amps)	Allocation
1	30	Heated seats
2	20	Row 3 12 V socket
3	40/50	Trailer fuse box (accessory)
4	-	Free
36	15	Hinged door locks
37	10	Hinged door locks
38	20	Hinged door rear wiper
39	10	Rear ventilation
40	5	Folding mirrors


Changing a fuse

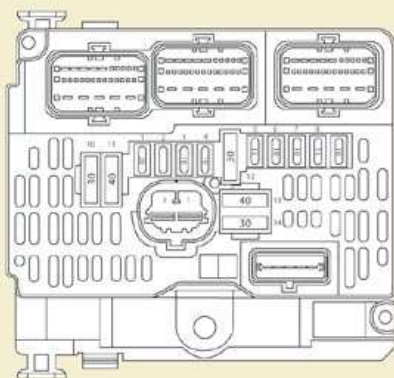

FUSES UNDER THE BONNET

- After opening the bonnet, slide the screenwash support to make access easier.
- Unclip and tilt the box to access the fuses.

Fuses	A (amps)	Allocation
1	20	Engine control unit, Fuel supply and air supply systems, Fan assembly
2	15	Horn
3	10	Front and rear wash-wipe pump
4	20	Headlamp wash pump
5	15	Fuel supply system
6	10	Power steering, Secondary brake pedal switch
7	10	Braking system (ABS/ESP)
8	20	Starter control
9	10	Main brake pedal switch
10	30	Fuel supply and air supply systems, Emission control systems
11	40	Front ventilation
12	30	Windscreen wipers
13	40	Built-in systems interface
14	30	Free

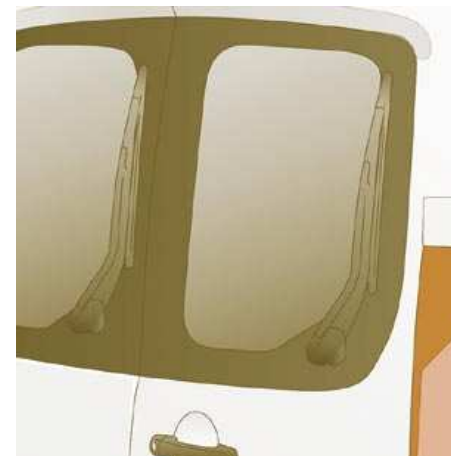

CHANGING A WINDSCREEN WIPER BLADE

Placing the wiper blades in the special position

- Less than a minute after switching off the ignition, press the wipers stalk downwards to position the wiper blades along the windscreen uprights (special position).

Changing a front wiper blade


- Lift the wiper arm.
- Unclip the blade and remove it.
- Fit the new blade.
- Push back the wiper arm.

To return the windscreen wipers to their normal position, switch on the ignition and operate the wipers stalk.

Changing the rear wiper blade

- Lift the wiper arm, then unclip the blade and remove it.
- Fit the new blade and push back the wiper arm.

Having your vehicle towed

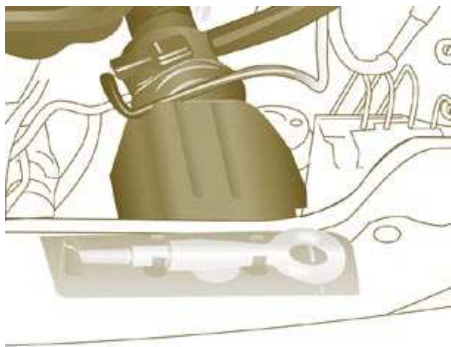

BEING TOWED

Without lifting (4 wheels on the road)

You should always use a towbar.

From the front

- Unclip the cover by pressing the bottom part.
- Screw in the removable towing eye until it locks.

From the rear

- Unclip the cover using a coin or the flat part of the towing eye,
- Screw in the removable towing eye until it locks.

Lifting (2 wheels on the road only)


It is preferable to raise the vehicle using professional lifting equipment.

i When towing with the engine switched off, there is no braking or steering assistance.

Vehicles fitted with a manual gearbox (diesel version)

In the case of vehicles fitted with a manual gearbox, the gear lever must be in the neutral position. Failure to observe this special condition may result in damage to certain braking components and the absence of braking assistance the next time the engine is started.

Dimensions

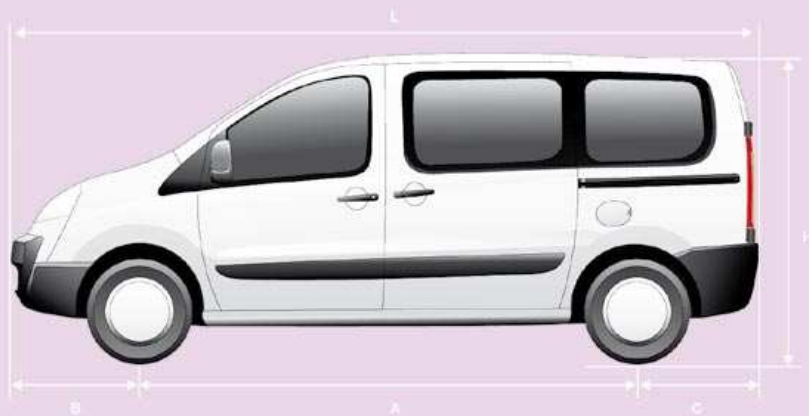


DIMENSIONS


The vehicle is available in 2 lengths (L1, L2) and 1 height (H1), refer to the tables:

		H1	
L	Overall length	4 805	5 135
H	Overall height pneumatic/metal suspension	1 895/1 942	
A	Wheelbase	3 000	3 122
B	Front overhang	975	
C	Rear overhang	830	1 038
D	Overall width:		
	on panel	1 870	
	with mouldings	1 895	
	with mirrors folded	1 986	
	with mirrors unfolded	2 194	
E	Width of front tracks	1 574	
F	Width of rear tracks	1 574	
	Turning circle pitch diameter between kerbs (m)	12,18	12,59
	Maximum loads (kg)		
	Payload	1 000	
	On roof	170	

Dimensions

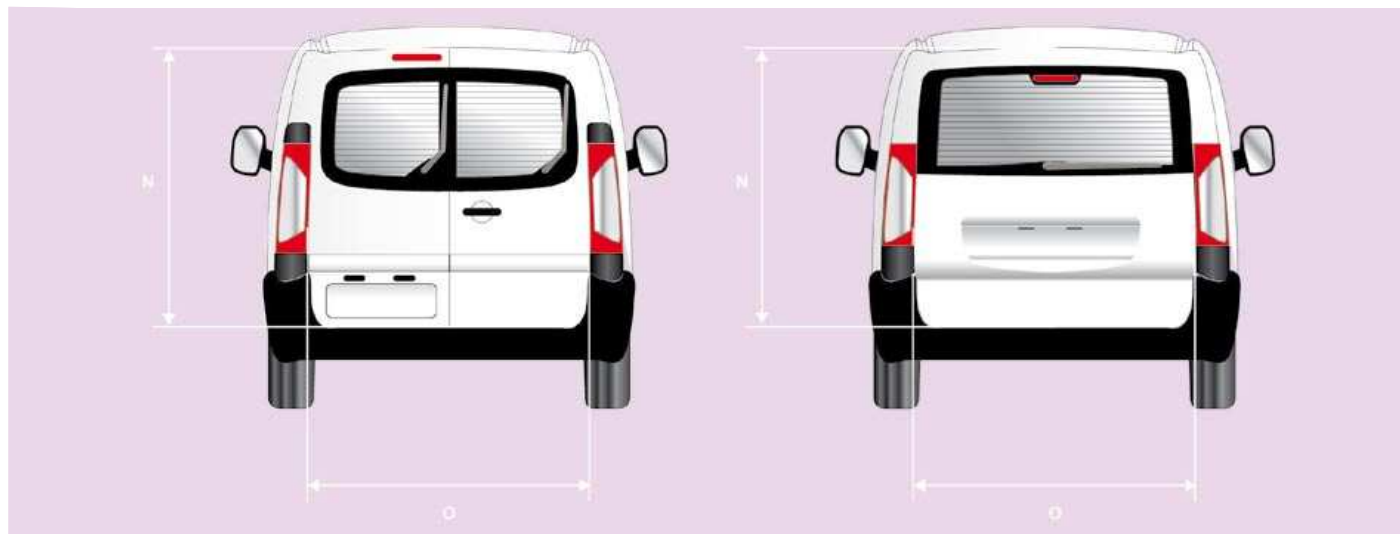

		REAR DOORS (mm)	
		L1	L2
		H1	
N	Useful height	1 272	
O	Useful width	1 237	

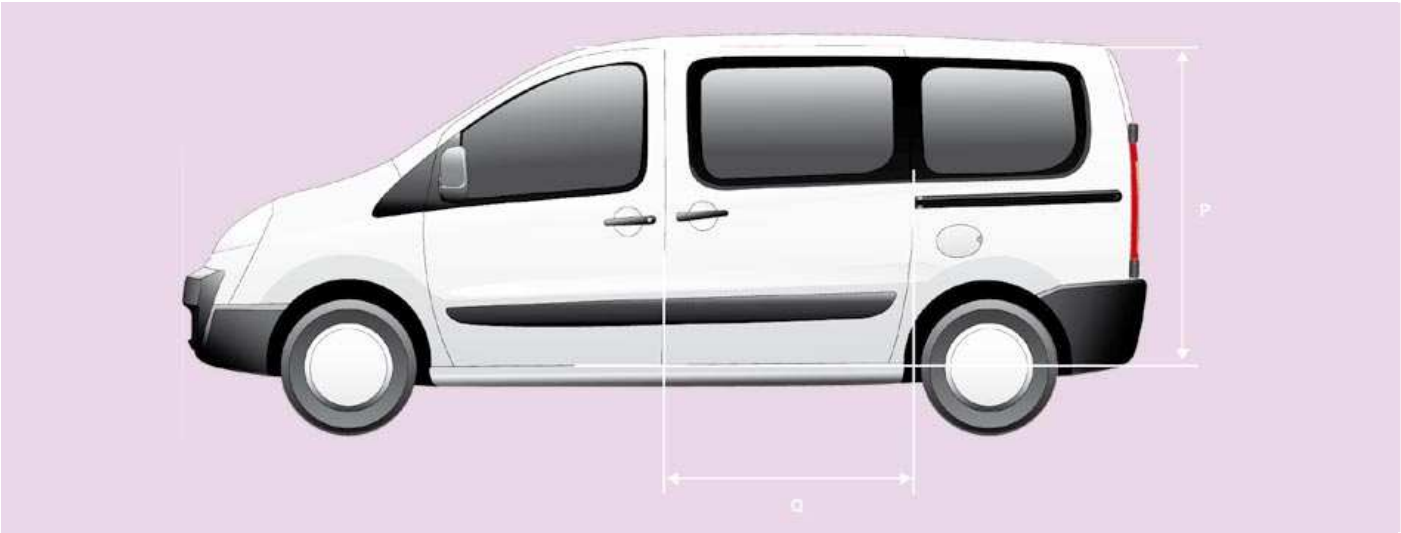

		SLIDING SIDE DOOR (mm)	
		L1	L2
		H1	
P	Height	1 203	
Q	Width	924	

Weights

WEIGHTS AND TOWED LOADS (KG)

For further information, refer to your registration certificate.

In each country, it is imperative that the towed loads permitted by local legislation are complied with. To find out your vehicle's towing capabilities and its gross train weight, contact a CITROËN dealer.

Load transfer

If the towing vehicle has not reached the GVW, it is possible to transfer this weight to the trailer.

In all cases, do not exceed the weight of the trailer and the GTW, indicated on your registration certificate.

Comply with the towing capacities of your vehicle.

Engine	Body type	Number of seats	Kerb weight	Maximum weight (1)	Maximum payload	Payload without driver	Braked towed weight (2)
1.6 HDi 90	Short (L1-H1)	5	1 733	2 683	950	882	2 000
		6	1 745	2 683	938	870	2 000
		8	1 811	2 683	872	804	2 000
		9	1 822	2 683	861	793	2 000
	Long (L2-H1)	5	1 764	2 714	950	882	2 000
		6	1 776	2 714	938	870	2 000
		8	1 842	2 714	872	804	2 000
		9	1 853	2 714	861	793	2 000
	Reinforced	8	1 857	2 852	995	927	2 000
		9	1 868	2 852	984	916	2 000

Engine	Body type	Number of seats	Kerb weight	Maximum weight (1)	Maximum payload	Payload without driver	Braked towed weight (2)
2.0 HDi 120 and 2.0 HDi 120 PEF	Short (L1-H1)	5	1 809	2 759	950	882	2 000
		6	1 821	2 759	938	870	2 000
		8	1 887	2 759	872	804	2 000
		9	1 898	2 759	861	793	2 000
	Long (L2-H1)	5	1 841	2 791	950	882	2 000
		6	1 853	2 791	938	870	2 000
		8	1 919	2 791	872	804	2 000
		9	1 930	2 791	861	793	2 000
	Reinforced	8	1 934	2 932	958	930	2 000
		9	1 945	2 932	987	919	2 000

(1) Gross vehicle weight (GVW).

(2) Braked towed weight with load transfer: this can be increased on condition that the equivalent of this load is removed from the vehicle so that the GTW is not exceeded.

High exterior temperatures may result in a reduction in the performance of the vehicle to protect the engine. When the exterior temperature is higher than 37 °C, limit the towed weight to 700 kg, without load transfer.

The speed of a towing vehicle must not exceed 60 mph (100 km/h) (comply with the legislation in force in your country).

Weights

Engine	Body type	Number of seats	Kerb weight	Maximum weight (1)	Maximum payload	Payload without driver	Braked towed weight (2)
2.0 HDi 136 PEF	Short (L1-H1)	5	1 824	2 774	950	882	2 000
		6	1 836	2 774	938	870	2 000
		8	1 902	2 774	872	804	2 000
		9	1 913	2 774	861	793	2 000
	Long (L2-H1)	5	1 855	2 805	950	882	2 000
		6	1 867	2 805	938	870	2 000
		8	1 933	2 805	872	804	2 000
		9	1 944	2 805	861	793	2 000
	Reinforced	8	1 948	2 946	998	930	2 000
		9	1 959	2 946	987	919	2 000

Engine	Body type	Number of seats	Kerb weight	Maximum weight (1)	Maximum payload	Payload without driver	Braked towed weight (2)
2.0 PETROL 140	Short (L1-H1)	5	1 722	2 672	950	882	2 000
		6	1 734	2 672	938	870	2 000
		8	1 800	2 672	872	804	2 000
		9	1 811	2 672	861	793	2 000
	Long (L2-H1)	5	1 754	2 771	1 017	949	2 000
		6	1 766	2 771	1 005	937	2 000
		8	1 832	2 771	939	871	2 000
		9	1 843	2 771	928	860	2 000
	Reinforced	8	1 847	2 842	995	927	2 000
		9	1 858	2 842	984	916	2 000

(1) Gross vehicle weight (GVW).

(2) Braked towed weight with load transfer: this can be increased on condition that the equivalent of this load is removed from the vehicle so that the GTW is not exceeded.


High exterior temperatures may result in a reduction in the performance of the vehicle to protect the engine. When the exterior temperature is higher than 37 °C, limit the towed weight to 700 kg, without load transfer.

The speed of a towing vehicle must not exceed 60 mph (100 km/h) (comply with the legislation in force in your country).

ENGINES AND GEARBOXES

	Diesel				Petrol
	1.6 HDi 90	2.0 HDi 120	2.0 HDi 120 PEF	2.0 HDi 136 PEF	2.0 PETROL 140
Gearbox	Manual				
Gears	5	6	6	6	5
Power (bhp)	90	120	136	138	138
Power (DIN)	92	122	138	143	143
Cubic capacity (cm ³)	1 560	1 997	1 997	1 997	1 997
Bore x stroke (mm)	75 x 88	85 x 88	85 x 88	85 x 88	85 x 88
EU standard maximum power (kW)	66	88	100	103	103
Max power engine speed (rpm)	4 000	4 000	4 000	6 000	6 000
EU standard max torque (Nm)	180	300	320	180	180
Max torque engine speed (rpm)	1 750	2 000	2 000	2 500	2 500
Fuel	Diesel	Diesel	Diesel	Diesel	Unleaded
Particle emission filter	No	No	Yes	Yes	/
Catalytic converter	Yes	Yes	Yes	Yes	-

For further information, consult the internet site at the address: <http://service.citroen.com>

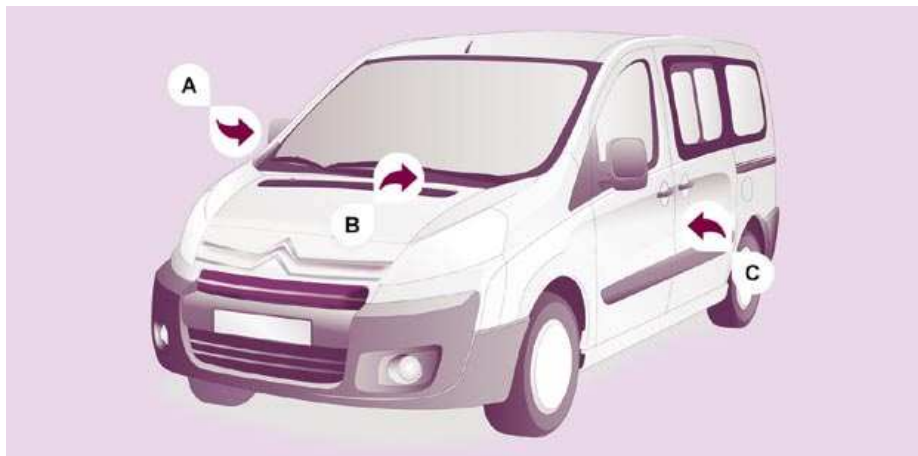

IDENTIFICATION FEATURES

A. Manufacturer's label.

- 1 - VF Type serial number.
- 2 - Gross vehicle weight (GVW).
- 3 - Gross train weight (GTW).
- 4.1 - Maximum weight on front axle.
- 4.2 - Maximum weight on rear axle.

B. Model serial number.

Use the flat end piece of the towing eye to open the flap.

C. Tyres and paint colour reference.

The label **C**, on the front door gives:

- the wheel and tyre sizes,
- the brands of tyres approved by the manufacturer,
- the tyre pressures (the tyre pressure must be checked when the tyre is cold, at least once a month),
- the paint colour reference.



MODEL CODE

Consult your registration certificate.

This table presents the Petrol and Diesel Model Codes.

Vehicle	X
Body types	X*___/_
6 seats max, short L1	XA___/_
6 seats max, long L2	XB___/_
9 seats max, short L1	XC___/_
9 seats max, long L2	XD___/_
8-9 seats, long L2	XE___/_
Engines	X_***_/_
Diesel	
1.6 HDi 90	X_9HU_/_
2.0 HDi 120	X_RHK_/_
2.0 HDi 120 with PEF	X_RHG_/_
2.0 HDi 136 with PEF	X_RHR_/_
Petrol	
2.0 PETROL 140	X_RFH_/_
Versions	X___*/_
The version code is a combination determined by the type of manual gearbox and the associated emission control level.	
Manual gearbox	
5-speed	X___*/_
6-speed	X___*/_
Variants	X___/*
The variant code is determined in relation to the parameters authorised when the vehicle was manufactured.	

EMERGENCY OR ASSISTANCE CALL using the NaviDrive


EMERGENCY CALL



In order for an emergency call to be made, a valid SIM card must be inserted.



In an emergency, press the SOS button until a CONFIRMATION/ CANCELLATION screen is displayed. A call is made* directly to CITROËN Emergency which receives locating information from the vehicle and can send a detailed alert to the appropriate emergency services. In countries where the call centre is not operational, the call is directed to the national emergency services (112).

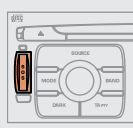

If necessary, the internal telephone is activated automatically to make an emergency call.

* This service is subject to conditions and availability. Consult a CITROËN dealer.



If the SIM card used was not supplied by CITROËN, we suggest that you check its compatibility by making a call to the CITROËN Emergency Emergency team.

ASSISTANCE CALL



Press this button for access to CITROËN services*.



Select "Customer call" to request any information about the CITROËN marque.

CUSTOMER CALL




Select "CITROËN Assistance" to make a breakdown assistance call.

CITROËN ASSISTANCE



* These services and options are subject to conditions and availability.

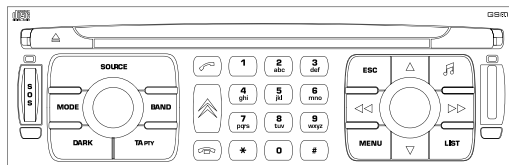

NaviDrive

MULTIMEDIA AUDIO EQUIPMENT/TELEPHONE
JUKEBOX FUNCTION (10 GB)/GPS (EUROPE)



The NaviDrive is coded in such a way that it will only operate in your vehicle. If it is to be installed in another vehicle, contact a CITROËN dealer for configuration of the system.



For safety reasons, it is imperative that the driver carries out operations which require prolonged attention while the vehicle is stationary.
When the engine is switched off and to prevent discharging of the battery, the NaviDrive may switch off after a few minutes.

CONTENTS

- **01 First steps** pg. 9.4
- **02 Display and general menu** pg. 9.6
- **03 GPS** pg. 9.9
- **04 Traffic information** pg. 9.18
- **05 Audio/Video** pg. 9.20
- **06 Making telephone calls** pg. 9.28
- **07 Trip computer** pg. 9.32
- **08 Voice commands** pg. 9.34
- **09 Configuration** pg. 9.35
- **10 Display flow charts** pg. 9.36
- **Frequently asked questions** pg. 9.82

01 FIRST STEPS



CD eject.

On - Off.
Volume dial.

Source: selection of the radio, Jukebox, CD, CD changer and auxiliary (AUX if activated on the Configuration menu).
 Copy CD to hard disc.

Mode: selection with displaying of the TRIP, TEL, NAV or AUDIO mode chosen.

Dark: hide the screen display, until completely black, by successive presses. Pressing again reactivates the display.
 Reinitialisation of the system.

Band: selection of the FM1, FM2, FMast, AM wavebands.

TA: TA Traffic Announcements function on/off.

PTY:  Types of Programme function on/off by means of a long press.

Alpha-numeric telephone keypad for the same uses, dial, call, hang up, enter.

Lion: Direct access to the "CITROËN" services.

 For a detailed global view of the menus available, refer to section 10.

 A long press is required.

 **Navigator** which selects the choices above or the step by step or rapid advances.

Pressing the navigation dial confirms the choice, but does not store it.


ESC: clears the current selection.
 Return to the previous selection.

Menu: displays the general screen.
 Sound settings.

List: displays the list of radio stations received, the list of CD tracks or MP3/USB/Jukebox directories.
 Updating of the stations received.


01 FIRST STEPS

STEERING WHEEL CONTROLS

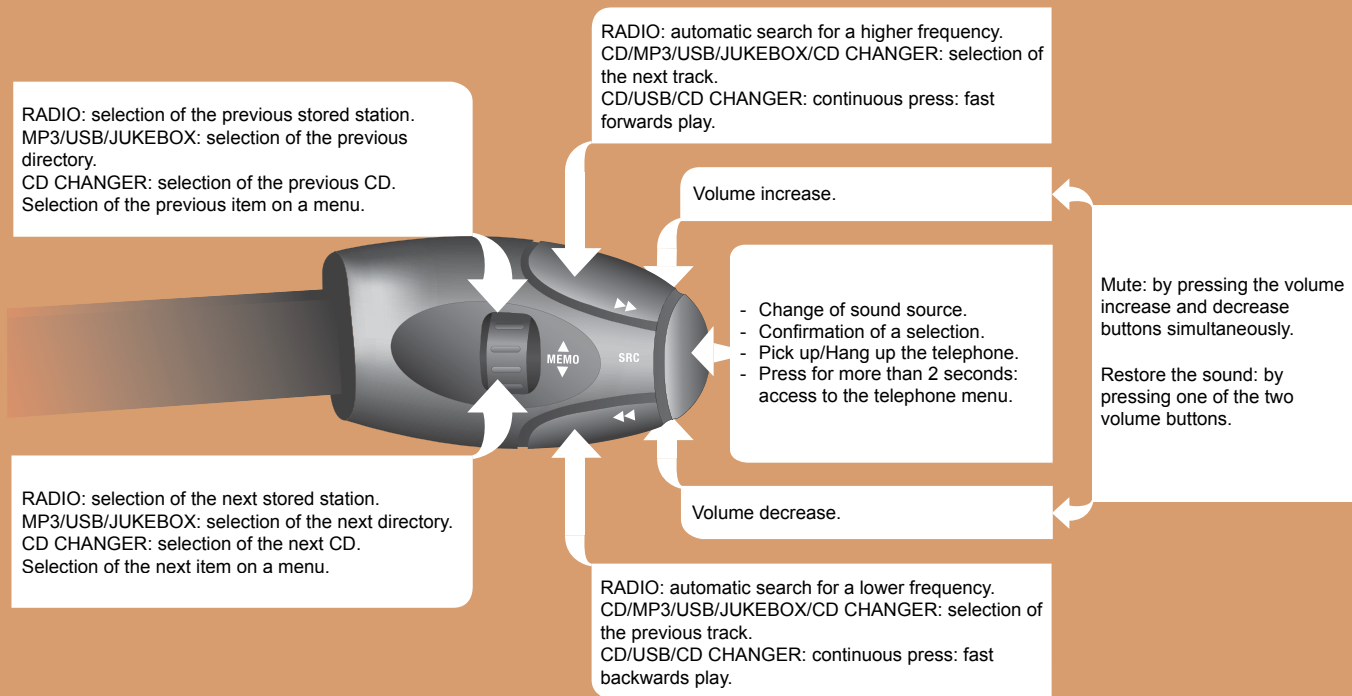

02 DISPLAY AND GENERAL MENU

> COLOUR DISPLAY

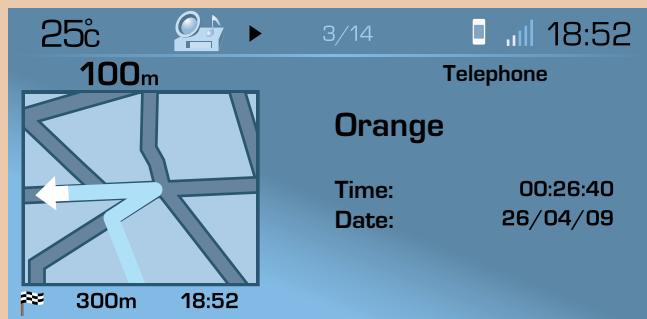

This displays the following information, via the audio equipment control pad:

- the time,
- the date,
- the exterior temperature (if there is a risk of ice, you are warned by a message),
- the audio source displays (radio, CD, jukebox, ...),
- the telematic system displays (telephone, services, ...),
- the accesses check (doors, boot, ...),
- the warning messages (e.g.: "Fuel level low") and vehicle function status messages (e.g.: "Auto lighting activated") displayed temporarily,
- the trip computer display,
- the GPS (Europe) satellite navigation system displays.




Display configuration: refer to the paragraph in section 09.



New

The system uses the complete and detailed NAVTEQ maps installed directly on the equipment's hard disc. There is no longer any need to insert a map CD in the CD player. The updates of the maps of France and of the other European countries, offered by our partner NAVTEQ, will be available from the CITROËN network.

DISPLAY AND GENERAL MENU 02

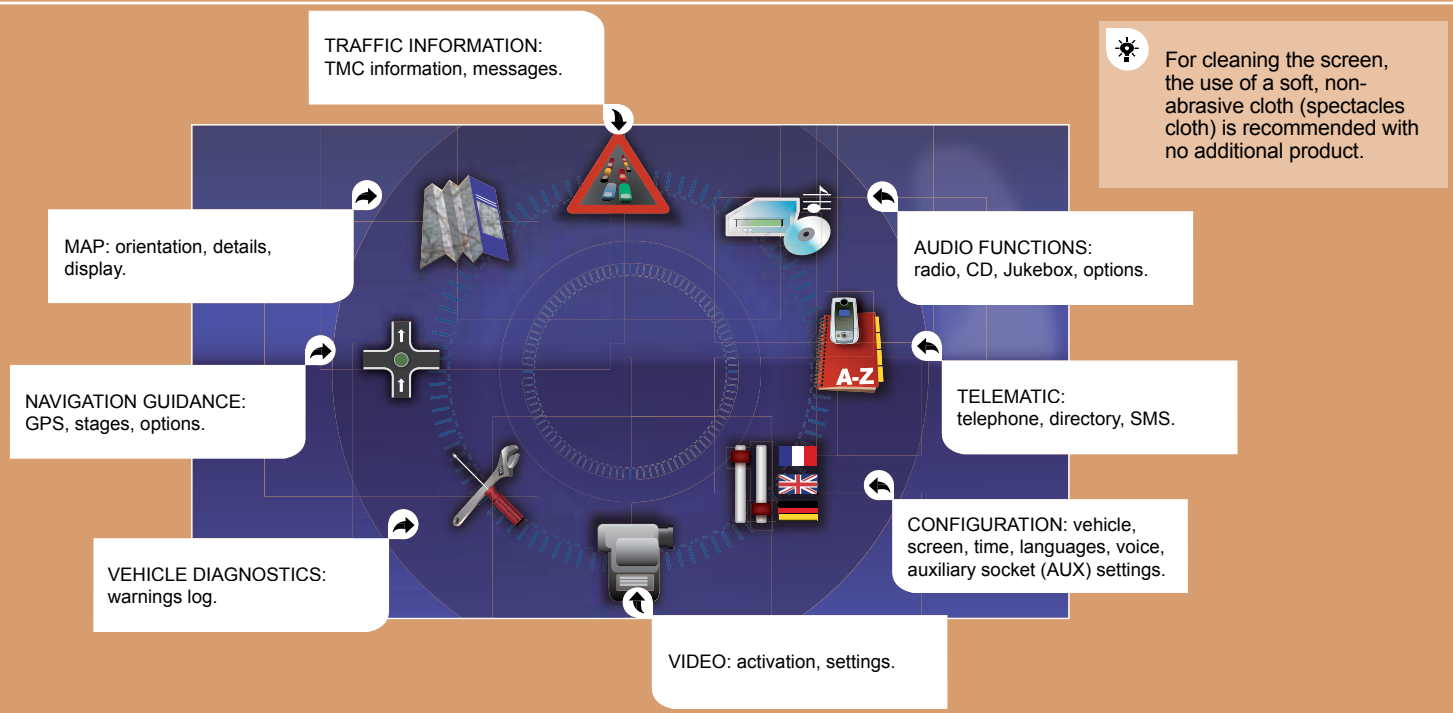

02 DISPLAY AND GENERAL MENU

DISPLAY ACCORDING TO THE CONTEXT



Press the OK dial to access short-cut menus according to the display on the screen.

NAVIGATION (IF NAVIGATION IS IN PROGRESS):

- 1 resume/stop guidance
- 1 divert route
- 1 route type
- 1 consult traffic info
- 1 zoom/scroll
- 1 in "zoom/scroll" mode
- 1 position info
- 1 select as destination
- 1 select as stage
- 1 store this position
- 1 exit map mode
- 1 guidance option

INTERNAL TELEPHONE:

- 1 call list
- 1 dial
- 1 phone book
- 1 voice mail

BLUETOOTH TELEPHONE:

- 1 call list
- 1 call
- 1 phone book
- 1 private mode/hands-free mode
- 1 place call on hold/resume call

TRIP COMPUTER:

- 1 alert log
- 1 status of functions

CD (MP3 OR AUDIO):

- 1 copy CD to JBX/stop copy
- 1 activate/deactivate Introsan
- 1 activate/deactivate random play
- 1 activate/deactivate repeat

RADIO:

- 1 enter a frequency
- 1 activate/deactivate RDS
- 1 activate/deactivate REG mode
- 1 mask/display "Radio Text"

JUKEBOX:

- 1 select playlist
- 1 activate/deactivate Introsan
- 1 activate/deactivate random play
- 1 activate/deactivate repeat

USB:

- 1 copy USB to JBX/stop copy
- 1 eject USB
- 1 activate/deactivate Introsan
- 1 activate/deactivate random play
- 1 activate/deactivate repeat

03 GPS



SELECTING A DESTINATION

Tip: for a detailed global view of the menus available, refer to section 10.

1



Press the MENU button.



2



Turn the dial and select the NAVIGATION GUIDANCE function.



3



Press the dial to confirm the selection.



4



Turn the dial and select the DESTINATION CHOICE function.

DESTINATION CHOICE



5



Press the dial to confirm the selection.



6



Turn the dial and select the ENTER AN ADDRESS function.

ENTER AN ADDRESS



7



Press the dial to confirm the selection.



8



When the country has been selected, turn the dial and select the TOWN function.

TOWN



9



Press the dial to confirm the selection.



10



Turn the dial and select the letters of the town one by one confirming each time by pressing the dial.

PARIS



To speed up the process, the POST CODE can be entered instead of the name of the town. Use the alphanumeric keypad to enter the letters and digits and "*" to correct.



03 GPS



GUIDANCE OPTIONS

The route presented depends directly on the guidance options.
Changing these options may completely change the route.

1



Press the MENU button.



2



Turn the dial and select the
NAVIGATION GUIDANCE function.



3



Press the dial to confirm the selection.



4



Turn the dial and select the
GUIDANCE OPTIONS function.

GUIDANCE OPTIONS



5



Press the dial to confirm the selection.



6



Turn the dial and select the DEFINE
CALCULATION CRITERIA function.

DEFINE CALCULATION CRITERIA



7



Press the dial to confirm the selection.

 


8



Turn the dial and select, for example,
the DISTANCE/TIME function.

DISTANCE/TIME



SETTING HAZARDOUS AREAS ALERT PARAMETERS



9



Press the dial to confirm the selection.



10



Turn the dial and select the **TRAFFIC INFO** function if you wish to receive the **TRAFFIC INFO** announcements.

TRAFFIC INFO



Tick this box for optimum operation of the traffic information, diversions will be suggested.

11



Press the dial to confirm the selection.




12



Select **OK** and press the dial to confirm.

OK

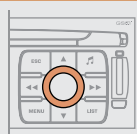

1


Repeat steps 1 to 5 of the guidance option.

2



Turn the dial and select the **SET HAZARDOUS AREAS PARAMETERS** function, then press the dial to confirm the warning message. Press the dial to confirm the selection.

SET HAZARDOUS AREAS

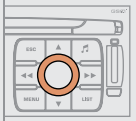


3



Select:

- visual warnings,
- audible warnings with an announcement duration (in seconds),
- warn during guidance only, then select **OK** and press the dial to confirm.

OK

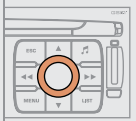

These functions are only available if the hazardous areas have been downloaded and installed on the system. The hazardous areas are, in general, fixed speed cameras, level crossings, dangerous uphill and downhill gradients. They may change on a regular basis.

03 GPS



GUIDANCE SPEECH SYNTHESIS



During announcements, the volume of each speech synthesis function (guidance, traffic information...) can be adjusted directly using the volume button.

1



Press the MENU button.



2



Turn the dial and select the **NAVIGATION GUIDANCE** function.



3



Press the dial to confirm the selection.



4



Turn the dial and select the **GUIDANCE OPTIONS** function.

GUIDANCE OPTIONS



5



Press the dial to confirm the selection.




6



Select the **ADJUST SPEECH SYNTHESIS** function and press the dial to confirm.

ADJUST SPEECH SYNTHESIS

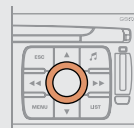


7



Press the dial then adjust the volume of the speech synthesis or select the **DEACTIVATE** function and press the dial to confirm.

DEACTIVATE

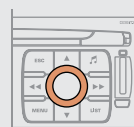


8



Select **OK** and press the dial to confirm.

OK

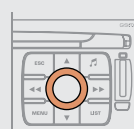

03 GPS



ACTIONS ON THE MAP

1



Press the MENU button.



2



Turn the dial and select the MAP function.



3



Press the dial to confirm the selection.



4



Turn the dial and select the MAP DETAILS function.
Permits selection of the services which can be seen on the map (hotels, restaurants, hazardous areas...).

MAP DETAILS



3D VIEW/MAP ORIENTATION




For improved visibility, beyond the scale of 10 km, the map automatically switches to North Orientation.

5



Repeat steps 1 to 3 then turn the dial and select the MAP ORIENTATION function.

MAP ORIENTATION

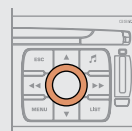

6



Press the dial to confirm the selection.



7




Turn the dial and select the orientation of your choice.

VEHICLE DIRECTION

NORTH DIRECTION

3D VIEW

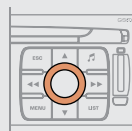


8



Select OK and press the dial to confirm.

OK

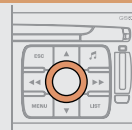

03 GPS



DISPLAYING THE MAP IN A WINDOW OR IN FULL SCREEN MODE



1



Press the MENU button.



2



Turn the dial and select the MAP function.



3



Press the dial to confirm the selection.



4



Turn the dial and select the DISPLAY MAP function.

DISPLAY MAP



5



Press the dial to confirm the selection.



6



Turn the dial and select the MAP IN WINDOW or FULL SCREEN MAP tab.

MAP IN WINDOW

FULL SCREEN MAP




7



Select OK and press the dial to confirm.

OK

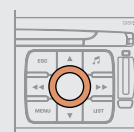

03 GPS



List of POI

-  Flying club
-  Airport
-  Lay-by
-  Bowling alley
-  Casino
-  Business park
-  Sports centre
-  Town centre
-  Cinema
-  Sports complexes
-  Culture/Museum
-  Vineyard
-  Garage

-  Station
-  Dock station
-  Bus station
-  Hospitals
-  Hotels
-  Vehicle hire
-  Town halls
-  Historical monuments
-  Tourist information
-  Theme park
-  Park/Garden
-  Park and ride
-  Car park

-  Covered parking
-  Skating rink
-  Ports
-  Restaurant
-  Shopping
-  Show/Exhibition
-  Winter sports centre
-  Service station
-  Supermarkets
-  Golf course
-  Tourism
-  University
-  Night life

03 GPS



ADDING A STAGE

1



During guidance, press the MENU button.



2



Turn the dial and select the NAVIGATION GUIDANCE function.



3



Press the dial to confirm the selection.



4



Turn the dial and select the JOURNEY LEGS AND ROUTE function.

JOURNEY LEGS AND ROUTE



5



Press the dial to confirm the selection.




6



Select the ADD A STAGE function (9 stages maximum) and press the dial to confirm.

ADD A STAGE

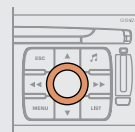

7



Enter for example a new address.

ENTER AN ADDRESS



8




When the new address has been entered, select OK and press the dial to confirm.



9



Select OK and press the dial to confirm the order of the stages.

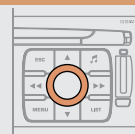

Select STRICT (the stage must be completed in order to continue to the next destination) or PROXIMITY then press the dial to confirm.

04 TRAFFIC INFORMATION



ACTIVATING THE FILTER ON THE ROUTE

We recommend a filter on the route and a filter around the vehicle of:

- 3 miles (5 km) or 6 miles (10 km) for a region with heavy traffic,
- 12 miles (20 km) for a region with a normal level of traffic,
- 60 miles (100 km) for long journeys (motorway).

1



Press the MENU button.



2



Turn the dial and select the **TRAFFIC INFORMATION** function.



3



Press the dial to confirm the selection.



4



Turn the dial and select the **FILTER TRAFFIC INFORMATION** function.

FILTER TRAFFIC INFORMATION



5



Press the dial to confirm the selection.




6



Select the **GEOGRAPHIC FILTER** function and press the dial to confirm.

GEOGRAPHIC FILTER

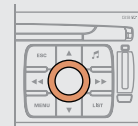

7



Turn the dial and select the filter of your choice.

AROUND THE VEHICLE

ON THE ROUTE



8



Select **OK** and press the dial to confirm.

OK



04 TRAFFIC INFORMATION



 
CONFIGURING THE TMC MESSAGE ANNOUNCEMENTS

We recommend that you do not tick the NEW MESSAGE DISPLAY tab for regions with heavy traffic.

1




Press the MENU button.



2



Turn the dial and select the TRAFFIC INFORMATION function.

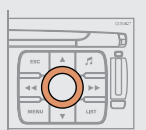

3



Press the dial to confirm the selection.



4



Turn the dial and select the CONFIGURE MESSAGE ANNOUNCEMENT function.

CONFIGURE MESSAGE ANNOUNCEMENT



5



Press the dial to confirm the selection.



6



Select the READ MESSAGES tab.
The Traffic Information Messages will be read by the voice synthesiser.

READ MESSAGES



Select the NEW MESSAGE DISPLAY tab.
The traffic information messages are extended to the filters selected (geographic...) and can also be displayed when guidance is not active.

NEW MESSAGE DISPLAY



7



Select OK and press the dial to confirm.

OK



 
05 AUDIO/VIDEO




The external environment (hills, buildings, tunnels, basement car parks, ...) may block reception, including in RDS mode. This is a normal effect of the way in which radio waves are transmitted and does not indicate any failure of the audio equipment.

RADIO SELECTING A STATION


- 1  Press the SOURCE button several times in succession and select the RADIO.



 
- 2  Press the BAND button to select a waveband: FM1, FM2, FMast, AM.




- 3  Briefly press one of the buttons to carry out an automatic search of the radio stations.

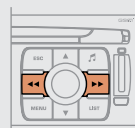

- 4  Press one of the buttons to carry out a manual search of the radio stations.

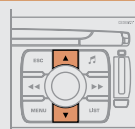


- 5  Press the LIST button to display the list of stations received locally (60 maximum). To update this list, press for more than two seconds.

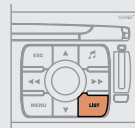


RDS

 - 1  Press the MENU button.



- 2  Select AUDIO FUNCTIONS then press OK.

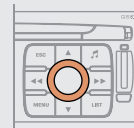

- 3  Select the FM BAND PREFERENCES function then press OK.

FM BAND PREFERENCES



- 4  Select ACTIVATE FREQUENCY FOLLOWING (RDS) then press OK. RDS appears on the display.

ACTIVATE FREQUENCY FOLLOWING (RDS)



The RDS, if displayed, enables you to continue listening to the same station by means of frequency following. However, in certain conditions, this RDS station is not followed throughout the country as radio stations do not cover 100 % of the territory. This explains the loss of reception of the station during a journey.

05 AUDIO/VIDEO



MP3 CD INFORMATION AND ADVICE



The MP3 format, an abbreviation of MPEG 1.2 & 2.5 Audio Layer 3, is an audio compression standard which permits the recording of several tens of music files on a single disc.



In order to be able to play a recorded CDR/DVDR or CDRW/DVDRW, when recording it is preferable to select standards ISO 9660 level 1.2 or Joliet. If the disc is recorded in another format, it may not be played correctly. It is recommended that the same recording standard is always used for an individual disc, with as low a speed as possible (4x maximum) for optimum sound quality. In the particular case of a multi-session CD, the Joliet standard is recommended.



The audio equipment will only play audio files with the extension ".mp3" with a sampling rate of 22.05 KHz or 44.1 KHz. No other type of file (.wma, .mp4, .m3u...) can be played.



 
It is advisable to restrict file names to 20 characters without using special characters (e.g. : " ? ; ù) to avoid any playing or displaying problems.

CD PLAYING A CD OR AN MP3 COMPILATION




Insert circular compact discs only. Some anti-pirating systems, on original discs or CDs copied using a personal recorder, may generate malfunctions regardless of the quality of the original player. Insert an audio CD or an MP3 compilation in the player, play begins automatically.

1




If the player already contains a disc, press the SOURCE button several times in succession and select CD to listen to it.

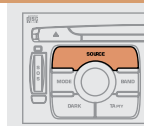

2



Press one of the buttons to select a track on the CD. Press the LIST button to display the list of tracks on the CD or of the directories of the MP3 compilation.

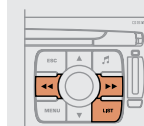


The playing and displaying of an MP3 compilation may depend on the recording programme and/or the parameter settings used. We recommend use of the ISO 9660 recording standard.

JUKEBOX COPYING A CD ONTO THE HARD DISK

1



Insert an audio CD or an MP3 compilation and press the MENU button.

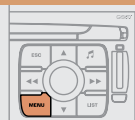

2



Select AUDIO FUNCTIONS then select CD and press the dial to confirm.

CD



3



Select COPY CD TO JUKEBOX and press the dial to confirm.

COPY CD TO JUKEBOX



4



Select COMPLETE CD to copy the entire CD and press the dial to confirm.

COMPLETE CD



5



To stop the copy, repeat points 2 and 3. Select STOP COPY and press the dial to confirm.

STOP COPY



The AUTO CREATION tab automatically copies the CD by default into an album of the type "album n°...".

6



Select the letters one by one and select OK to confirm.

OK



The audio or MP3 CD is copied onto the hard disk. Copying may take up to 20 minutes depending on the duration of the CD. During this copying phase, it is not possible to listen to the albums previously recorded on the hard disk or the CDs.



If it is not an MP3 CD, the Jukebox automatically compresses the CD in MP3 format. The compression may take approximately 20 minutes depending on the duration of the CD. During this compression phase, it is possible to listen to the CD or to albums previously recorded on the hard disk.



A long press on the SOURCE button starts the copying of the CD.




It is not possible to copy files from the Jukebox to a CD. The STOP THE CD COPY action does not delete the files which have already been transferred onto the jukebox hard disk.


JUKEBOX PLAYING AN MP3 USB STICK

- 1**  Insert a USB stick in the space provided.

- 2**  If another source is being played, press the SOURCE button several times in succession and select USB to play it.

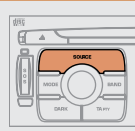

- 3**  Press one of the buttons to select a track on the USB stick. Press the LIST button to display the list of folders on the MP3 USB stick.

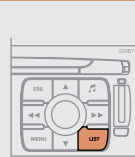


- !** To eject the USB stick, use the short-cut menu (press OK) or press the MENU button, select AUDIO FUNCTIONS, USB, then select EJECT USB.
The playing and displaying of an MP3 compilation may depend on the parameters programme used.

JUKEBOX COPYING AN MP3 USB STICK ONTO THE HARD DISK

- 1**  Insert a USB stick in the space provided and press the MENU button.



- 2**  Select AUDIO FUNCTIONS and press the dial to confirm.

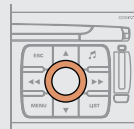

- 3**  Select USB and press the dial to confirm.

USB




- 4**  Select COPY USB TO JUKEBOX and press the dial to confirm.

COPY USB TO JUKEBOX



- 5**  Select COMPLETE DISC to copy the entire USB stick and press the dial to confirm.

COMPLETE DISC

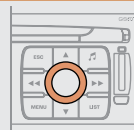


JUKEBOX RENAMING AN ALBUM

1



Press the MENU button.

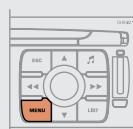

2



Select AUDIO FUNCTIONS and press the dial to confirm.




3



Select the JUKEBOX function and press the dial to confirm.

JUKEBOX

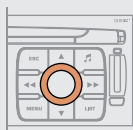

4



Select the JUKEBOX MANAGEMENT function and press the dial to confirm.


JUKEBOX MANAGEMENT



5



Select the album to be renamed and press the dial to confirm.

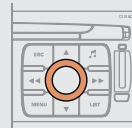

6



Select the RENAME tab and press the dial to confirm.

RENAME



7



Turn the dial and select the letters of the album title one by one confirming each time by pressing the dial.



Use the alphanumeric keypad to enter the letters of the album title one by one.

JUKEBOX LISTENING TO THE JUKEBOX

8



Select OK and press the dial to confirm.

OK



To rename the tracks of an album, follow the same procedure, selecting the tracks to be renamed. Use the ESC button to exit from the list of tracks.

 


Select the DELETE function to delete an album or a track from the Jukebox.

DELETE




1



Press the SOURCE button several times in succession and select the JUKEBOX function.

JUKEBOX

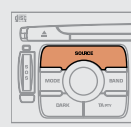

2




Press the LIST button.



3




Turn the dial to select the files.

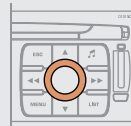

Press the ESC button to return to the first file level.

CD CHANGER PLAYING A CD

 
1



On a single slot changer (MP3 compatible), press LOAD, select the number of the CD, then insert the CD, or press and hold LOAD and insert the CDs one by one.

Press the SOURCE button several times in succession and select CD CHANGER.

CD CHANGER

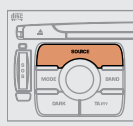

2



Press one of the buttons on the alphanumeric keypad to select the corresponding CD.



3



Press one of the buttons to select a track on the CD.



It is not possible to copy the files onto the hard disc from the CD changer.

USING THE AUXILIARY INPUT (AUX) JACK/RCA AUDIO CABLE NOT SUPPLIED



Press the MENU button then select the CONFIGURATION function, then SOUNDS, then ACTIVATE AUXILIARY SOURCE to activate the audio equipment auxiliary input.


1

Connect the portable equipment (MP3 player...) to the JACK socket or to the audio sockets (white and red, RCA type) located in the glove box using a suitable cable.

2



Press the SOURCE button several times in succession and select AUX.

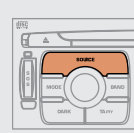

The displaying and management of the commands takes place via the portable equipment.



It is not possible to copy the files onto the hard disk from the auxiliary input.

VIDEO MENU

You can connect video equipment (camcorder, digital camera, DVD player...) to the three audio/video sockets, located in the glove box.

1



After connecting the video equipment, press the MENU button.



2



Turn the dial and select the VIDEO function.



3



Press the dial to confirm the selection.




4



Turn the dial and select the **ACTIVATE VIDEO MODE** function to activate/deactivate the video.

ACTIVATE VIDEO MODE

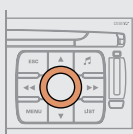

5



Press the dial to confirm the selection.




6



Turn the dial and select the VIDEO PARAMETERS function to set the display format, the brightness, the contrast and the colours.

VIDEO PARAMETERS

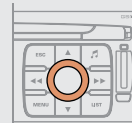

7



Press the dial to confirm the selection.



Pressing the "DARK" button disconnects display of the video.



Pressing the "SOURCE" button several times in succession permits the selection of an audio source other than that of the video.



Videos can only be displayed when stationary.

06 MAKING TELEPHONE CALLS




INSTALLING YOUR SIM CARD (NOT SUPPLIED)


1




Access the slot by pressing the button using the tip of a pen.

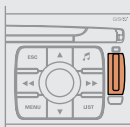

2

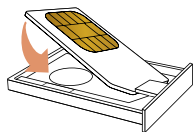

Install the SIM card in the holder and then insert it in the slot.

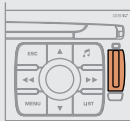

3

To remove the SIM card, repeat step 1.



!

Your SIM card must be installed and removed with the NaviDrive audio and telematics system switched off and the ignition off.

ENTERING THE PIN CODE

1



Enter the PIN code on the keypad.

PIN CODE



2



Confirm the PIN code by pressing button #.



When entering your PIN code, tick the STORE PIN tab to gain access to the telephone without having to enter this code when it is used subsequently.

06 BLUETOOTH TELEPHONE



CONNECTING A BLUETOOTH TELEPHONE

The services offered by the telephone depend on the network, the SIM card and the compatibility of the Bluetooth equipment used. Refer to your telephone's manual and your operator to check which services you have access to. A list of mobile telephones which offer the best range of services is available from dealers.



For reasons of safety, the driver should only carry out operations which require prolonged attention when the vehicle is stationary (pairing the Bluetooth mobile telephone to the hands-free kit).

1


Activate the telephone's Bluetooth function. The last telephone connected is reconnected automatically.



2




Press the MENU button, select **TELEMATICS**, then **BLUETOOTH FUNCTIONS**. Press the dial to confirm each operation.

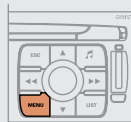

3



Select **BLUETOOTH ACTIVATION MODE**, then **ACTIVATED AND VISIBLE**. Press the dial to confirm each operation.

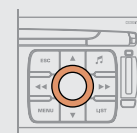

To find and change the name of the CITROËN audio/telephone, repeat step 2 then select **CHANGE AUDIO/TELEPHONE NAME**.

4



On your telephone, select the name of the CITROËN audio/telephone. Enter the authentication code (0000 by default).



06 BLUETOOTH TELEPHONE



CONNECTING A BLUETOOTH TELEPHONE



To change the authentication code, repeat step 2 then select **AUTHENTICATION CODE** and save the code of your choice.



Once the telephone has been connected, the system can synchronise the address book and the call list. Repeat step 2 then select **PHONE BOOK SYNCHRONISATION MODE**. Select the synchronisation of your choice and press the dial to confirm.

The synchronisation may take a few minutes.



To change the telephone connected, repeat step 2 then select **LIST OF MATCHED TELEPHONES** and press OK to confirm. The list of previously connected telephones (10 maximum) appears. Select the telephone of your choice, confirm, then select **CONNECT** and press the dial to confirm.



The call list consists of calls made from the vehicle's audiotelephone only.

06 MAKING TELEPHONE CALLS



CALLING A CONTACT

1



Press the PICK UP button to display the telephone short-cut menu.



Select CALL LIST or PHONE BOOK and press OK. Select the number required and confirm to make the call.

2



Turn the dial and select the DIAL function.

DIAL



3



Press the dial to confirm the selection.



4



Dial the telephone number of your contact using the alphanumeric keypad.



To select the telephone used, press MENU, then select TELEMATICS, then BLUETOOTH FUNCTIONS, then BLUETOOTH ACTIVATION MODE. Then select:

- DEACTIVATED: to use the internal telephone,
- ACTIVATED AND VISIBLE: to use the bluetooth telephone, visible to all telephones,
- ACTIVATED AND NOT VISIBLE: to use the bluetooth telephone, not visible to other telephones, it is not possible to match a new telephone.

5



Press the PICK UP button to call the number dialled.



6



Press the HANG UP button to end the call.



ACCEPTING OR REFUSING A CALL



Press the PICK UP button to accept a call.



Press the HANG UP button to refuse a call.



Press the end of the steering wheel stalk for more than 2 seconds to access the telephone menu: calls log, directory, voice mailbox.

 


07 TRIP COMPUTER

VEHICLE DIAGNOSTICS



- The "vehicle" tab: The range, the current consumption and the distance remaining to the destination.
- Tab "1" (route 1) with: The average speed, the average consumption and the distance travelled calculated over route "1".
- Tab "2" (route 2) with the same functions for a second route.




1 VEHICLE DIAGNOSTICS

2 WARNINGS LOG

2 STATUS OF FUNCTIONS

2 TYRE UNDER-INFLATION DETECTOR ZERO RESET

CONTROL SHORT-CUTS

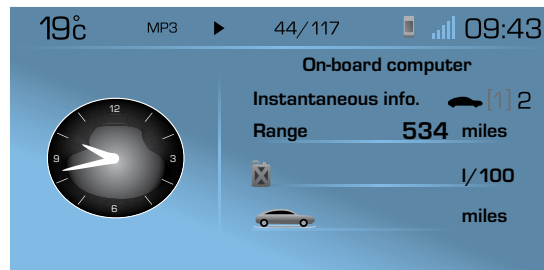


Zero reset

When the required route is displayed, press the control for more than two seconds.

Each press of the button permits displaying of the different trip computer data in succession, depending on the display.

07 TRIP COMPUTER

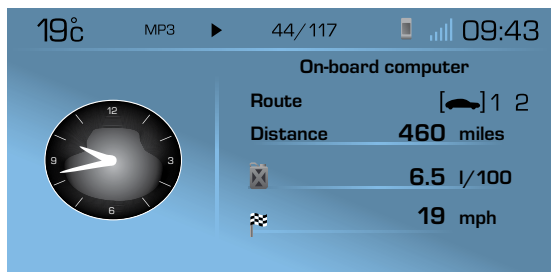

With tab "1" (trip 1):

- the average speed, the average consumption and the distance travelled calculated over trip "1".

Tab "2" (trip 2) with the same functions for a second trip.

A FEW DEFINITIONS

Range: displays the distance which can be travelled with the remaining fuel detected in the tank, based on the average consumption over the last few miles (kilometres).

This displayed value may vary significantly following a change in the vehicle speed or the relief of the route.

When the range falls below 20 miles (30 km), dashes are displayed. After filling with at least 5 litres of fuel, the range is recalculated and is displayed as soon as it exceeds 60 miles (100 km).

If, whilst driving, dashes are displayed continuously in place of digits, contact a CITROËN dealer.

Current fuel consumption: only calculated and displayed above 20 mph (30 km/h).

Average fuel consumption: this is the average fuel consumption since the last trip recorder zero reset.

Distance travelled: calculated since the last trip computer zero reset.

Distance remaining to the destination: calculated with reference to the final destination entered by the user. If guidance is activated, the navigation system calculates it as a current value.

Average speed: this is the average speed calculated since the last trip computer zero reset (ignition on).

08 VOICE COMMANDS

VOICE COMMANDS DISPLAYING THE LIST AND USING THEM



1




To display the list of available voice commands, press the end of the lights stalk to start the voice recognition, then say HELP or WHAT CAN I SAY.



For the same operation, press and hold the MENU button and select the function VOICE COMMANDS LIST.

VOICE COMMANDS LIST

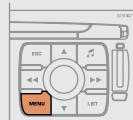

2



Press the end of the lights stalk to start the voice recognition.
Say the words one by one and wait for the audible confirmation signal between each word.
The list which follows is exhaustive.

LEVEL 1	LEVEL 2	LEVEL 3
radio	memory autostore previous/next list	1 to 6/*
cd player Jukebox (if activated) USB	previous/next track track number/track scan random play directory (CD-MP3 inserted) list	1 to 250/* previous/next repeat help/what can I say/cancel
changer	previous/next track track number/track scan repeat random play previous/next disc disc number list	1 to 20/* 1 to 5/6/*
call/guide to	"Pre-recorded description"	
telephone	last number voice box voice mail directory	"Pre-recorded description"
message	display read directory	"Pre-recorded description"
navigation	stop/resume zoom in/out view	* destination vehicle
traffic info	display read	
display	audio telephone trip computer Navigation air conditioning	
previous/next stop delete yes/no	for all level 1 and 2	
* help/what can I say/cancel	for all level 1, 2 or *	

09 CONFIGURATION



ADJUSTING THE DATE AND TIME

The CONFIGURATION function gives access to the colour, brightness and units settings and to voice commands.

1



Press the MENU button.



2



Turn the dial and select the CONFIGURATION function.



3



Press the dial to confirm the selection.



4



Turn the dial and select the DISPLAY CONFIGURATION function.

DISPLAY CONFIGURATION



5



Press the dial to confirm the selection.



6



Turn the dial and select the ADJUST THE DATE AND TIME function.

ADJUST THE DATE AND TIME



7



Press the dial to confirm the selection.



8



Adjust the settings one by one confirming by pressing the dial. Next select the OK tab on the screen then confirm.

OK



10 SCREEN MENU MAP



1 NAVIGATION - GUIDANCE

2 SELECT DESTINATION

3 enter an address

4 country:

4 town:

4 road:

4 N°/_:

4 curr. loc

4 Archive

4 POI

5 near

5 on the route

5 around current place

5 search by name

3 GPS coordinates

3 directory



1 MAIN FUNCTION

2 CHOICE A

3 choice A1

3 choice A2

2 CHOICE B...

3 previous destinations

2 JOURNEY LEGS AND ROUTE

3 add a stage

4 enter an address

4 directory

4 previous destinations

3 order/delete journey legs

3 divert route

3 chosen destination

2 GUIDANCE OPTIONS

3 define calculation criteria

4 fastest

4 shortest

4 distance/time

4 with tolls

4 with ferry

4 traffic info

3 set speech synthesis

3 activate/deactivate road names

3 delete last destinations

2 STOP/RESUME GUIDANCE



1 MAP

2 MAP ORIENTATION

3 vehicle direction

3 north direction

3 3D view

2 MAP DETAILS

3 administration and safety

4 town halls, town centre

4 universities, colleges

4 hospitals

3 hotels, restaurants and shops

4 hotels

4 restaurants

4 vineyards

4 business centres

- 4 supermarkets, shopping
- 3 **culture, tourism and shows**
 - 4 culture and museums
 - 4 casinos and nightlife
 - 4 cinemas and theatres
 - 4 tourism
 - 4 shows and exhibitions
- 3 **sports and open air centres**
 - 4 sports centres
 - 4 golf courses
 - 4 skating rinks, bowling alleys
 - 4 winter sports resorts
 - 4 parks, gardens
 - 4 theme parks
- 3 **transport and automobile**
 - 4 airports, ports
 - 4 stations, bus stations
 - 4 vehicle rental
 - 4 lay-bys, car parks
 - 4 service stations, garages
- 2 **DISPLAY MAP**
 - 3 full screen MAP
 - 3 MAP in window

- 2 **MOVE THE MAP/FOLLOW VEHICLE**
- 2 **MAP DATABASE DESCRIPTION**



- 1 **TRAFFIC INFORMATION**
- 2 **READ MESSAGES**
- 2 **FILTER TRAFFIC INFORMATION**
 - 3 geographic filter
 - 3 store all messages
 - 3 store messages
 - 4 around the vehicle
 - 4 on the route
 - 3 road information
 - 4 traffic information
 - 4 road closure
 - 4 size limit
 - 4 road condition
 - 4 weather and visibility
 - 3 urban/city information
 - 4 parking
 - 4 public transport
 - 4 demonstrations
- 2 **CONFIGURE MESSAGE ANNOUNCEMENT**

- 3 read messages
- 3 new message display
- 2 **SELECT TMC STATION**
 - 3 automatic TMC
 - 3 manual TMC
 - 3 list of TMC stations



- 1 **AUDIO FUNCTIONS**
- 2 **RADIO FAVOURITES**
 - 3 enter a frequency
 - 3 activate/deactivate RDS mode
 - 3 activate/deactivate regional mode
 - 3 display/hide radio text
- 2 **CD, USB, JUKEBOX FAVOURITES**
 - 3 activate/deactivate Introsan (SCN)
 - 3 activate/deactivate Random mode (RDM)
 - 3 activate/deactivate Repeat (RPT)
 - 3 activate/deactivate display of CD info
- 2 **CD**
 - 3 copy CD to Jukebox
 - 4 copy complete CD
 - 4 multiple selection

4 current album

4 current track

3 eject CD

2 USB

3 copy USB to Jukebox

4 complete disc

4 multiple selection

4 current album

4 current track

3 eject USB

2 JUKEBOX

3 jukebox management

3 jukebox configuration

4 hi-fi (320 kbps)

4 high (192 kbps)

4 normal (128 kbps)

3 playlist management

3 delete jukebox data

3 Jukebox status



1 TELEMATICS

2 CALL

3 call list

3 dial

3 directory

3 mailbox

3 services

4 customer contact centre

4 CITROËN assistance

4 CITROËN service

4 messages received

2 DIRECTORY

3 managing directory files

4 consult or modify a file

4 add a file

4 delete a file

4 delete all files

3 configure directory

4 select a directory

4 name directory

4 select starting directory

3 file transfer

4 exchange by infrared

5 send all records

5 send one record

5 receive by infrared

4 exchange with SIM card

5 send all records to SIM

5 send one record to SIM

5 receive all SIM files

5 receive a SIM file

4 exchange with Bluetooth

2 TEXT MESSAGES (SMS)

3 read received text messages

3 send a text message

3 write a text message

3 delete list of text messages

2 TELEPHONE FUNCTIONS

3 network

4 network search mode

5 automatic mode

5 manual mode

4 networks available

3 length of calls

4 reset

3 manage PIN code

4 activate/deactivate

4 save PIN code

4 modify PIN code

3 call options

4 configure calls

5 display my number

5 automatic reply after x ring(s)

4 ring options

5 for voice calls

5 for text messages (SMS)

6 text message ring

3 calls diversion to mailbox n°

3 delete calls log

2 BLUETOOTH FUNCTIONS

3 activation mode

4 deactivated

4 activated and visible

4 activated and not visible

3 list of matched peripheral equipment

3 change the name of the audio/telephone

3 authentication code

3 phone book synchronisation mode

4 no synchronisation

4 view telephone phone book

4 view SIM card phone book

4 view all phone books



1 CONFIGURATION

2 DISPLAY CONFIGURATION

3 choose colour

3 adjust luminosity

3 set date and time

3 select units

2 SOUND

3 voice commands setting

3 speech synthesis setting

4 guidance instructions volume

4 other message volume

4 select female/male voice

3 activate/deactivate auxiliary source

2 SELECT LANGUAGE

2 DEFINE VEHICLE PARAMETERS*



1 VIDEO

2 ACTIVATE VIDEO MODE

2 VIDEO PARAMETERS

3 display formats

3 adjust luminosity

3 set colours

3 set contrasts



1 VEHICLE DIAGNOSTICS

2 ALERT LOG

2 STATUS OF FUNCTIONS*

2 RESET TYRE PRESS. DETEC. SYS.*

* The parameters vary according to vehicle.

Display short cuts version 8.2



Press the MENU button for more than 2 seconds to access the following flow chart.

- 1 VOICE COMMANDS LIST
- 1 AUDIO/TELEPHONE DIAGNOSTICS
- 2 GPS COVERAGE
- 2 UNIT BACKUP POWER
- 2 UNIT DESCRIPTION
- 1 NAVIGATION DEMONSTRATION
- 1 SERVICES CONFIGURATION



Press the Music button several times in succession to access the following settings.

MUSICAL AMBIENCE
BASS
TREBLE
LOUDNESS CORRECTION
FR - RR BALANCE
LH - RH BALANCE
AUTO VOLUME CORRECTION



Each audio source (Radio, CD, MP3, Jukebox, CD changer) has its own separate settings.

FREQUENTLY ASKED QUESTIONS

The table below groups together the answers to the most frequently asked questions concerning your NaviDrive, MyWay and your Audio system.

QUESTION	RESPONSE	SOLUTION
There is a difference in sound quality between the different audio sources (radio, CD, CD changer...).	For optimum sound quality, the audio settings (Volume, Bass, Treble, Ambience, Loudness) can be adapted to the different sound sources, which may result in audible differences when changing source (radio, CD, CD changer...).	Check that the audio settings (Volume, Bass, Treble, Ambience, Loudness) are adapted to the sources listened to. It is advisable to set the AUDIO functions (Bass, Treble, Front-Rear Balance, Left-Right Balance) to the middle position, select the musical ambience "None" and set the loudness correction to the "Active" position in CD mode or to the "Inactive" position in radio mode.
The CD is ejected automatically or is not played by the player.	The CD is inserted upside down, is unplayable, does not contain any audio data or contains an audio format which the player cannot play. The CD is protected by an anti-pirating protection system which is not recognised by the audio equipment.	- Check that the CD is inserted in the player the right way up. - Check the condition of the CD: the CD cannot be played if it is too damaged. - Check the content in the case of a recorded CD: consult the advice in the "Audio" section. - The audio equipment's CD player does not play DVDs. - Due to inadequate quality, certain recorded CDs will not be played by the audio system. - The CD changer does not play MP3 CDs.
The CD player sound is poor.	The CD used is scratched or of poor quality.	Insert good quality CDs and store them in suitable conditions.
	The audio equipment settings (bass, treble, ambiences) are unsuitable.	Set the treble or bass level to 0, without selecting an ambience.


QUESTION	RESPONSE	SOLUTION
The stored stations do not function (no sound, 87.5 Mhz is displayed...)	An incorrect waveband is selected.	Press the BAND AST button to return to the waveband (AM, FM1, FM2, FMAST) on which the stations are stored.
The traffic announcement (TA) is displayed. I do not receive any traffic information.	The radio station is not part of the regional traffic information network.	Tune to a radio station which broadcasts traffic information.
The quality of reception of the radio station listened to gradually deteriorates or the stored stations do not function (no sound, 87.5 Mhz is displayed...).	The vehicle is too far from the transmitter used by the station listened to or there is no transmitter in the geographical area through which the vehicle is travelling.	Activate the RDS function to enable the system to check whether there is a more powerful transmitter in the geographical area.
	The environment (hills, buildings, tunnels, basement car parks...) block reception, including in RDS mode.	This phenomenon is normal and does not indicate a failure of the audio equipment.
	The aerial is absent or has been damaged (for example when going through a car wash or into an underground car park).	Have the aerial checked by a CITROËN dealer.
Sound cut-outs of 1 to 2 seconds in radio mode.	During this brief sound cut-out, the RDS searches for any frequency permitting better reception of the station.	Deactivate the RDS function if the phenomenon is too frequent and always on the same route.
With the engine off, the audio equipment switches off after a few minutes of use.	When the engine is switched off, the audio equipment operating time depends on the battery charge. The switch-off is normal: the audio equipment switches to economy mode and switches off to prevent discharging of the vehicle's battery.	Start the vehicle's engine to increase the battery charge.
The message "the audio system is overheated" appears on the display.	In order to protect the installation if the surrounding temperature is too high, the audio equipment switches to an automatic thermal protection mode leading to a reduction of the volume or stopping of the playing of the CD.	Switch the audio system off for a few minutes to allow the system to cool.

QUESTION	RESPONSE	SOLUTION
The TRAFFIC INFO box is ticked. However, certain traffic jams along the route are not indicated in real time.	On starting, it is several minutes before the system begins to receive the traffic information.	Wait until the traffic information is being received correctly (displaying of the traffic information symbols on the map).
	In certain countries, only major routes (motorways, ...) are listed for the traffic information.	This phenomenon is normal. The system is dependent on the traffic information available.
The time taken to calculate a route sometimes seems longer than usual.	The performance of the system may slow down temporarily if a CD is being copied onto the Jukebox at the same time as a route is being calculated.	Wait until the CD has been copied or stop the copying before starting the guidance function.
Does the emergency call function on the NaviDrive work without a SIM card?	No, as certain national regulations impose the presence of a SIM card in order to make an emergency call.	Insert a valid SIM card in the slot on the NaviDrive.
My SIM card is not recognised.	The NaviDrive accepts 3.3 V SIM cards, the old 5 V and 1.8 V SIM cards are not recognised.	Contact your telephone operator.
After changing a wheel, the system loses its location.	The NaviDrive uses the wheel rotation information to improve the GPS locating function. If a wheel is changed or deflates suddenly, the system recalculates the location. For approximately ten minutes, this recalculation may affect the quality of the locating function.	Wait until the system has completed its recalculation. The location on the map is incorrect or inaccurate.
The altitude is not displayed.	On starting, the initialisation of the GPS may take up to 3 minutes to receive more than 4 satellites correctly.	Wait until the system has started up completely. Check that there is a GPS coverage of at least 4 satellites (long press on the MENU button, then select AUDIO/TELEPHONE DIAGNOSTICS, then GPS COVERAGE).
	Depending on the geographical environment (tunnel, ...) or the weather, the conditions of reception of the GPS signal may vary.	This phenomenon is normal. The system is dependent on the conditions of reception of the GPS signal.

QUESTION	RESPONSE	SOLUTION
The route calculation is not successful.	The exclusion criteria may conflict with the current location (exclusion of toll roads on a toll motorway).	Check the exclusion criteria.

QUESTION	RESPONSE	SOLUTION
There is a long waiting time after inserting a CD or SD card.	When a new medium is inserted, the system reads a certain amount of data (directory, title, artist, etc.). This may take a few seconds.	This phenomenon is normal.

I cannot connect my Bluetooth telephone.	The telephone's Bluetooth function may be deactivated or the equipment may not be visible.	- Check that your telephone's Bluetooth function is activated. - Check that your telephone is visible.
--	--	---

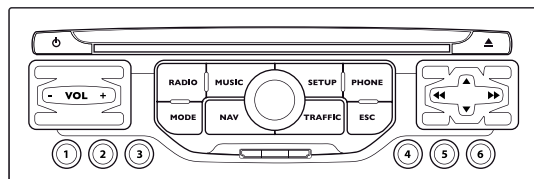

MyWay

MULTIMEDIA AUDIO EQUIPMENT/BLUETOOTH TELEPHONE
GPS EUROPE BY SD CARD



The MyWay is protected in such a way that it will only operate in your vehicle. If it is to be installed in another vehicle, contact a CITROËN dealer for configuration of the system.




For safety reasons, it is imperative that the driver carries out operations which require prolonged attention while the vehicle is stationary.
When the engine is switched off and to prevent discharging of the battery, the MyWay switches off following the activation of the Energy Economy mode.

CONTENTS

- **01 First steps** pg. 9.42
- **02 General operation** pg. 9.44
- **03 Navigation - Guidance** pg. 9.46
- **04 Traffic information** pg. 9.53
- **05 Radio** pg. 9.54
- **06 Music media players** pg. 9.55
- **07 Bluetooth telephone** pg. 9.58
- **08 Configuration** pg. 9.60
- **09 Trip computer** pg. 9.61
- **10 Display flow charts** pg. 9.63
- **Frequently asked questions** pg. 9.82

01 FIRST STEPS

MyWay CONTROL PANEL

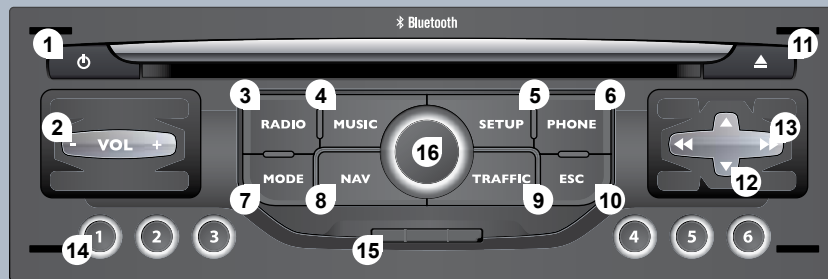

1. Engine not running
- Short press: on/off.
- Long press: CD pause, mute for the radio.
Engine running
- Short press: CD pause, mute for the radio.
- Long press: reinitialisation of the system.
2. Volume adjustment.
3. Access to the "Radio" Menu. Display the list of stations.
4. Access to the "Music" Menu. Display the tracks.
- 3-4. Long press: access to the audio settings: front/rear and left/right balance, bass/treble, equalizer, loudness, automatic volume adjustment, initialise the settings.
5. Access to the "SETUP" Menu.
Long press: access to the GPS coverage and the demonstration mode.
6. Access to the "Phone" Menu. Display the call list.
7. Access to the "MODE" Menu.
Selection of the successive display of:
Radio, Map, NAV (if navigation is in progress), Telephone (if a conversation is in progress).
Long press: display of a black screen (DARK).
8. Access to the "Navigation" Menu. Display the last destinations.
9. Access to the "Traffic" Menu. Display the current traffic alerts.
10. ESC: abandon the operation in progress.
11. CD eject.
12. Selection of the previous/next radio station from the list.
Selection of the previous/next MP3 directory.
Selection of the previous/next page of a list.
13. Selection of the previous/next radio station.
Selection of the previous/next CD or MP3 track.
Selection of the previous/next line of a list.
14. Buttons 1 to 6:
Selection of the stored radio station.
Selection of the previous/next CD or MP3 track.
Long press: store the current radio station.
15. SD card reader.
16. Dial for selection of the screen display and according to the context of the menu.
Short press: confirmation.

01 FIRST STEPS

STEERING WHEEL CONTROLS

RADIO: selection of the next stored station.
MP3/WMA SD CARD: selection of the next directory.
CD CHANGER: selection of the next CD.
Selection of the next entry in the address book.

RADIO: change to the next radio station on the list.
Long press: automatic search for a higher frequency.
CD/MP3 SD CARD/CD CHANGER: selection of the next track.
CD/MP3 SD CARD/CD CHANGER: continuous press: fast forward play.

Volume increase.

- Change the sound source.
- Make a call from the address book.
- Pick up/Hang up the telephone.
- Press for more than 2 seconds: access to the address book.


Mute: by pressing the volume increase and decrease buttons simultaneously.

Restore the sound: by pressing one of the two volume buttons.

Volume decrease.

RADIO: selection of the previous stored station.
MP3/WMA SD CARD: selection of the previous directory.
CD CHANGER: selection of the previous CD.
Selection of the previous entry in the address book.

RADIO: change to the previous radio station on the List.
Long press: automatic search for a lower frequency.
CD/MP3 SD CARD/CD CHANGER: selection of the previous track.
CD/MP3 SD CARD/CD CHANGER: continuous press: fast backward play.

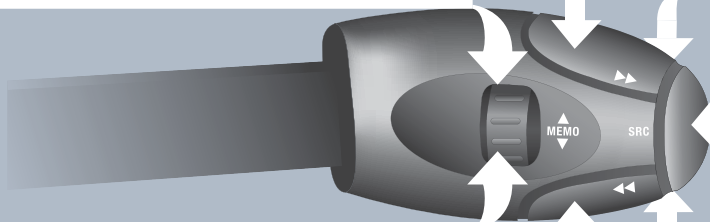

02 GENERAL OPERATION

Press the **MODE** button several times in succession to gain access to the following menus:

RADIO/MUSIC MEDIA PLAYERS




PHONE

(If a conversation is in progress)



TRIP COMPUTER

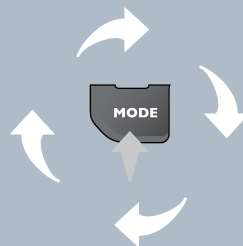

FULL SCREEN MAP



NAVIGATION

(If navigation is in progress)



SETUP:

system language, date and time, display, vehicle parameters, units and system parameters, DEMONSTRATION MODE



TRAFFIC:

TMC information and messages



For maintenance of the display, the use of a soft, non-abrasive cloth (spectacles cloth) is recommended, without any additional product.



For a detailed global view of the menus available, refer to section 10.

GENERAL OPERATION 02

DISPLAY ACCORDING TO THE CONTEXT



A press on the OK dial to permits access to short-cut menus according to the display on the screen.

NAV:

- 1 ABORT GUIDANCE
- 1 REPEAT ADVICE
- 1 BLOCK ROAD
- 1 ROUTE INFO
- 2 SHOW DEST.
- 2 TRIP INFO
 - 3 route type
 - 3 avoidance criteria
 - 3 satellites
- 2 ZOOM/SCROLL
- 1 VOICE ADVICE
- 1 ROUTE OPTIONS

TRIP COMPUTER:

- 1 ALERT LOG
- 1 STATUS OF FUNCTIONS

PHONE:

- 1 END CALL
- 1 HOLD CALL
- 1 DIAL
- 1 DTMF TONES
- 1 PRIVATE MODE
- 1 MICRO OFF

MUSIC MEDIA PLAYERS:

- 1 TA
- 1 PLAY OPTIONS
 - 2 NORMAL
 - 2 RANDOM TRACK
 - 2 REPEAT FOLDER
 - 2 TRACK INTRO
- 1 SELECT MUSIC

RADIO:

- 1 IN FM MODE
 - 2 TA
 - 2 RDS
 - 2 RADIOTEXT
 - 2 REGIONAL PROG. (REG)
 - 2 AM
- 1 IN AM MODE
 - 2 TA
 - 2 REFRESH AM LIST
 - 2 FM

MAP:

 
- 1 ABORT/RESUME GUIDANCE
- 1 SET DESTINATION
- 1 POIS NEARBY
- 1 POSITION INFO
- 1 MAP SETTINGS
- 1 ZOOM/SCROLL

03 NAVIGATION - GUIDANCE


SELECTING A DESTINATION

Insert the SD card in the front panel reader and leave it there to use the Navigation functions.
The navigation SD card data must not be changed.
The map data updates are available from CITROËN dealers.

1



Press the NAV button.

 

4



Select the **NEW DESTINATION INPUT** function and press the dial to confirm.

NEW DESTINATION INPUT



5



Once the country has been selected, turn the dial and select the town function. Press the dial to confirm.



6



Select the letters of the town one by one confirming each time by pressing the dial.

 


2



Press the NAV button again or select the **NAVIGATION MENU** function and press the dial to confirm.

NAVIGATION MENU



3



Select the **DESTINATION INPUT** function and press the dial to confirm.

DESTINATION INPUT



A pre-set list (by entering the first few letters) of the towns in the country selected can be accessed via the **LIST** button on the virtual keypad.

During guidance, pressing the end of the lights stalk repeats the last guidance instruction.

7



Turn the dial and select OK.
Press the dial to confirm.

 


To speed up the process, the post code can be entered directly after selecting the POST CODE function.
Use the virtual keypad to enter the letters and digits.

8



Repeat steps 5 to 7 for the STREET
and N° functions.



Select the SAVE TO ADDRESS BOOK function to record the address entered in a directory file. Press the dial to confirm the selection.
MyWay permits the recording of up to 4 000 contact files.

9



Then select START ROUTE
GUIDANCE and press the dial to confirm.

START ROUTE GUIDANCE



10



Select the route type:
FAST ROUTE, SHORT ROUTE or
OPTIMISED ROUTE and press the
dial to confirm.



It is also possible to select a destination FROM ADDRESS BOOK or FROM LAST DESTINATIONS.

FROM ADDRESS BOOK

FROM LAST DESTINATIONS



 
You can zoom in/zoom out on the map using the dial.
It is possible to scroll the map or select its orientation via the short-cut menu of the FULL SCREEN MAP. Press the dial then select MAP SETTINGS or ZOOM/SCROLL and confirm.

03 NAVIGATION - GUIDANCE


ROUTE OPTIONS

The route selected by the MyWay audio/telephone depends directly on the route options. Changing these options may change the route completely.

1



Press the NAV button.

 


2



Press the NAV button again or select the "Navigation" Menu function and press the dial to confirm.

 "NAVIGATION" MENU




3



Select the "Route options" function and press the dial to confirm.

 ROUTE OPTIONS




4



Select the "Route type" function and press the dial to confirm. This function allows you to change the route type.

 ROUTE TYPE



5



Select the "Route dynamics" function. This function gives access to the "Traffic independent" or "Semi-dynamic" options.

ROUTE DYNAMICS



6



Select the "Avoidance criteria" function. This function provides access to the AVOID options (motorways, toll roads, ferries).

AVOIDANCE CRITERIA



7



Turn the dial and select the "Recalculate" function to take into account the route options selected. Press the dial to confirm.

 
RECALCULATE




ADDING A STOPOVER

Stopovers can be added to the route once the destination has been selected.

1



Press the NAV button.

 


2



Press the NAV button again or select the "Navigation" Menu function and press the dial to confirm.

 "NAVIGATION" MENU



3



Select the "Stopovers" function and press the dial to confirm.

STOPOVERS



4



Select the "Add stopover" function (5 stopovers maximum) and press the dial to confirm.

ADD STOPOVER



5



Enter a new address, for example.

ADDRESS INPUT



6



Once the new address has been entered, select OK and press the dial to confirm.

OK



7



Select "Recalculate" and press the dial to confirm.

RECALCULATE



 
The stopover must be completed or deleted in order for the guidance to continue to the next destination. Otherwise, the MyWay will always return you to the previous stopover.

03 NAVIGATION - GUIDANCE


SEARCHING FOR POINTS OF INTEREST

The points of interest (POIs) indicate all of the service locations in the vicinity (hotels, various businesses, airports...).

1



Press the NAV button.

 


2



Press the NAV button again or select the "Navigation" Menu function and press the dial to confirm.

 "NAVIGATION" MENU




3



Select the "POI search" function and press the dial to confirm.

 POI SEARCH



4



Select the "POI nearby" function to search for POIs around the vehicle.

POI NEARBY



5



Select the "POI near destination" function to search for POIs near the point of arrival of the route.

POI NEAR DESTINATION



6



Select the "POI in city" function to search for POIs in the city required. Select the country then enter the name of the city using the virtual keypad.

POI IN CITY



 
A list of cities present in the country selected can be accessed via the LIST button on the virtual keypad.

7



Select the "POI in country" function to search for POIs in the country required.

POI IN COUNTRY



8



Select the "POI near route" function to search for POIs near the route.

POI NEAR ROUTE



03 NAVIGATION - GUIDANCE

This icon appears when several POIs are grouped together in the same area. Zooming in on this icon shows details of the POIs.



List of POIs

	Service station
	LPG station
	Garage
	CITROËN
	Motor racing circuit
	Covered car park
	Car park
	Rest area
	Hotel
	Restaurant
	Refreshment area
	Picnic area
	Cafeteria

	Airport
	Railway station
	Bus station
	Port
	Industrial estate
	Supermarket
	Bank
	Vending machine
	Tennis court
	Swimming pool
	Golf course
	Winter sports resort
	Theatre

	Cinema
	Camp site
	Theme parks
	Hospital
	Pharmacy
	Police station
	School
	Post office
	Museum
	Tourist information
	Automatic speed camera*
	Red light camera*
	Risk area*

 
* According to availability in the country.

03 NAVIGATION - GUIDANCE


NAVIGATION SETTINGS

Contact a CITROËN dealer for details of the procedure for obtaining the RISK AREA POIs.
Updating of the RISK AREA POIs requires an SDHC (High Capacity) compatible reader.

1



Press the NAV button.

 

2



Press the NAV button again or select the "Navigation" Menu function and press the dial to confirm.

"NAVIGATION" MENU



3



Select the "Settings" function and press the dial to confirm.

SETTINGS



4



Select the "Navi volume" function and turn the dial to set the volume of each voice synthesiser (traffic information, alert messages...).

NAVI VOLUME

 


5



Select the "POI categories on Map" function to select the POIs to be displayed on the map by default.

POI CATEGORIES ON MAP



6



Select "Set parameters for risk areas" to gain access to the "Display on map", "Visual alert" and "Sound alert" functions.

SET PARAMETERS FOR RISK AREAS



 
04 TRAFFIC INFORMATION

CONFIGURE THE FILTERING AND DISPLAY OF TMC MESSAGES

1



Press the TRAFFIC button.




The list of TMC messages appears under the "Traffic" Menu sorted in order of proximity.

2



Press the TRAFFIC button again or select the "Traffic" Menu function and press the dial to confirm.

 "TRAFFIC" MENU



The TMC icon, at the bottom left of the screen, may appear in 3 different forms:

- No TMC station available,
- TMC station available, no message on route,
- TMC station available and messages on route (if guidance is active).

The filters are independent and their results are cumulative.

We recommend a filter on the route and a filter around the vehicle of:

- 2 miles (3 km) or 3 miles (5 km) for a region with heavy traffic,
- 6 miles (10 km) for a region with normal traffic,
- 30 miles (50 km) for long journeys (motorway).

3

Select the filter of your choice:

MESSAGES ON ROUTE

ALL WARNING MESSAGES

ONLY WARNING ON ROUTE

ALL MESSAGES



The messages appear on the map and on the list.
To exit, press ESC.

 


4



Select the "Geo. Filter" function and press the dial to confirm.

GEO. FILTER



5



Then select the radius of the filter (in miles (km)) required in accordance with the route, press the dial to confirm.

When all of the messages on the route are selected, the addition of a geographical filter is recommended (within a radius of 3 miles (5 km) for example) to reduce the number of messages displayed on the map. The geographical filter follows the movement of the vehicle.



05 RADIO

 
The external environment (hill, building, tunnel, underground car park...) may interfere with the reception, including in RDS following mode. This phenomenon is a normal result of the way in which radio waves are transmitted and does not in any way indicate a failure of the audio equipment.

SELECTING A STATION


1




Press the RADIO button to display the list of stations received locally sorted in alphabetical order. Select the station required by turning the dial and press to confirm.



 While listening to the radio, press one of the buttons to select the previous or next station on the list.



 A long press of one of the buttons starts the automatic search for a station with a lower or higher frequency.



Press one of the buttons on the numeric keypad for more than 2 seconds to store the current station. Press the button on the numeric keypad to recall the stored radio station.

RDS - REGIONAL MODE - TRAFFIC INFO

1



When the current radio station is displayed on the screen, press the dial.



2

The radio source short-cuts menu appears and provides access to the following short-cuts:

TRAFFIC INFO (TA)

RDS

RADIOTEXT

REGIONAL PROG.

AM

3



Select the function required and press the dial to confirm to gain access to the corresponding settings.



The RDS, if displayed, allows you to continue listening to the same station by automatic retuning to alternative frequencies. However, in certain conditions, coverage of an RDS station may not be assured throughout the entire country as radio stations do not cover 100 % of the territory. This explains the loss of reception of the station during a journey.

06 MUSIC MEDIA PLAYERS

CD, MP3/WMA CD INFORMATION AND ADVICE



The MP3 format, an abbreviation of MPEG 1, 2 & 2.5 Audio Layer 3 and the WMA format, an abbreviation of Windows Media Audio and the property of Microsoft, are audio compression standards which permit the recording of several tens of music files on a single disc.



In order to be able to play a recorded CDR or CDRW, when recording it is preferable to select the ISO 9660 level 1, 2 or Joliet standard.

If the disc is recorded in another format it may not be played correctly.

It is recommended that the same recording standard is always used for an individual disc, with as low a speed as possible (4x maximum) for optimum sound quality.

In the particular case of a multi-session CD, the Joliet standard is recommended.



The MyWay will only play audio files with the extension ".mp3" with a speed of between 8 Kbps and 320 Kbps and the extension ".wma" with a speed of between 5 Kbps and 384 Kbps.



It also supports the VBR (Variable Bit Rate) mode.
No other type of file (.mp4, .m3u...) can be played.



It is advisable to restrict file names to 20 characters, without using of special characters (e.g. : " " ? ; ù) to avoid any playing and displaying problems.

 
SELECTING/PLAYING MUSIC

CD, MP3/WMA CD

1



Press the MUSIC button.




The list of tracks or MP3/WMA files appears under "Music" Menu.

2



Press the MUSIC button again or select the "Music" Menu function and press the dial to confirm.

 "MUSIC" MENU




3



Select the "Select music" function and press the dial to confirm.

 SELECT MUSIC



4



 
Select the music source required: CD, MP3/WMA CD. Press the dial to confirm. Play begins.



5




Press the up or down button to select the next/previous folder.



6



 Press one of the buttons to select a music track.
Press and hold one of the buttons for fast forward or rewind play.



The playing and displaying of an MP3/WMA compilation may depend on the recording programme and/or the settings used. We recommend the ISO 9660 file standard.

06 MUSIC MEDIA PLAYERS

USING THE EXTERNAL DEVICE (AUX) AUDIO/RCA CABLE NOT SUPPLIED

 
1

Connect the portable equipment (MP3/WMA player...) to the audio sockets (white and red, RCA type) in the glove box using a JACK/RCA audio cable.

2



Press the MUSIC button then press it again or select the "Music" Menu function and press the dial to confirm.



3



Select the "External device" function and press the dial to activate it.

EXTERNAL DEVICE



4



Select the AUX music source and press the dial to confirm. Play begins automatically.



 
The display and management of the controls is via the portable equipment.

CD CHANGER PLAYING A CD (NOT MP3/WMA COMPATIBLE)

1



Insert one or more CDs in the changer. Press the MUSIC button.



2



Press the MUSIC button again or select the MUSIC MENU function and press the dial to confirm.

MUSIC MENU



3



Select the SELECT MUSIC function and press the dial to confirm.

SELECT MUSIC



4



Select the CD CHANGER music source and press the dial to confirm.

CD CHANGER



5



Press one of the buttons on the numeric keypad to select the corresponding CD.



07 BLUETOOTH TELEPHONE



CONNECTING A TELEPHONE

The services available depend on the network, the SIM card and the compatibility of the Bluetooth equipment used. Refer to your telephone's manual and your operator to check which services you have access to. A list of mobile telephones which offer the best range of services is available from dealers.



For safety reasons and because they require prolonged attention on the part of the driver, the operations for pairing the Bluetooth mobile telephone to the hands-free system of the MyWay must be carried out with the vehicle stationary and the ignition on.

1

 
Activate the telephone's Bluetooth function. The last telephone connected is reconnected automatically.



2



Press the PHONE button.



3



Select the TELEPHONE MENU function and press the dial to confirm.

TELEPHONE MENU



The list of telephones connected previously (4 maximum) appears on the multifunction display. Select the telephone required for a new connection.

4



For a first connection, select **SEARCH PHONE** and press the dial to confirm. Then select the name of the telephone.

SEARCH PHONE



5



Enter the authentication code on the telephone. The code to be entered is displayed on the screen.



Once the telephone has been connected, MyWay can synchronise the address book and the call list. This synchronisation may take a few minutes.

1



To change the telephone connected, press the PHONE button, then select **TELEPHONE MENU** and press the dial to confirm.



2



Select **CONNECT PHONE**. Select the telephone and press to confirm.

CONNECT PHONE



RECEIVING A CALL

1

An incoming call is announced by a ring and a superimposed display on the multifunction screen.

2



Select the "Yes" tab to accept or "No" to refuse and confirm by pressing the dial.

YES NO

 


3




To hang up, press the PHONE button or press the dial and select "End call" then confirm by pressing the dial.

END CALL



 Press the end of the steering mounted control to accept the call or end the call in progress.




MAKING A CALL

1



 Press the PHONE button.




The list of the last 20 calls made and received in the vehicle appears under "Phone" Menu. You can select a number and press the dial to make the call.

2



Select the "Phone" Menu function and press the dial to confirm.

 "PHONE" MENU




3



Select "Dial number", then dial the telephone number using the virtual keypad.

 DIAL NUMBER



It is also possible to select a number from the address book. You can select "Dial from address book". The MyWay permits the recording of up to 4 000 entries.



 
Press the end of the steering wheel control for more than two seconds to gain access to the address book.

08 CONFIGURATION


SETTING THE DATE AND TIME

This function gives access to the options: System language, Date & Time, Display (Brightness, Colour, Map colour), Vehicle, Units, System.

1



Press the SET UP button.

 


2



Select the "Date & Time" function and press the dial to confirm.

 DATE & TIME



3



Select the "Set date & time" function and press the dial to confirm.

 
SET DATE & TIME



4



Set the parameters one by one using the direction arrows and confirm by means of the dial.



5



Select the "Date format" function and press the dial to confirm.

Confirm the format required using the dial.



6



Select the "Time format" function and press the dial to confirm.

Confirm the format required using the dial.



Pressing the SET UP button for more than 2 seconds gives access to:

DESCRIPTION OF THE UNIT

GPS COVERAGE

 
DEMO MODE

09 TRIP COMPUTER

VEHICLE DIAGNOSTICS



- The "vehicle" tab:
The range, the current consumption and the distance remaining.
- The "1" (route 1) tab with:
The average speed, the average consumption and the distance travelled calculated over route "1".
- The "2" (route 2) tab with the same functions for a second route.



Each press of the button at the end of the wipers stalk displays the various trip computer data in succession, according to the display.

A FEW DEFINITIONS



Range: displays the distance which can travelled with the remaining fuel detected in the tank, based on the average fuel consumption over the last few miles (kilometres).

This displayed value may vary significantly following a change in the vehicle speed or the relief of the route.

When the range falls below 20 miles (30 km), dashes are displayed. After filling with at least 5 litres of fuel, the range is recalculated and is displayed when it exceeds 60 miles (100 km).

If, whilst driving, dashes are displayed continuously in place of the digits, contact a CITROËN dealer.

Current fuel consumption: only calculated and displayed above 20 mph (30 km/h).

Average fuel consumption: this is the average fuel consumption since the last trip computer zero reset.

Distance travelled: calculated since the last trip computer zero reset.

Distance remaining to the destination: calculated with reference to the final destination, entered by the user. If guidance is activated, the navigation system calculates it as a current value.

Average speed: this is the average speed calculated since the last trip computer zero reset (ignition on).

10 SCREEN MENU MAP



1 MAIN FUNCTION

- 2 CHOICE A
- 3 choice A1
- 3 choice A2
- 2 CHOICE B...



1 "TRAFFIC" MENU

- 2 MESSAGES ON ROUTE
- 2 ONLY WARNINGS ON ROUTE
- 2 ALL WARNING MESSAGES
- 2 ALL MESSAGES
- 2 GEO. FILTER
 - 3 Within 2 miles (3 km)
 - 3 Within 3 miles (5 km)
 - 3 Within 6 miles (10 km)
 - 3 Within 30 miles (50 km)
 - 3 Within 60 miles (100 km)



1 "MUSIC" MENU

- 2 SELECT MUSIC
- 2 SOUND SETTINGS
 - 3 Balance/Fader
 - 3 Bass/Treble
 - 3 Equalizer
 - 4 Linear
 - 4 Classic
 - 4 Jazz
 - 4 Rock/Pop
 - 4 Techno
 - 4 Vocal
 - 3 Loudness
 - 3 Speed dependent volume
 - 3 Reset sound settings



1 "RADIO" MENU

- 2 WAVEBAND
 - 3 FM
 - 3 AM
- 2 MANUAL TUNE
- 2 SOUND SETTINGS
 - 3 Balance/Fader
 - 3 Bass/Treble
 - 3 Equalizer
 - 4 Linear
 - 4 Classic
 - 4 Jazz
 - 4 Rock/Pop
 - 4 Techno
 - 4 Vocal
 - 3 Loudness
 - 3 Speed dependent volume
 - 3 Reset sound settings



1 "NAVIGATION" MENU

2 ABORT GUIDANCE/RESUME GUIDANCE

2 DESTINATION INPUT

3 Address input

4 Country

4 City

4 Street

4 House number

4 Start route guidance

4 Postal code

4 Save to address book

4 Intersection

4 City district

4 Geo position

4 Map

3 Navigate HOME

3 Choose from address book

3 Choose from last destinations

2 TMC STATION INFORMATION

2 STOPOVERS

3 Add stopover

4 Address input

4 Navigate HOME

4 Choose from address book

4 Choose from last destinations

3 Rearrange route

3 Replace stopover

3 Delete stopover

3 Recalculate

4 Fast route

4 Short route

4 Optimized route

2 POI SEARCH

3 POI nearby

3 POI near destination

3 POI in city

3 POI in country

3 POI near route

2 ROUTE OPTIONS

3 Route type

4 Fast route

4 Short route

4 Optimized route

3 Route dynamics

4 Traffic independent

4 Semi-dynamic

3 Avoidance criteria

4 Avoid motorways

4 Avoid toll roads

4 Avoid ferries

3 Recalculate

2 SETTINGS

3 Navi volume

3 POI categories on Map

PHONE

1 "PHONE" MENU

2 DIAL NUMBER

2 DIAL FROM ADDRESS BOOK

2 CALL LISTS

2 CONNECT PHONE

3 Search phone

3 Phones connected

4 Disconnect phone

4 Rename phone

4 Delete pairing

4 Delete all pairings

4 Show details

2 SETTINGS

3 Select ring tone

3 Phone/Ring tone volume

3 Enter mailbox number

SETUP

1 "SETUP" MENU

2 SYSTEM LANGUAGE

3 Deutsch

3 English

3 Español

3 Français

3 Italiano

3 Nederlands

3 Polski

3 Portuguese

2 DATE & TIME

3 Set date & time

3 Date format

3 Time format

2 DISPLAY

3 Brightness

3 Colour

4 Pop titanium

4 Toffee

4 Blue steel

4 Technogrey

4 Dark blue

3 Map colour

4 Day mode for map

4 Night mode for map

4 Auto. Day/Night for map

2 VEHICLE

3 Vehicle information

4 Alert log

4 Status of functions

2 UNITS

3 Temperature

4 Celsius

4 Fahrenheit

3 Metric/Imperial

4 Kilometres (Consumption: l/100)

4 Kilometres (Consumption: km/l)


4 Miles (Consumption: MPG)

2 SYSTEM

3 Factory reset

3 Software version

3 Automatic scrolling

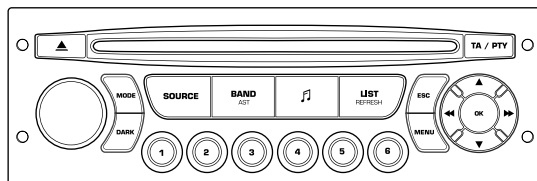

Audio system

AUDIO EQUIPMENT/HANDS-FREE KIT



Your Audio system is coded in such a way that it will only operate in your vehicle. If it is to be installed in another vehicle, contact your CITROËN dealer for configuration of the system.



For safety reasons, the driver must carry out operations which require prolonged attention while the vehicle is stationary. When the engine is switched off and to prevent discharging of the battery, the audio equipment may switch off after a few minutes.

CONTENTS

- **01 First steps** pg. 9.68
- **02 Display and menu C** pg. 9.70
- **03 Audio** pg. 9.71
- **04 USB** pg. 9.74
- **05 Trip computer** pg. 9.76
- **06 Configuration** pg. 9.77
- **07 Display C flow chart** pg. 9.78
- **08 General menu A** pg. 9.79
- **09 Display A flow chart** pg. 9.81
- **Frequently asked questions** pg. 9.82

01 FIRST STEPS

CD eject.



On - Off.
Volume dial.

Mode: Selection of the screen display mode.

Dark: Hide the screen display, until completely black, by successive presses. Pressing again reactivates the display.

Source: Selection of the source; radio, CD and CD changer.

Band: Selection of the FM1, FM2, FMast and AM wavebands.

Setting the audio options:
Front/rear balance, left/right balance, loudness, sound ambiances.

List: Displaying of the local stations, of the tracks on the CD or of the MP3 directories.



- Storing of a station.
- Selection of a stored radio station.
- Selection of a CD in the CD changer.



Updating of the stations received.



A long press is required.



Navigator which selects the choices above or the step by step or rapid advances.


Pressing the navigation dial confirms the choice, but does not store it.



For a detailed global view of the menus available, refer to the "Display flow chart" section of this chapter.

01 FIRST STEPS

STEERING WHEEL CONTROLS

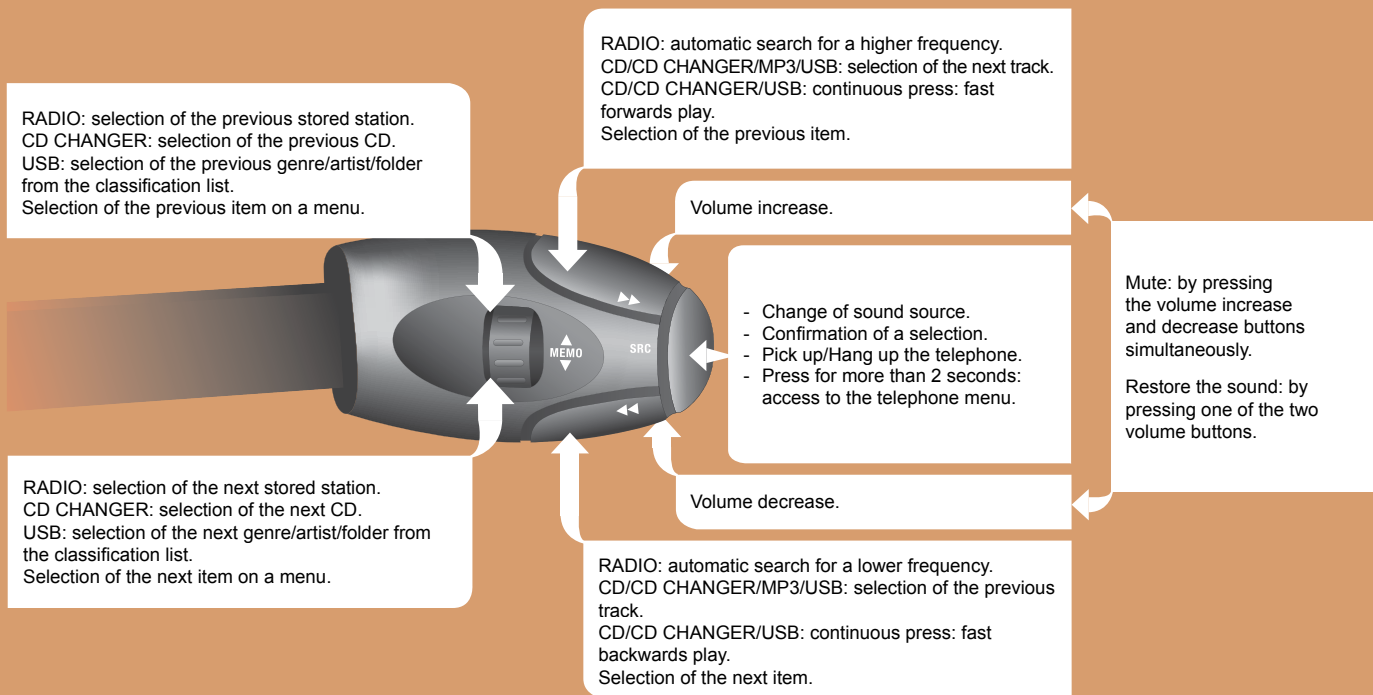

02 DISPLAY AND MENU C

> DISPLAY C



This displays the following information, via the audio equipment control pad:

- the time,
- the date,
- the exterior temperature (this flashes if there is a risk of ice),
- the audio source displays (radio, CD, ...),
- the accesses check (doors, boot, ...),
- the warning messages (e.g.: "Antipollution fault") or information messages (e.g.: "Auto lighting activated") displayed temporarily, can be cleared by pressing the "ESC" button,
- the trip computer,
- the location of a faulty wheel,
- the detection of a rear obstacle.

> GENERAL MENU

AUDIO FUNCTION:
radio, CD, options.

PERSONALISATION -
CONFIGURATION:
vehicle parameters,
display, languages.



TRIP COMPUTER:
distance entering, warnings,
status of functions.

TELEPHONE:
hands-free
kit, matching,
management
of a call.

03 AUDIO



 
The external environment (hills, buildings, tunnels, basement car parks, ...) may block reception, including in RDS mode. This is a normal effect of the way in which radio waves are transmitted and does not indicate any failure of the audio equipment.

RADIO SELECTING A STATION

1




Press the SOURCE button several times in succession and select the radio.



2



 
Press the BAND AST button to select a waveband: FM1, FM2, FMast, AM.



3



 
Briefly press one of the buttons to carry out an automatic search of the radio stations.



4



 
Press one of the buttons to carry out a manual search of the radio stations.



5



 Press the LIST REFRESH button to display the list of stations received locally (30 stations maximum). To update this list, press for more than two seconds.



RDS


1



Press the MENU button.




2

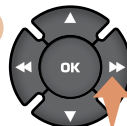


Select AUDIO FUNCTIONS then press OK.

 OK



3

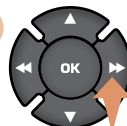


Select the FM BAND PREFERENCES function then press OK.

FM BAND PREFERENCES

OK



4

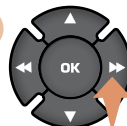

Select ACTIVATE FREQUENCY FOLLOWING (RDS) then press OK.
RDS appears on the display.

ACTIVATE FREQUENCY FOLLOWING (RDS)

OK



!

The RDS, if displayed, enables you to continue listening to the same station by means of frequency following. However, in certain conditions, this RDS station is not followed throughout the country as radio stations do not cover 100 % of the territory. This explains the loss of reception of the station during a journey.

CD PLAYING A CD

 


Insert circular compact discs only.
Some anti-pirating systems, on original discs or CDs copied using a personal recorder, may cause faults which are no reflection on the quality of the original player.
Without pressing the EJECT button, insert a CD in the player, play begins automatically.

1




To play a disc which has already been inserted, press the SOURCE button several times in succession and select CD.



2



 Press one of the buttons to select a track on the CD.
Press the LIST REFRESH button to display the list of tracks on the CD.



MP3 CD INFORMATION AND ADVICE



The MP3 format, an abbreviation of MPEG 1.2 & 2.5 Audio Layer 3, is an audio compression standard which permits the recording of several tens of music files on a single disc.
In order to be able to play a recorded CDR or CDRW, when recording it is preferable to select standards ISO 9660 level 1.2 or Joliet.



If the disc is recorded in another format, it may not be played correctly.
It is recommended that the same recording standard is always used for an individual disc, with as low a speed as possible (4x maximum) for optimum sound quality.
In the particular case of a multi-session CD, the Joliet standard is recommended.



The audio equipment will only play files with the extension ".mp3" with a sampling rate of 22.05 KHz or 44.1 KHz. No other type of file (.wma, .mp4, .m3u...) can be played.



It is advisable to restrict file names to 20 characters without using special characters (e.g. " " ? ; ù) to avoid any playing or displaying problems.

CD PLAYING AN MP3 COMPILATION*



Insert an MP3 compilation in the player. The audio equipment searches for all of the music tracks, which may take anything between a few seconds and several tens of seconds, before play begins.

 


On a single disc, the CD player can read up to 255 MP3 files spread over 8 directory levels. However, it is advisable to keep to a limit of two levels to reduce the access time before the CD is played.

1




To play a disc which has already been inserted, press the SOURCE button several times in succession and select CD.



2



 Press one of the buttons to select a track on the CD. Press the LIST REFRESH button to display the list of directories of the MP3 compilation.




* According to level of finish.

CD CHANGER PLAYING A CD (MP3 COMPATIBLE)

1



 Insert the CDs in the changer one by one. Press the SOURCE button several times in succession and select CD CHANGER.



2



Press one of the buttons on the numeric keypad to select the corresponding CD.



3



Press one of the buttons to select a track on the CD. Press and hold one of the buttons for fast forward or backward play.



04 USB PLAYER

USING THE USB

1



This unit consists of a USB port and a Jack socket*. The audio files are transmitted from portable equipment such as a digital player or a USB memory stick to your Audio system to be listened to via the vehicle's speakers.

2

- USB key (1.1, 1.2 and 2.0) or Ipod® of generation 5 or later:
- USB memory sticks should be formatted FAT or FAT 32 (NTFS not supported),
 - the Ipod® lead is essential,
 - navigation through the file database is by means of the steering wheel controls,
 - the IPod software should be regularly updated for the best connection.



3

- Other Ipod® players of earlier generations and players using the MTP protocol*:
- play via Jack-Jack lead only (not supplied),
 - navigation through the file database is from the portable equipment.



The list of compatible equipment and the compression rates supported are available from CITROËN dealers.

CONNECTING A USB MEMORY STICK

1



Connect the memory stick to the port, directly or using a lead. If the audio equipment is switched on, the USB source is detected as soon as it is connected. Play begins automatically after a delay which depends on the capacity of the USB stick.

The file formats recognised are .mp3 (mpeg1 layer 3 only), .wma (standard 9 only, 128 kbits/sec compression), .wav and .ogg.

The playlists types accepted are m3u, .pls, .wpl.

!

The system puts together playlists (temporary memory) created over a period which depends on the capacity of the USB equipment. The other sources are available during this time. The playlists are updated each time the ignition is switched off or each time a USB memory stick is connected. When connecting for the first time, the classification suggested is by folder. When you reconnect, the classification selected previously is retained.

* According to vehicle.

04 USB PLAYER

USING THE USB SOCKET

 
2

Press and hold LIST to display the different classifications. Select by Folder/Artist/Genre/Playlist, press OK to select the classification required, then press OK again to confirm.

OK




- by Folder: all folders containing audio files recognised on the peripheral device, classified in alphabetical order without following the flow chart.
- by Artist: all of the artist names defined in the ID3 Tags, classified in alphabetical order.
- by Genre: all of the genres defined in the ID3 Tags.
- by Playlist: in accordance with the playlists recorded on the USB device.



3



 
Press LIST briefly to display the previously selected classification. Navigate through the list using the left/right and up/down buttons. Confirm the selection by pressing OK.



4



 
Press one of these buttons to gain access to the previous/next track on the classification list currently being played. Press and hold one of the buttons for fast forward or backward play.



5



 Press one of these buttons to gain access to the previous/next Genre, Folder, Artist or Playlist on the classification list currently being played.



CONNECTING AN IPOD® VIA THE USB PORT

1

The lists available are Artist, Genre and Playlist (as defined on the iPod®). Selection and Navigation are described in steps 1 to 5 above.

!

Do not connect a hard disk or USB devices other than audio equipment to the USB port. This could damage your installation.

05 TRIP COMPUTER

VEHICLE DIAGNOSTICS



Each press of the button, located at the end of the wipers stalk, permits displaying of the different trip computer data in succession, depending on the display.

DISPLAY A



Each press displays in succession:

- Range,
- Current consumption
- Distance travelled,
- Average consumption,
- Average speed.

DISPLAY C



- the "vehicle" tab with:
 - the range, the current consumption and the distance remaining to the destination,
- the "1" tab (route 1) with:
 - the average speed, the average consumption and the distance travelled calculated over route "1",
- the "2" tab (route 2) with the same characteristics for a second route.



Zero reset

When the required route is displayed, press the control for more than two seconds.

A FEW DEFINITIONS

Range: displays the distance which can be travelled with the remaining fuel detected in the tank, in relation to the average consumption over the last few miles (kilometres).

This displayed value may vary significantly following a change in the vehicle speed or the relief of the route.

When the range falls below 20 miles (30 km), dashes are displayed. After filling with at least 5 litres of fuel, the range is recalculated and is displayed when it exceeds 60 miles (100 km).

If, whilst driving, dashes are displayed continuously in place of digits, contact a CITROËN dealer.

Current consumption: only calculated and displayed above 20 mph (30 km/h).

Average consumption: this is the average quantity of fuel consumed since the last trip recorder zero reset.

Distance travelled: calculated since the last trip computer zero reset.

Distance remaining to the destination: calculated with reference to the final destination, entered by the user. If guidance is activated, the navigation system calculates it as a current value.

Average speed: this is the average speed calculated since the last trip computer zero reset (ignition on).

06 CONFIGURATION

 


ADJUSTING THE DATE AND TIME SCREEN C

1



Press the MENU button.



2



Using the arrows, select the **PERSONALISATION CONFIGURATION** function.



 
PERSONALISATION CONFIGURATION



3



Press to confirm the selection.




4



Using the arrows, select the **DISPLAY CONFIGURATION** function.

 
DISPLAY CONFIGURATION



5



 Press to confirm the selection.




6



Using the arrows, select the **ADJUST DATE AND TIME** function.

 
ADJUST DATE AND TIME



7



 Press to confirm the selection.




8



Adjust the settings one by one confirming by pressing the OK button. Next select the OK tab on the screen then confirm.

 OK



07 DISPLAY C FLOW CHART



1 AUDIO FUNCTIONS

2 FM BAND PREFERENCES

3 alternative frequencies (RDS)

4 activate/deactivate

3 regional mode (REG)

4 activate/deactivate

3 radio-text information (RDTXT)

4 activate/deactivate

2 AUDIO CD PREFERENCES

3 cd changer repeat (RPT)

4 activate/deactivate

3 track random play (RDM)

4 activate/deactivate



1 TRIP COMPUTER

2 ENTER DISTANCE TO DESTINATION

3 distance: x km

2 WARNING LOG

3 diagnostics



2 STATUS OF FUNCTIONS*

3 functions activated or deactivated



1 PERSONALISATION - CONFIGURATION

2 DEFINE THE VEHICLE PARAMETERS*

2 DISPLAY CONFIGURATION

3 video brightness adjustment

4 normal video

4 inverse video

4 brightness (- +) adjustment

3 date and time adjustment

4 day/month/year adjustment

4 hour/minute adjustment

4 choice of 12 h/24 h mode

3 choice of units

4 l/100 km - mpg - km/l

4 °Celsius/°Fahrenheit

2 CHOICE OF LANGUAGE

* The parameters vary according to vehicle.

** According to compatibility of Bluetooth telephone and service contract.



1 TELEPHONE

2 CONSULTING DIRECTORIES**

3 telephone directory

3 call log

3 services directory

4 customer contact centre

4 breakdown call

4 emergency call

2 CONFIGURATION

3 deletion of a match

4 list of matches

3 consulting matches

4 list of matches

3 choice of a mobile to connect

4 list of mobiles

2 MANAGEMENT OF A COMMUNICATION

3 switch**

3 terminate the current call

3 secret mode

4 activate/deactivate

DISPLAY AND MENU A 08

> GENERAL MENU

Press the MENU button then OK.



MENU
CONFIG VEHIC

RADIO: RDS search, REG mode. CD: introscan, random play, repeat.

VEHICLE CONFIGURATION: activation/deactivation of the equipment.

OPTIONS: equipment status diagnostics.

DISPLAY ADJUST: year, month, day, hour, minute, 12 or 24 hour mode.

LANGUAGES.

UNITS: temperature (°C or °F), fuel consumption (l/100, mpg or km/l).



The date and time are changed via the display adjust.

08 GENERAL MENU A

> GENERAL MENU A



This displays the following information, via the audio equipment control pad:

- the time,
- the date,
- the exterior temperature (this flashes if there is a risk of ice),
- the audio source displays (radio, CD, ...),
- the warning messages or information messages displayed temporarily, can be cleared by pressing the "ESC" button,
- the trip computer (see 9.76).

1 DISPLAY ADJUST

- 2 YEAR
- 2 MONTH
- 2 DAY
- 2 HOUR
- 2 MINUTES
- 2 12 HR/24 HR MODE

1 UNITS

- 2 TEMPERATURE: °CELSIUS/°FAHRENHEIT
- 2 FUEL CONSUMPTION: km/L - L/100 - MPG

> GENERAL MENU

1 RADIO-CD

- 2 RDS SEARCH
- 2 REG MODE
- 2 INTROSCAN
- 2 CD REPEAT
- 2 RANDOM PLAY

1 VEHIC CONFIG

- 2 WIPING IN REVERSE GEAR
- 2 AUTO LIGHTS
- 2 FOLLOW-ME-HOME LIGHTING
- 2 PARKING ASSISTANCE

1 OPTIONS

- 2 ABANDON/CONSULT LIST OF FAULTS
- 3 functions activated (or not)
- 3 warning messages

1 DISPLAY ADJUST

1 LANGUAGES

1 UNITS

09 DISPLAY FLOW CHART monochrome A



- 1 MAIN FUNCTION
- 2 CHOICE A
- 3 Choice A1
- 3 Choice A2
- 2 CHOICE B...

- 1 RADIO-CD
- 2 RDS SEARCH
 - 3 active
 - 3 inactive
- 2 REG MODE
 - 3 active
 - 3 inactive
- 2 INTROSCAN
 - 3 active
 - 3 inactive
- 2 CD REPEAT
 - 3 active
 - 3 inactive
- 2 RANDOM PLAY
 - 3 active
 - 3 inactive

- 1 VEHICLE CONFIG*
- 2 REV WIPE ACT
 - 3 active
 - 3 inactive
- 2 AUTO LIGHTS
 - 3 active
 - 3 inactive
- 2 GUIDE LAMPS
 - 3 active
 - 3 inactive
- 2 PARKING ASSIST
 - 3 active
 - 3 inactive

- 1 OPTIONS
- 2 ABANDON/CONSULT LIST OF FAULTS
 - 3 functions activated (or not)
 - 3 warning messages

1 DISPLAY ADJUST

- 2 YEAR
- 2 MONTH
- 2 DAY
- 2 HOUR
- 2 MINUTES
- 2 12 H/24 H MODE

1 LANGUAGES

- 2 FRANCAIS
- 2 ITALIANO
- 2 NEDERLANDS
- 2 PORTUGUES
- 2 PORTUGUES-BRASIL
- 2 DEUTSCH
- 2 ENGLISH
- 2 ESPANOL

1 UNITS

- 2 TEMPERATURE: °CELSIUS/°FAHRENHEIT
- 2 FUEL CONSUMPTION: km/L - L/100 - MPG

* The parameters vary according to vehicle.