



TOYOTA

ALWAYS A
BETTER WAY

Urban Cruiser

Brief Guide



Table of Contents

Accessing your vehicle	2 - 3	Electric window and window lock	10
Child rear door protection lock	3	Starting your vehicle	11
Child restraint system	3	Stop & Start system (if equipped)	11
Seat and seat belt adjustment	4 - 5	Heating, A/C and de-misting	12
Steering wheel adjustment	5	Setting the clock	13
Instrument panel overview	6	Gear change	14
Steering wheel controls	7	Four-wheel drive lock (4WD models)	14
Instrument cluster	8 - 9	Fuel tank opening	15
Lights	9	Bonnet opening	15
Wipers	10	Eco-Driving	16

Introducing Urban Cruiser

Thank you for buying an Urban Cruiser. We trust this Brief Guide will enable you to become familiar with your vehicle's basic operations and assist you in enjoying your vehicle.

This brief guide does not replace or substitute the Owner's Manual, which you will find in the vehicle's glove compartment. It is important that you review the full Owner's Manual as well as any further supplementary manuals as this will allow you to familiarise yourself with the operating and safety instructions and to handle the vehicle within its limitations.

Please do read all documents in your pack as this will ensure you get maximum performance from your car and learn about related services offered.


Your Centre and everyone at Toyota wish you many years of enjoyable driving in your new Urban Cruiser.

NB: All information contained in this brief guide are current at the time of printing.
Toyota reserves the right to make changes at any time without notice.

Accessing your vehicle


Vehicles without smart entry & start system

1. Master keys (with wireless remote control function).
2. Master keys (without wireless remote control function).
3. Valet key - Limited access.
4. Key number plate.

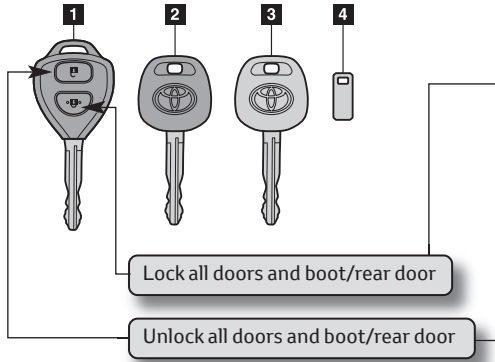

Vehicles with smart entry & start system

1. Electronic keys.
 - Operate smart entry & start system.
 - Operate the wireless remote control function.
2. Mechanical keys.
3. Key number plate.

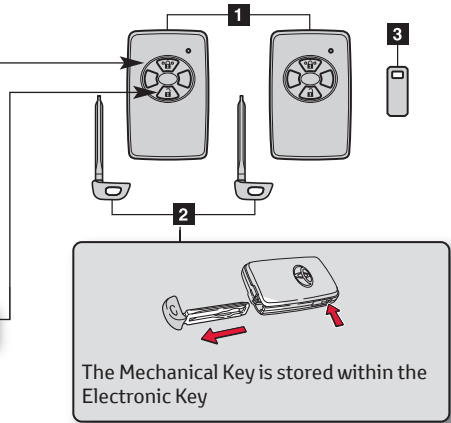


The wireless remote control can be used to lock and unlock your vehicle from the outside.

Smart entry & Start system

The following operations can be performed simply by carrying the electronic key on your person.


(The driver should always carry the electronic key.)

1. Unlocks and locks the doors.
2. Unlock and locks the back door.
3. Start and stop the engine.

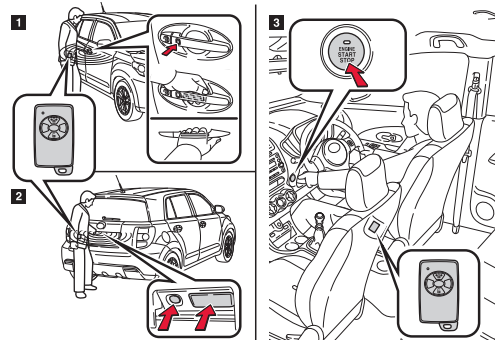


Accessing your vehicle

Unlocking and locking the doors (front door handles only)

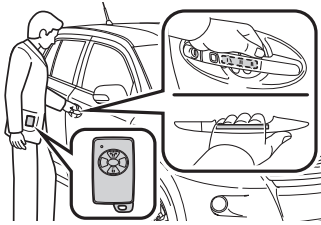

Grip the handle to unlock.


Make sure to touch the sensor on the back of the handle.

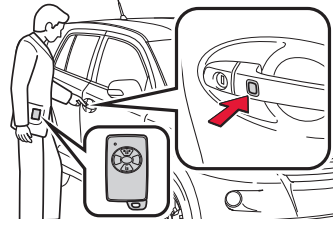

Press the button to lock.

The doors cannot be unlocked for 3 seconds after they are locked.

Child rear door protection lock

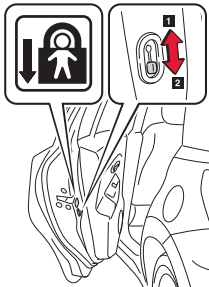

The door cannot be opened from inside the vehicle when the locks are set.

1. Unlock
2. Lock

These locks can be set to prevent children from opening the rear doors. Push down the rear door switches to lock the rear doors.

Child restraint system

Child restraint systems are classified into the following 5 groups according to the regulation ECE No. 44:

Group 0: Up to 10 kg or 22lbs (0-9 months)

Group I: 9-18 kg or 20-40lbs (9 months-4 years)

Group III: 22-36 kg or 48-79lbs (6 years-12 years)

Group 0+: Up to 13 kg or 29lbs (0-2 years)

Group II: 15-25 kg or 33-55lbs (4 years - 7 years)

(A) Baby seat
equal to Group 0 and 0+
of ECE No. 44




(B) Child seat
equal to Group 0+, I and II
of ECE No. 44



(C) Junior seat
equal to Group III
of ECE No. 44




Seat and seat belt adjustment

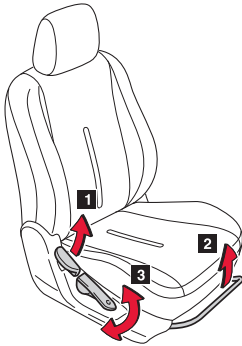


Front seats

1. Seatback angle adjustment lever.
2. Seat position adjustment lever.
3. Vertical height adjustment lever (driver's side).

Head restraint height adjustment

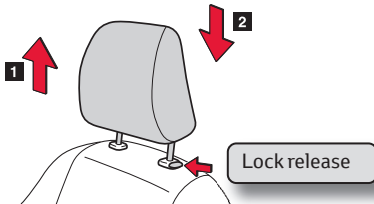


The centre of the head restraint should be level with the top of the ears

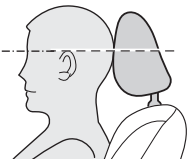


1. Up
Pull the head restraints up.
2. Down
Push the head restraint down while pressing the lock release button.

Seat belts

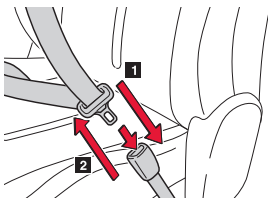

1. To fasten the seat belt push the tab into the buckle until it clicks.
2. Press the release button to unfasten the seat belt.

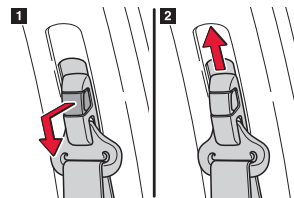


Adjust the height up and down as required.

1. Down
Pull the lock release knob and slide the height adjuster down.
2. Up
Move the height adjuster up as needed until you hear a click.

Seat and seat belt adjustment


Rear centre seat belts

Make sure that the buckle (1) is securely latched for ready use of the centre seat belt.

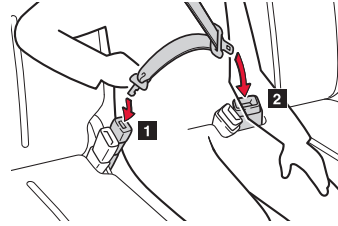

1. Insert the tab with the hooked end.
2. Insert the tab with the concave end.


Steering wheel adjustment

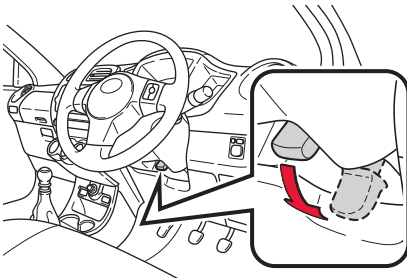

Hold the steering wheel and press the lever down.
Adjust the position by moving the steering wheel horizontally and vertically.

After adjustment, pull the lever up to secure the steering wheel.

Instrument Panel Overview

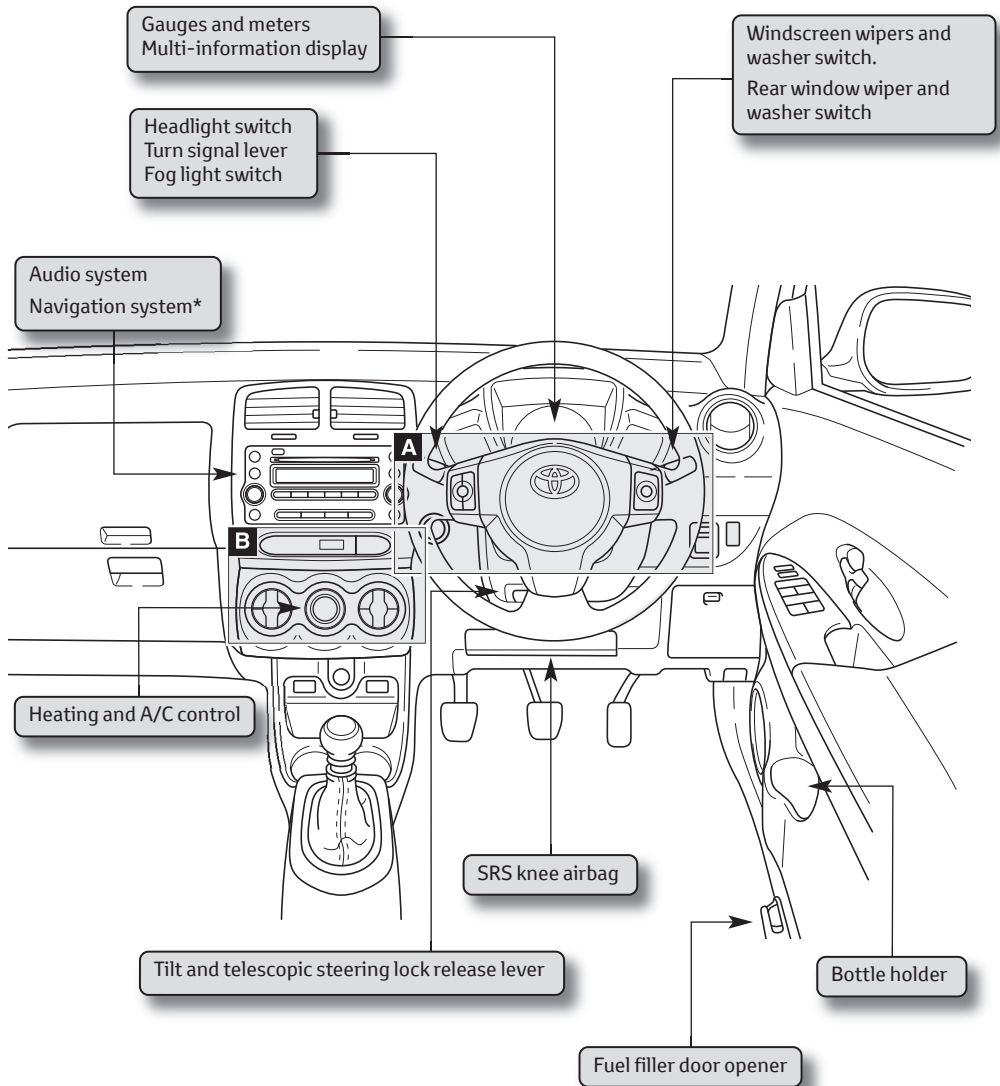


A. Steering wheel Controls (page 7).
B. Heating and A/C Controls (page 12).

* On some models

Steering wheel instruments

Area A indicated on instrument panel overview (page 6).

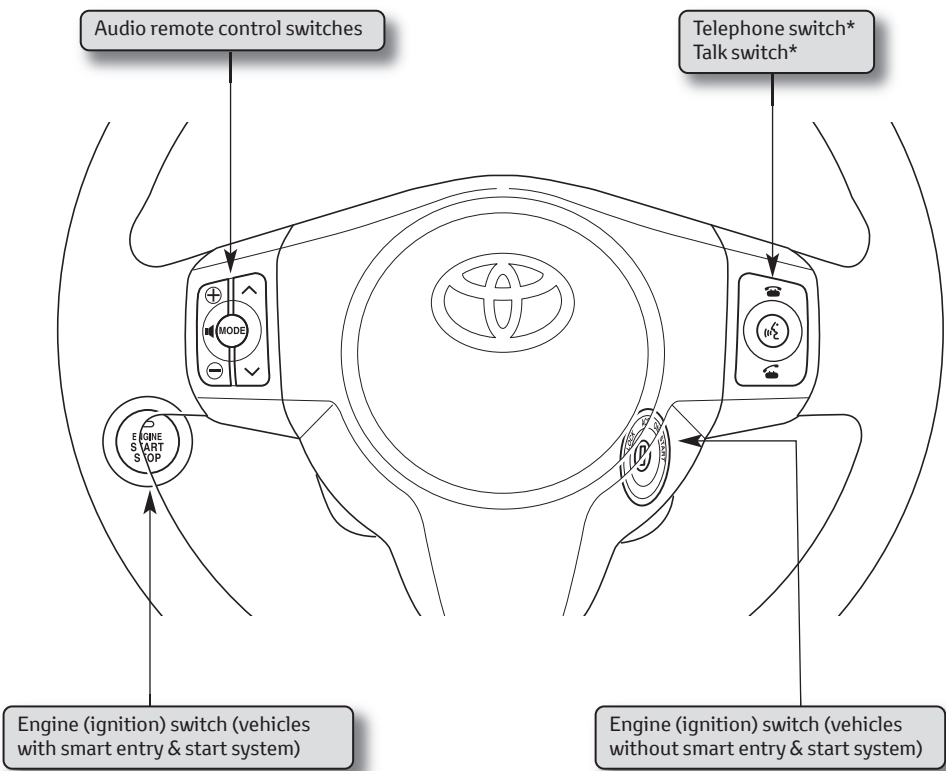

* On some models

Instrument cluster



Vehicles without smart entry and start system

The following gauges, meters and displays illuminate when the engine switch is in the “ON” position.

Vehicles with smart entry & start system


The following gauges, meters and displays illuminate when the “ENGINE START STOP” switch is in the IGNITION ON mode.

Centre panel

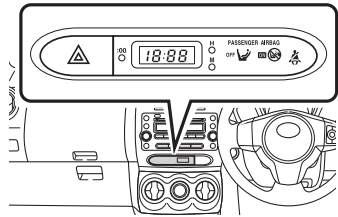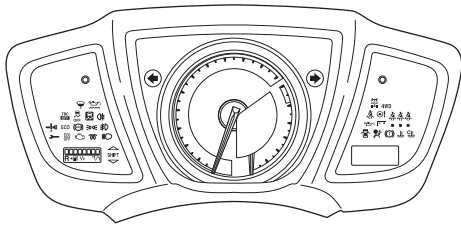


The units used on the speedometer, tachometer and some indicators may differ depending on the target region.

Switch the display

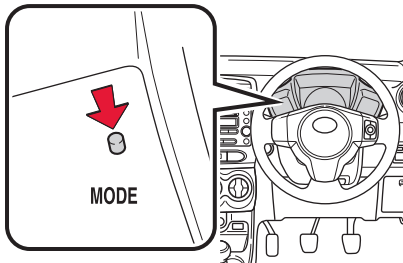

Display items can be switched by pressing the “MODE” button.

Multi-information display

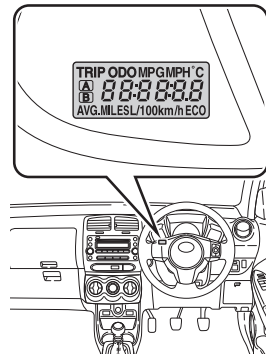


Odometer/trip meter display.

Trip Information - displays driving range, fuel consumption and other cruising-related information.

Outside temperature display - indicates the outside temperature.

Instrument cluster light control

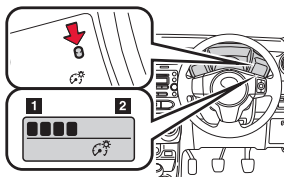

To adjust the brightness of the instrument cluster lights, push the switch.

1. Darker.
2. Brighter.

Instrument cluster

Main Indicators*

The indicators inform the driver of the operating state of the vehicle's main systems.



Turn signal indicator



Headlight high beam



Tail light indicator



Front fog light indicator



Rear fog light indicator

Main Warning lights*

 

Warning lights inform the driver of malfunctions in any of the vehicle's systems.



*1 These lights turn on when the engine switch is turned to the "ON" position (without smart entry & start system) or the "ENGINE START STOP" switch is turned to the IGNITION ON mode (with smart entry & start system). They will turn off after the engine is started. There may be a malfunction if a light does not come on, or if the lights do not turn off. Have the vehicle inspected by your Toyota dealer.


*: For details, please see your Owner's manual, Chapter 2-2.

Lights

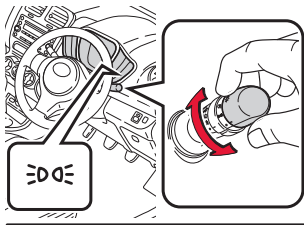


The headlights can be operated manually

The front position, tail, license plate lights turn on. The headlights and all lights listed above turn on, normal driving.

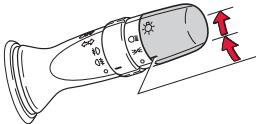


Turning on the high beam headlights

1. With the headlights on, push the lever away to turn on the high beams. Pull the lever back to the centre position to turn the high beams off.
2. You can flash the high beams with the headlights on or off by pulling the lever towards you, and releasing it to turn them off.

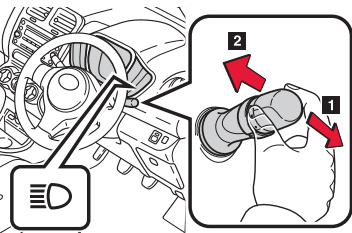


Wipers

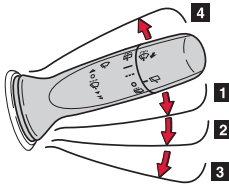


1. Intermittent wiper operation.
2. Low speed wiper operation.
3. High speed wiper operation.
4. Temporary operation.

Rear window wiper and washer

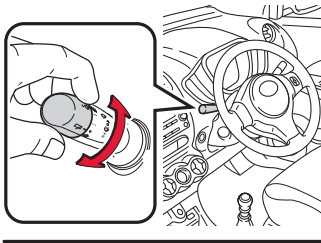


1. Intermittent window wiper operation.
2. Normal window wiper operation.
3. Washer/wiper dual operation.
4. Washer/wiper dual operation.

When the rear window is dry do not use the wipers, as they may damage the rear window.

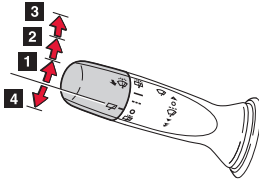

Electric windows and windows lock

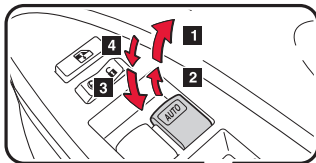


The electric windows can be opened and closed as follows:

1. One touch closing (driver's windows only)*.
2. Closing
3. One touch opening* (driver's windows only)*.
4. Opening


***To stop the window, press the switch lightly in the opposite direction**

Pressing the switch locks the passenger windows preventing accidental opening or closing.

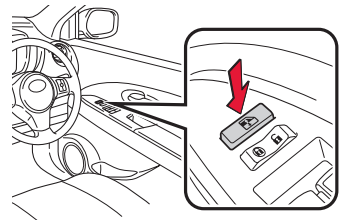

Keep fingers away from moving windows.

Starting your vehicle

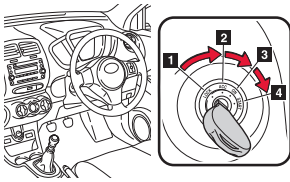

For vehicles without smart entry key positions are as follows:

1. Lock:- The steering wheel is locked and the key can be removed.
2. ACC:- Some electrical equipment such as audio can be used.
3. On:- All electrical equipment can be used.
4. Start:- Starts the engine.



For vehicles with smart entry :

1. The driver should carry the key on his person.
2. The Engine Start Stop button is used to start the vehicle.

Starting procedure:

Ensure hand brake is applied.

Put gear lever to the neutral position.

Press and hold the clutch pedal firmly.

Press the “ENGINE START STOP” switch.

Start the engine.

NB For diesel vehicles:


The engine should not be started until the indicator light goes out.



Light: Red: No start/Green: Engine start.

Stop & Start system (if equipped)

This vehicle is fitted with a “Stop & Start” function that allows the automatic stopping and starting of the engine. This function helps you to decrease the fuel consumption.

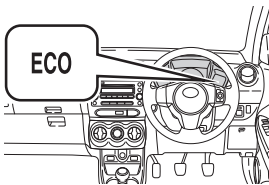

Stopping the engine

First put the shift lever in the neutral position when stationary, and release the clutch pedal. The engine will then stop. Next with the engine stopped, if the clutch pedal is pressed, the engine will start again.

The “ECO” indicator will light up in the instrument cluster when the engine has stopped.

A buzzer will sound as a warning when the following operations are done:

1. The shift is put into a gear position without the clutch pedal being pressed when the engine is stopped.
2. The driver's door is opened when the engine has stopped temporarily.



Restarting the engine


Check that the shift lever is in “N” and depress the clutch pedal, the engine will re-start and the “ECO OFF” indicator will come on but when the vehicle starts moving, it will go off.

If you should want to disable the system, press “ECO OFF” switch.

For details of restrictions and operating conditions, please read carefully Chapter 2-4 in you Owner's Manual.


Heating, A/C and de-misting

Manual air conditioning system

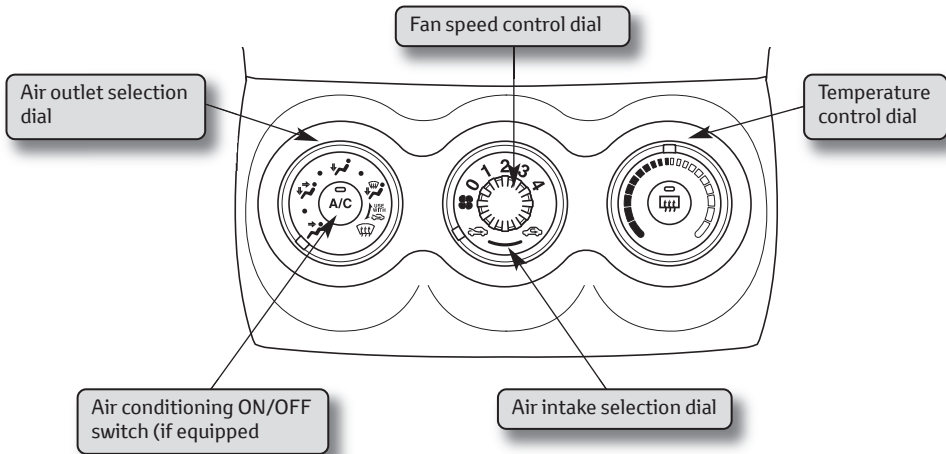

Automatic air conditioning system

Airflow of outlets are automatically adjusted according to the temperature setting.

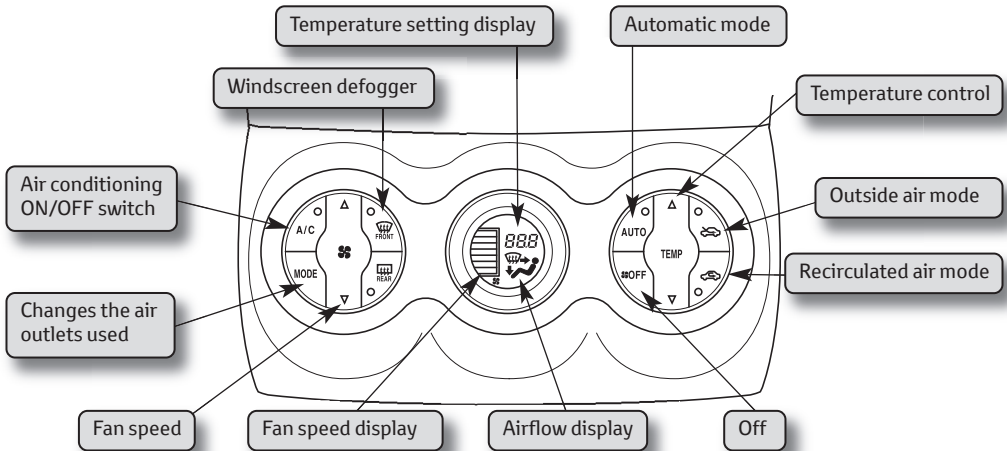

Tips for windscreen demisting:


1. Switch AUTO button off (light is OFF)
2. Switch A/C ON (light is ON)
3. Switch air recirc off (light is OFF)



4. Switch airflow to windscreen (light ON)



Setting the clock

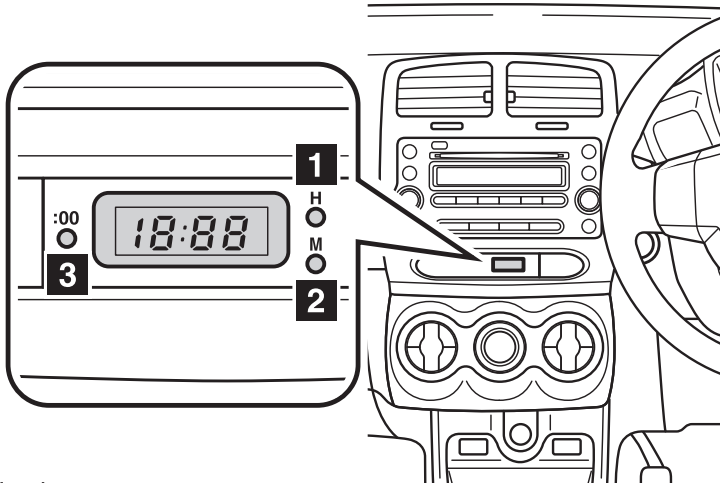

1. Adjusts the hour.
2. Adjusts the minutes.
3. Rounds to the nearest hour*

* eg. 1:00 to 1:29 = 1:00
1:30 to 1:59 = 2:00


When the battery is disconnected

The time display will automatically be set to 1:00.

Gear change


Manual transmission

The shift pattern is as shown.

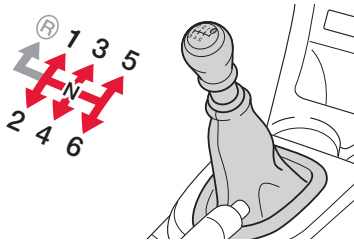

Shift pattern

Fully depress the clutch pedal before operating the gear lever, and then release it slowly, once a gear is selected.

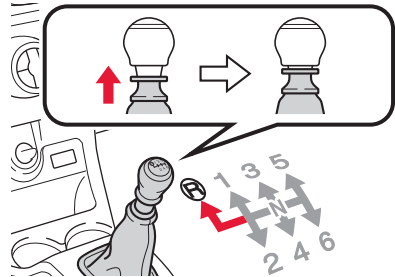


Gear lever for “R” (Reverse)

Lift up the ring and shift lever to the “R” position.

Four-wheel drive lock (4WD models)

Four-wheel drive lock mode can be used when a large amount of drive power needs to be applied to all the wheels, such as when the vehicle gets stuck in mud and you need to free it.

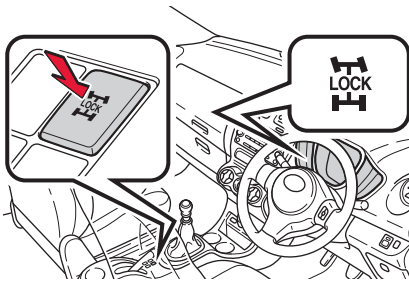

Push the button

The torque of the engine is distributed to the rear wheels to the maximum extent possible in accordance with driving conditions.

Pushing the button again cancels four-wheel drive lock mode.

Four -wheel drive lock mode can be operated when the engine switch is on.

Four -wheel drive lock mode

Four -wheel drive lock mode is cancelled when the brakes are applied to ensure the ABS and VSC system operate effectively.

Four -wheel drive lock mode is cancelled when the vehicle speed exceeds 25 mph.

Fuel tank opening


Before refueling the vehicle

Vehicles without smart entry & start system

Turn the engine switch to the "LOCK" position and ensure that all the doors and windows are closed.

Vehicles with smart entry & start system

Turn the "ENGINE START STOP" switch OFF and ensure that all the doors and windows are closed.

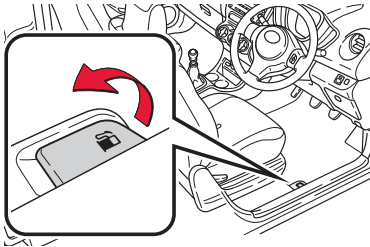


Opening the fuel tank cap

Press the fuel filler door opener switch.




Turn the fuel tank cap slowly to open.

Hang the fuel tank cap on the back of the fuel filler door.

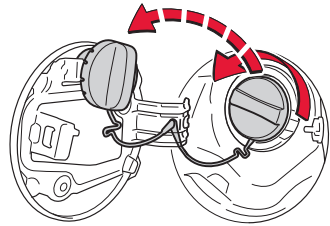

Take care to select the correct fuel.

Bonnet opening

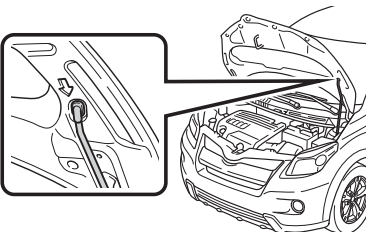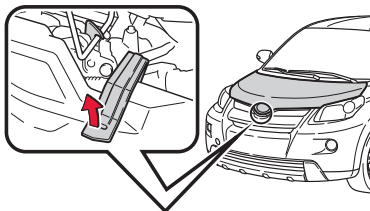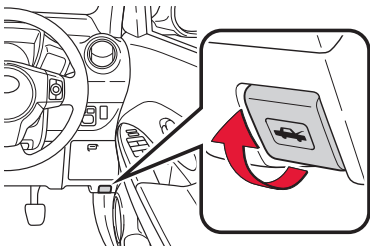

Release the lock from the inside of the vehicle to open the bonnet.

1. Pull the bonnet release lever.
The bonnet will pop up slightly.

Release the bonnet catch and lift the bonnet.

Caution :

Be careful when you pick up the rod, it might be hot.

Hold the bonnet open by inserting the supporting rod into the slot.

Close: gently drop the bonnet from approximately 200mm.

Eco-Driving

What is “Eco-Driving”?

- **Eco-Driving** = Driving in a more careful and environmentally responsible way
- **Eco-Driving** = Reduced **fuel costs**
- **Eco-Driving** = Reduced Environmental **impact** > Saving of CO₂ emissions.

Eco-Driving Savings

Total potential saving of 20 - 30%.

Roof load increases wind drag and therefore consumption.

Roof Load (Speed at 120 km/hr)	Increased consumption
Luggage rack	5 – 10%
Ski box	10 – 20%
Bicycle rack	30%
Loaded luggage rack	35 – 40%

Open windows increase fuel consumption by an average of **5%**.

Air Conditioning can result in **10 - 25%** extra fuel consumption.

Low Tyre Pressure result in higher fuel consumption (up to 3% extra from 0.5 bar too low)
Tyre pressures can fall by 2.5 - 5.0% after one month, and by 20% after 5 months.

Shifting up gear earlier can result in **8% saving**.



How to Eco-Drive?

Starting

- Remove any extra weight and roof load
- Plan your route to avoid detours
- Avoid using your car for short journeys

Checking/maintenance

- Check your tyre pressures regularly
- Service your car according to owner's manual

Driving

- Shift up gear earlier
- Only use electrical accessories when necessary (e.g. A/C)
- Follow and anticipate the traffic flow
- Keep your windows closed (use ventilation system when possible)
- Switch off your engine if you have to wait longer than 30 - 60 seconds

Think&Act



