


GMC Jimmy 1994 fuse box diagram

Fuses and Circuit breakers

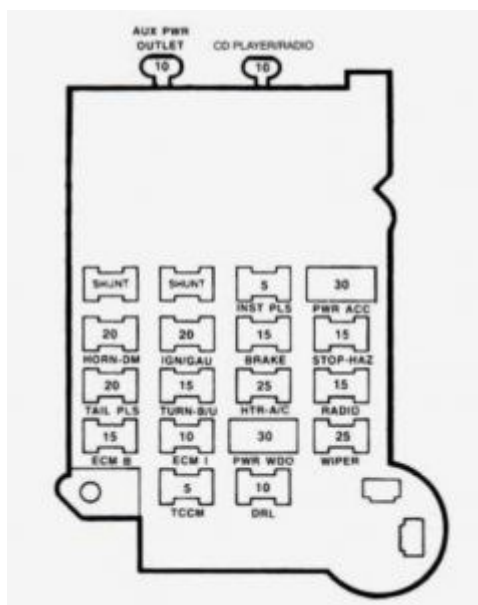

GMC Jimmy – fuse box diagram

Name	Circuit protected	Ampere rating [A]	Circuit Breaker
INST LPS	Instrument Panel Lights, Headlight Warning Buzzer, Rear Defogger Switch Light, Four-wheel Drive Indicator Light, RR Wiper Switch Lamp, Fog Lamp Switch Light, Electronic Shift Pnl Lamps	5	
PWR ACC	Power Door Locks, Rear Defogger, Electric Shift Transfer Case, Power Seat		30
HORN-DM BATT	Horn, Dome Lights, Courtesy Lights, Fog Lamp Relay, Outside Rearview Mirror, Liftgate Release Solenoid, ISRV & Lighted Vanity Mirror, IP Compr Lamps, Cig Lighter	20	
IGN-GAGES	Indicator Lights and Gages, Rear Defogger Relay, Cruise Control, Four Wheel Drive Indicator Light, Rear Defogger Timer, Seat Belt Timer, O2 Sensor, VTC Relay, Auto Trans, RR Defog Switch, 0 Spd Warning (Export), DRL Relay, ISRV and Vanity	20	
STOP-HAZ	Stop Lights, Hazard Flasher Warning Lights, Chime Module	15	
TAIL LMPs	Light Switch, Tailpark Lights, Digital Cluster, License Lamp	20	
TURN-B/U	Turn Signals & Backup Lights	15	
HEATER A/C	Heating and Air Conditioning	25	
RADIO	Radio, Rear Wiper, Rear Washer	15	
ECM B	Engine Control Module, Fuel Pump	15	
ECM I	Engine Control Module	10	

PWR WINDOW	Power Windows		30
WIPER	Windshield Wipers and Washers	25	
BRAKE	Four-wheel Anti-lock Brake Module, Digital Ratio Adapter Module, Speedometer, Auto Transmission Converter Clutch	15	
DRL	Daytime Running Light (Canada Only)	10	
TRAILER*	Trailer Wiring Harness	30	
CD Player**	CD Player/Radio	10	
TCCM	Electric Shift Transfer Case Module	5	
AUX PWR**	Aux. Pwr. Outlet	10	
*In-line fuse			
**Fuse is attached to fuse block.			