



READY TO GO



DASHBOARD



FSUV1601

1 Left steering column stalk: external lights - **2** Instrument panel - **3** Right steering column stalk: windscreen/rear window wiper
4 Information Display - **5** Navigation system - **6** Glovebox - **7** Heating and air conditioning system - **8** Ignition switch - **9** Control plate

INSTRUMENT PANEL

- 1 Speedometer (speed indicator)
- 2 Odometer/Trip meter
- 3 Odometer/
trip meter selection knob
- 4 Rev counter
- 5 Fuel level gauge
- 6 Engine coolant temperature gauge
- 7 Warning and indicator lights



FSUV1602

THE KEYS



FSUV1612



FSUV1611



Push once: to open the driver's door
Push twice in sequence: to open all the doors



Push once: to lock the doors

ENGINE START/SWITCH-OFF



FSUV1632


ENGINE START

Petrol versions

- pull the handbrake
- put the gear lever into neutral
- press the clutch pedal down to the floor without pressing the accelerator pedal
- turn the ignition key to **START** and let it go the moment the engine starts.

Multijet versions

- pull the handbrake
- put the gear lever into neutral
- turn the ignition key to **ON** and wait for glow plug preheating warning light to turn off
- press the clutch pedal down to the floor
- turn the ignition key to **START** and let it go the moment the engine starts.

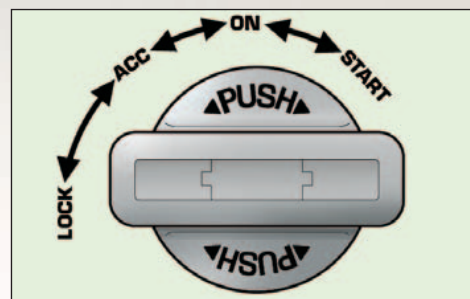

FSUV1633

ENGINE SWITCH-OFF

Versions equipped with key

Switch the engine off by turning the key from position **ON** to position **ACC**, then press the key and turn it to position **LOCK**.

Versions equipped with the Easy Go

Switch the engine off by turning the device from position **ON** to position **ACC**, then press and turn it to the **LOCK** position.

In order to ensure the battery life, a buzzer will, when the driver's door opens, signal the starting device's failure to set to the **LOCK** position.

DOORS



FSUV1604

Opening from the outside with the key

Fit the key and turn it towards the front side of the vehicle.

Locking from the outside with the key

To lock one of the front doors, fit the key and turn it towards the back of the vehicle.



FSUV1619

Locking/unlocking one door from the passenger's compartment

To lock: turn the knob forward.

To unlock: turn the knob in opposite direction.




FSUV1608

Locking/unlocking all doors from the passenger's compartment

To lock: press the button on the front part.

To unlock: press the button on the rear part.

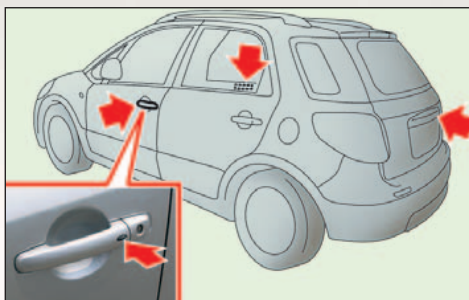

FSUV1620

Opening/closing doors with Easy Go

When the remote control is in the proper working range the doors can be opened or closed by pressing the button on the handle of the driver's door, front passenger's door or tailgate.

To lock all the doors, press once the button located on one of the doors or tailgate handles.



FSUV1606

DEAD LOCK

When the dead lock device is ON, the door opening buttons are disabled.

Engaging the dead lock device with the key

Fit the key into the driver's door lock and turn the key twice towards the back of the vehicle within 3 seconds.

Disengaging the dead lock device with the key

To unlock the driver's door only, fit the key into the driver's door lock and turn it once towards the front side of the vehicle.

To unlock all the doors turn the key twice towards the front side of the vehicle.



FSUV1611


Connecting the device with the remote control

 press the button twice within 3 seconds

Disconnecting the device with the remote control

 to unlock the driver's door only, press the button once


to unlock the other doors, press the button again.

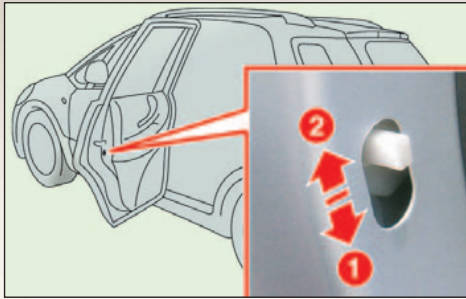

FSUV1621

Child lock (rear doors)


- ❶ door locked from passenger's compartment
- ❷ door openable from passenger's compartment.

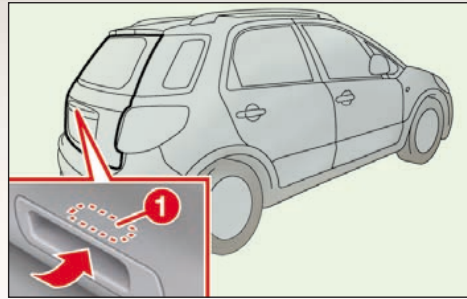

FSUV1640

Tailgate

To open the tailgate, press and keep the opening device ❶ pressed and raise the tailgate.

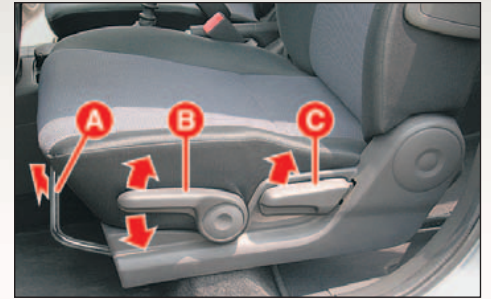

FSUV1622

SEATS

Adjustment

To move the seat backwards or forwards: raise lever **A** and push the seat forwards or backwards.

Height adjustment: raise or lower the lever **B**.

Back rest angle adjustment: raise lever **C** and move the backrest.

HEAD RESTRAINTS




FSUV1623

FRONT

Adjustment

To raise: raise the head restraint.

To lower: press button **A** and lower the head restraint.

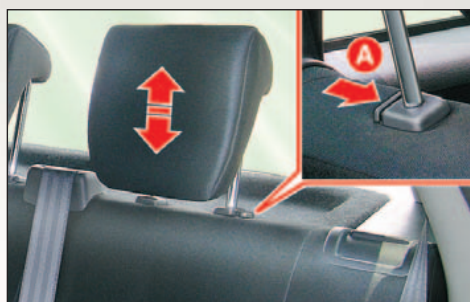

FSUV1624

REAR

Adjustment

To raise: raise the head restraint.

To lower: press button **A** and lower the head restraint.

STEERING WHEEL



FSUV1626

Steering wheel height adjustment

- ① released (adjustments can be made)
- ② locked.

REARVIEW MIRRORS




FSUV1625

Driving mirror

Adjust the mirror by hand.

Normal or antiglare position: use lever **A**.

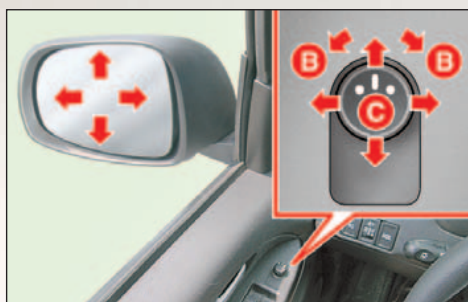

FSUV1610

Door mirrors

B to select left or right mirror

C to adjust the selected mirror.

SEAT BELTS



FSUV1618

To fasten: take hold the tongue **A** and insert it into the buckle **B**, until hearing the locking click.

To unfasten: press button **C**.

CONTROL PLATE



FSUV1627

A Front fog lights

With knurled ring on left-hand stalk at , press button.

B Headlight aiming

Use the wheel to adjust aiming

C Instrument panel lighting off

With light switch at a position different than OFF, press the button to pass from reduced lighting to standard lighting and vice versa

HAZARD WARNING LIGHTS



FSUV1629

Switching on/off: press button **A** on the dashboard.

STEERING WHEEL STALKS



FSUV1613

External lights

OFF lights off (always turn the knurled ring to OFF after removing the key. If lights are on a warning buzzer will sound when opening the door)

 side/taillights, number plate light, instrument panel lights on

 dipped beams on


 stalk pushed forward: main beams on

Flashing the headlights

Pull the stalk towards the steering wheel.

Rear fog lights

With headlight switch at  turn the knurled ring.

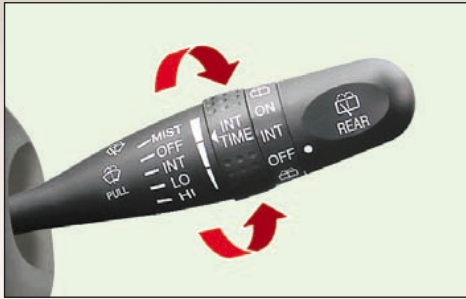

FSUV1616

Windscreen wiper

- MIST** temporary continuous slow wiping
- OFF** windscreen wiper off
- INT** intermittent wiping
- LO** continuous slow wiping
- HI** continuous fast wiping
- INT TIME** to select intermittent wiping speed.

Windscreen washer

Pull the stalk towards the steering wheel



FSUV1642

Rear window wiper


- OFF** rear window wiper off
- INT** intermittent wiping
- ON** continuous wiping

Windscreen washer

With the stalk at **OFF**: pull the stalk towards the steering wheel

With the stalk at **ON**: push the stalk towards the dashboard.


CEILING LIGHT

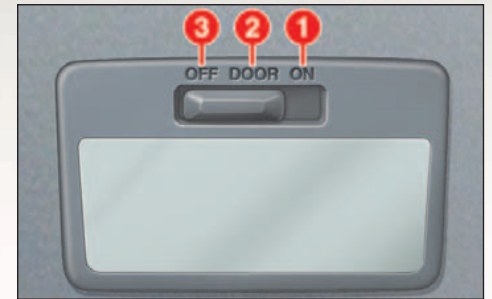

FSUV1641

- OFF** lights always off
- DOOR** lights on when opening the doors, timed switching off
- ON** lights always on.

POWER WINDOWS

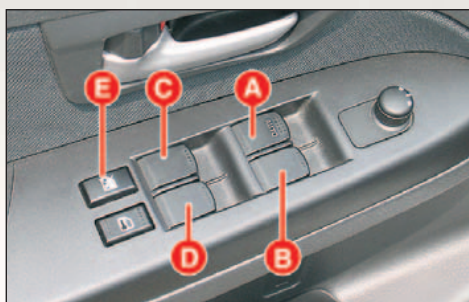

FSUV1609

Control buttons

- A** to open/close the front left window
- B** to open/close the front right window
- C** to open/close the rear left window
- D** to open/close the rear right window
- E** to inhibit rear power window controls.

ESP SYSTEM



FSUV1630

Switch-off

Press the **“ESP OFF”** button and keep it depressed until the **“ESP OFF”** warning light (available on the board) comes on.

Re-actuation

To switch the system on again, press the **“ESP OFF”** button and keep it depressed until the **“ESP OFF”** warning light goes out.

2WD/4WD SWITCH



FSUV1631


2WD AUTO

front wheel drive only
front and rear wheel drive: recommended on stone-paved roads or slipping roadbeds (ice, snow, mud)

LOCK

front and rear wheel drive at slow speed: recommended for starting the vehicle on roadbeds covered with mud, sand or snow.

TRANSMISSION

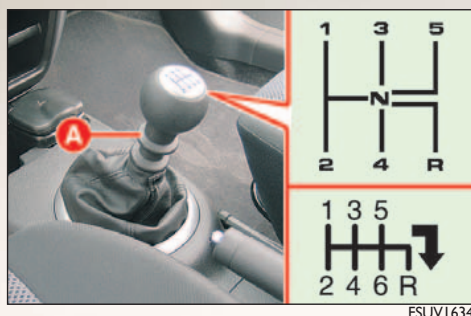


Petrol versions

To engage reverse **R** from neutral, shift the lever to the right and then back.


Multijet versions

To engage reverse **R** from neutral, lift the ring **A** and shift the lever to the right and then back.

REFUELLING

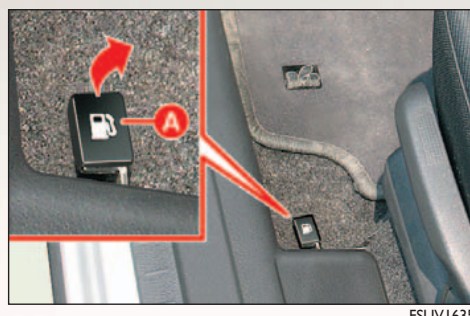

- open the fuel lid by pulling lever **A**
- slacken the cap **B** slowly
- to refit it, turn it clockwise and tighten it until hearing the locking click.

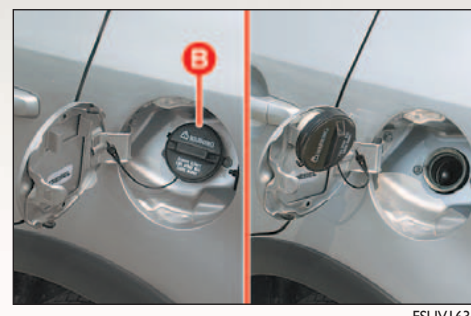


Petrol versions

Only refuel with unleaded petrol with octane rating not less than 95 R.O.N. (EN228 specification).

Multijet versions

Only refuel with diesel fuel for motor vehicles (EN590 specification).

CLIMATIC COMFORT

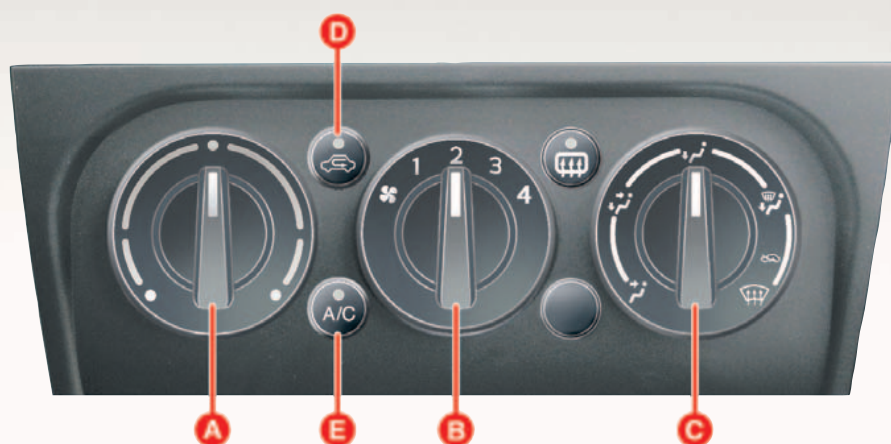

Manual climate control system

- A** Temperature selector
- B** Fan speed selector
- C** Air flow selector
- D** Recirculation button
- E** Compressor activation button

Switching on: press button **E** (led on)

Temperature adjustment: turn selector **A**

Fan speed adjustment: turn selector **B**

Air flow distribution: turn selector **C**

Air recirculation activation: press button **D** (led on)

FSUV1638



FSUV1637

Automatic climate control system

- A** Temperature selector
- B** Fan speed selector
- C** Air flow selector
- D** Compressor activation button
- E** Recirculation button

To turn on: turn selector **B** to **AUTO**

To adjust temperature: turn selector **A**

NAVIGATION SYSTEM



To activate the Navigation System you shall require your personal access code by calling:

- by non-mobile telephone the following international toll-free number
00 800 99333333
- or **+49 69 37005517**
- or, via internet, web site:
www.C-IQ.net

Automatic power on

Turn the ignition key to **ON**.

Manual power on

Press knob **A**.

To enter destination

- press button **NAV B**.
- turn knob **C** to select and press it to confirm.

Set in the following sequence: Address, Place, Street, Street number, Calculate route.

The Navigation System will calculate the route and will guide you to the set destination.

FSUV1639

Fiat Auto S.p.A.
Quality - Assistenza Tecnica - Ingegneria Assistenziale
Largo Senatore G. Agnelli, 5 - 10040 Volvera - Torino (Italia)
Print no. 603.83.039 - 09/2006 - 1st edition

All adjustments described herein shall only be made when the vehicle is stationary.
You are recommended to read carefully the Owner Handbook before taking the road for the first time.