

Fiat Punto mk2 (Classic) from 2004 fuse box diagrams

Fuse location


The fuses of the car are grouped into two fuse boxes (thre for versions with Dualogic gearbox) to be found respectively on the dashboard and in the engine compartment.

Fuse box on the dashboard



Fiat Punto Classic – fuse box – dashboard

Fuse box in engine compartment

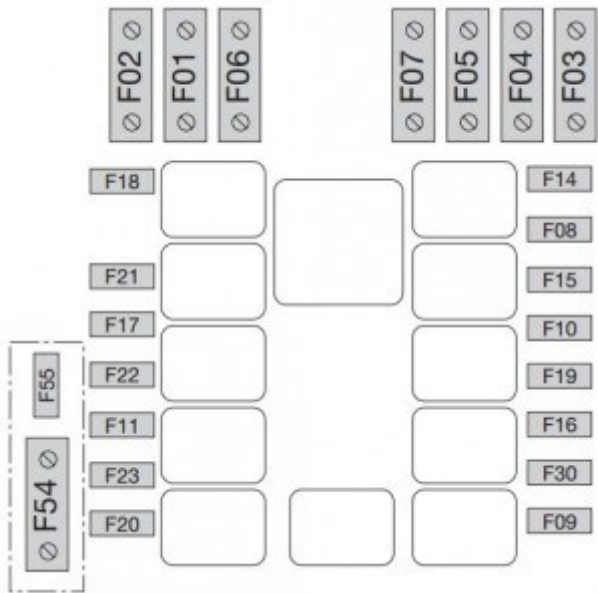

Fiat Punto Classic – fuse box – engine

compartment

Fuse summary table

Lights	Fuse	Ampere rating [A]
Right dipped-beam headlight	F12	10

Left dipped-beam headlight, headlight aiming device	F13	10
Right main-beam headlight	F14	10
Left main-beam headlight	F15	10
Boot	F39	10
Hazard lights	F53	10
Fog lights	F30	15
Direction indicators	F53	10
Dashboard instrument lights	F51	7,5
Cigar lighter	F51	7,5
Light system	F32	15
Ceiling light	F39	10
Instrument panel and warning lights (ignition switch powered)	F37	10
Instrument panel and warning lights (battery powered)	F53	10
Reversing light	F31	7,5
Brake lights	F37	10
Number plate light	F51	7,5
Additional brake light (third stop light)	F37	10

Services	Fuse	Ampere rating [A]
Cigar lighter	F44	20
Air bag	F50	7,5
Dashboard power: optional functions	F00 – MAXI FUSE	40
Dashboard power: standard functions	F01 – MAXI FUSE	70
Manual climate control	F31	7,5
ABS/ESP system	F04 – MAXI FUSE	60
Right front power window	F48	20
Left front power window	F47	20
Door locking system	F38	20
Engine compartment ECU remote switch coils	F31	7,5
Ignition coils	F22	20
Engine control system secondary loads	F11	15
ABS control unit (ignition switch powered)	F42	7,5
Engine control unit (+battery)	F18	7,5

Engine control unit (power)	F17	10
Engine control unit (ignition switch powered)	F16	7,5
Parking assistance control unit	F31	7,5
Glow plug control unit	F11	15
Horn	F10	15
Manual climate control compressor	F19	7,5
Headlight aiming device	F13	10
Ignition switch	F03 – MAXI FUSE	20
Petrol fume recirculation solenoid valve	F11	15
Heated diesel fuel filter	F20	20
Tachometer generator	F11	15
Glow plug heating system	F54 – MAXI FUSE	60
Subwoofer system	F36	15
Injectors	F22	20
Headlight washer	F09	20
Heated rear window	F40	25
One-speed radiator fan (1.28V and 1.216V versions with heater)	F06 – MAXI FUSE	30
Fuel pump (1.28V version)	F22	20
Fuel pump	F21	15
Windscreen/rear window washer pump	F43	30
Radiator fan first speed (1.28V and 1.216V versions with manual climate control system)	F06 – MAXI FUSE	30
Radiator fan first speed (1.816V and 1.9JTD versions)	F06 – MAXI FUSE	30
Radiator fan second speed (1.28V and 1.216V versions with manual climate control system)	F07 – MAXI FUSE	50
Radiator fan second speed (1.816V and 1.9JTD versions)	F07 – MAXI FUSE	40
Front heated seats	F45	15
Water in diesel fuel filter sensor (diesel versions)	F35	10

+ 30 utilities (sound system, automatic climate control system, cellular phone presetting, EOBD diagnostic socket)	F39	10
+ 15 utilities (sound system, automatic climate control switch, Cruise Control, ASR system cut-out control, cellular phone presetting, dashboard control lights, heated seat switch, ESP system sensors, rain sensor, fastened seat belt warning light)	F49	7,5
Brake pedal switch	F42	7,5
Electric power steering	F35	10
Electric power steering	F05 – MAXI FUSE	60
Lambda sensor	F11	15
Engine cooling system relay	F18	7,5
Engine control system relay	F16	7,5
Heated rearview mirrors	F41	7,5
Windscreen wiper	F43	30
Rear window wiper	F52	15
Sunroof	F46	15
Passenger compartment fan	F08	30
Free	F33	—
Free	F34	—