


Citroen C4 Cactus (from 2014) – fuse box diagram

Year of production: 2014, 2015, 2016

Dashboard fuses

The two fuseboxes are placed in the lower dashboard, at glove box.

Left hand fusebox

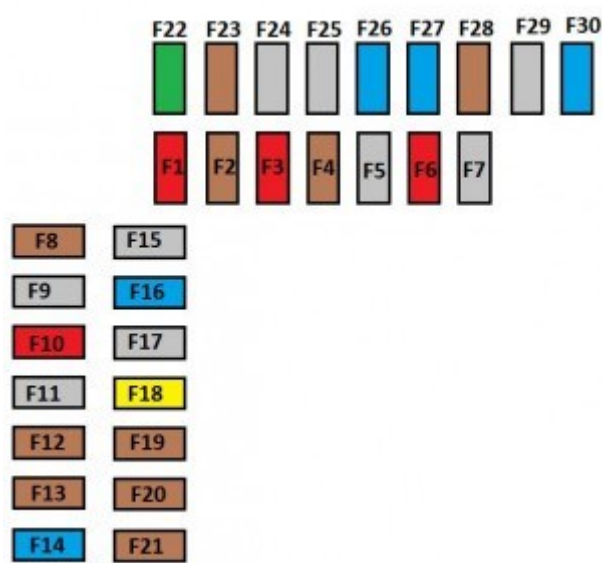

Citroen C4 Cactus – fuse box – under dashboard

(right side)

Fuse	Ampere rating [A]	Functions
F01	10	Brake pedal (switch 2), Stop & Start
F02	5	Headlamp beam height adjuster, additional heater (Diesel), parking sensor, diagnostic socket, door mirrors (electric adjustment)
F03	10	Diesel additive pump, electric power steering, clutch pedal (switch)
F04	5	Rain and sunshine sensor
F06	10	Brake pedal (switch 1), diagnostic socket
F08	5	Top of steering column with steering mounted controls
F10	10	Emergency call/ Assistance call
F12	5	Stop & Start, ABS, ESC
F13	5	Parking sensor, reversing camera
F14	15	Electronic gearbox, switch panel (below the touch screen tablet), air conditioning, touch screen tablet
F16	15	12 Volt socket
F18	20	Radio

F19	15	Seat belt unfasten warning
F20	5	Airbags
F21	5	Instrument panel
F22	30	Locks
F23	5	Courtesy lamp, map reading lamp
F26	15	Horn
F27	15	Front and rear screenwash
F28	5	Ignition switch
F30	15	Rear wiper

Right hand fuse box




Citroen C4 Cactus – fuse box – under dashboard

(left side)

Fuse	Ampere rating [A]	Functions
F30	10	Heated mirrors
F31	25	Heated rear screen
F34	30	Front electric windows
F36	30	Heated front seats
F38	20	Trailer interface unit
F40	25	Trailer interface unit

Fuse box in engine compartment

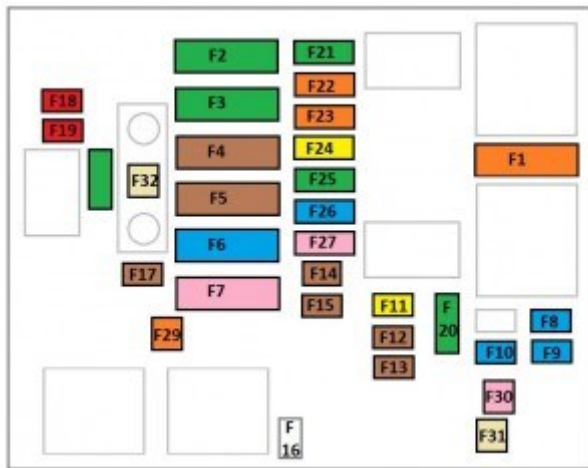

Citroen C4 Cactus – fuse box – engine

compartment

Fuse	Ampere rating [A]	Functions
F1	40	Air conditioning
F2	30/40	Stop & Start
F3	30	Passenger compartment fusebox
F4	70	Passenger compartment fusebox
F5	70	Buil-in System Interface (BSI)
F6	60	Cooling fan assembly

F7	80	Buil-in System Interface (BSI)
F8	15	Engine management, petrol pump
F9	15	Engine management
F10	15	Engine management
F11	20	Engine management
F12	5	Cooling fan assembly
F13	5	Buil-in System Interface (BSI)
F14	5	Battery charge unit (non Stop & start engine)
F15	5	Stop & Start
F17	5	Buil-in System Interface (BSI)
F18	10	Right hand main beam headlamp
F19	10	Left hand main beam headlamp
F20	30	Engine management
F21	30	Starter motor
F22	40	Electronic gearbox
F23	40	ABS, ESC
F24	20	ABS, ESC
F25	30	Passenger compartment fusebox
F26	15	Electronic gearbox
F27	25	Buil-in System Interface (BSI)
F28	30	Diesel emission control system (AdBlue)
F29	40	Windscreen wipers
F30	80	Preheater control unit
F31	100	Additional heater (Diesel)
F32	80	Electric power steering

WARNING: Terminal and harness assignments for individual connectors will vary depending on vehicle equipment level, model, and market.