

Dodge 5500 2008 – 2009 fuse box diagram

Integrated power module

Cavity	Cartridge fuse	Mini fuse	Description
1		20	Power Outlet Console
2		20	Cabin Compartment Node (CCN) Door Locks
3		—	—
4		15	Aisin Transmission Controls (Diesel Only)
5		20	Power Sunroof
6		10	Vistronic Fan/Wastegate Solenoid
7		—	—
8		10	Heated Mirrors
9	30		Off Road Module Power
10		5	Trx-Off Rd Pkg Sen (Gas Engine Only) NOTE: Insert 5 amp fuse in this cavity to enable the TRX capability (If Equipped).
11		20	Ignition Off Draw (IOD)-Cabin Compartment Node (CCN)/Radio/Under Hood Lamp/Wireless Control Module (WCM)/Satellite Digital Audio Receiver (SDARS)/Hands Free Module (HFM)/EOM

12	30		Electric Brake
13		25	Power-Battery RWAL/ABS Module Feed
14		15	Park Lights Left
15		20	Trailer Park Lights
16		15	Park Lights Right
17		—	—
18	40		ABS Pump
19	30		Trailer Tow Battery Feed
20		10	Occupant Restraints Controller (ORC) 2
21		10	Occupant Restraints/Pass Disable Switch
22		2	IGN Switch Feed
23		10	HVAC
24	20		AISIN Relay Feed (Diesel Only)
25		10	Power Mirror/T-Case Brake
26		20	Brake Switch/Center High Mount Stop Light (CHMSL)/Aftermarket CHMSL

27	40		Power Seats
28		10	Power Run/Start-PCM/Steering Angle Sensor
29		10	4X4 Switch/Pass Dr Switch/EC Mirror
30		15	Power Run/Start-ABS/RWAL/Smart Bar/YAW Sensor/ Universal Exhaust Gas Oxygen (Uego) Sensor Controller
31		10	PCM (Gas)/TCM (Diesel 58RFE)
32		10	Power Ignition Run – Adjustable Pedals LED
33		10	Power-IGN Run – HVAC
34		—	—
35		15	Cabin Compartment Node (CCN) Illumination
36		25	Audio_Amplifier
37		15	Variable Gate Turbo (VGT) – Turbo Diesel
38		20	Power Outlet IP
39		10	Seatbelt Tension Reducer/Power IGN Run/Acc
40		20	Power IGN Run/Acc – Cigar Lighter/Rear Power Point
41		—	—

42	30		Diesel PCM (Diesel Only)
----	----	--	--------------------------