

BASIC OPERATION

QUICK REFERENCE

Driver's seat	2
Steering wheel	2
Automatic transmission	3
Headlight and turn signal switch	4
Wiper switch	5

1. DRIVER'S SEAT

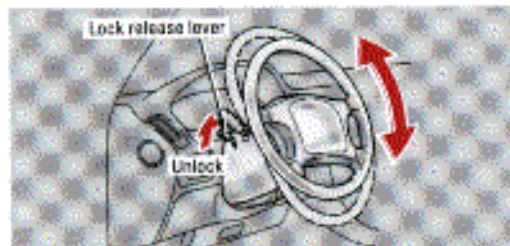


Seat adjustment

	Seat position		
	Seat cushion angle		
	Seat cushion height		
	Seatback angle		
	Lumbar support		
	Head restraint height		
	Head restraint angle		

2. STEERING WHEEL

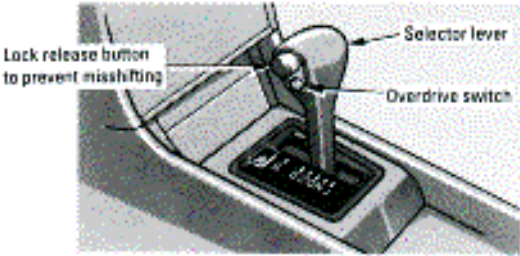
• TILT STEERING WHEEL



To tilt the steering wheel up or down to the desired angle:

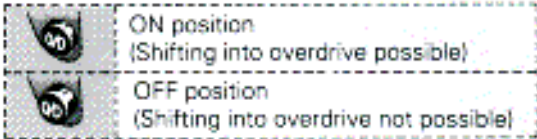
1. Pull the lever up while holding the steering wheel.
2. Push or pull the steering wheel to the desired angle.
3. Release the lever.

 
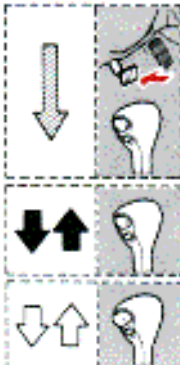
 
3. AUTOMATIC TRANSMISSION



OPERATION OF OVERDRIVE SWITCH

For selecting either a three-speed or four-speed transmission

 


SELECTOR LEVER POSITION	INDI-CATION	OPERATION OF SELECTOR LEVER	
Parking, engine starting and key removal position			 With the brake pedal depressed, shift while pressing the lock release button in (The ignition switch must be in “ON” position.)
Reverse position			 Shift while pressing the lock release button in
Neutral position			 Shift without pressing the button
Normal driving position			 Shift without pressing the button
Position for engine braking			 Shift without pressing the button
Position for stronger engine braking than that in “2” position			 Shift without pressing the button

Note: When the cruise control is being used, even if you downshift the transmission by turning off the overdrive switch, engine braking will not be applied because the cruise control is not cancelled. For the operation to decrease the vehicle speed, see page [114](#).

 
4. HEADLIGHT AND TURN SIGNAL SWITCH

• HEADLIGHT SWITCH (FOR U.S.A.)

	Parking, tail, license plate, side marker and instrument panel lights turn on.
	Headlights also turn on.
	High beam
	Headlight flasher

• HEADLIGHT SWITCH (FOR CANADA)

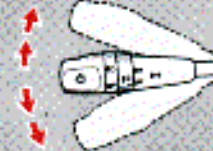
With the ignition OFF

	Parking, tail, license plate, side marker and instrument panel lights turn on.
	Headlights also turn on.

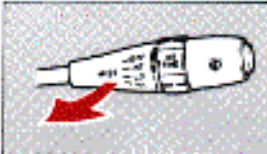
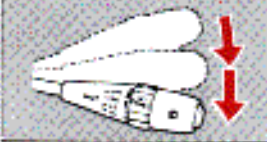
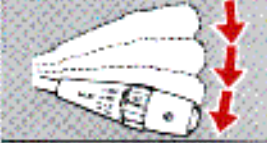
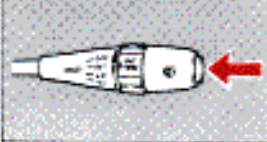
With the engine started and parking brake released

	Parking, tail, license plate, side marker and instrument panel lights turn on.
	Headlights turn on at full intensity.
	High beam
	Headlight flasher

• TURN SIGNAL SWITCH

	Right or left turn
	Lane change (Right or left)

5. WIPER SWITCH

	Mist wiper operation
	Intermittent operation
	Low speed operation
	High speed operation
	Washer on