


Lincoln Continental mk9 1996 – 1998 fuse box diagram

The instrument panel fuse

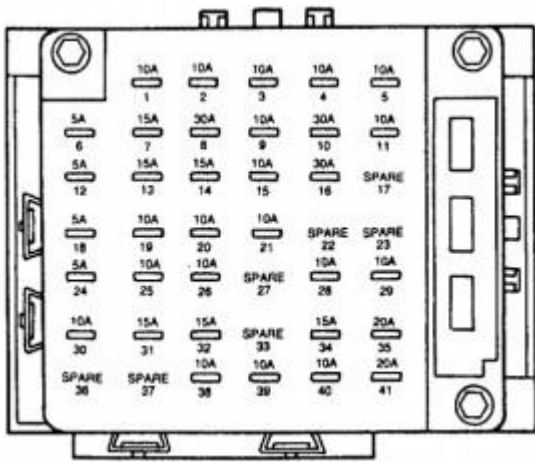

Lincoln Continental mk9 – fuse box –

instrument panel


Fuse	Ampere rating [A]	Description
1	10	And-theft indicator light, PWM dimming output for microphone illumination, ashtray illumination (R & L rear door),heated seat switches, heated backlight switch, EATC control panel, message center switches, cigar lighter, console shift illumination, navigation display module, and navigation switches
2	10	Luxury radio, Clock (non-navigational), Cellular phone
3	10	Multi-function switch
4	10	Run/Accessory sensor (luxury radio), Cellular phone, Run/Accessory sensor (LCM), Window switches backlight RF, LR, RR)*, Compass, E/C mirror, Stand alone clock, Door lock switches backlight
5	10	Virtual image cluster, Light sensor (Autolamp), Traction Assist OFF switch, Airbag diagnostic, Luxury radio FCU, Run/Start sensor (LCM)

6	5	SCP networ
7	15	Right front turn lamp, Right turn indicator, HI beam switch, Right and left front side marker lamps, Right and left front park lamps, Right and left front tail lamps, Right rear stop/turn lamps
8	30	Fuel filler, Trunk solenoid, Navigation system power
9	10	Blower motor relay coil, EATC control, Airbag diagnostic
10	30	Windshield wiper motor, Windshield wiper control module (washer pump motor)
11	10	PCM power relay coil, Ignition coil
12	5	SCP networ
13	15	Stand alone clock illumination, Right and left rear side marker lamps, License lamps, Right and left tail lamps (on decklid), Left rear stop/turn lamps, Left turn indicator, Left front turn lamp
14	15	Front cigar lighter
15	10	Navigation display, Navigation module, Heated seat control switches
16	30	Power moonroof switch, Moonroof motor
17	—	Not used
18	5	SCP network
19	10	LH low beam

20	10	Multi-function switch (Flash to pass and hazard signal to LCM), LH & RH cornering lamps
21	10	ABS control module
22	—	Not used
23	—	Not used
24	5	SCP network
25		RH low beam
26	10	Instrument cluster power, EATC power
27	—	Not used
28	10	Shift interlock, VDM logic power, Instrument cluster logic power, Rear defrost control
29	10	Luxury RCU station signal, Navigation module signal
30	10	Heated mirror right, Heated mirror left
31	15	Voltage dimming for FCU and stand alone clock, Courtesy lamps in the doors Rear reading lamps, Map lamps, RH & LH I/P courtesy lamps, Engine compartment lamp, Visor lamps, Storage bin lamp (5 passenger only), Luggage compartment lamp, Glove box lamp
32	15	Speed control brake deact switch, Stop lamp switch
33	—	Not used

34	15	Back-up L & R lamp ext., DRL module (Canada only), EATC clutch, Speed control logic · IMRC
35	20	L & R heated seat module power
36	—	Not used
37	—	Not used
38	10	OBD 11 scan tool connection
39	10	DSM logic power, DDM logic power, Door lock switches, Keyless keypad switch, Memory set switch, Driver seat switch, Power mirror switch
40	10	Blend door actuator, LTPS
41	20	Door locks (DDM)

High Current Fuses

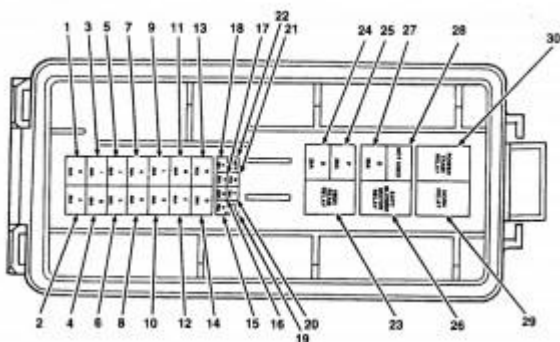

Lincoln Continental mk9 – fuse box –

high current fuse panel

Fuse	Maci-fuse ampere rating [A]	Description
------	--------------------------------	-------------

1	40	EATC blower motor
2	60	Engine cooling fans
3	60	Air suspension compressor relay
4	60	ABS module, EVAC and fill
5	60	Fuse panel to LCM, OBD 11
6	60	Fuse panel to LCM CD player
7	30	VDM
8	40	Heated mirrors, Heated backlight
9	40	DDM, LH power windows, Door locks
10	40	RH power windows
11	40	Ignition switch to fuse panel
12	40	Ignition switch to fuse panel
13	30	DSM, Heated seats, Driver 4-way power lumbar seats
14	30	Passenger power seat, Passenger 4-way power
15	30	Luxury radio, Sub woofer amplifier, CD player

16	20	HI beam
17	20	Horn
18	10	Air bag
19	—	Not used
20	10	PCM KAPWR
21	10	Alternator sensor, Alternator field supply
22	—	Not used
23	Relay	HI beam headlamps relay
24	20	Fuel pump
25	20	Thermactor pump
26	Relay	EATC blower motor relay
27	30	PCM, STC
28	—	Not used
29	Relay	Horns relay
30	Relay	Powertrain control module relay