



F RELAY LOCATIONS

[Engine Compartment] (1KR-FE)

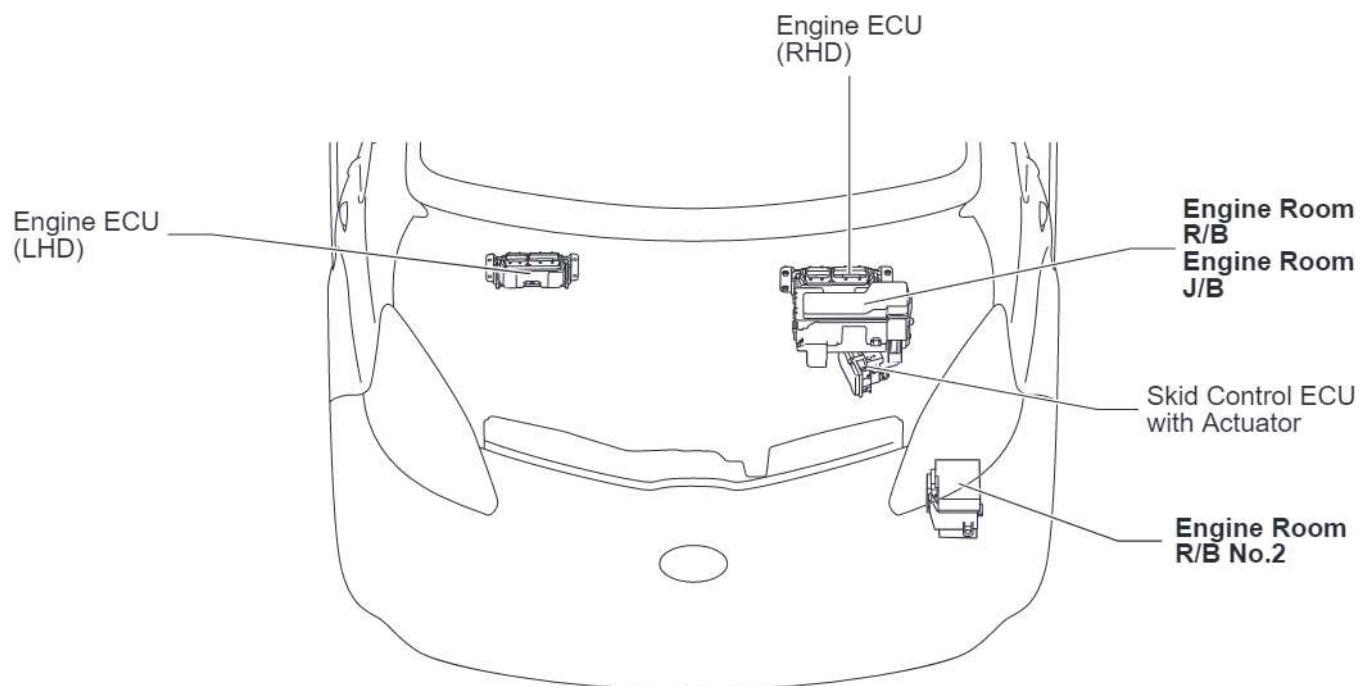


(2WZ-TV)

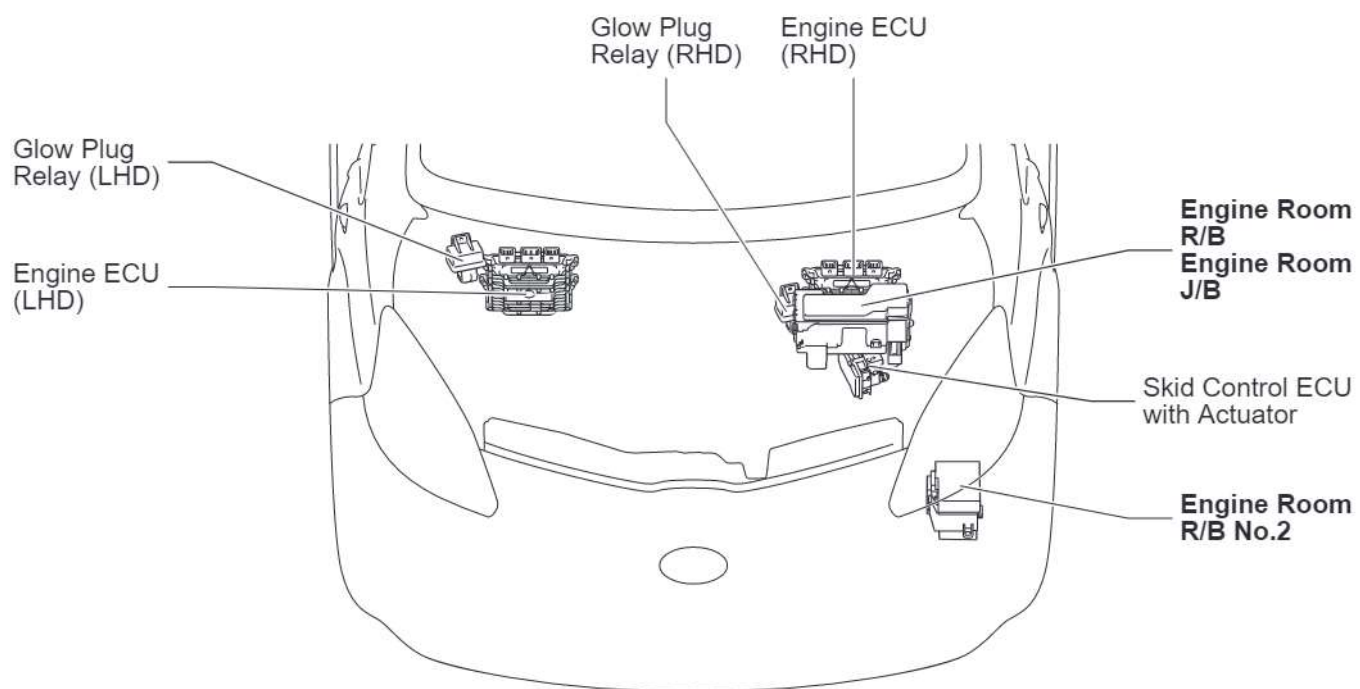


F RELAY LOCATIONS

[Engine Compartment] (1KR-FE)

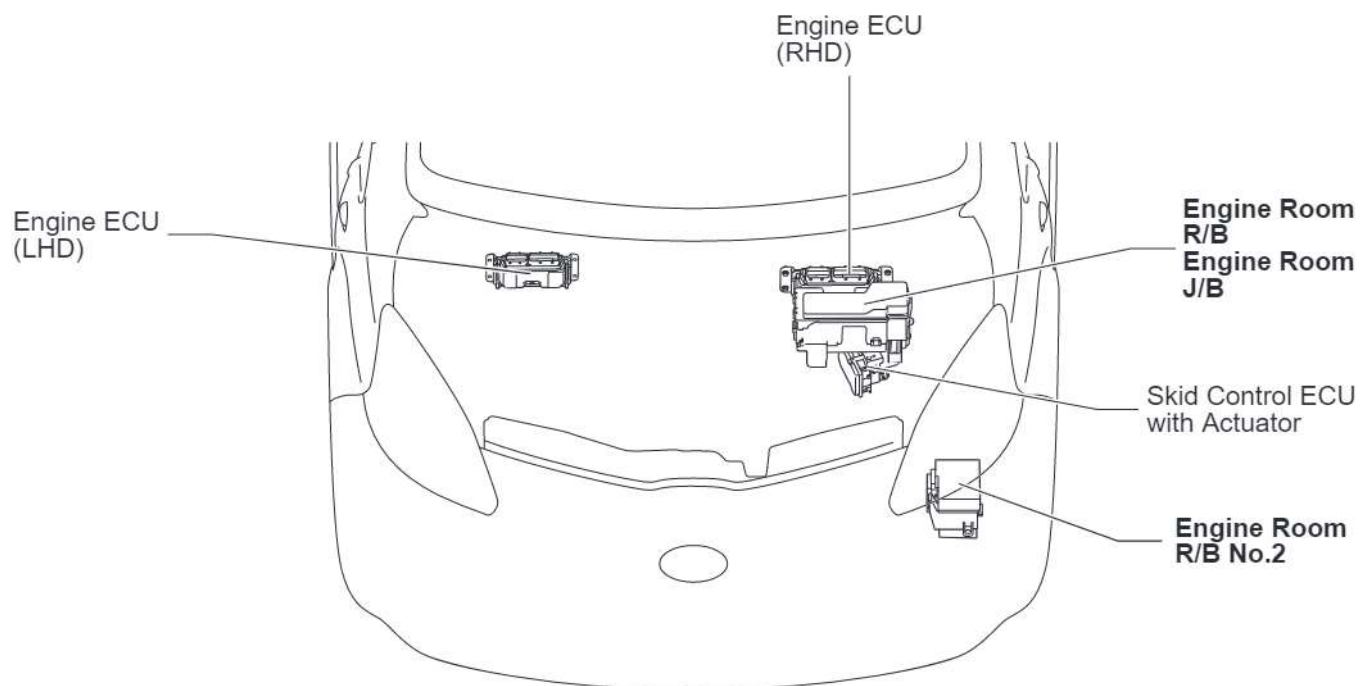

(2WZ-TV)

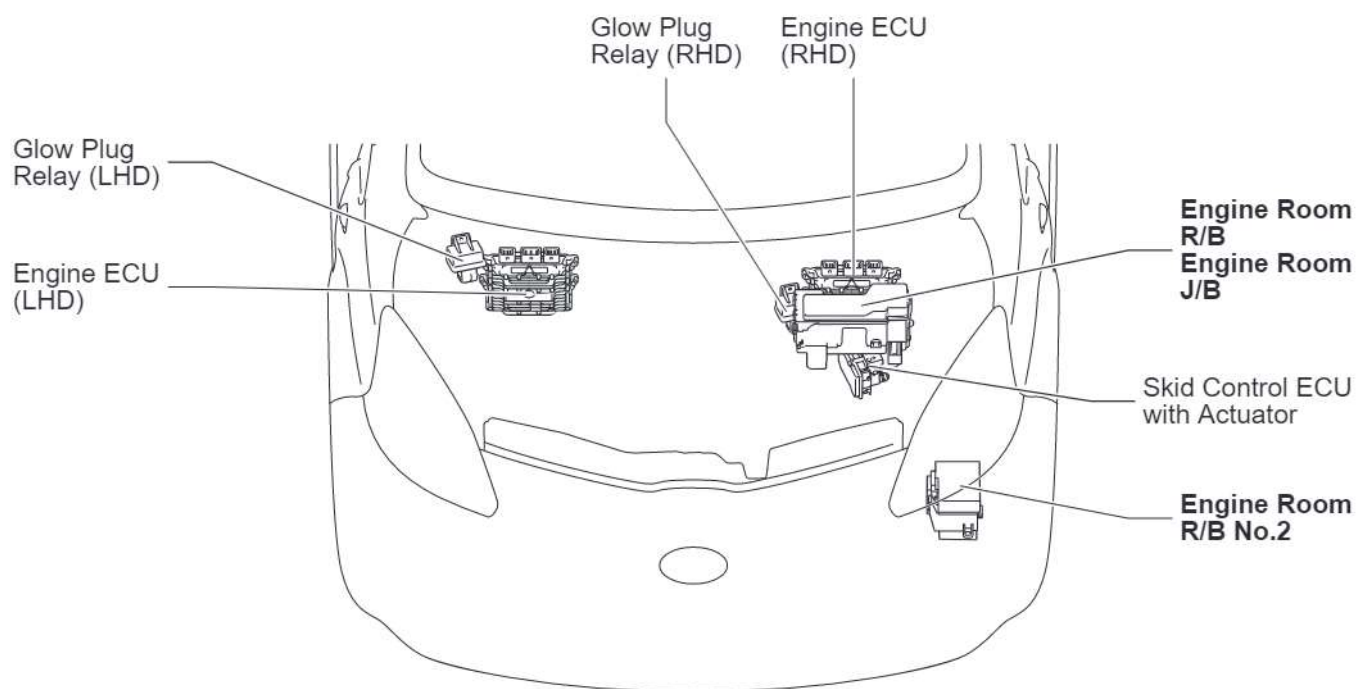


F RELAY LOCATIONS

○ : Center Connector


LHD : Left Side of the Instrument Panel Reinforcement (See Page 21)

RHD : Right Side of the Instrument Panel Reinforcement (See Page 21)


(LHD)

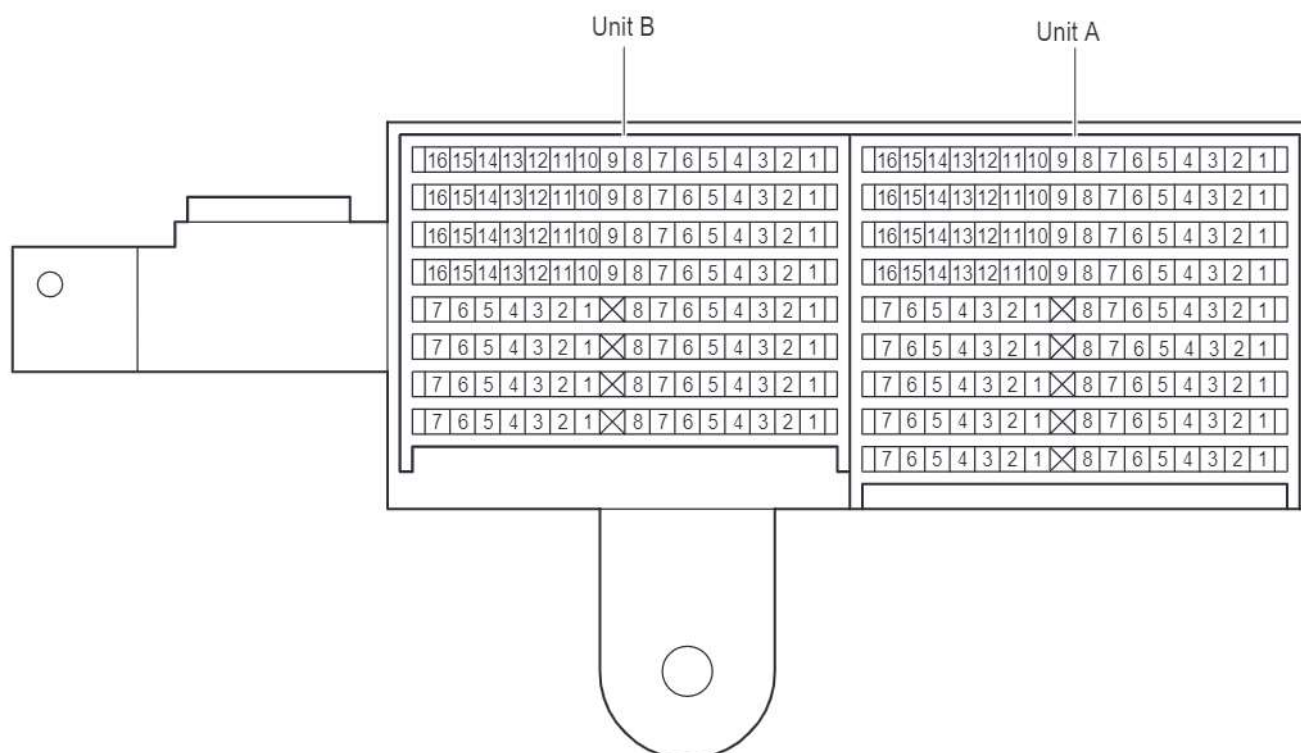


(RHD)

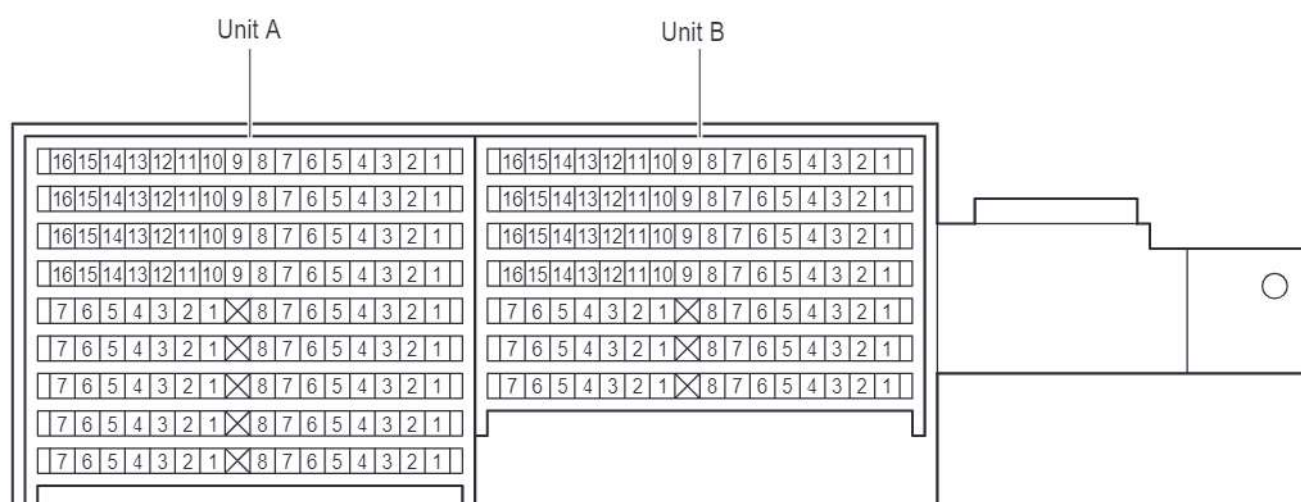

Unit A

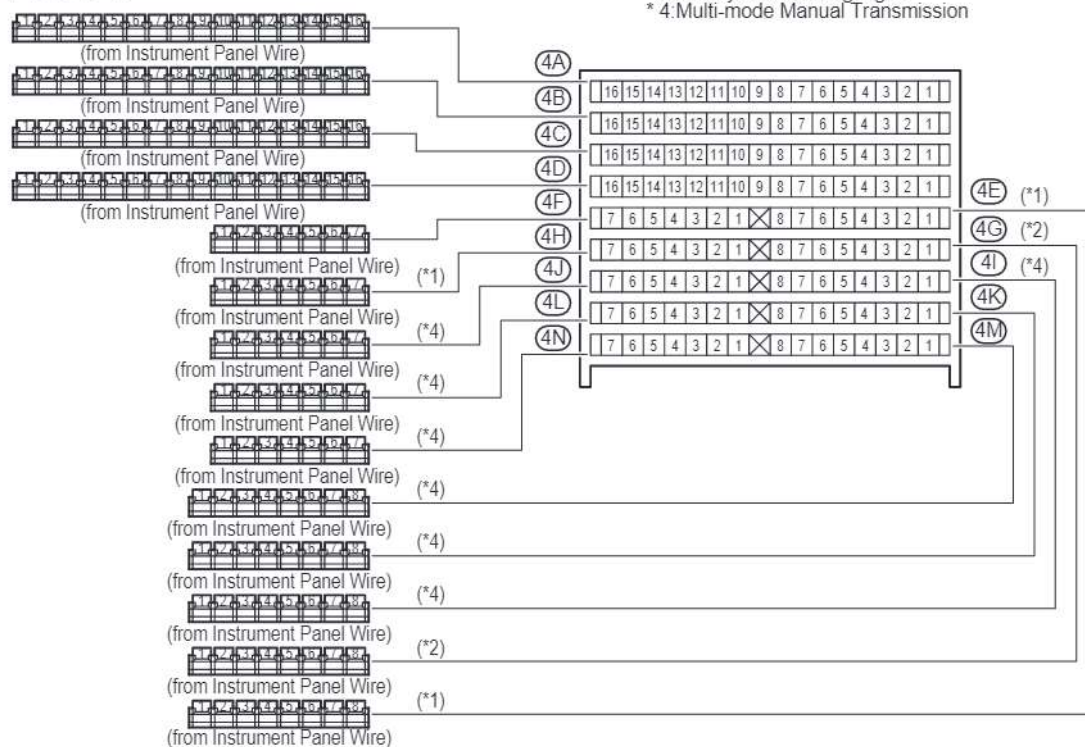


Unit B

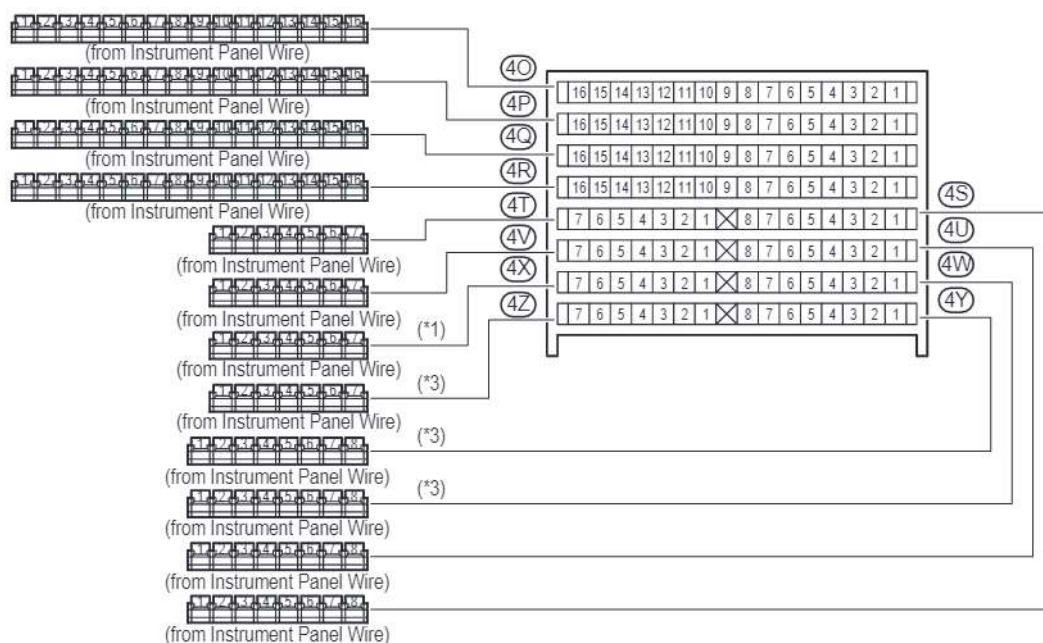

F RELAY LOCATIONS

[Center Connector Inner Circuit]

- * 1:Non-cold area spec. LHD w/o Door Lock Control, Air Conditioner, Daytime Running Light and EPS
- * 2:RHD, LHD Except *1
- * 7:w/o VSC

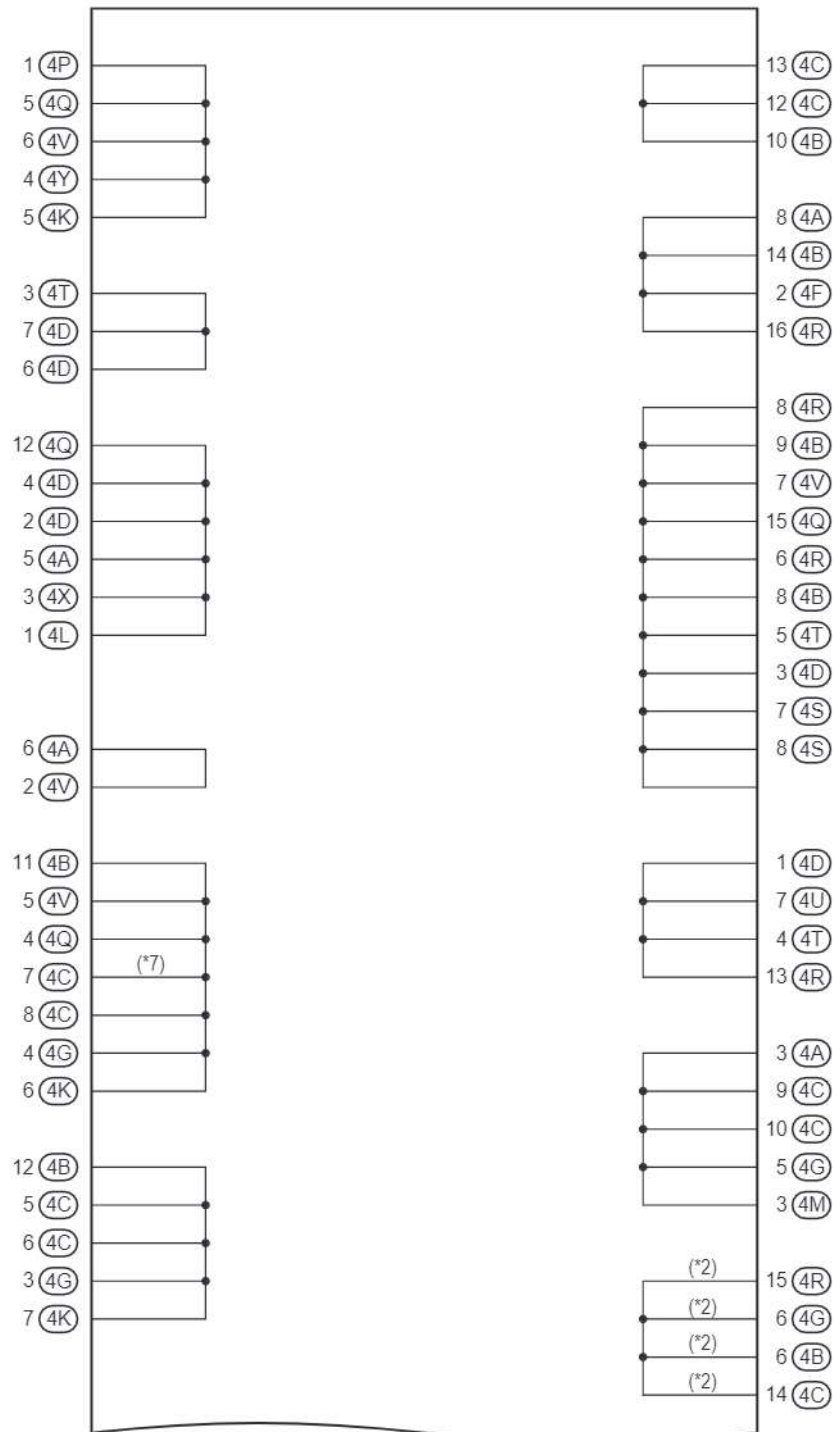

(Cont. Next Page)

* 1:Non-cold area spec. LHD w/o Door Lock Control, Air Conditioner, Daytime Running Light and EPS

* 2:RHD, LHD Except *1


* 3:w/ Daytime Running Light

* 4:Multi-mode Manual Transmission

* 5:w/o Daytime Running Light

* 6:w/ VSC

(Cont'd)

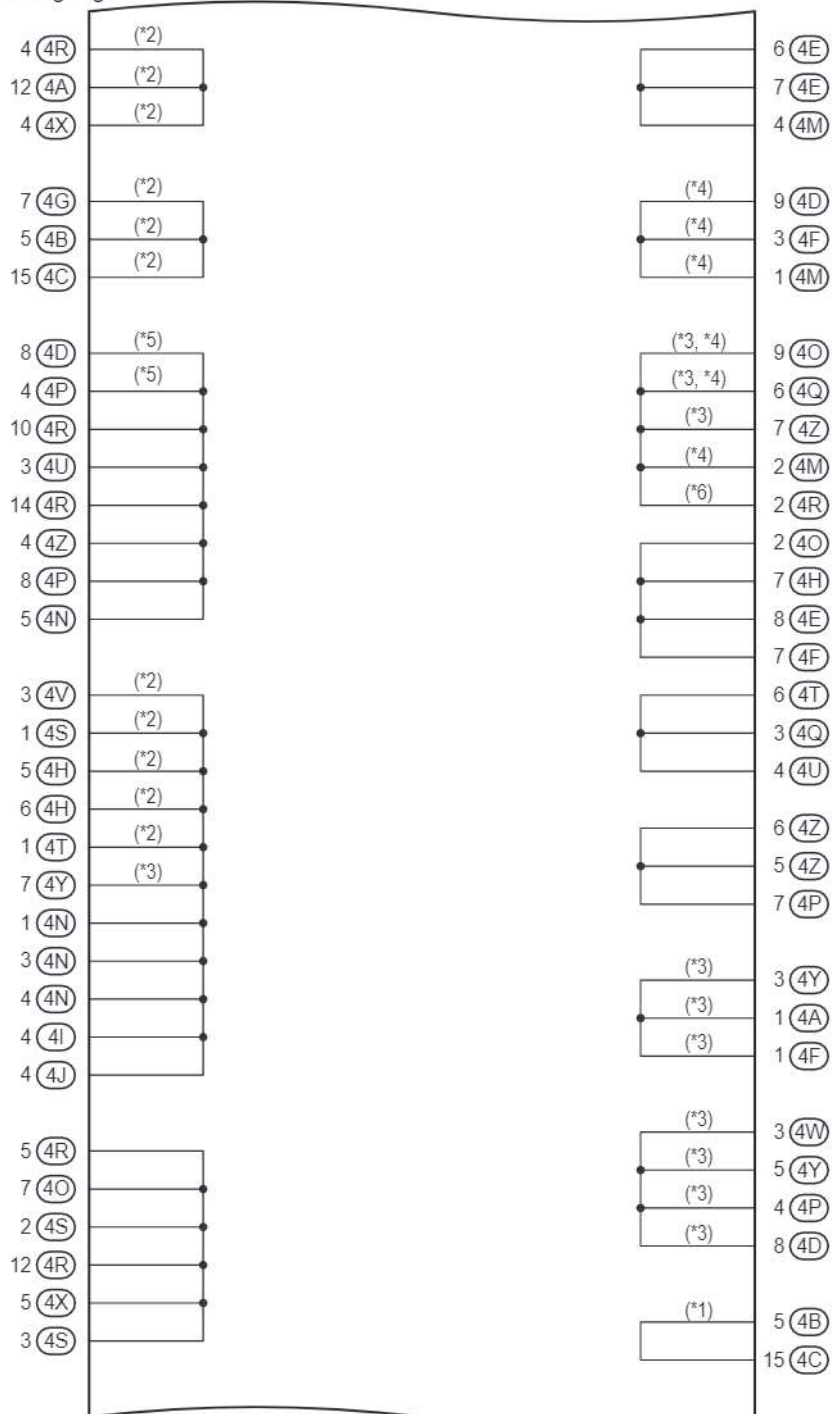

(Cont. Next Page)

F RELAY LOCATIONS

[Center Connector Inner Circuit]


* 1:Non-cold area spec. LHD w/o Door Lock Control, Air Conditioner, Daytime Running Light and EPS

* 5:w/o Daytime Running Light

* 6:w/ VSC

* 7:w/o VSC

(Cont'd)

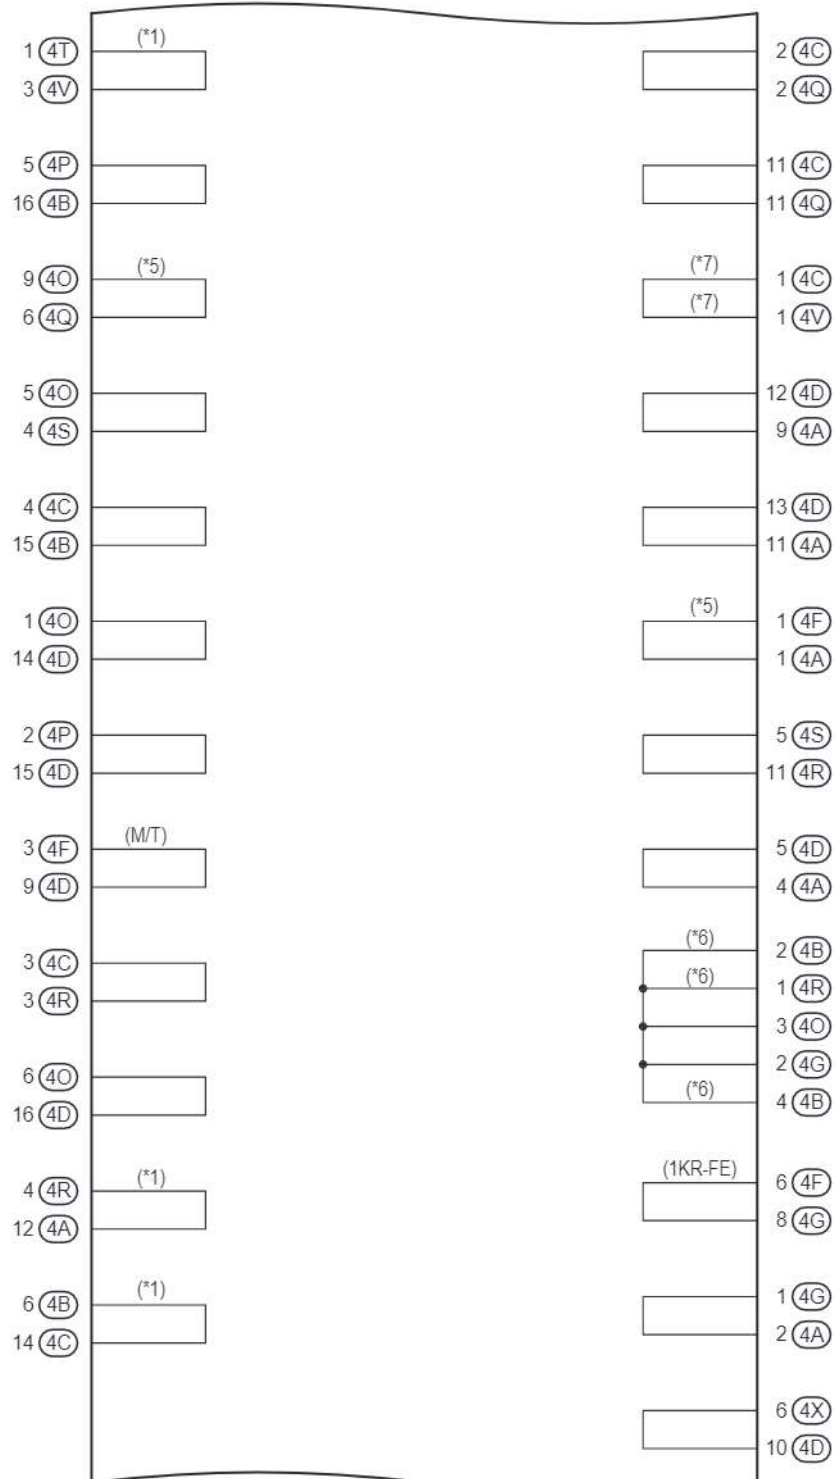

(Cont. Next Page)

* 6:w/ VSC


(Cont'd)

7 (4X)			6 (4L)
11 (4D)			6 (4N)
2 (4H)			5 (4I)
2 (4E)			2 (4K)
1 (4H) (1KR-FE)			2 (4J)
1 (4E)			5 (4L)
3 (4H) (1KR-FE)			2 (4I)
3 (4E)			4 (4K)
7 (4T)			3 (4I)
1 (4W)			3 (4K)
4 (4E)			3 (4J)
1 (4Y)			4 (4L)
5 (4E)			6 (4I)
2 (4Y)			1 (4K)
9 (4P)			6 (4J)
2 (4Z)			2 (4L)
8 (4O)			5 (4J)
3 (4Z)			3 (4L)
1 (4Z)			7 (4L)
8 (4W)			7 (4N)
1 (4H) (2WZ-TV)		(^{*6})	1 (4B)
3 (4H)		(^{*6})	5 (4F)
16 (4C)			
10 (4A)			

F RELAY LOCATIONS


② : Engine Room R/B No.2 Radiator Side Support LH (See Page 20)

* 1: Multi-mode Manual Transmission
* 2: w/ PTC Heater

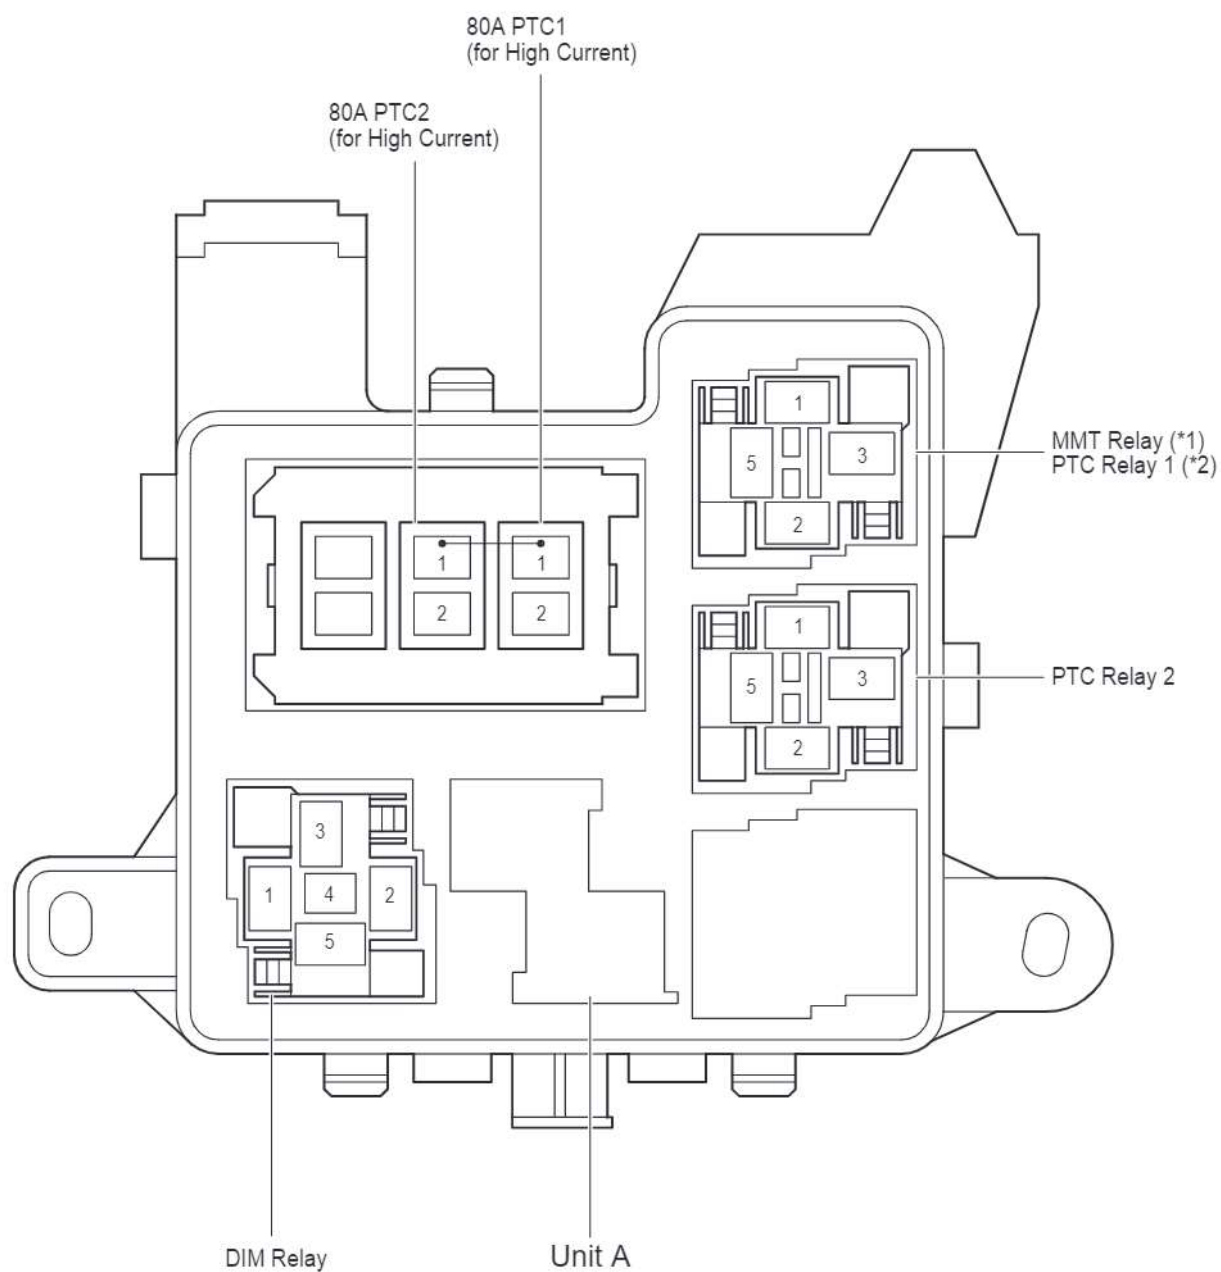


Unit A

(Before Feb. 2012 Production)

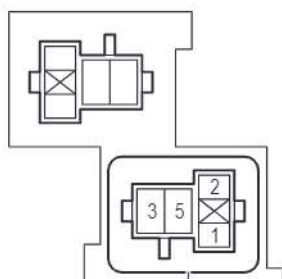

H-LP Relay

(From Feb. 2012 Production)

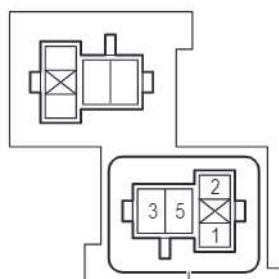


DRL Relay


F RELAY LOCATIONS

① : Engine Room R/B	Engine Compartment Left (See Page 20)
② : Engine Room J/B	

Upper View

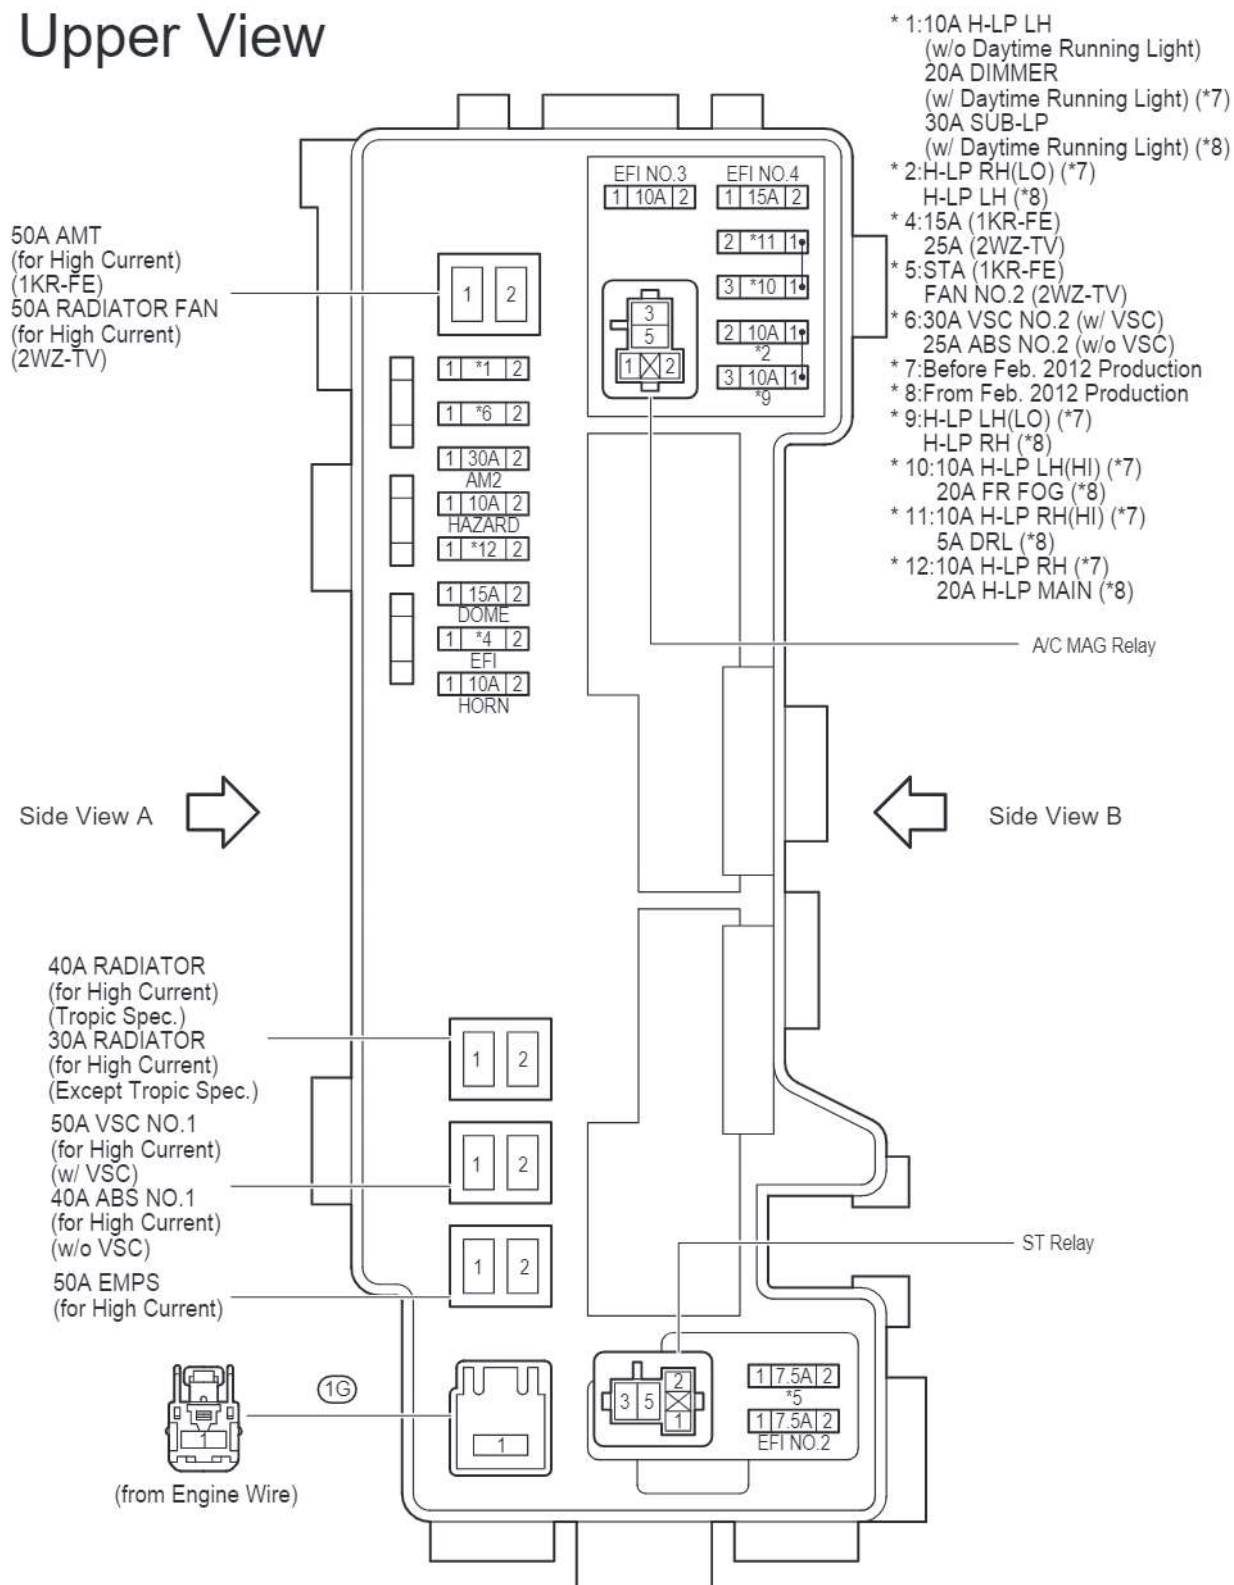

Under View

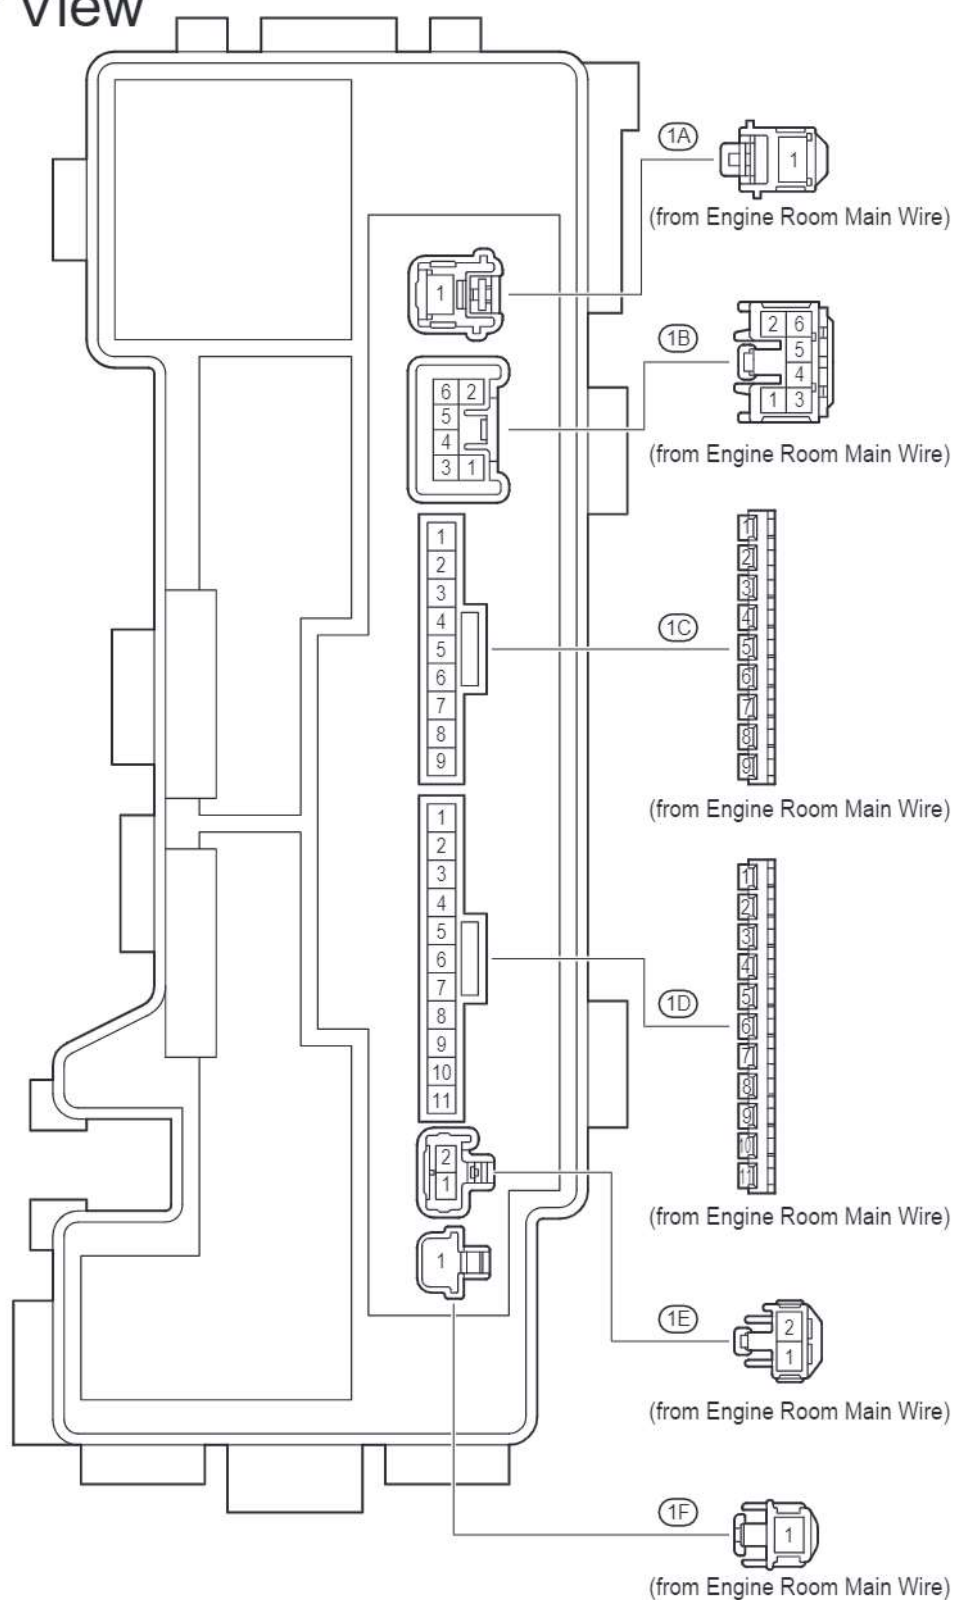


 : Engine Room J/B

Side View A



Side View B

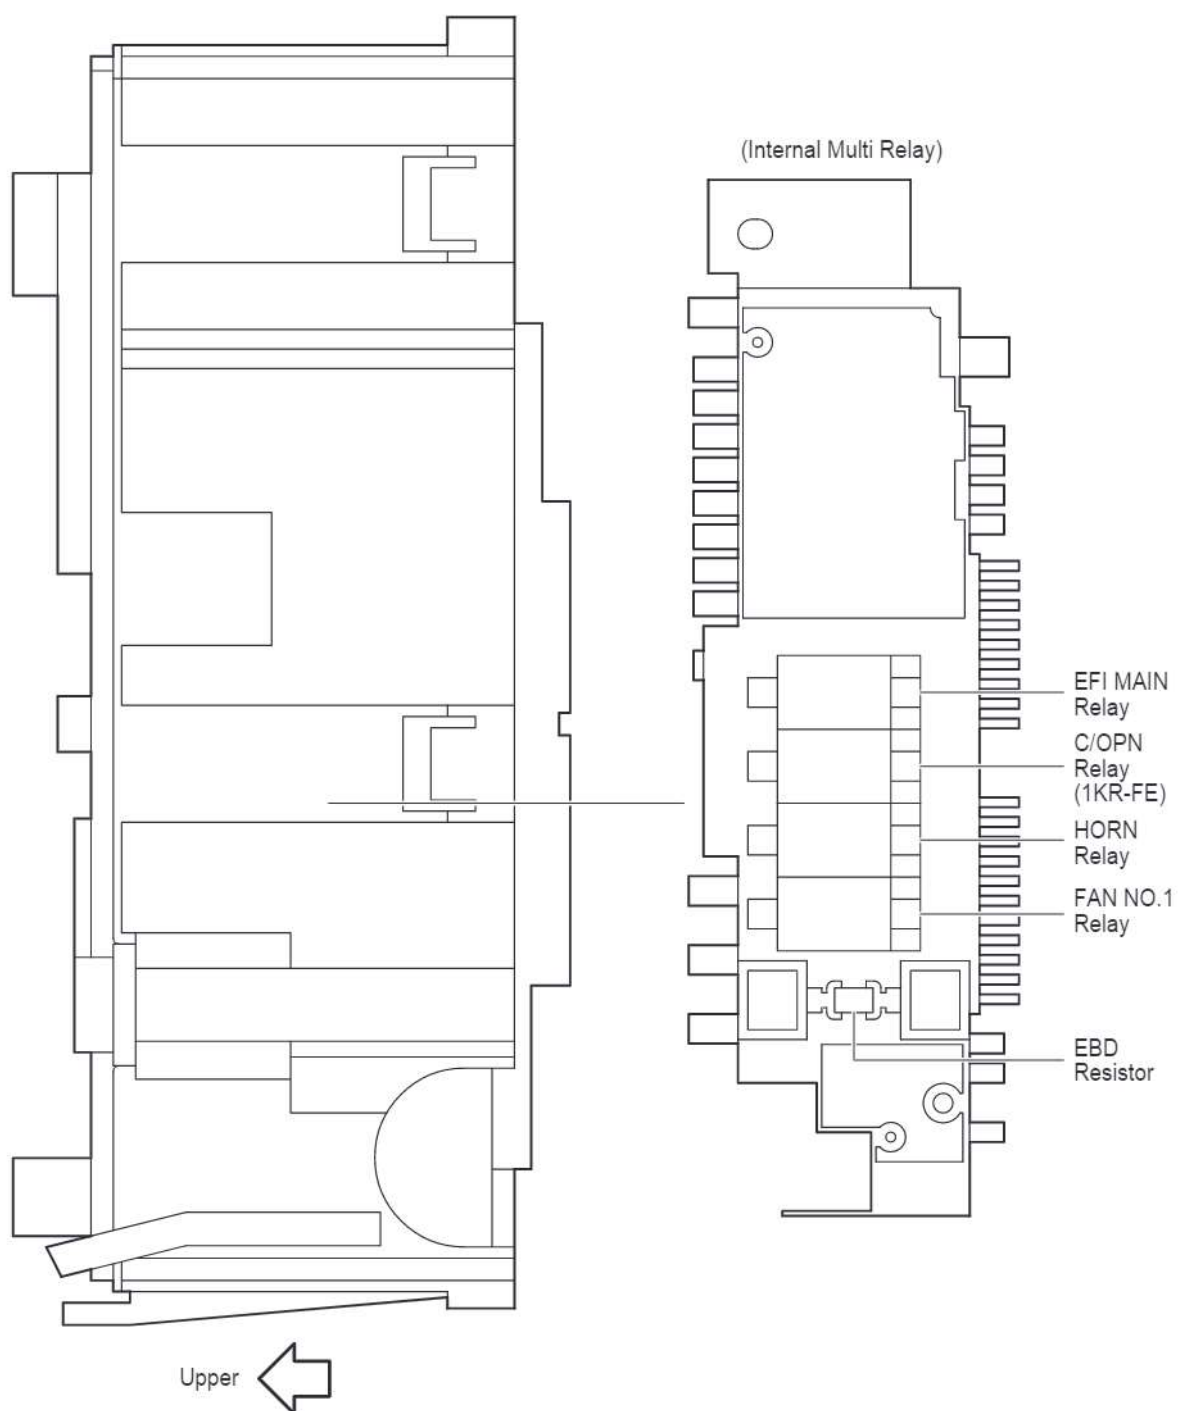


F RELAY LOCATIONS

[Engine Room R/B and Engine Room J/B Inner Circuit]

- * 1:w/ Daytime Running Light
- * 2:w/o Daytime Running Light
- * 3:1KR-FE
- * 4:2WZ-TV
- * 5:w/ VSC
- * 6:w/o VSC


- * 7:Tropic Spec.
- * 8:Except Tropic Spec.

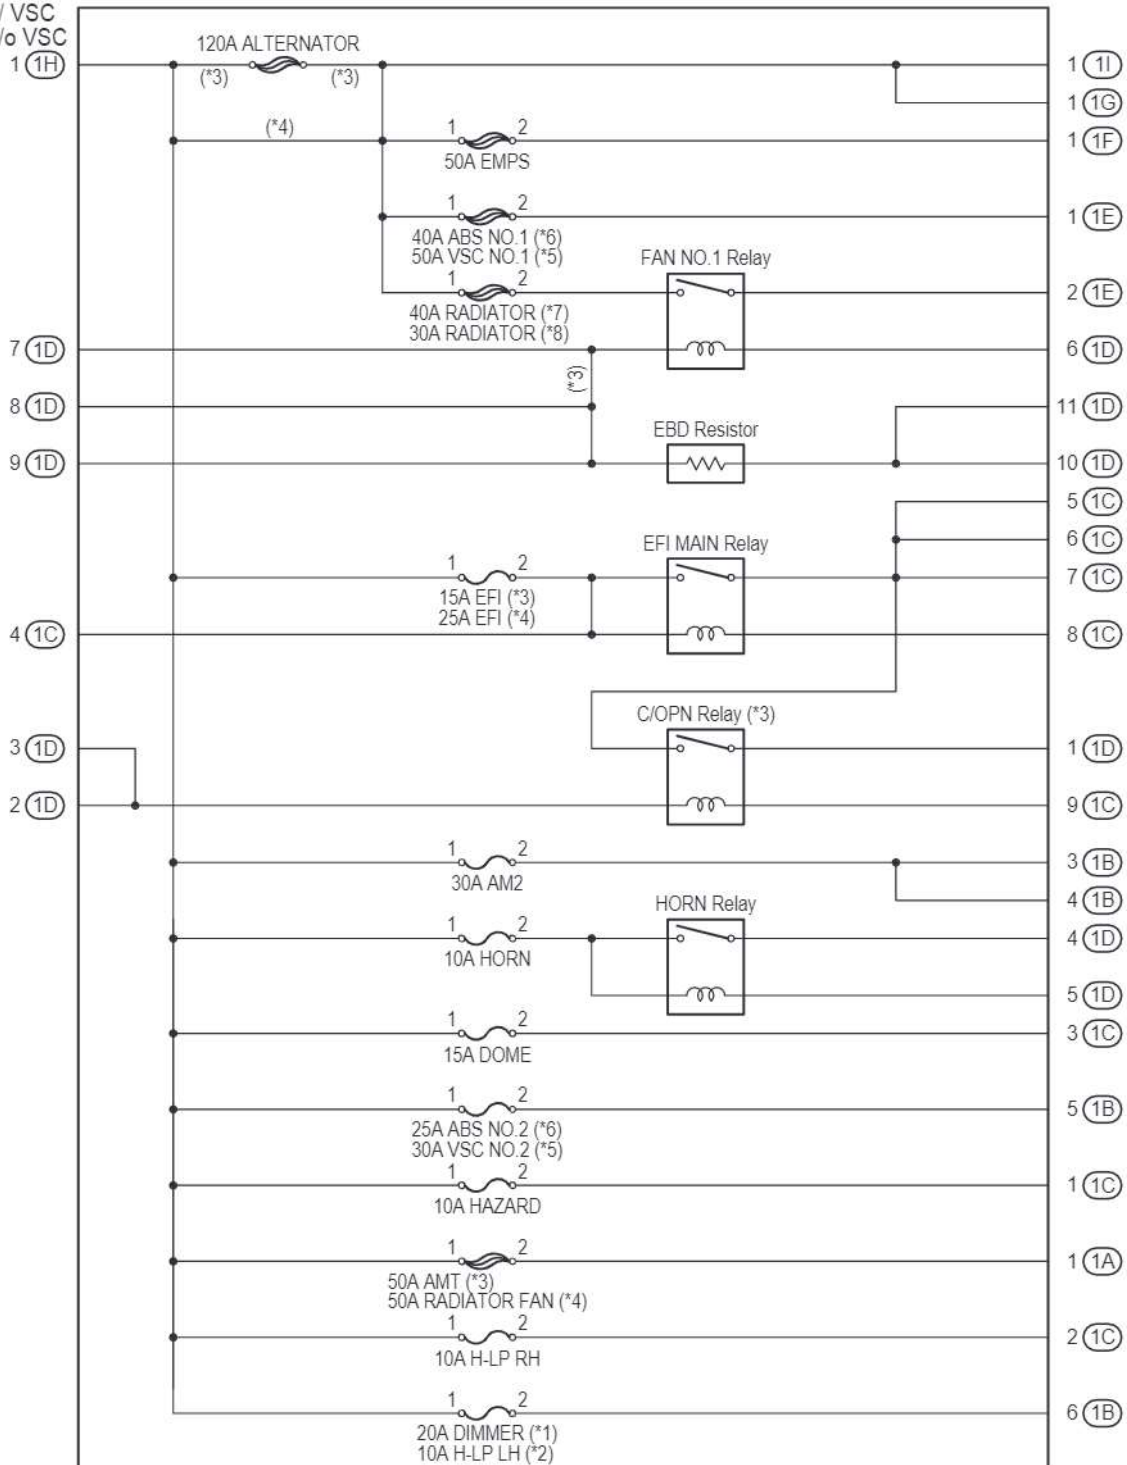


F RELAY LOCATIONS

○ : Instrument Panel J/B

Rear Side of the Combination Meter (See Page 21)

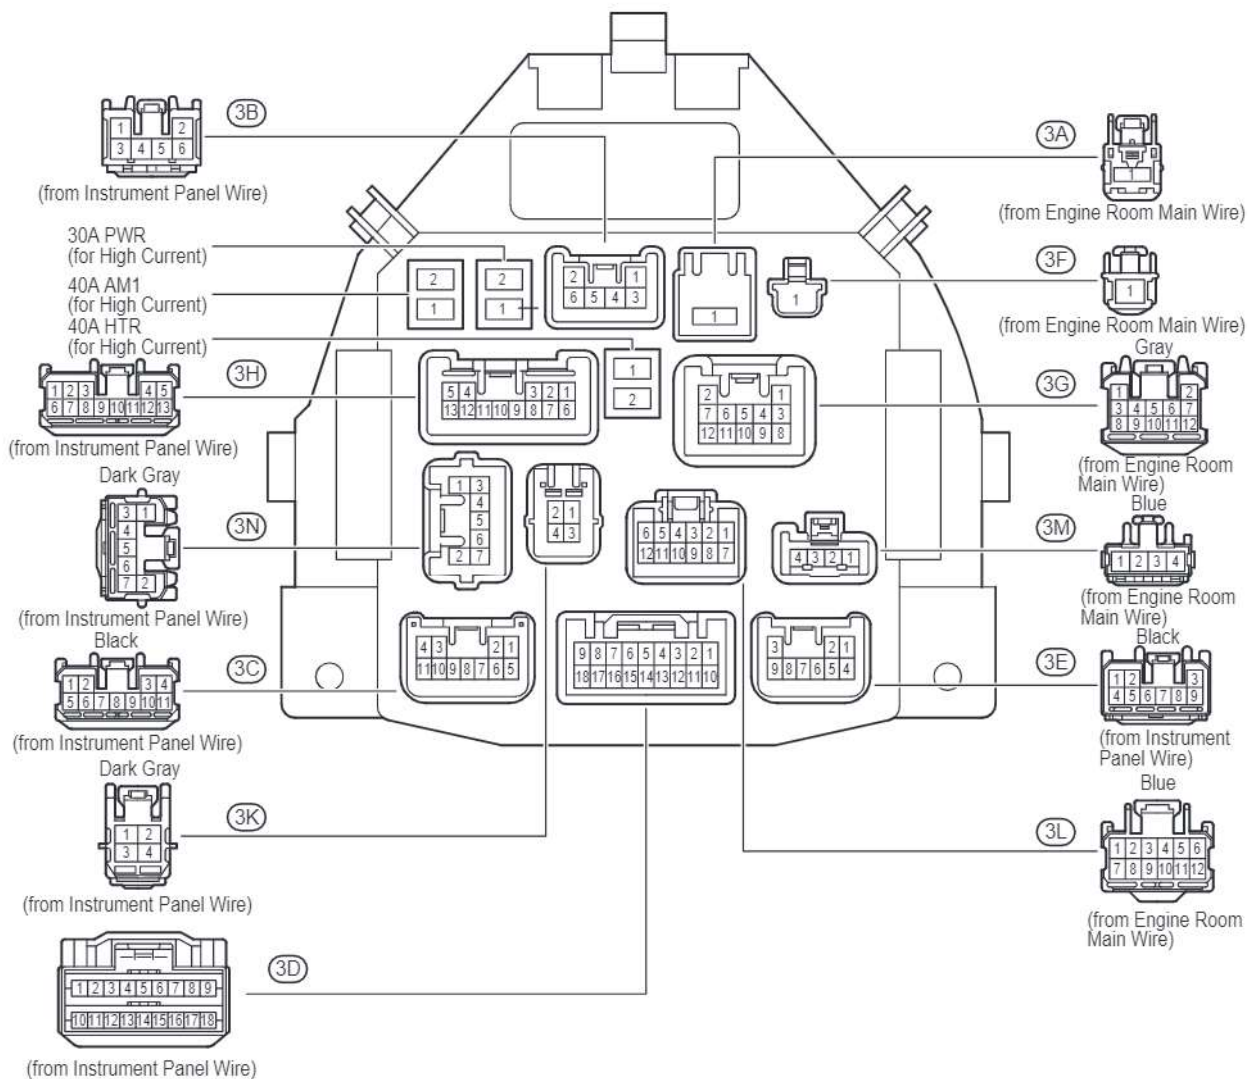


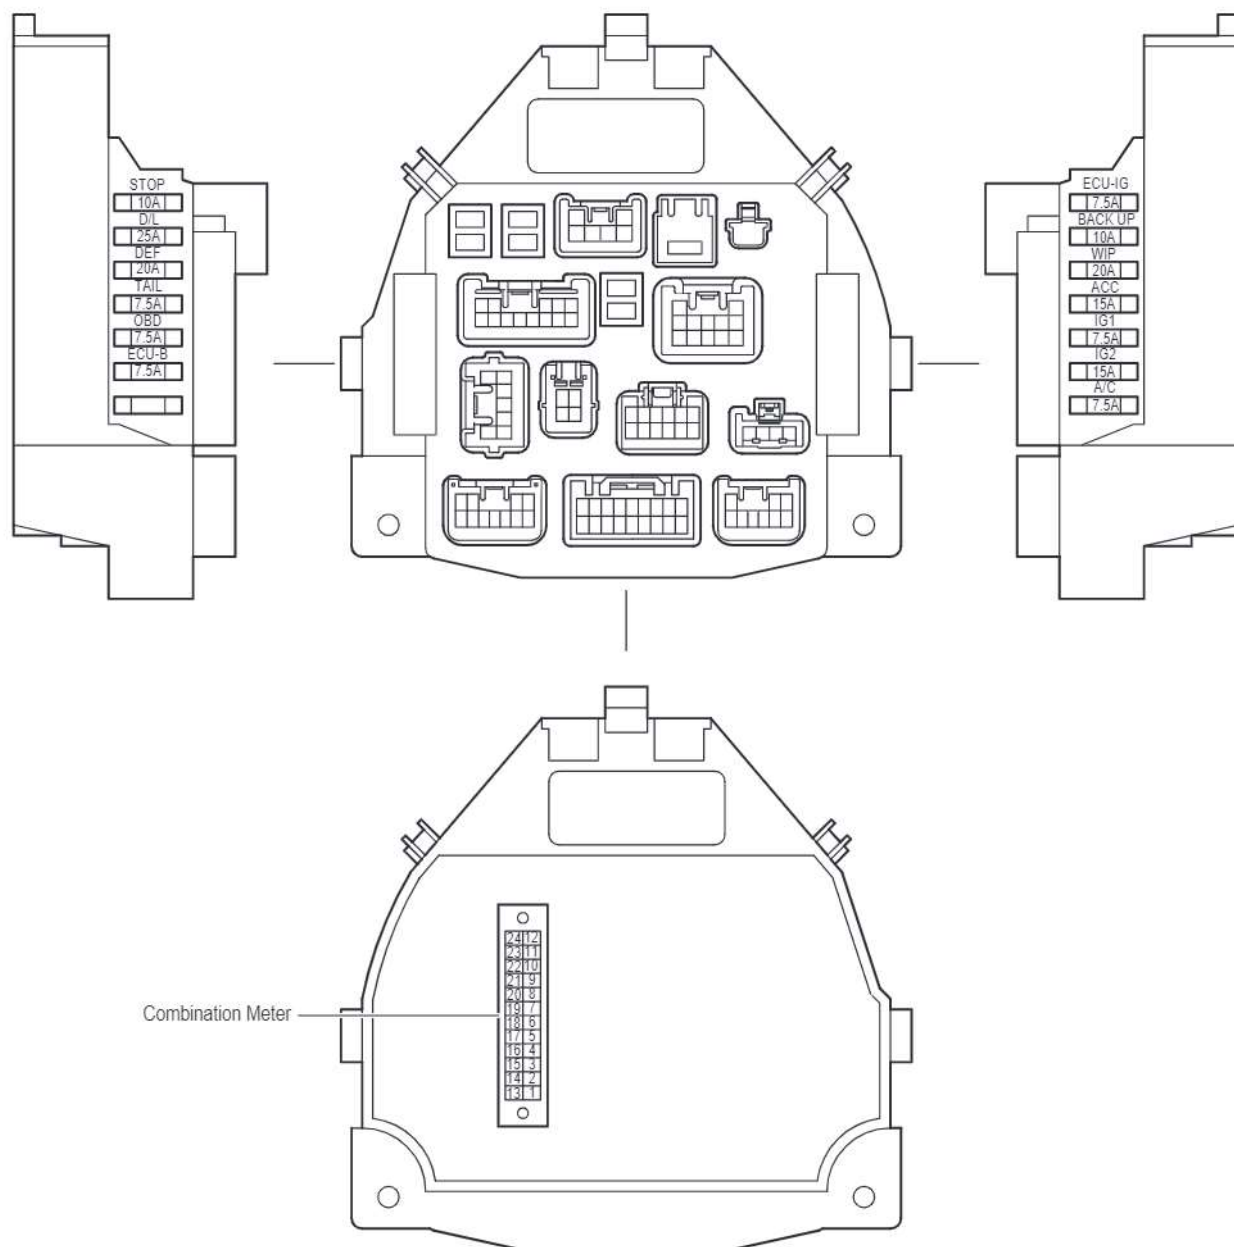

F RELAY LOCATIONS

[Instrument Panel J/B Inner Circuit]


* 2:w/o Daytime Running Light

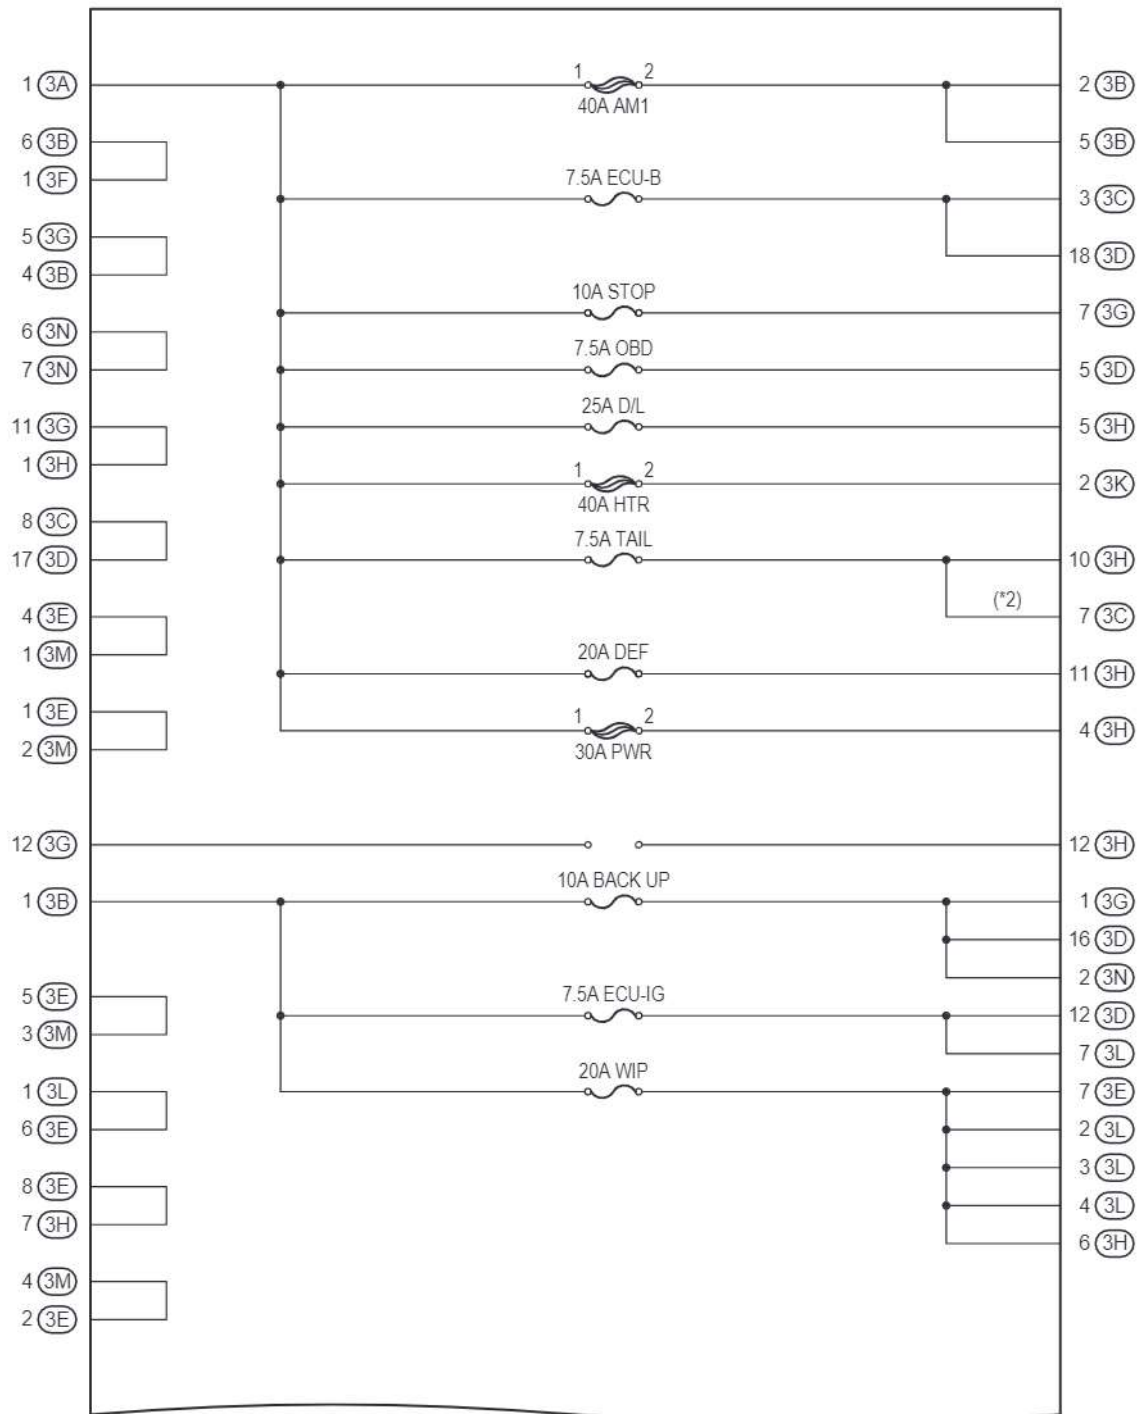


(Cont. Next Page)




[Instrument Panel] (LHD)

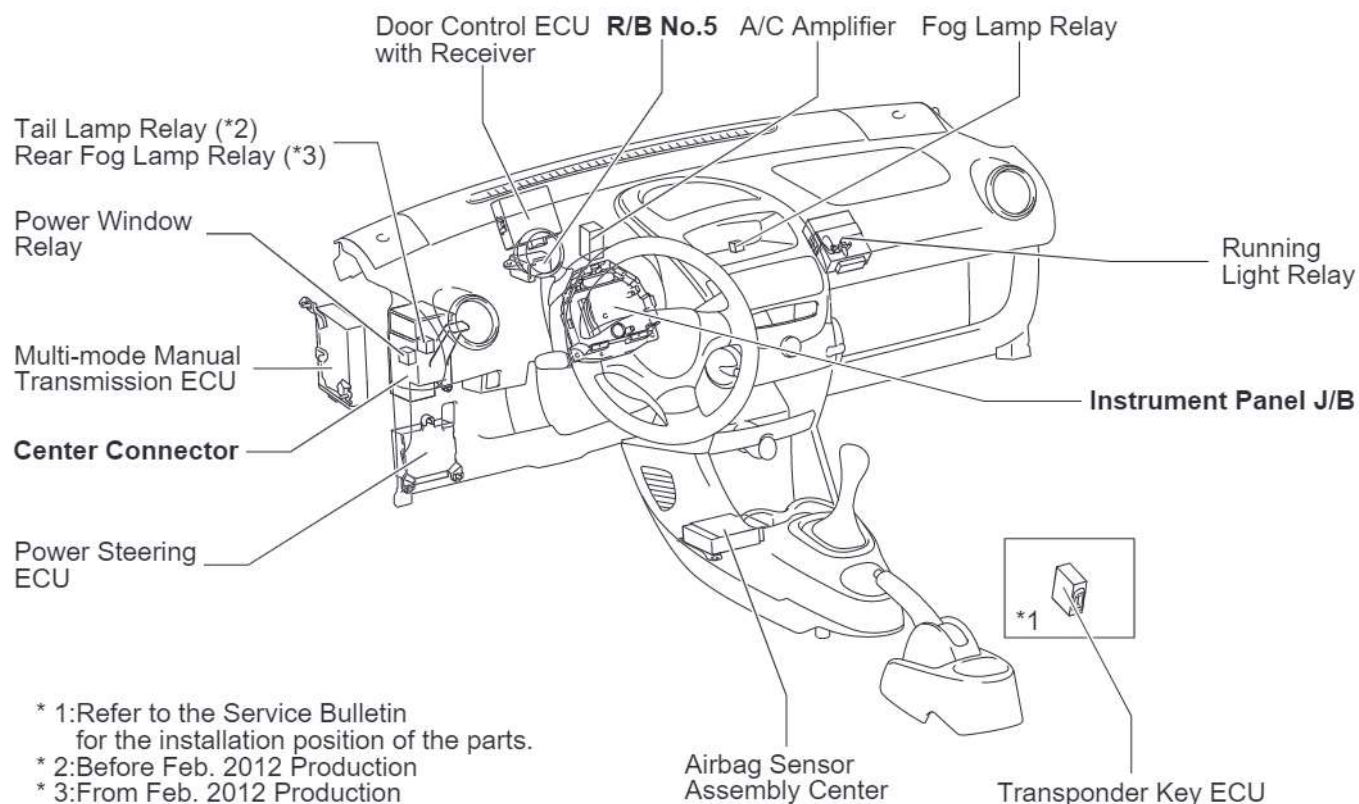


(RHD)

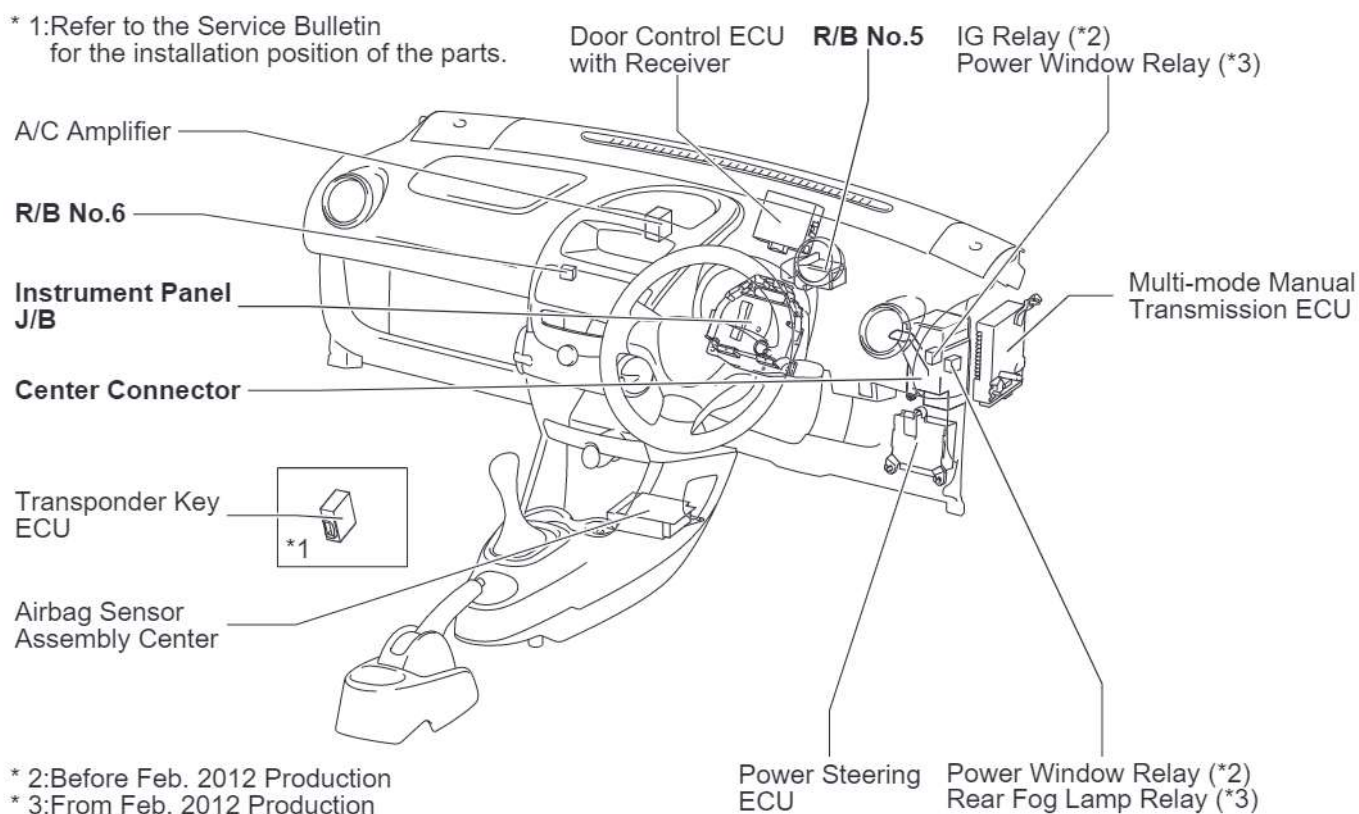

[Instrument Panel] (LHD)

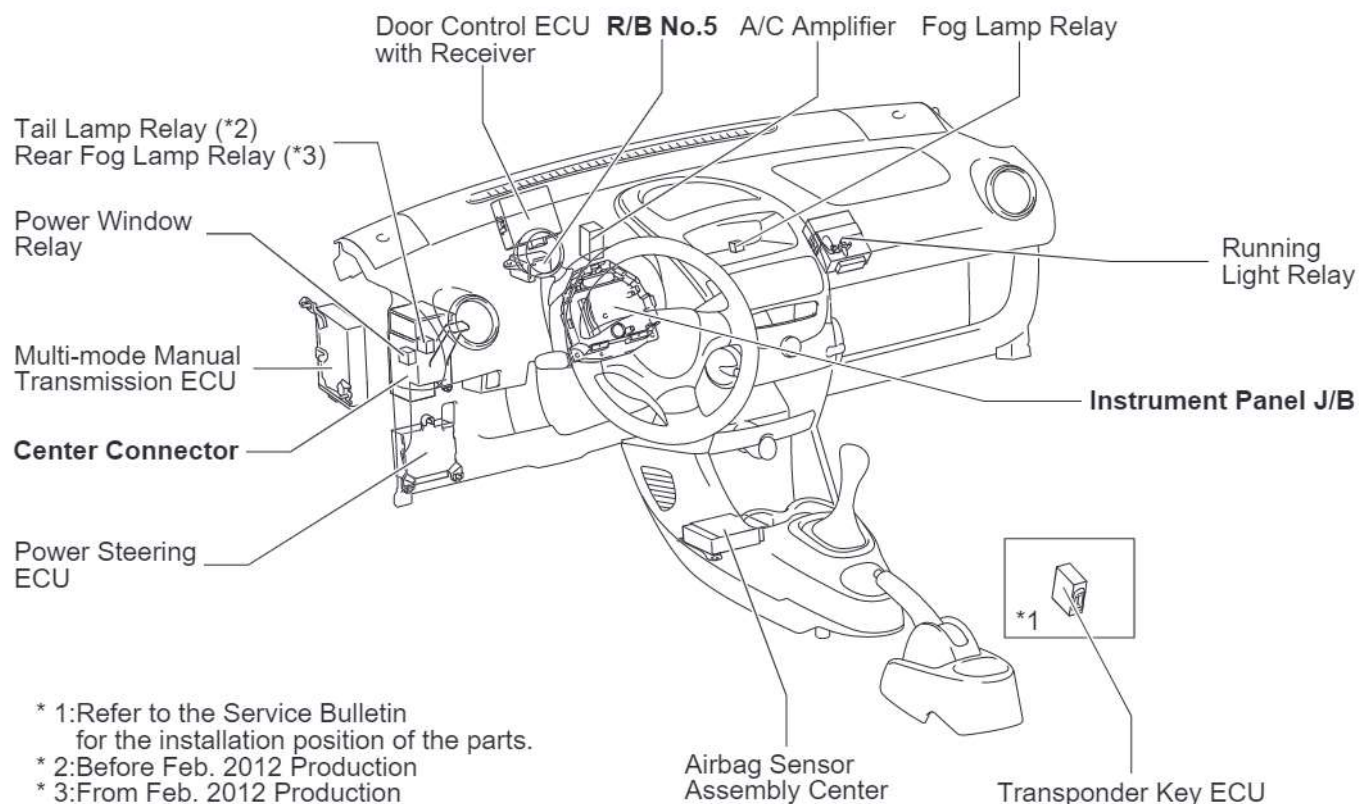

(RHD)

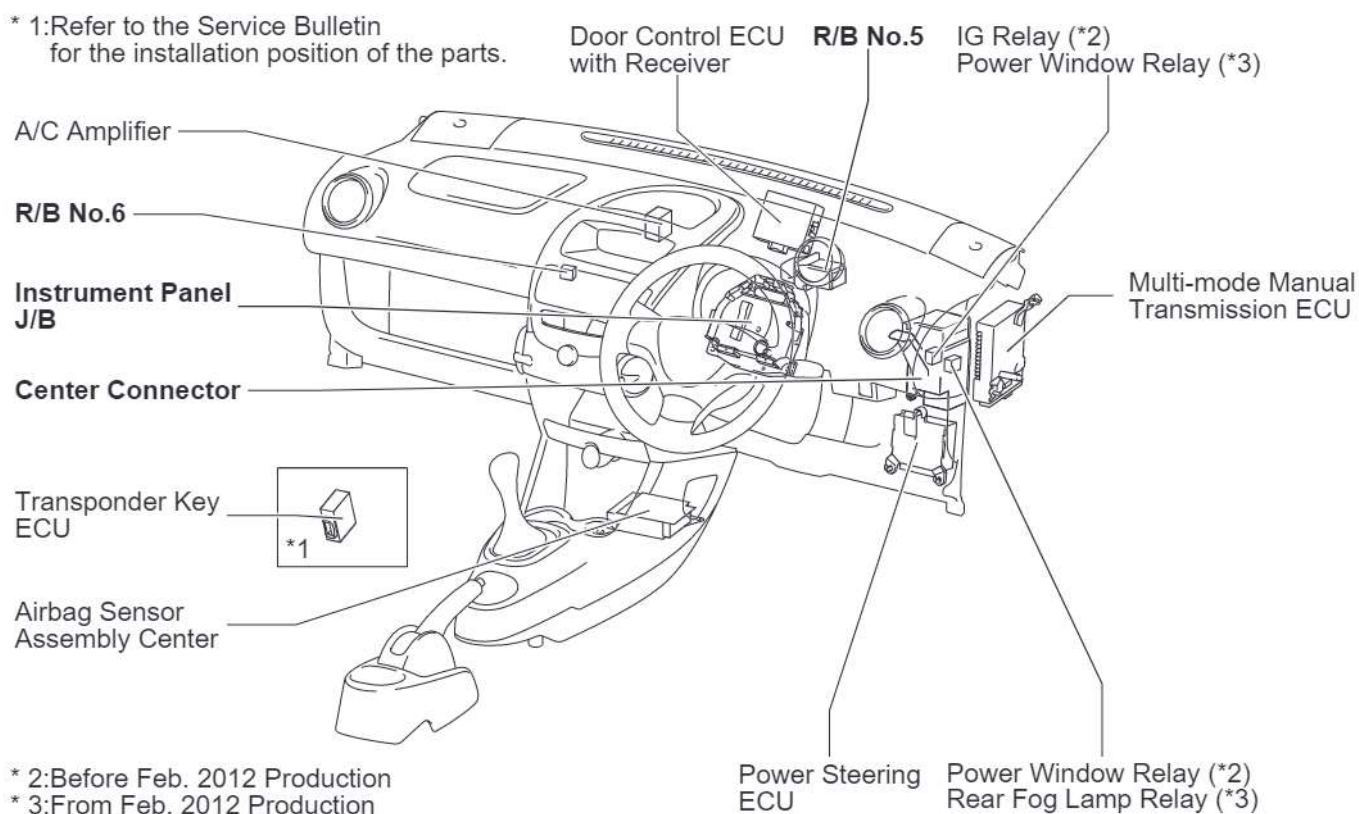


F RELAY LOCATIONS


⑤ : R/B No.5

Rear Side of the Combination Meter (See Page 21)

(LHD)

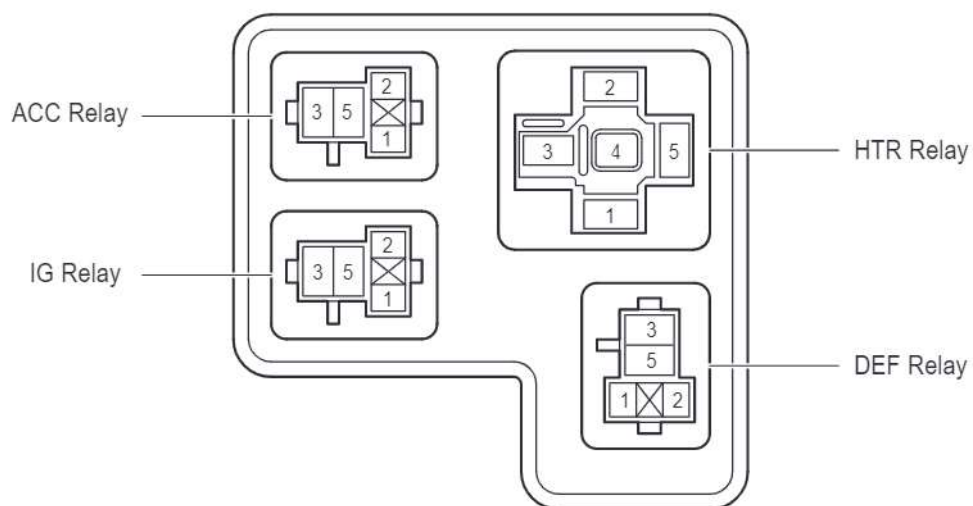

(RHD)

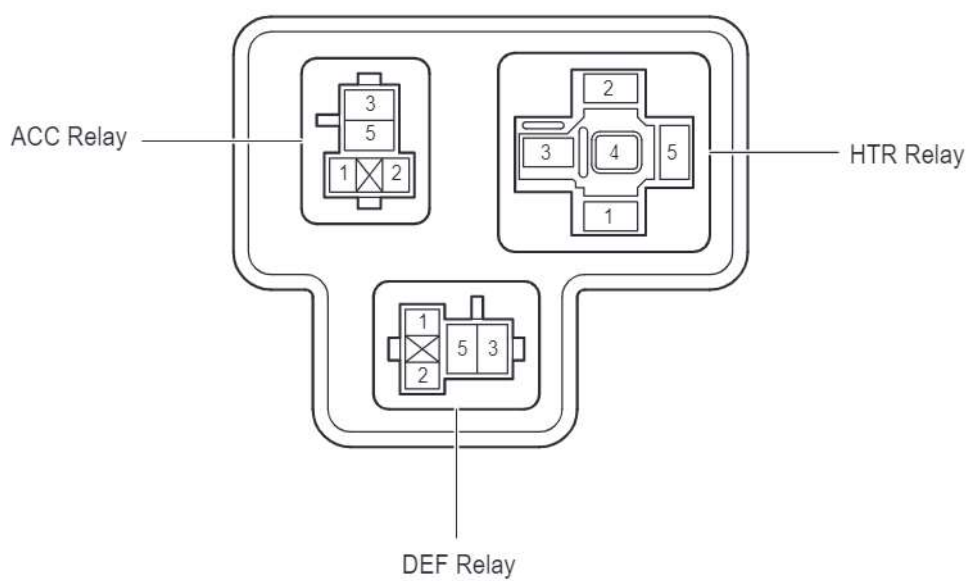

⑥ : R/B No.6

Instrument Panel Reinforcement (See Page 21)

