

ACCESSORIES & EQUIPMENT

Transmitter Battery (w/o Smart Key) (Service Information) - Sienna


TRANSMITTER BATTERY (W/O SMART KEY SYSTEM)

REPLACEMENT

REPLACEMENT

1. REMOVE TRANSMITTER HOUSING COVER

- a. Using a screwdriver with its tip wrapped in protective tape, pry apart the transmitter housing cover.

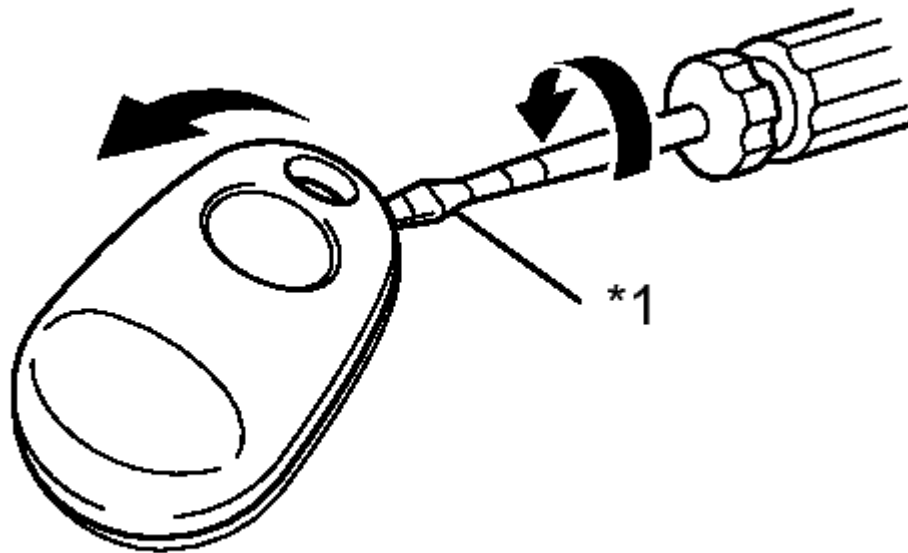

Y

Fig. 1: Prying Apart Transmitter Housing Cover

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.


TEXT IN ILLUSTRATION

*1	Protective Tape
----	--------------------

NOTE: Do not use excessive force when prying apart the housing cover.

2. REMOVE TRANSMITTER BATTERY

- a. Remove the battery (lithium battery).

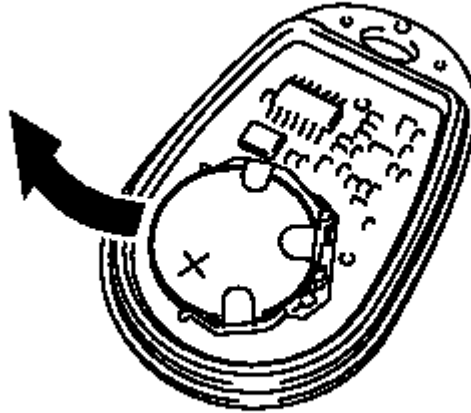

Y

Fig. 2: Removing Battery From Transmitter


Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

NOTE:

- Do not push the terminals with your finger.
- Do not forcibly pry up the battery (lithium battery). The terminals may be damaged.
- Do not touch the battery with wet hands. Water may cause rust.
- Do not touch or move any components inside the transmitter. It may interfere with proper operation.

3. INSTALL TRANSMITTER BATTERY

- a. Install a battery (lithium battery) with the positive (+) side up, as shown in the illustration.

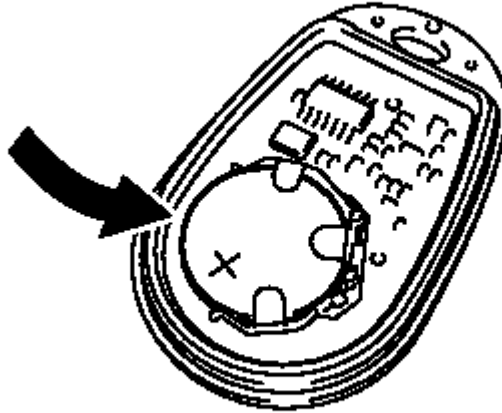

Y

Fig. 3: Installing Transmitter Battery


Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

NOTE:

- Make sure that the positive (+) side and the negative (-) side of the transmitter battery are correctly matched with the transmitter terminals.
- Do not bend the transmitter battery electrode during insertion.
- Keep the transmitter cover interior free of dust and oil.

4. INSTALL TRANSMITTER HOUSING COVER

- a. Install the transmitter housing cover onto the transmitter housing case securely.

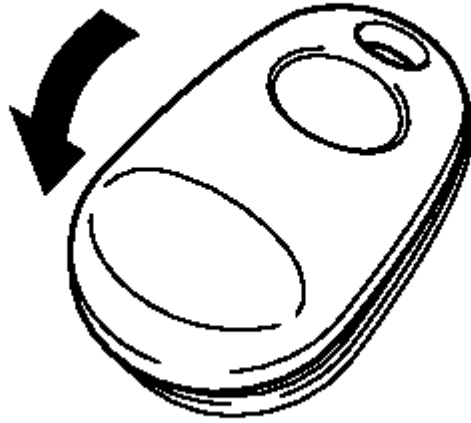

Y

Fig. 4: Installing Transmitter Housing Cover
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.