



G ELECTRICAL WIRING ROUTING


□	: Location of Connector Joining Wire Harness and Wire Harness
▽	: Location of Ground Points

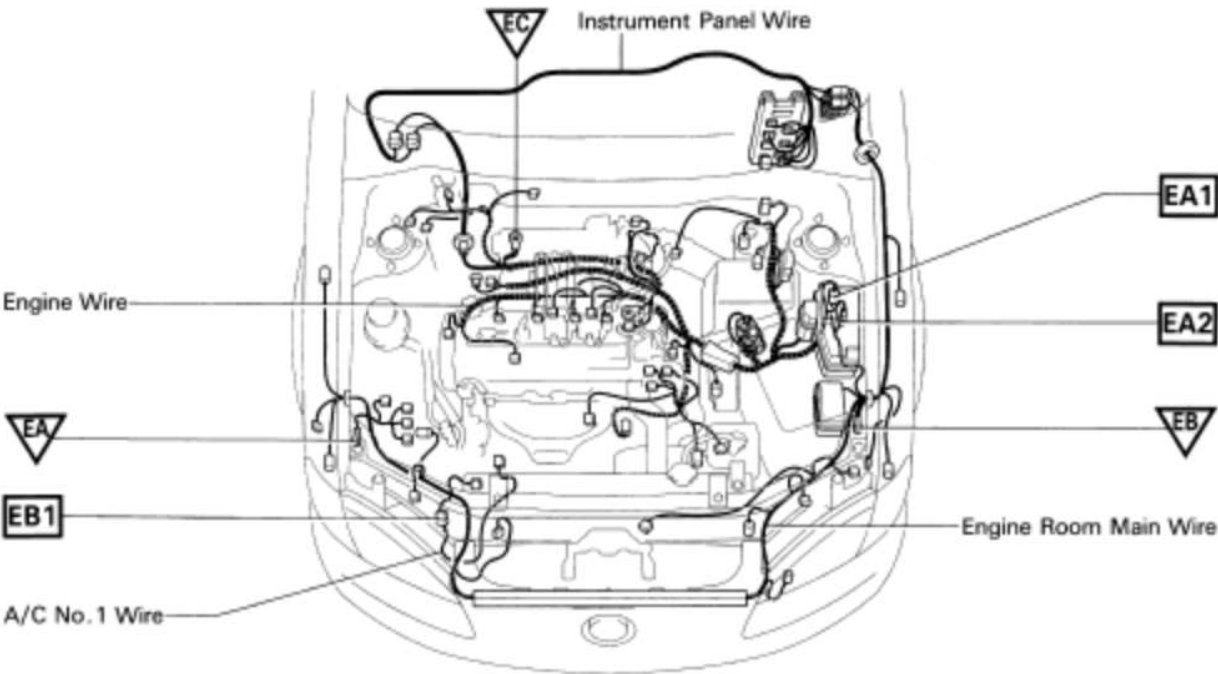

○	: Location of Splice Points
---	-----------------------------

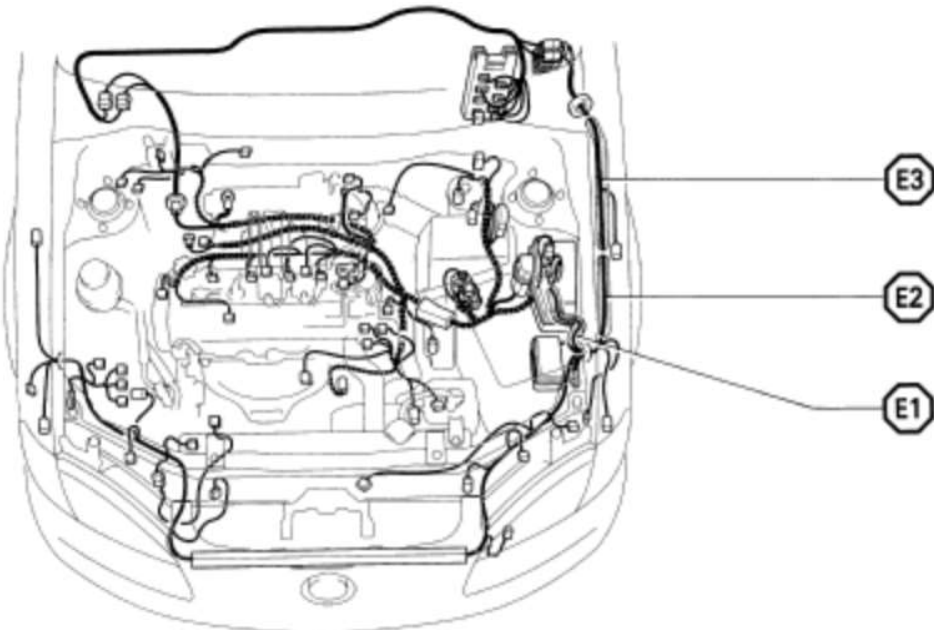

Connector Joining Wire Harness and Wire Harness

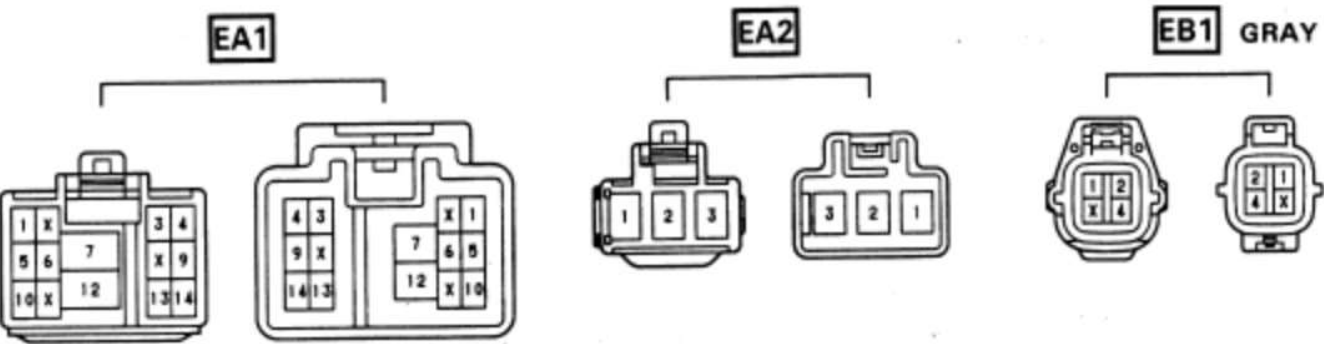


CODE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
EA1	ENGINE ROOM MAIN WIRE AND ENGINE ROOM MAIN WIRE (INSIDE OF THE ENGINE ROOM R/B)
EA2	
EB1	A/C NO.1 WIRE AND ENGINE ROOM MAIN WIRE (NEAR THE RADIATOR SUPPORT RH)


cardiagn.com

G ELECTRICAL WIRING ROUTING


□ : Location of Connector Joining Wire Harness and Wire Harness

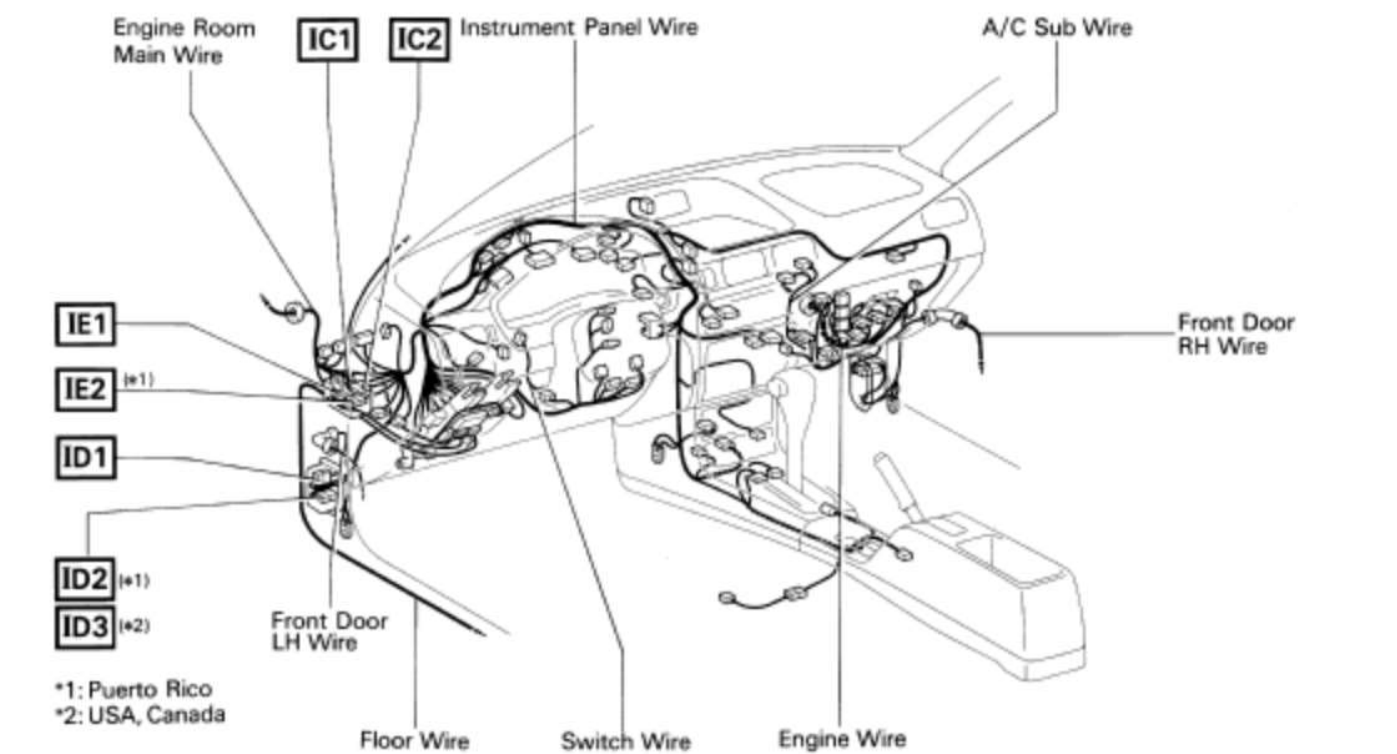

▽ : Location of Ground Points

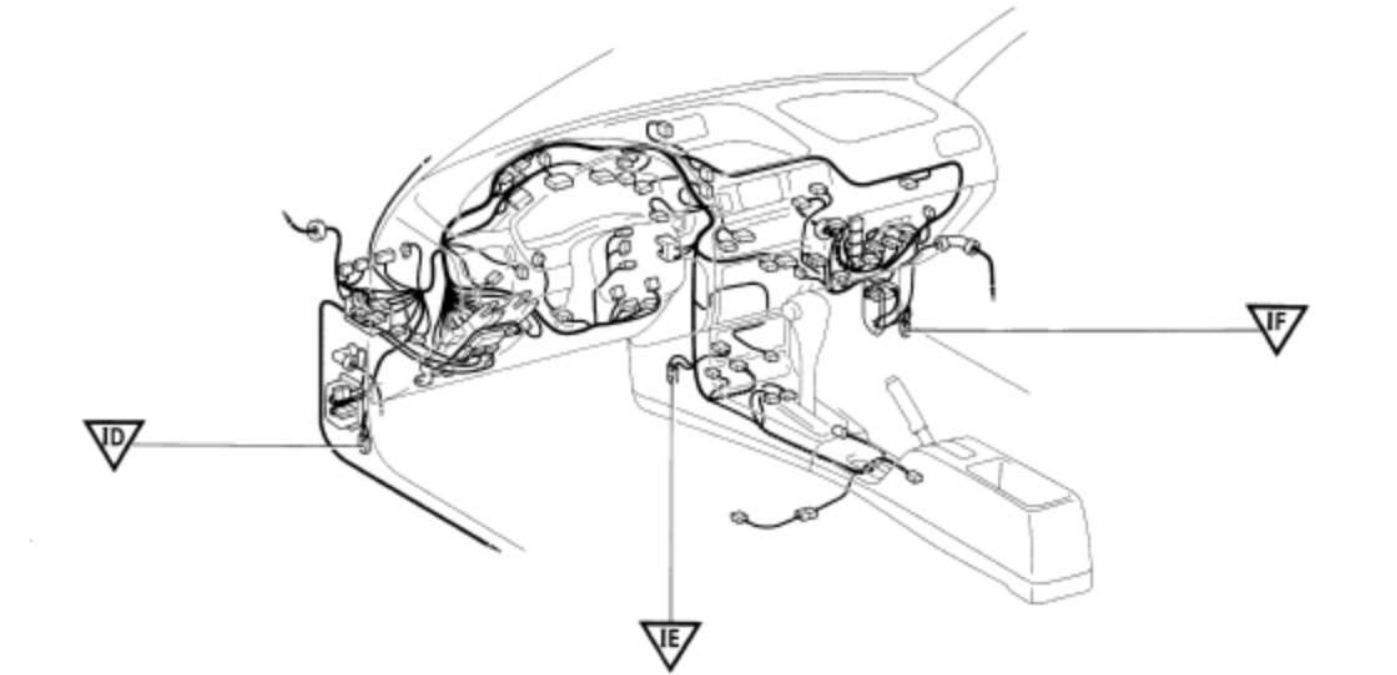


Connector Joining Wire Harness and Wire Harness

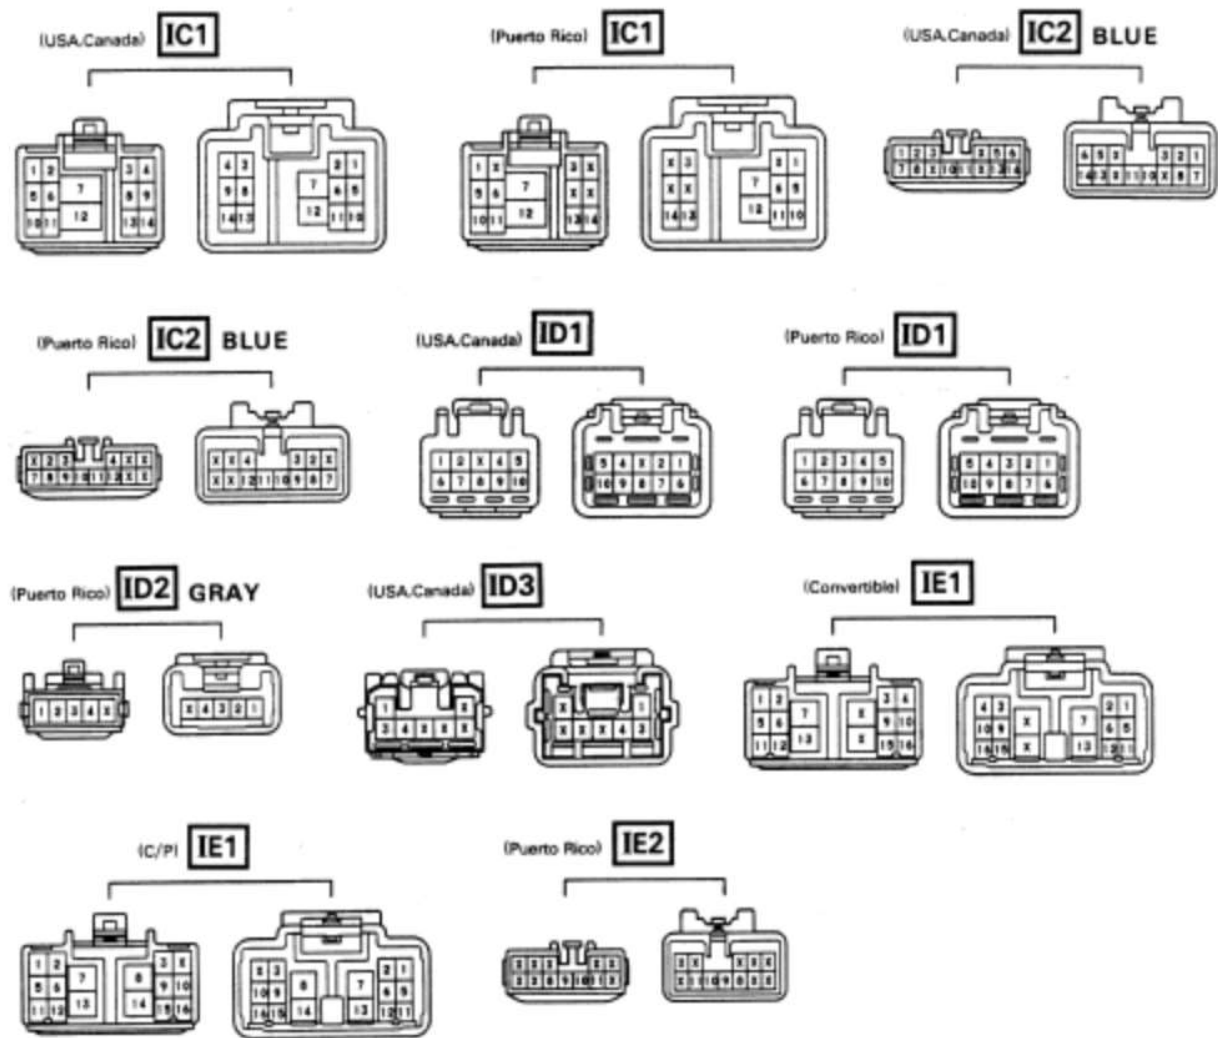


CODE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
IC1	INSTRUMENT PANEL WIRE AND ENGINE ROOM MAIN WIRE (LEFT KICK PANEL)
IC2	
ID1	FRONT DOOR LH WIRE AND INSTRUMENT PANEL WIRE (LEFT KICK PANEL)
ID2	
ID3	
IE1	INSTRUMENT PANEL WIRE AND FLOOR WIRE (LEFT KICK PANEL)
IE2	

G ELECTRICAL WIRING ROUTING


□ : Location of Connector Joining Wire Harness and Wire Harness

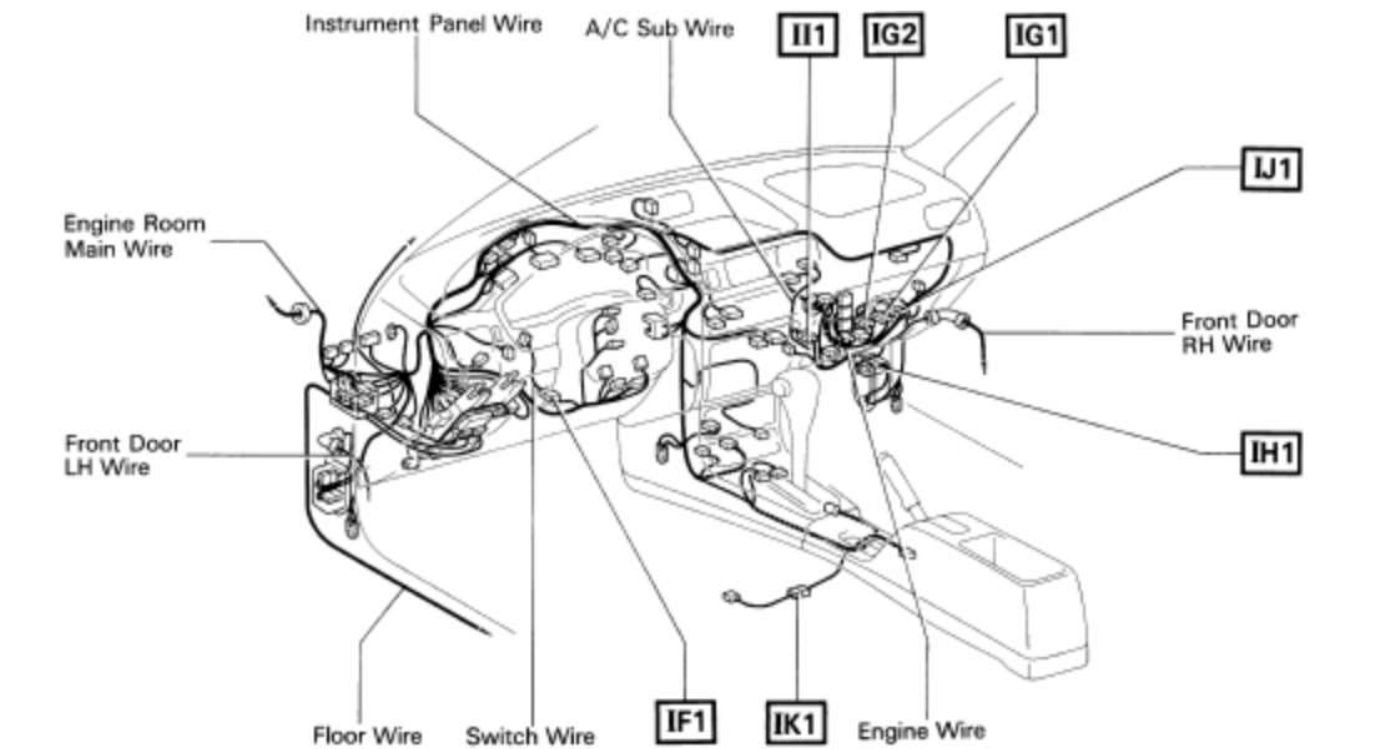

○ : Location of Splice Points

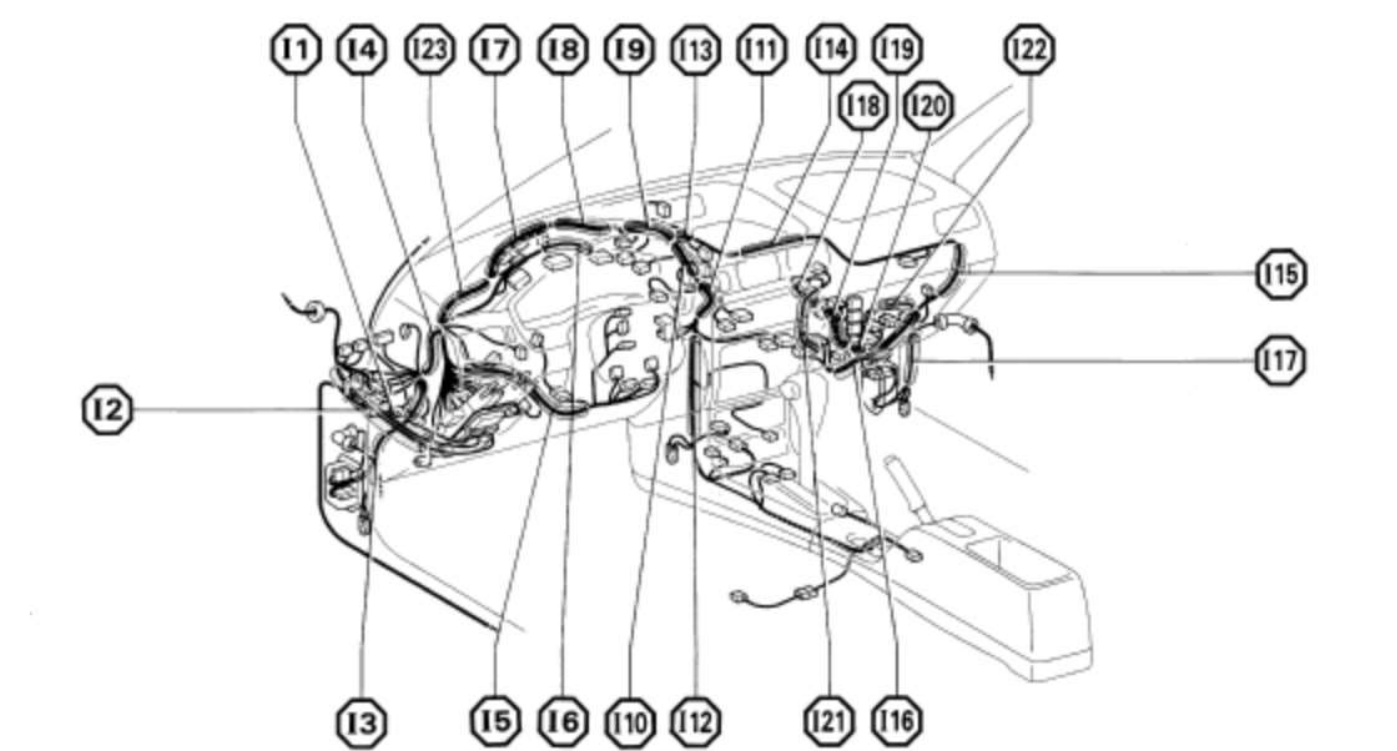

Connector Joining Wire Harness and Wire Harness

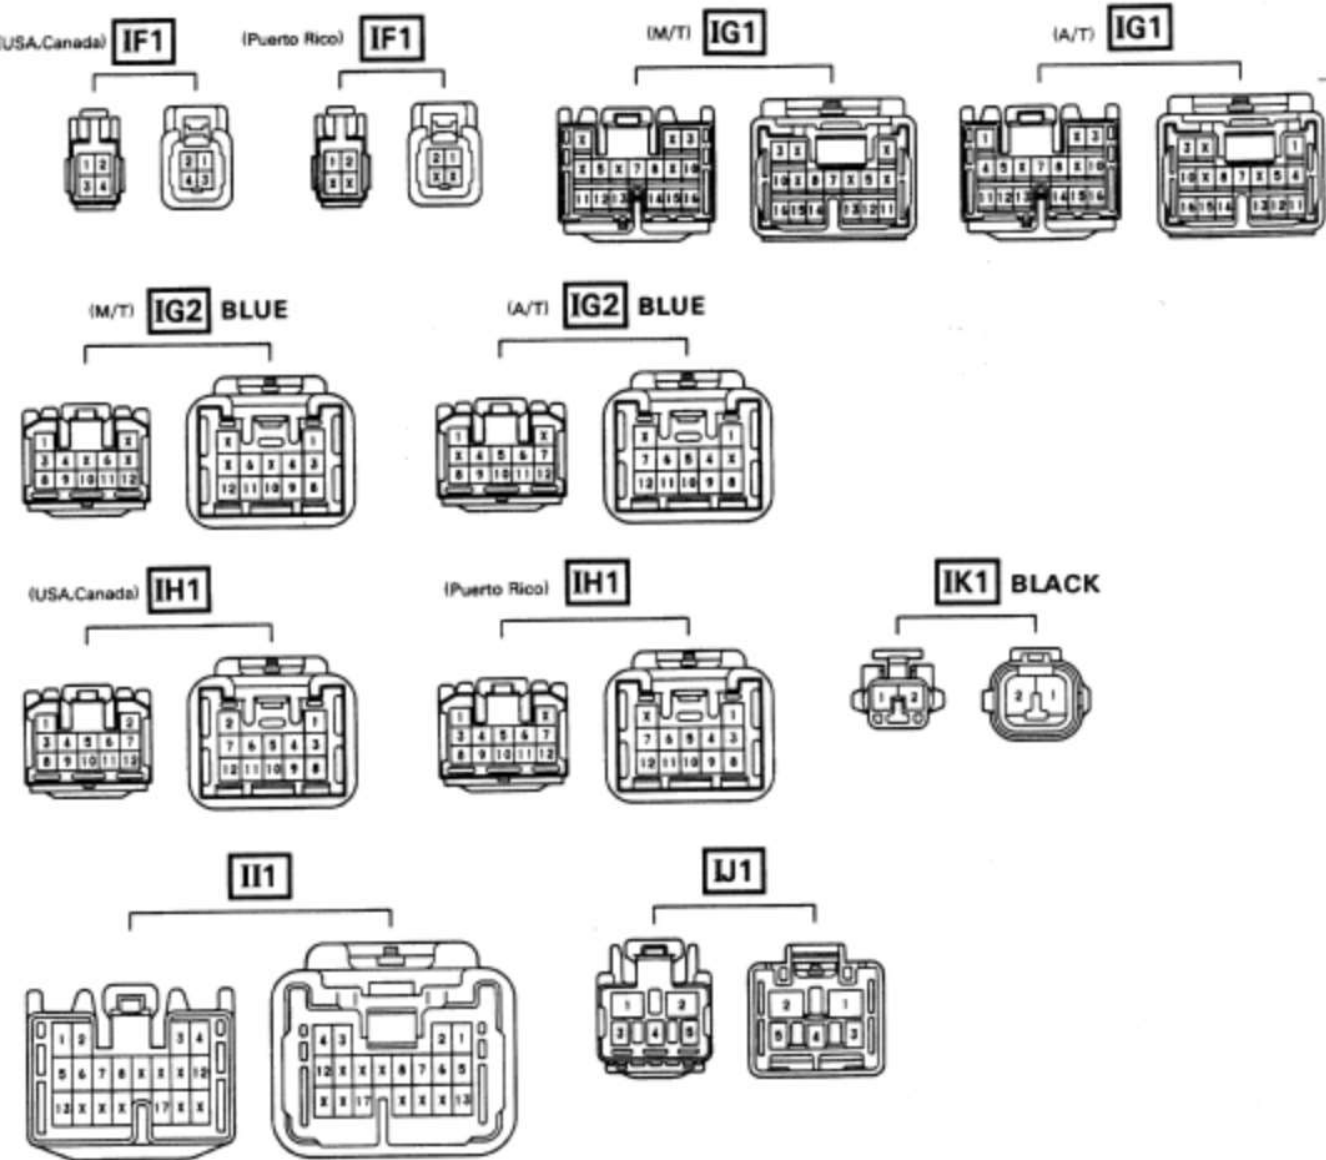


CODE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
IF1	INSTRUMENT PANEL WIRE AND SWITCH WIRE (NEAR THE STEERING COLUMN)
IG1	ENGINE WIRE AND INSTRUMENT PANEL WIRE (NEAR THE BLOWER UNIT)
IG2	
IH1	FRONT DOOR RH WIRE AND INSTRUMENT PANEL WIRE (RIGHT KICK PANEL)
II1	INSTRUMENT PANEL WIRE AND A/C SUB WIRE (NEAR THE BLOWER UNIT)
IJ1	INSTRUMENT PANEL NO. 2 WIRE AND INSTRUMENT PANEL WIRE (RIGHT KICK PANEL)
IK1	FLOOR NO.3 WIRE AND INSTRUMENT PANEL WIRE (UNDER THE DRIVER'S SEAT)


G ELECTRICAL WIRING ROUTING

▽ : Location of Ground Points


[C/P]

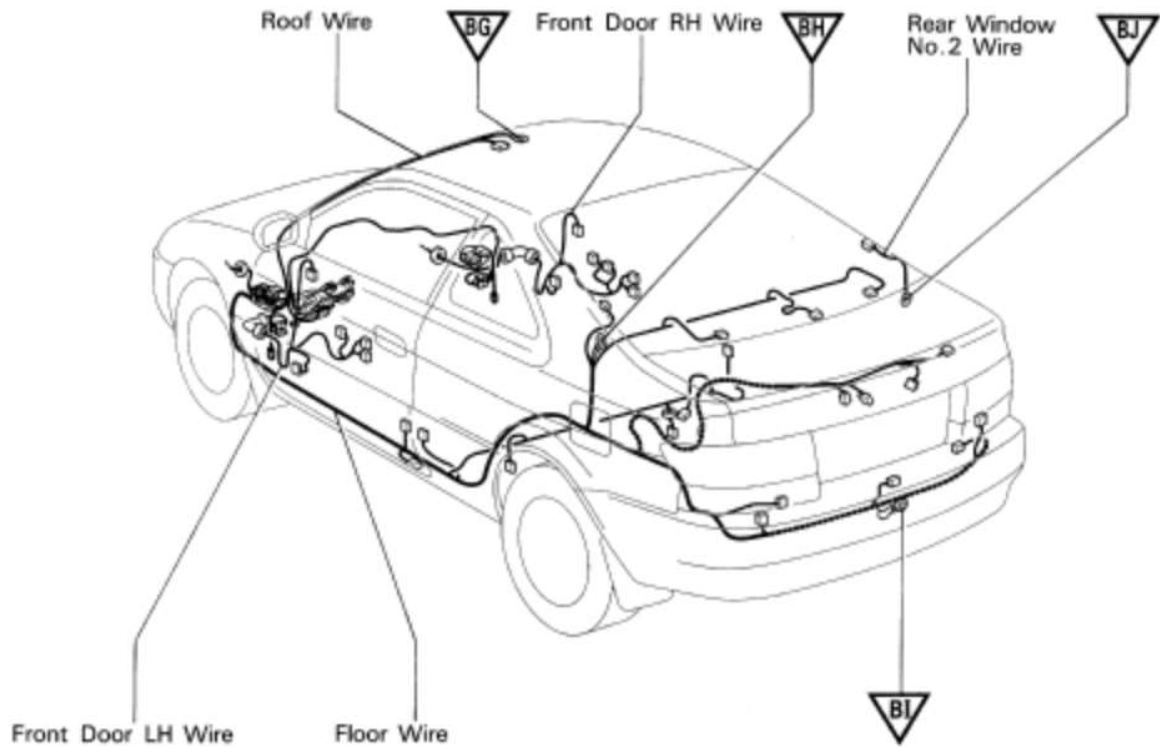


○ : Location of Splice Points

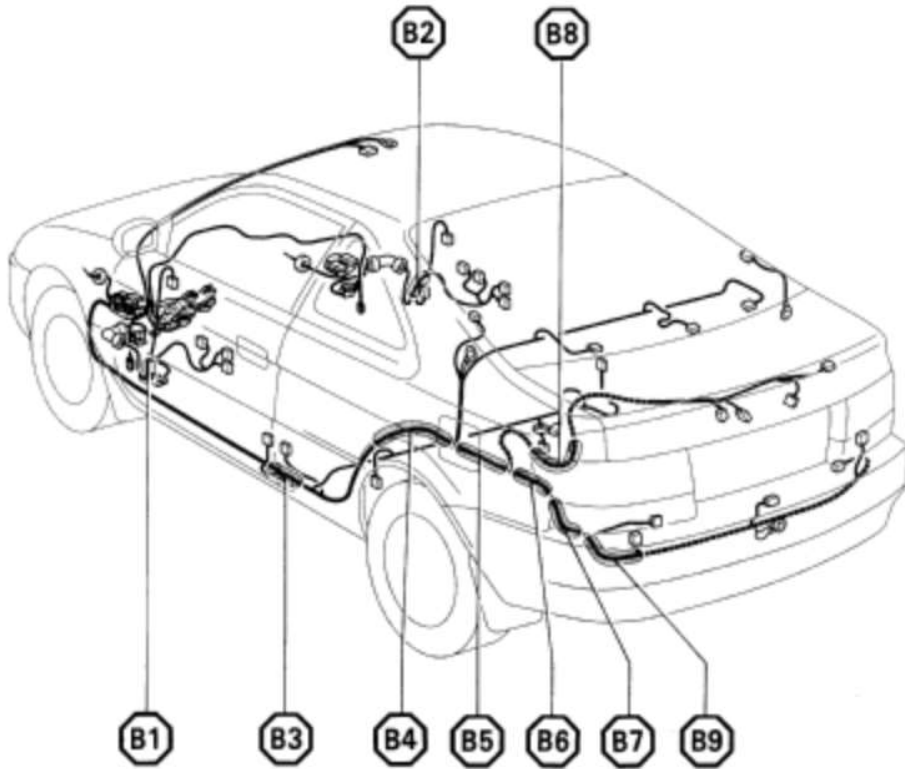

▽ : Location of Ground Points

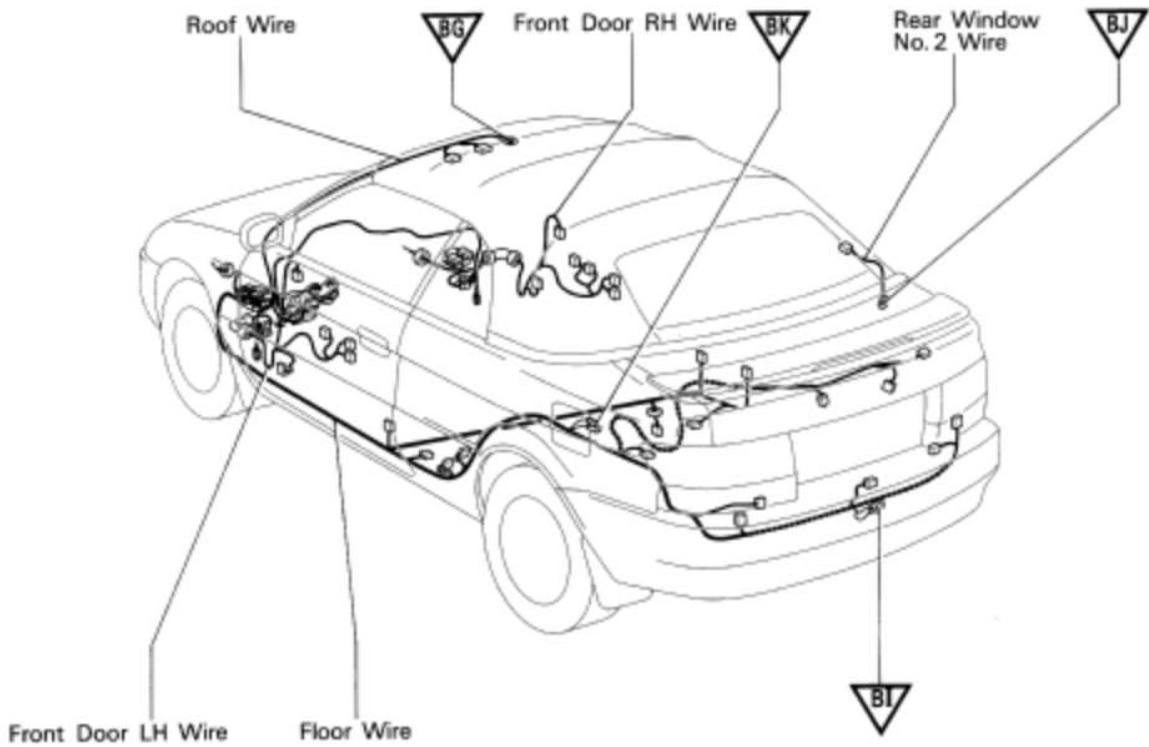


○ : Location of Splice Points

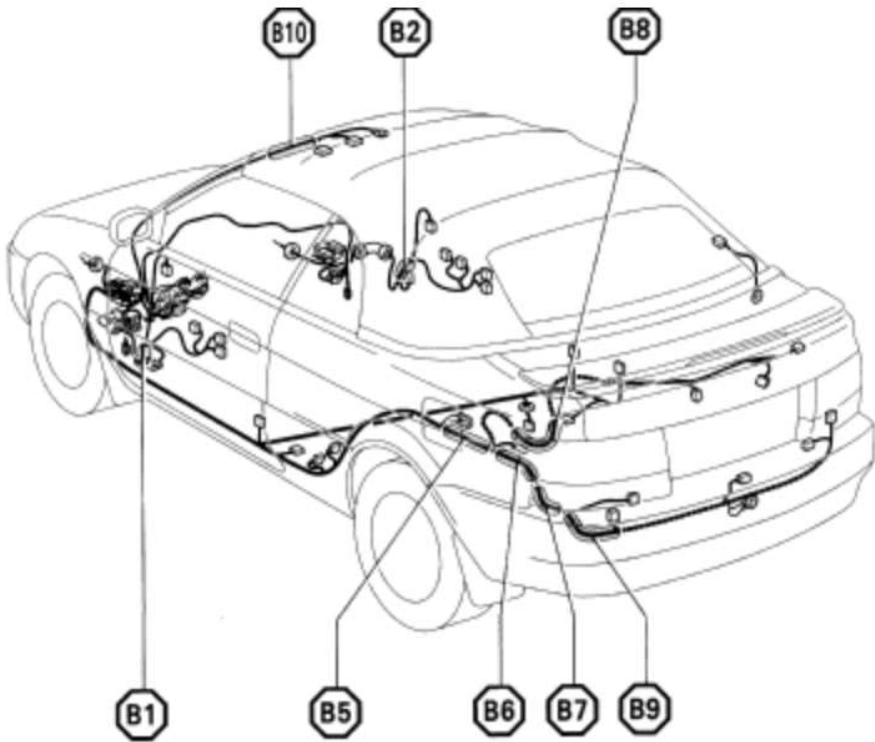

G ELECTRICAL WIRING ROUTING

Position of Parts in Engine Compartment

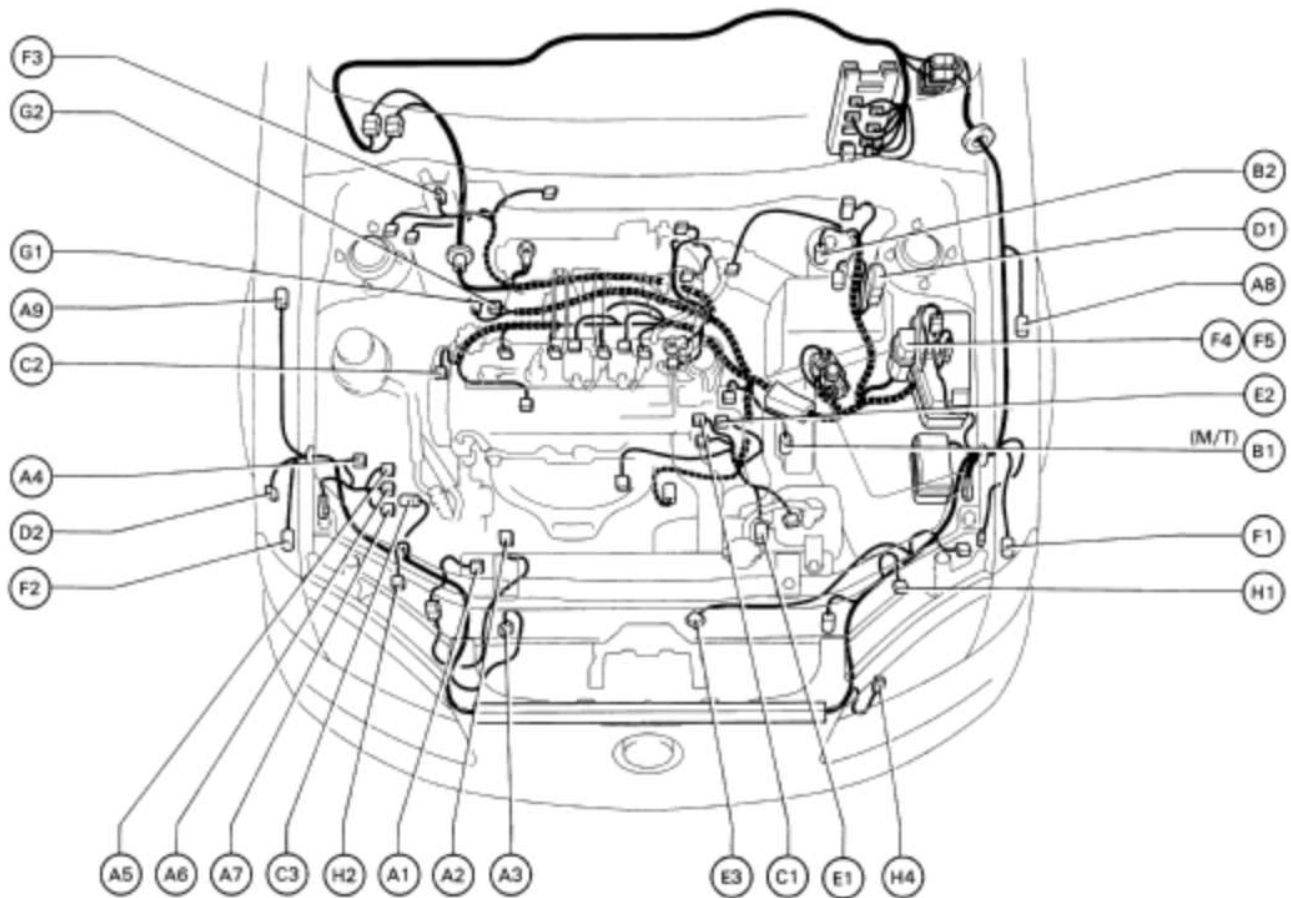

- A 1 A/C Condenser Fan Motor
- A 2 A/C Magnetic Clutch and Lock Sensor
- A 3 A/C Triple Pressure SW(A/C Dual and Single Pressure SW)
- A 4 ABS Actuator
- A 5 ABS Actuator
- A 6 ABS Relay
- A 7 ABS Relay
- A 8 ABS Speed Sensor Front LH
- A 9 ABS Speed Sensor Front RH

- B 1 Back-Up Light SW (M/T)
- B 2 Brake Fluid Level Warning SW

- C 1 Camshaft Position Sensor
- C 2 Crankshaft Position Sensor
- C 3 Cruise Control Actuator

- D 1 Data Link Connector 1
- D 2 Daytime Running Light Resistor


- E 1 Electronically Controlled Transmission Solenoid
- E 2 Engine Coolant Temp. Sensor
- E 3 Engine Hood Courtesy SW

- F 1 Front Turn Signal Light and Parking Light LH
- F 2 Front Turn Signal Light and Parking Light RH
- F 3 Front Wiper Motor
- F 4 Fusible Link Block
- F 5 Fusible Link Block

- G 1 Generator
- G 2 Generator

- H 1 Headlight LH
- H 2 Headlight RH
- H 4 Horn


Position of Parts in Engine Compartment

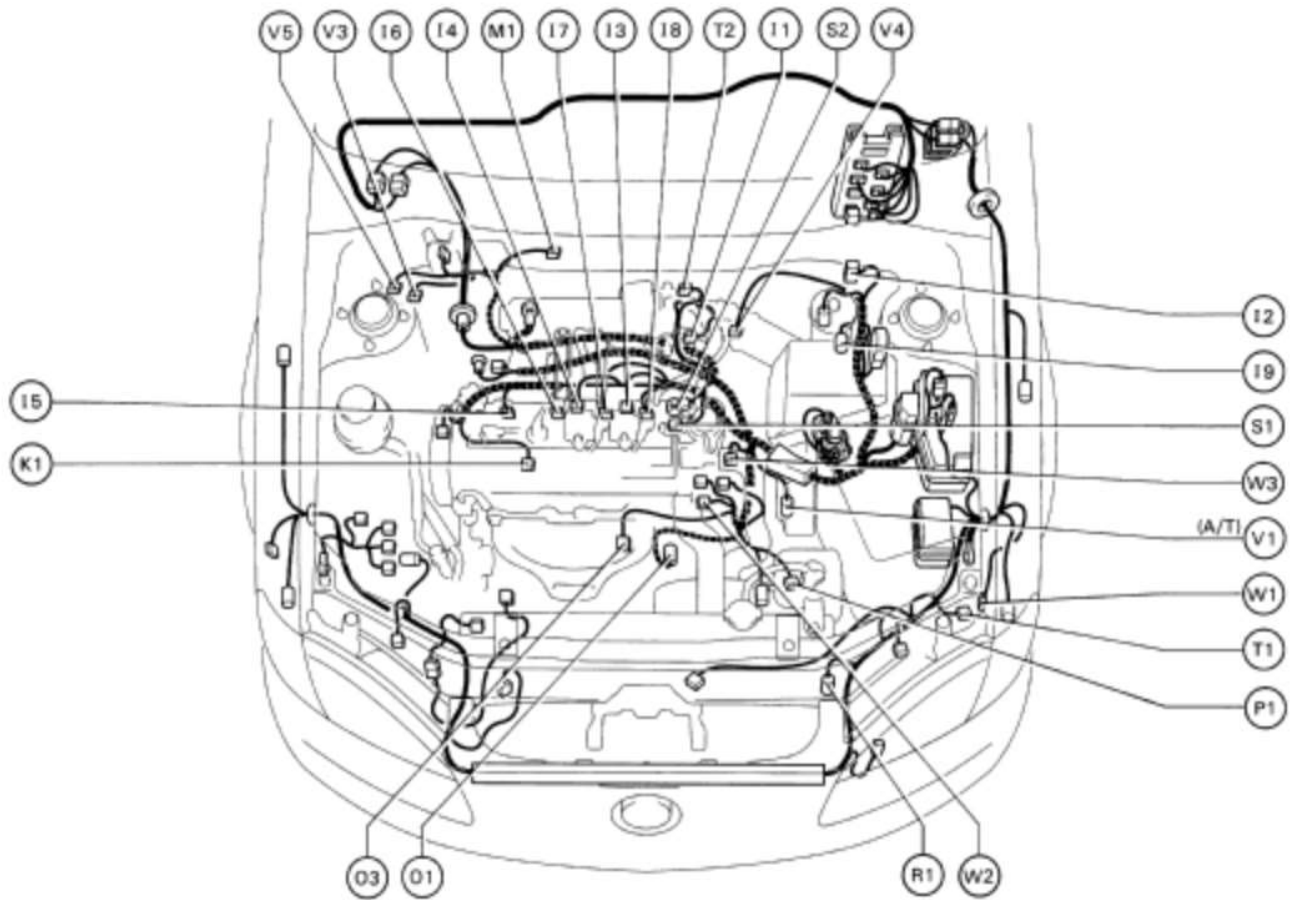

- | | |
|---------------------------------------|--|
| I 1 Idle Air Control Valve | P 1 Park/Neutral Position SW,A/T Position SW and Back-Up Light SW(A/T) |
| I 2 Igniter | R 1 Radiator Fan Motor |
| I 3 Ignition Coil No.1 | S 1 Starter |
| I 4 Ignition Coil No.2 | S 2 Starter |
| I 5 Injector No.1 | T 1 Theft Deterrent Horn |
| I 6 Injector No.2 | T 2 Throttle Position Sensor |
| I 7 Injector No.3 | V 1 Vehicle Speed Sensor(Electronically Controlled Transmission) |
| I 8 Injector No.4 | V 3 Vapor Pressure Sensor |
| I 9 Intake Air Temp. Sensor | V 4 VSV(EVAP) |
| K 1 Knock Sensor | V 5 VSV(Vapor Pressure Sensor) |
| M 1 Manifold Absolute Pressure Sensor | W 1 Washer Motor |
| O 1 Oil Pressure SW | W 2 Water Temp. Sender |
| O 3 Oxygen Sensor(Bank 1 Sensor 1) | W 3 Water Temp. SW(Radiator Fan) |

G ELECTRICAL WIRING ROUTING


Position of Parts in Instrument Panel

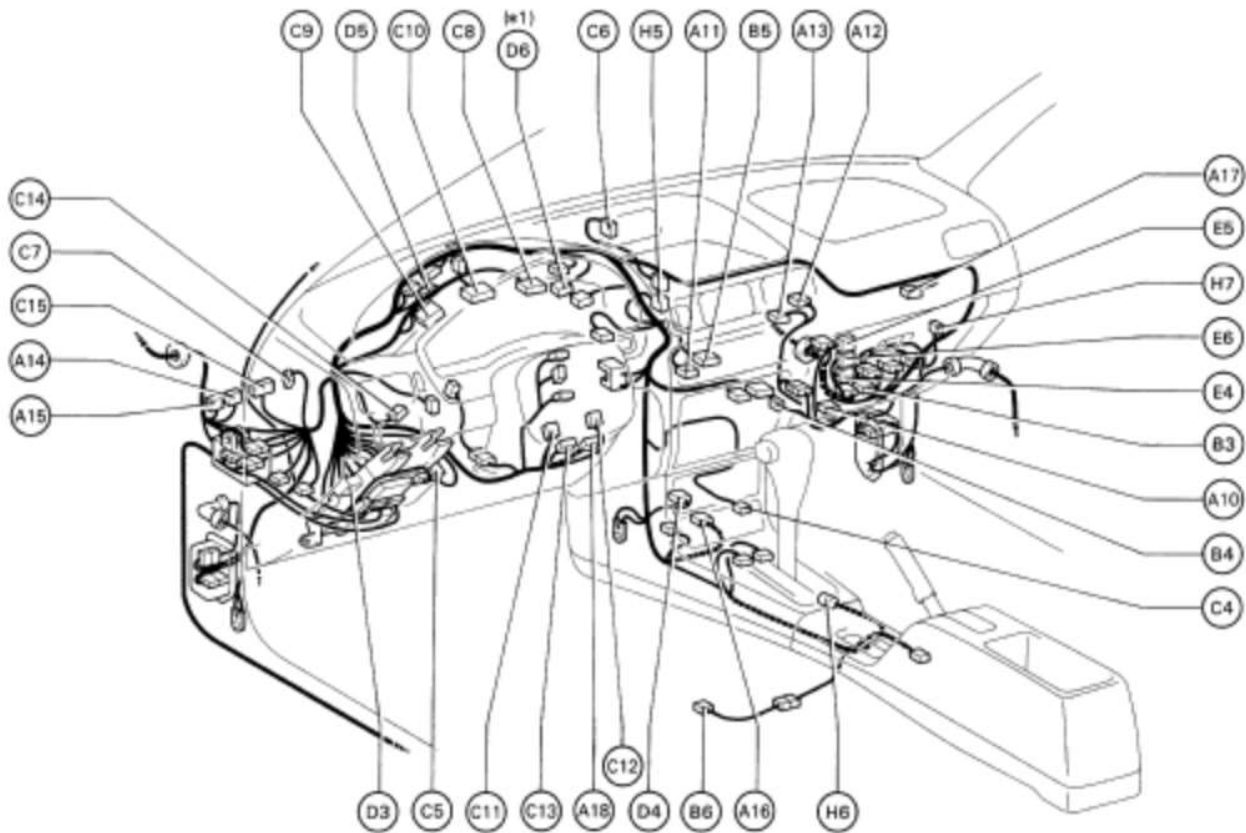

*1: w/o Theft Deterrent System, w/ Door Lock Control

- | | |
|--|---|
| A 10 A/C Amplifier | C 4 Cigarette Lighter |
| A 11 A/C SW | C 5 Circuit Opening Relay |
| A 12 A/C Magnetic Clutch Relay | C 6 Clock |
| A 13 A/C Thermistor | C 7 Clutch Start SW |
| A 14 ABS ECU | C 8 Combination Meter |
| A 15 ABS ECU | C 9 Combination Meter |
| A 16 Airbag Sensor Assembly | C 10 Combination Meter |
| A 17 Airbag Squib(Front Passenger's Airbag Assembly) | C 11 Combination SW |
| A 18 Airbag Squib(Steering Wheel Pad) | C 12 Combination SW |
| | C 13 Combination SW |
| B 3 Blower Motor | C 14 Cruise Control Clutch SW |
| B 4 Blower Resistor | C 15 Cruise Control ECU |
| B 5 Blower SW | |
| B 6 Buckle SW LH | D 3 Data Link Connector 3 |
| | D 4 Daytime Running Light Relay(Main) |
| | D 5 Diode(Daytime Running Light System) |
| | D 6 Door Lock Control Relay |
| | E 4 Engine Control Module |
| | E 5 Engine Control Module |
| | E 6 Engine Control Module |
| | H 5 Hazard SW |
| | H 6 Heated Oxygen Sensor(Bank 1 Sensor 2) |
| | H 7 Heater Relay |

Position of Parts in Instrument Panel

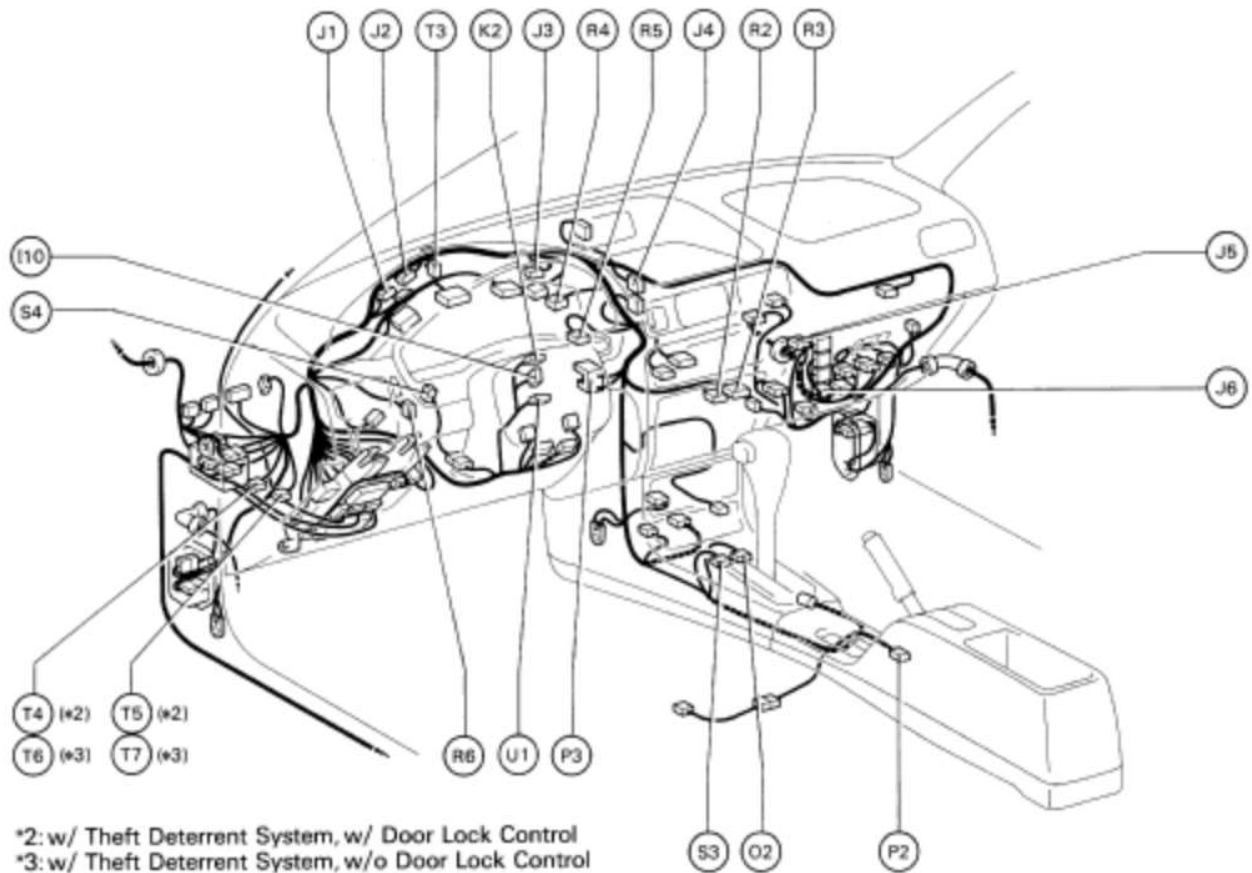

I 10 Ignition SW

J 1 Junction Connector
J 2 Junction Connector
J 3 Junction Connector
J 4 Junction Connector
J 5 Junction Connector
J 6 Junction Connector

K 2 Key Interlock Solenoid

O 2 O/D Main SW and A/T Shift Lever Illumination

P 2 Parking Brake SW
P 3 Power Main Relay and Power Fuse

R 2 Radio and Player
R 3 Radio and Player
R 4 Rear Window Defogger Relay
R 5 Rear Window Defogger SW
R 6 Rheostat

S 3 Shift Lock ECU
S 4 Stop Light SW


T 3 Turn Signal Flasher
T 4 Theft Deterrent and Door Lock Control ECU
T 5 Theft Deterrent and Door Lock Control ECU
T 6 Theft Deterrent ECU
T 7 Theft Deterrent ECU

U 1 Unlock Warning SW

G ELECTRICAL WIRING ROUTING

Position of Parts in Body

[C/P]

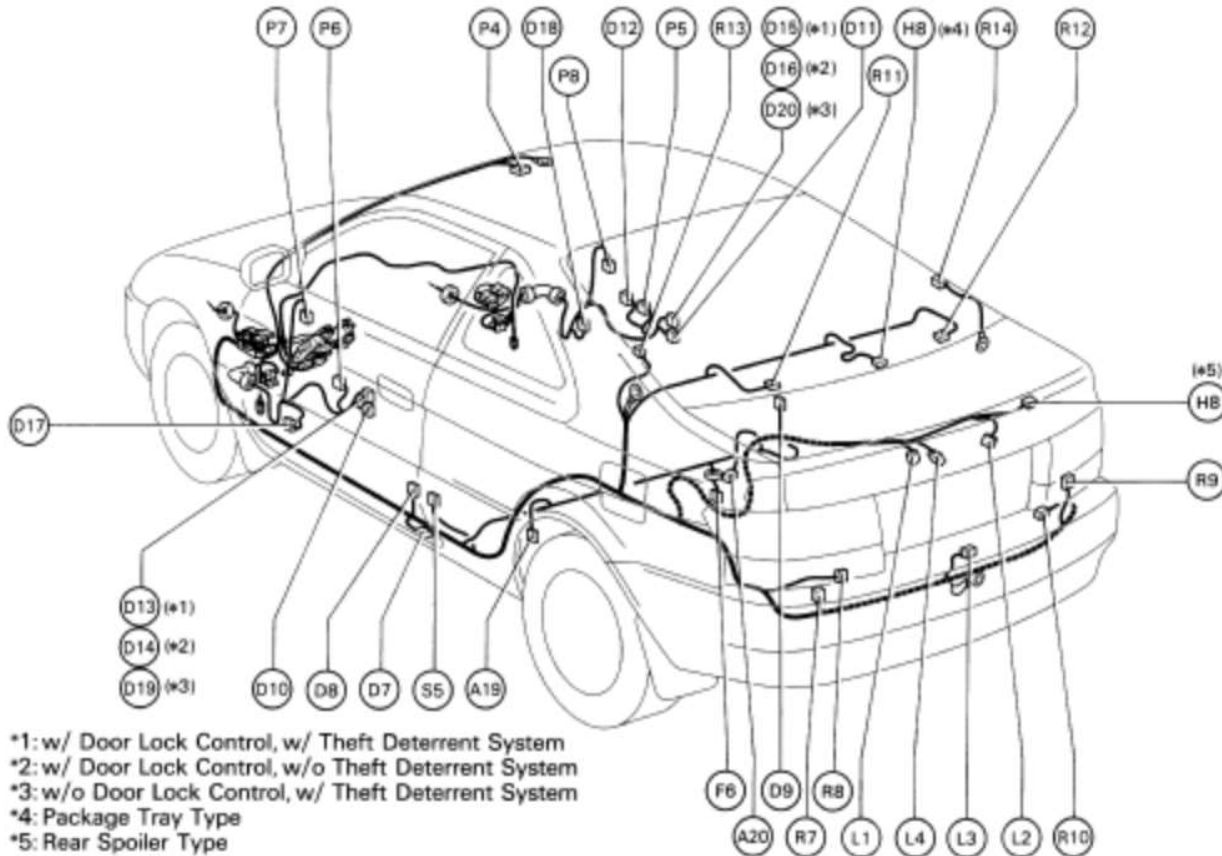

A 19 ABS Speed Sensor Sensor Rear LH
 A 20 ABS Speed Sensor Rear RH

D 7 Diode(Theft Deterrent System)
 D 8 Door Courtesy SW LH
 D 9 Door Courtesy SW RH
 D 10 Door Key Lock and Unlock SW LH
 D 11 Door Key Lock and Unlock SW RH
 D 12 Door Lock Control SW RH
 D 13 Door Lock Motor and Door Unlock Detection SW LH
 D 14 Door Lock Motor and Door Key Lock and Unlock SW LH
 D 15 Door Lock Motor and Door Unlock Detection SW RH
 D 16 Door Lock Motor and Door Key Lock and Unlock SW RH
 D 17 Door Speaker LH
 D 18 Door Speaker RH
 D 19 Door Unlock Detection SW LH
 D 20 Door Unlock Detection SW RH

F 6 Fuel Sender and Pump

H 8 High Mounted Stop Light

L 1 License Plate Light LH
 L 2 License Plate Light RH
 L 3 Luggage Compartment Courtesy SW
 L 4 Luggage Compartment Key Unlock SW

P 4 Personal Light
 P 5 Power Window Control SW RH
 P 6 Power Window Master SW and Door Lock Control SW LH
 P 7 Power Window Motor LH
 P 8 Power Window Motor RH


R 7 Rear Combination Light LH
 R 8 Rear Combination Light RH
 R 9 Rear Combination Light RH
 R 10 Rear Combination Light RH
 R 11 Rear Speaker LH
 R 12 Rear Speaker RH
 R 13 Rear Window Defogger(+)
 R 14 Rear Window Defogger(-)

S 5 Seat Belt Retractor SW

G ELECTRICAL WIRING ROUTING

Position of Parts in Body

[Convertible]

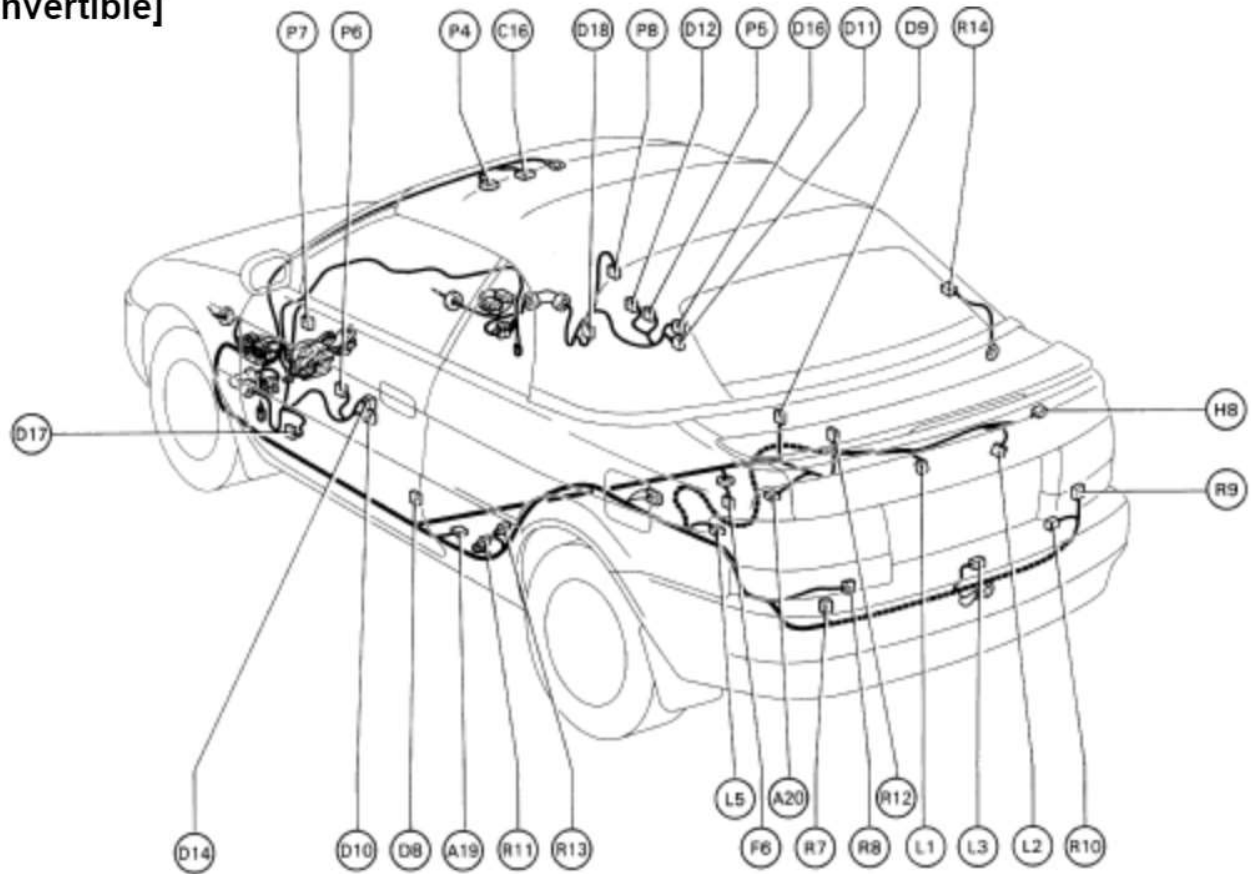

A 19 ABS Speed Sensor Rear LH
A 20 ABS Speed Sensor Rear RH

C 16 Courtesy Light

D 8 Door Courtesy SW LH
D 9 Door Courtesy SW RH
D 10 Door Key Lock and Unlock SW LH
D 11 Door Key Lock and Unlock SW RH
D 12 Door Lock Control SW RH
D 14 Door Lock Motor and Door Key Lock and Unlock SW LH
D 16 Door Lock Motor and Door Key Lock and Unlock SW RH
D 17 Door Speaker LH
D 18 Door Speaker RH

F 6 Fuel Sender and Pump

H 8 High Mounted Stop Light

L 1 License Plate Light LH
L 2 License Plate Light RH
L 3 Luggage Compartment Courtesy SW
L 5 Luggage Compartment Light

P 4 Personal Light
P 5 Power Window Control SW RH
P 6 Power Window Master SW and Door Lock Control SW LH
P 7 Power Window Motor LH
P 8 Power Window Motor RH

R 7 Rear Combination Light LH
R 8 Rear Combination Light LH
R 9 Rear Combination Light RH
R 10 Rear Combination Light RH
R 11 Rear Speaker LH
R 12 Rear Speaker RH
R 13 Rear Window Defogger(+)
R 14 Rear Window Defogger(-)