


G ELECTRICAL WIRING ROUTING

Position of Parts in Engine Compartment

[LHD]

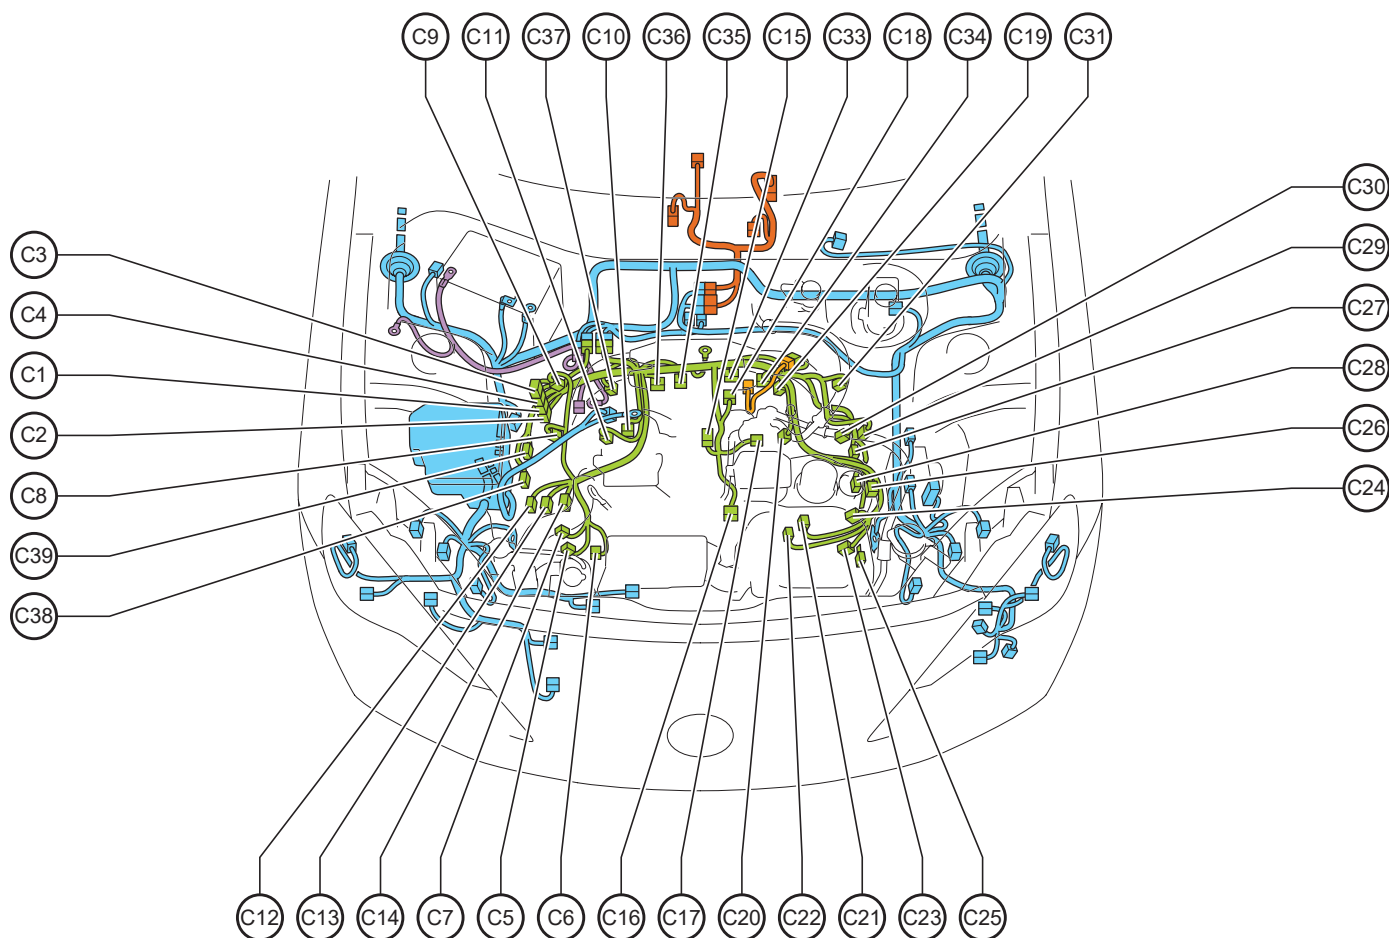


- C1 Injector Driver (EDU)
- C2 Injector Driver (EDU)
- C3 Injector Driver (EDU)
- C4 Injector Driver (EDU)
- C5 Camshaft Timing Oil Control Valve Assembly (Bank 1 Exhaust Side)
- C6 VVT Sensor (Camshaft Position Sensor) (Bank 1 Exhaust Side)
- C7 Camshaft Timing Oil Control Valve Assembly (Bank 1 Intake Side)
- C8 Fuel Injector Assembly (for Port Injection No. 1)
- C9 Fuel Injector Assembly (for Port Injection No. 3)
- C10 Fuel Pressure Sensor
- C11 Fuel Injector Assembly (for Direct Injection No. 1)
- C12 VVT Sensor (Camshaft Position Sensor) (Bank 1 Intake Side)
- C13 Heated Oxygen Sensor (Bank 1 Sensor 2)
- C14 Wide Range Air Fuel Ratio Sensor (Bank 1 Sensor 1)
- C15 Throttle Body with Motor Assembly
- C16 Intake Mass Air Flow Meter Sub-Assembly
- C17 Compressor with Magnet Clutch
- C18 VSV
- C19 Fuel Injector Assembly (for Direct Injection No. 4)

- C20 Fuel Injector Assembly (for Direct Injection No. 2)
- C21 Oil Temperature Sensor
- C22 Engine Oil Pressure Switch Assembly
- C23 Camshaft Timing Oil Control Valve Assembly (Bank 2 Exhaust Side)
- C24 Camshaft Timing Oil Control Valve Assembly (Bank 2 Intake Side)
- C25 VVT Sensor (Camshaft Position Sensor) (Bank 2 Exhaust Side)
- C26 VVT Sensor (Camshaft Position Sensor) (Bank 2 Intake Side)
- C27 Ignition Coil Assembly No. 4
- C28 Ignition Coil Assembly No. 2
- C29 Spill Control Valve (Fuel Pump Assembly)
- C30 Fuel Injector Assembly (for Port Injection No. 2)
- C31 Fuel Injector Assembly (for Port Injection No. 4)
- C33 Crankshaft Position Sensor
- C34 Knock Control Sensor (Bank 2)
- C35 E.F.I. Engine Coolant Temperature Sensor
- C36 Knock Control Sensor (Bank 1)
- C37 Fuel Injector Assembly (for Direct Injection No. 3)
- C38 Ignition Coil Assembly No. 1
- C39 Ignition Coil Assembly No. 3

Position of Parts in Engine Compartment

[LHD]

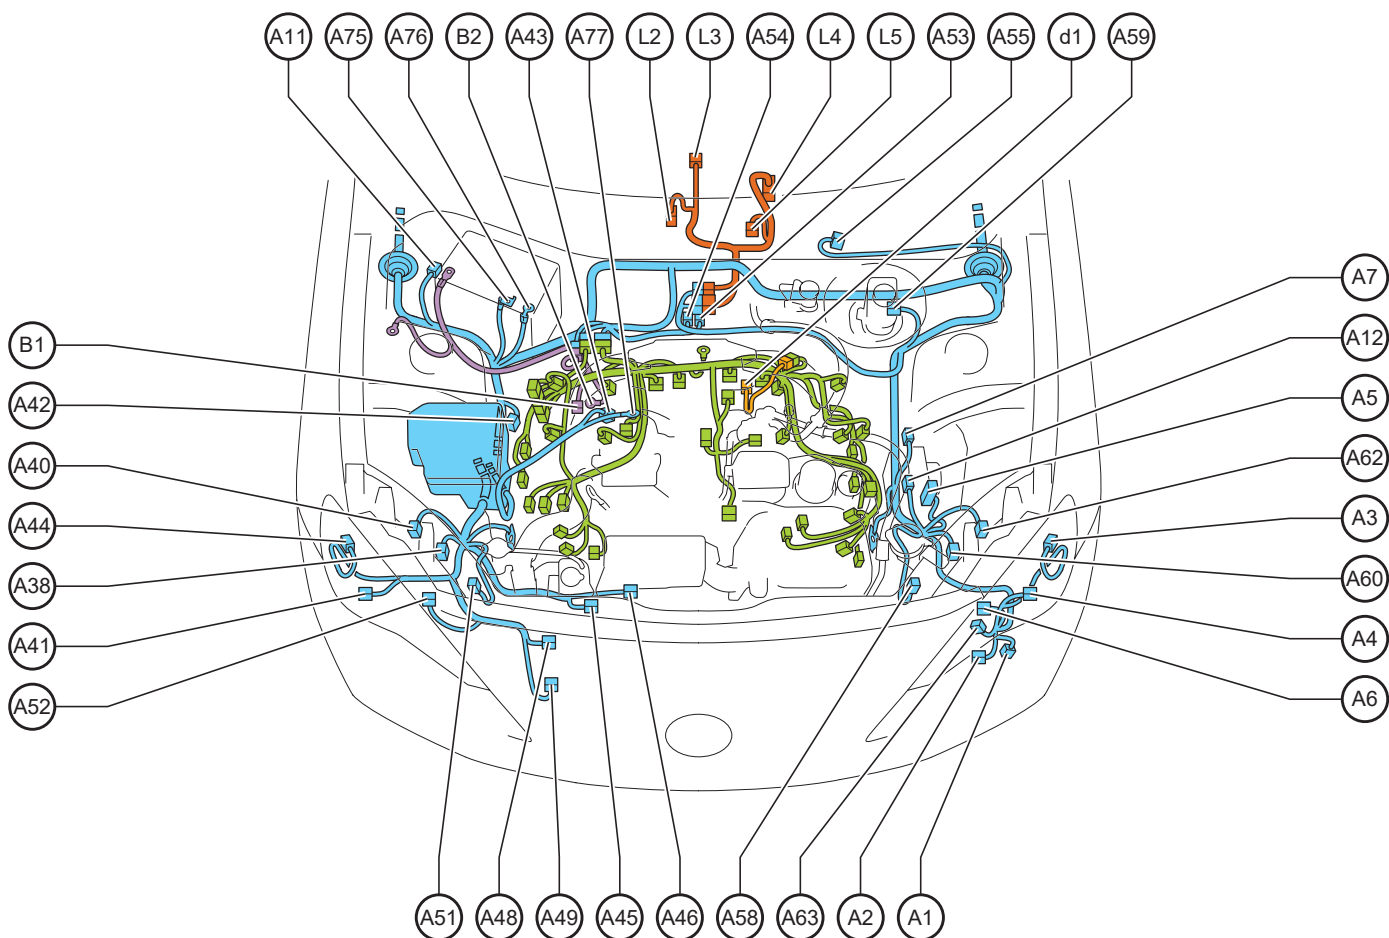


A1 Windshield Washer Motor and Pump Assembly
 A2 Headlight Cleaner Washer Motor and Pump Assembly
 A3 Side Turn Signal Light Assembly LH
 A4 Headlight Assembly LH
 A5 VSC (VDC) Control Module
 A6 Headlight Cleaner Control Relay
 A7 Pressure Switch
 A11 Battery Current Sensor Assembly
 A12 Front Speed Sensor LH
 A38 Headlight Assembly RH
 A40 Headlight Assembly RH
 A41 Headlight Assembly RH
 A42 Front Speed Sensor RH
 A43 Generator Assembly
 A44 Side Turn Signal Light Assembly RH
 A45 Cooling Fan Motor
 A46 No. 2 Cooling Fan Motor
 A48 Ambient Temperature Sensor (Thermistor Assembly)
 A49 High Pitched Horn Assembly
 A51 Front Sub Sensor RH

A52 Low Pitched Horn Assembly
 A53 Back-Up Light Switch Assembly
 A54 Park/Neutral Position Switch Assembly
 A55 Front Wiper Motor and Link Assembly
 A58 Front Sub Sensor LH
 A59 Brake Fluid Level Warning Switch (Brake Master Cylinder Sub-Assembly)
 A60 Headlight Assembly LH
 A62 Headlight Assembly LH
 A63 Wireless Door Lock Buzzer
 A75 Fusible Link Block Assembly
 A76 Fusible Link Block Assembly
 A77 Generator Assembly
 B1 Starter Assembly
 B2 Starter Assembly
 L2 Park/Neutral Position Switch Assembly
 L3 Transmission Revolution Sensor (SP2)
 L4 Electronically Controlled Transmission Solenoid
 L5 Transmission Revolution Sensor (NT)
 d1 CPC Solenoid

G ELECTRICAL WIRING ROUTING

Position of Parts in Instrument Panel


[LHD]

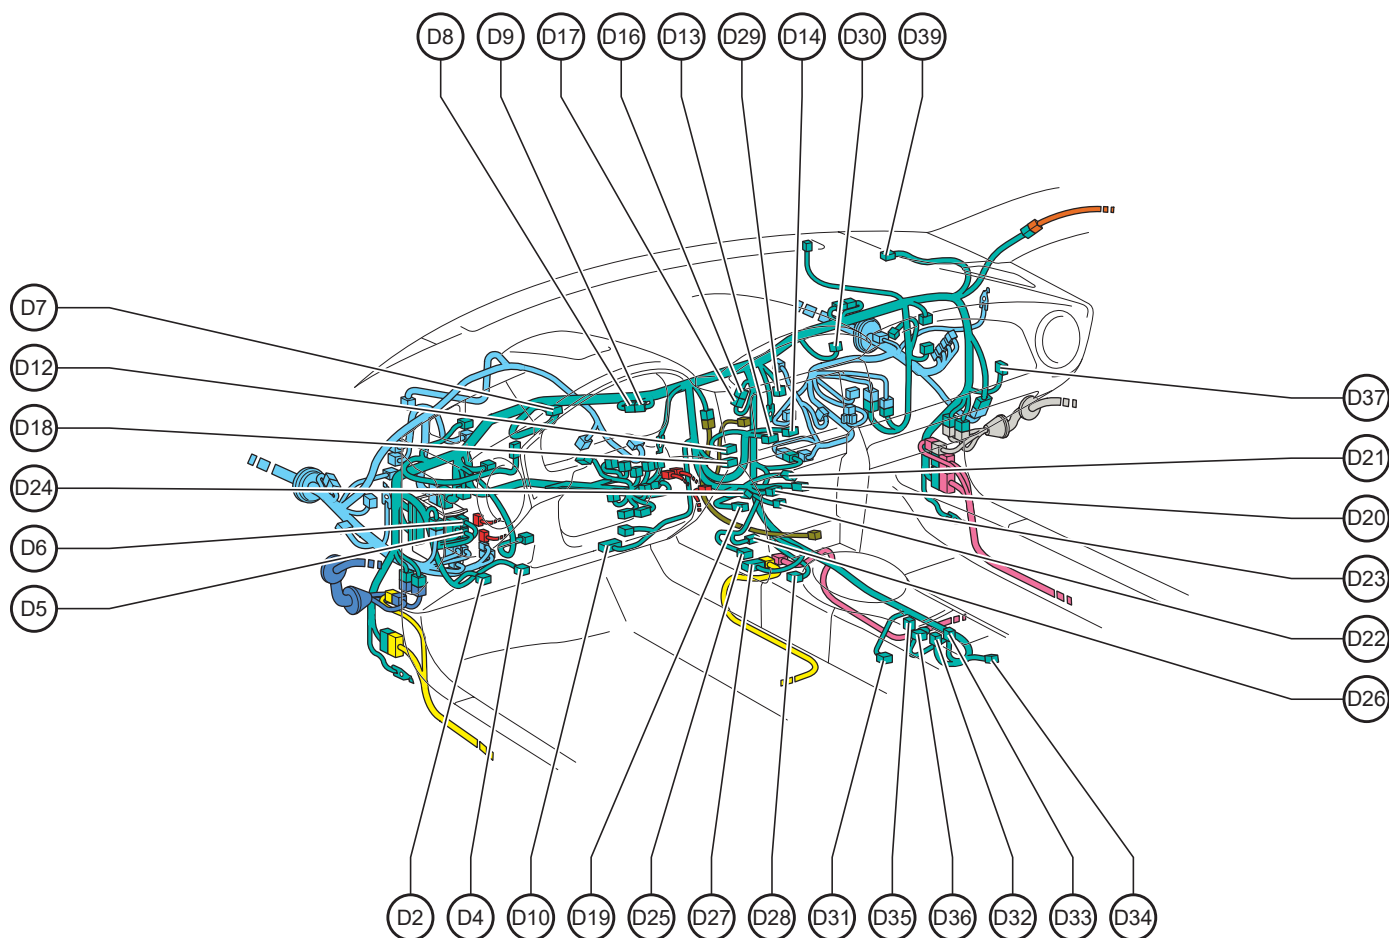

D2	Light Control Rheostat	D22	No. 3 Heater Control Sub-Assembly
D4	Luggage Door Opening Switch Assembly	D23	No. 3 Heater Control Sub-Assembly
D5	Main Body ECU	D24	Heater Control Sub-Assembly
D6	Main Body ECU	D25	Engine Switch
D7	Combination Meter Assembly	D26	Indoor Electrical Key Oscillator Assembly
D8	Junction Connector	D27	Airbag Control Module
D9	Junction Connector	D28	Shift Lever Position Sensor (Floor Shift Control Lever)
D10	DLC3	D29	Option Connector
D12	Radio Receiver Assembly	D30	Passenger's Airbag Module
D13	Radio Receiver Assembly	D31	Parking Brake Switch Assembly
D14	Radio Receiver Assembly	D32	Seat Heater Switch LH
D16	Junction Connector	D33	Seat Heater Switch RH
D17	Junction Connector	D34	No. 2 Power Outlet Socket Assembly
D18	Clock Assembly	D35	Pattern Select Switch Assembly
D19	A/C Amplifier Assembly	D36	Shift Position Indicator
D20	A/C Amplifier Assembly	D37	Airbag Cut Off Switch
D21	No. 1 Heater Control Sub-Assembly	D39	Front No. 2 Speaker Assembly RH

Position of Parts in Instrument Panel

[LHD]

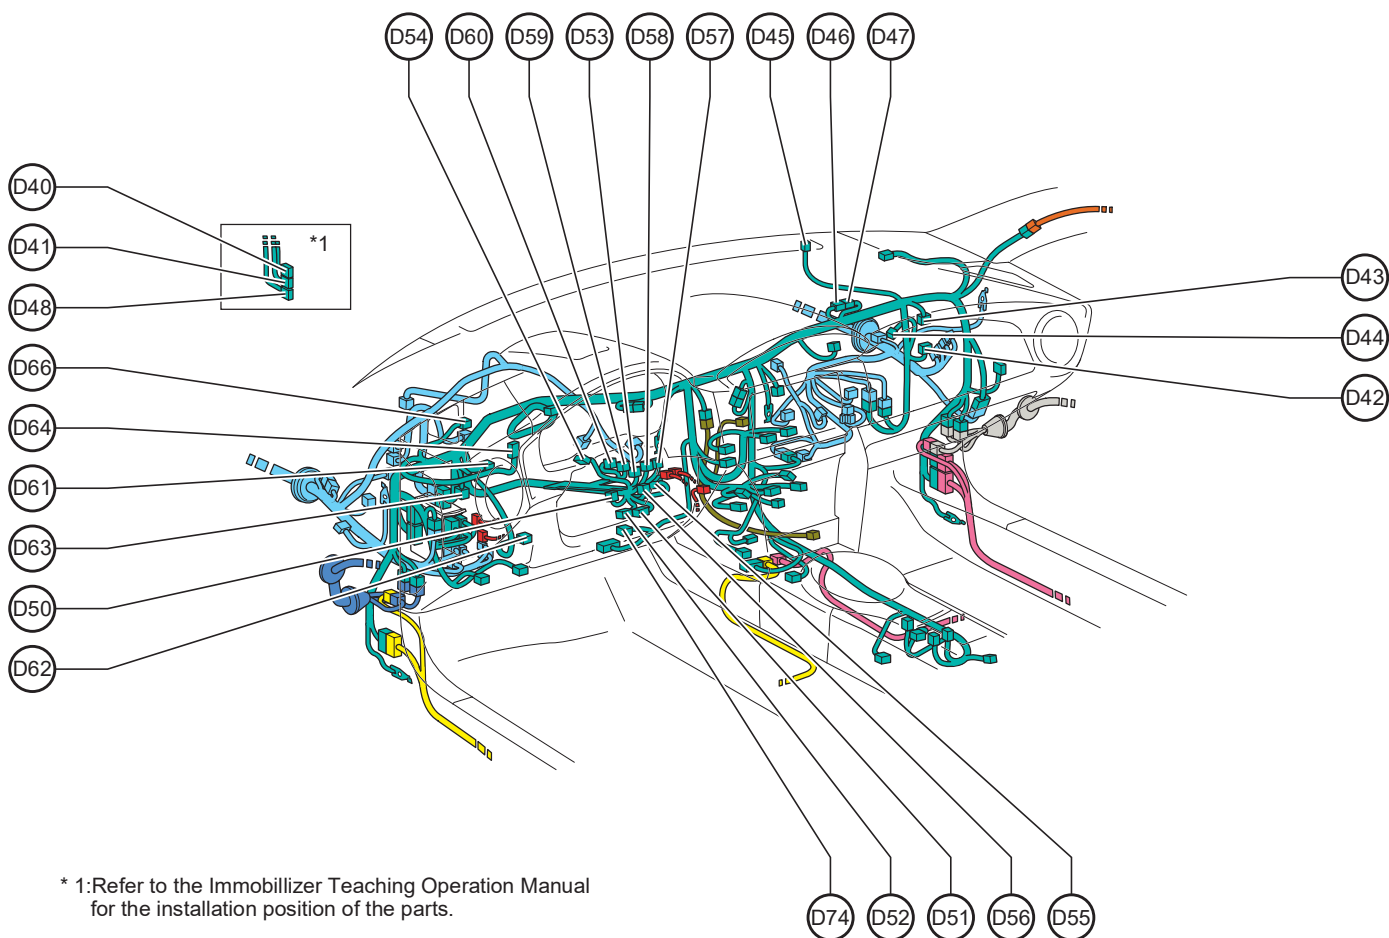


* 1: Refer to the Immobilizer Teaching Operation Manual for the installation position of the parts.

D40	Certification ECU Assembly	D54	Transponder Key Amplifier
D41	Certification ECU Assembly	D55	Ignition or Starter Switch Assembly
D42	Shift Lock Release Button Cover	D56	Steering Sensor
D43	Junction Connector	D57	Windshield Wiper Switch Assembly
D44	No. 1 Power Outlet Socket Assembly	D58	Windshield Wiper Switch Assembly
D45	Automatic Light Control Sensor	D59	Steering Lock Actuator Assembly
D46	Junction Connector	D60	Key Inter Lock Solenoid (Ignition Switch Lock Cylinder Assembly)
D47	Junction Connector	D61	Turn Signal Flasher Assembly
D48	Certification ECU Assembly	D62	Driver's Knee Airbag Module
D50	Headlight Dimmer Switch Assembly	D63	Option Connector
D51	Roll Connector	D64	Trip Switch
D52	Roll Connector	D66	Front No. 2 Speaker Assembly LH
D53	Un-Lock Warning Switch Assembly (Ignition Switch Lock Cylinder Assembly)	D74	No. 1 Cooler Thermistor

G ELECTRICAL WIRING ROUTING

Position of Parts in Instrument Panel

[LHD]

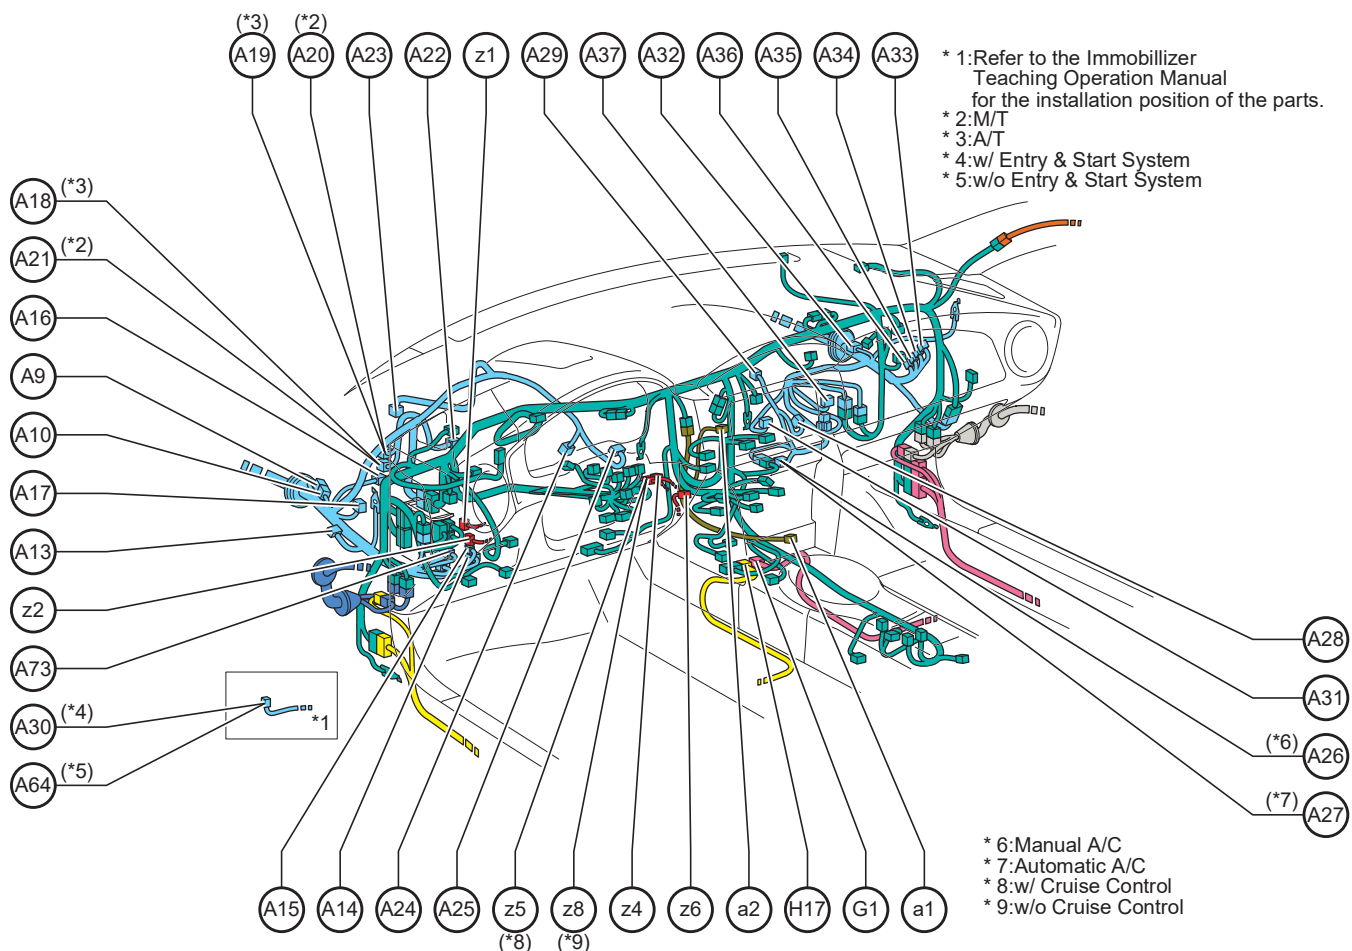


A9	Junction Connector
A10	Junction Connector
A13	Noise Filter
A14	Power Steering ECU Assembly
A15	Power Steering ECU Assembly
A16	Headlight Leveling ECU
A17	Junction Connector
A18	Transmission Control Module
A19	Transmission Control Module
A20	Clutch Start Switch Assembly
A21	Clutch Switch Assembly
A22	Stop Light Switch Assembly
A23	Accelerator Pedal Sensor Assembly
A24	No. 1 A/C Radiator Damper Servo Sub-Assembly
A25	Cooler Thermistor (Room Temperature Sensor)
A26	Blower Resistor
A27	Blower Assembly
A28	No. 3 A/C Radiator Damper Servo Sub-Assembly
A29	No. 4 A/C Radiator Damper Servo Sub-Assembly
A30	ID Code Box
A31	Blower with Fan Motor Sub-Assembly
A32	No. 5 A/C Radiator Damper Servo Sub-Assembly
A33	ECM
A34	ECM
A35	ECM
A36	ECM
A37	Junction Connector

A64	Transponder Key ECU Assembly
A73	Main Body ECU
G1	Airbag Control Module
H17	Airbag Control Module
a1	No. 1 Stereo Jack Adapter Assembly
a2	Radio Receiver Assembly
z1	Power Steering ECU Assembly Steering Column Assembly
z2	Power Steering ECU Assembly Steering Column Assembly
z4	Roll Connector Paddle Shift Switch
z5	Roll Connector Cruise Control Main Switch
z6	Roll Connector Driver's Airbag Module
z8	Roll Connector Horn Button Assembly

G ELECTRICAL WIRING ROUTING

Position of Parts in Body

[LHD]

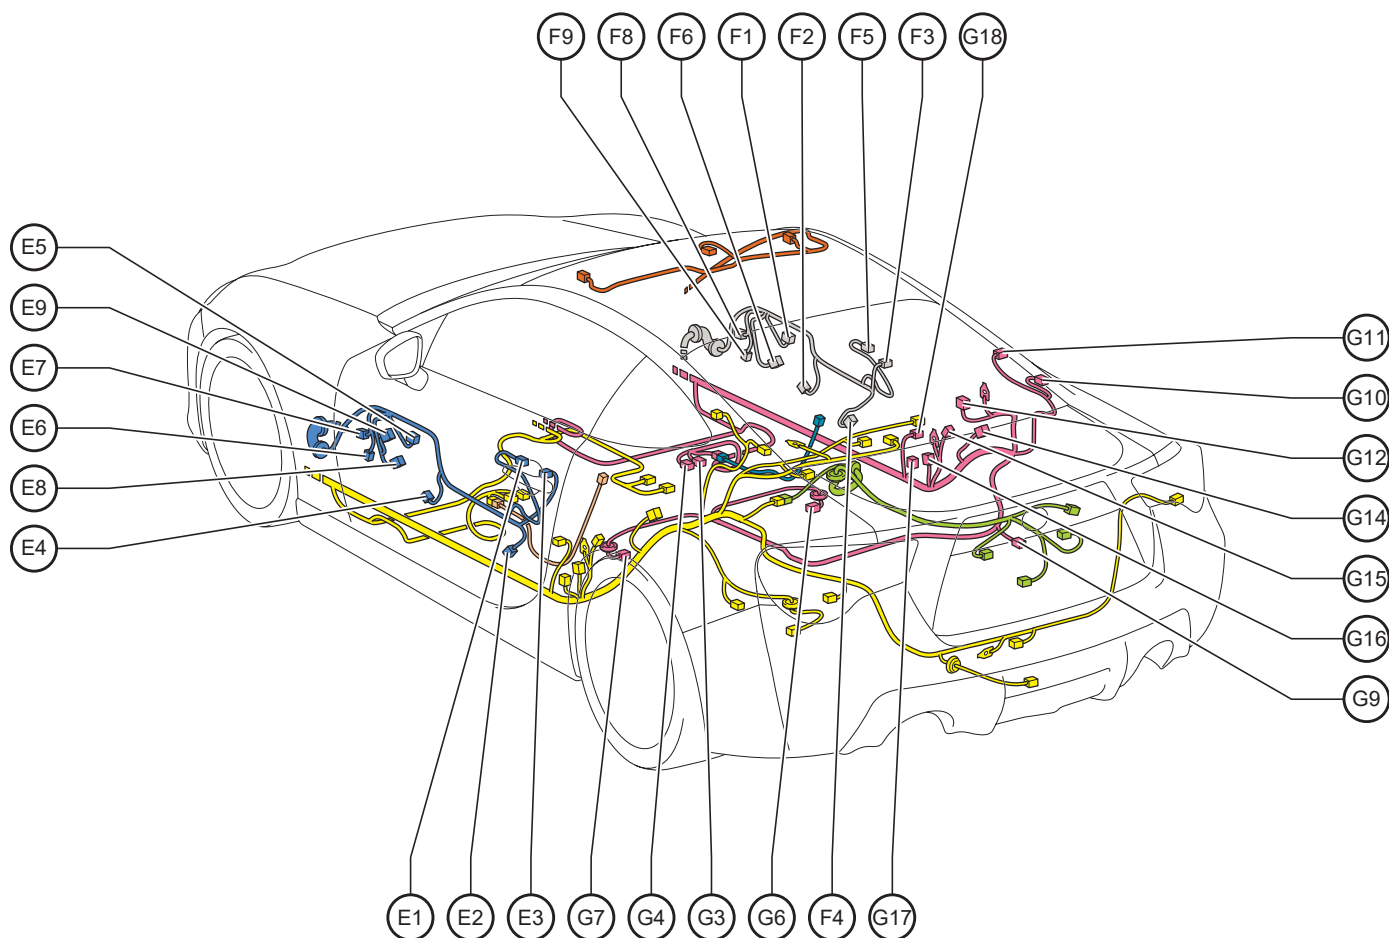


- E1 Electrical Key Antenna LH
(Front Door Outside Handle Assembly LH)
- E2 Front Courtesy Light Assembly LH
- E3 Door Lock with Motor Assembly LH
- E4 Front Door Impact Sensor LH
- E5 Power Window Regulator Motor Assembly LH
- E6 Front No. 1 Speaker Assembly LH
- E7 Outer Rear View Mirror Assembly LH
- E8 Power Window Regulator Master Switch Assembly
- E9 Outer Mirror Switch Assembly

- F1 Power Window Regulator Motor Assembly RH
- F2 Front Door Impact Sensor RH
- F3 Door Lock with Motor Assembly RH
- F4 Front Courtesy Light Assembly RH
- F5 Electrical Key Antenna RH
(Front Door Outside Handle Assembly RH)
- F6 Power Window Regulator Switch Assembly
- F8 Outer Rear View Mirror Assembly RH
- F9 Front No. 1 Speaker Assembly RH

- G3 Front Seat Inner Belt Assembly RH
- G4 Seat Heater RH
- G6 No. 2 Fuel Sender Gage Assembly
- G7 Fuel Sender Gage Assembly
- G9 Rear Speed Sensor RH
- G10 Rear Window Defogger (Back Window Glass)
- G11 Curtain Airbag Module RH
- G12 Fuel Pump Control ECU Assembly
- G14 Curtain Airbag Sensor RH
- G15 Rear Speaker Assembly RH
- G16 Side Airbag Sensor RH
- G17 Pretensioner RH
- G18 Front Door Courtesy Light Switch Assembly RH

Position of Parts in Body

[LHD]

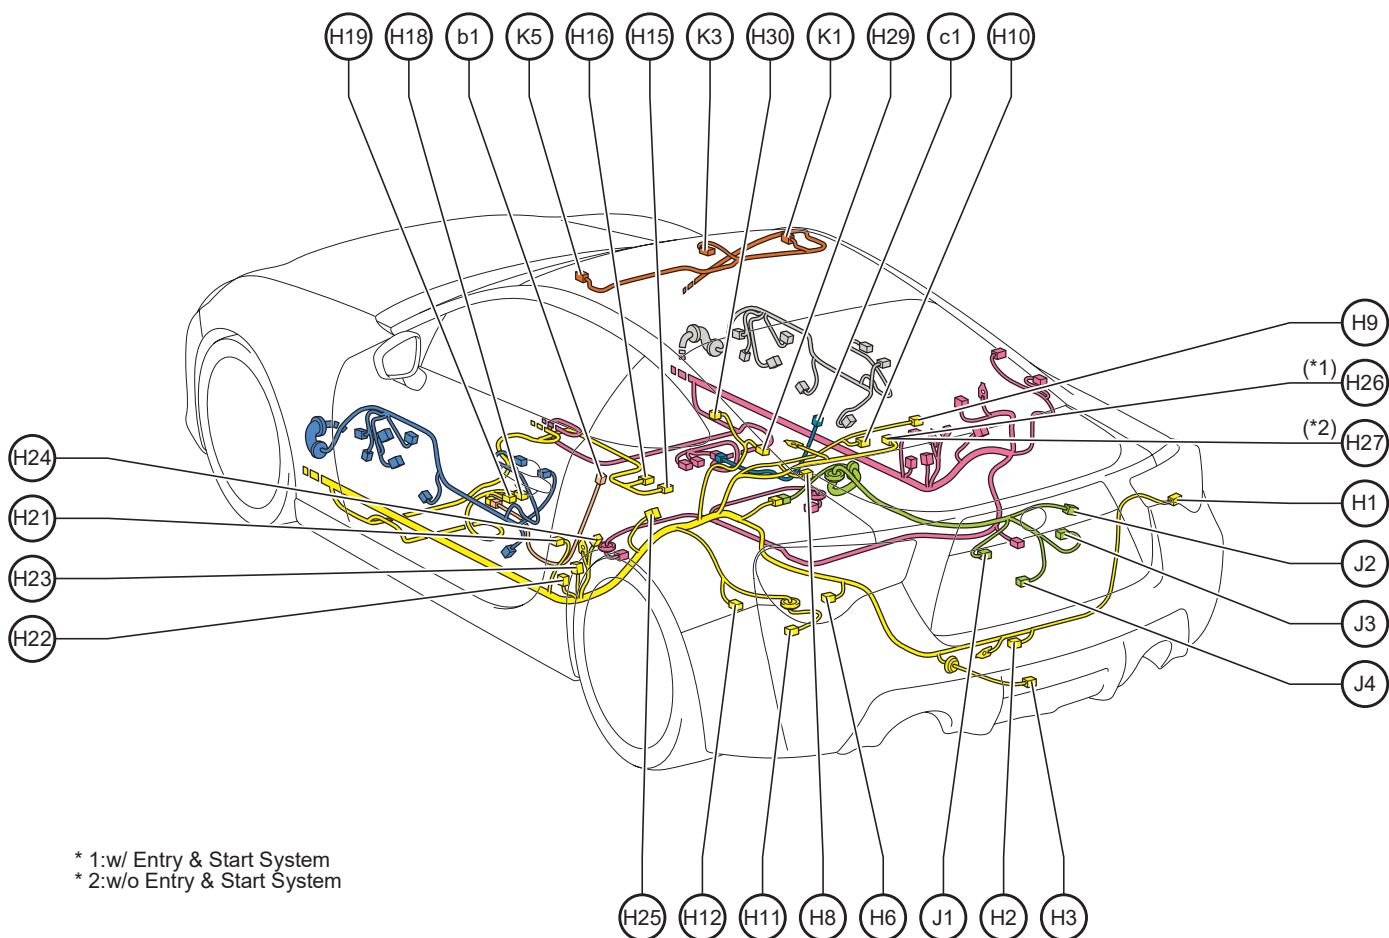

* 1:w/ Entry & Start System

* 2:w/o Entry & Start System


H1	Rear Combination Light Lens and Body RH
H2	Rear Fog Light Assembly (Back-Up Light Lens and Body)
H3	Rear Electrical Key Antenna
H6	Rear Combination Light Lens and Body LH
H8	No. 1 Luggage Compartment Light Assembly
H9	No. 2 Indoor Electrical Key Oscillator Assembly
H10	Center Stop Light Assembly
H11	Rear Height Control Sensor Sub-Assembly LH
H12	Rear Speed Sensor LH
H15	No. 3 Indoor Electrical Key Oscillator Assembly
H16	Satellite Safing Sensor
H18	Seat Heater LH
H19	Front Seat Inner Belt Assembly LH
H21	Front Door Courtesy Light Switch Assembly LH
H22	Pretensioner LH
H23	Side Airbag Sensor LH
H24	Rear Speaker Assembly LH
H25	Curtain Airbag Sensor LH
H26	Door Control Receiver
H27	Door Control Receiver
H29	Rear Window Defogger (Back Window Glass)
H30	Curtain Airbag Module LH

J1	License Plate Light Lens LH
J2	Back Door Opener Switch Assembly
J3	Luggage Compartment Door Striker Assembly
J4	License Plate Light Lens RH
K1	Vanity Light Assembly RH (Visor Assembly RH)
K3	Map Light Assembly
K5	Vanity Light Assembly LH (Visor Assembly LH)
b1	Side Airbag Module LH
c1	Side Airbag Module RH

G ELECTRICAL WIRING ROUTING

Position of Parts in Engine Compartment

[RHD]

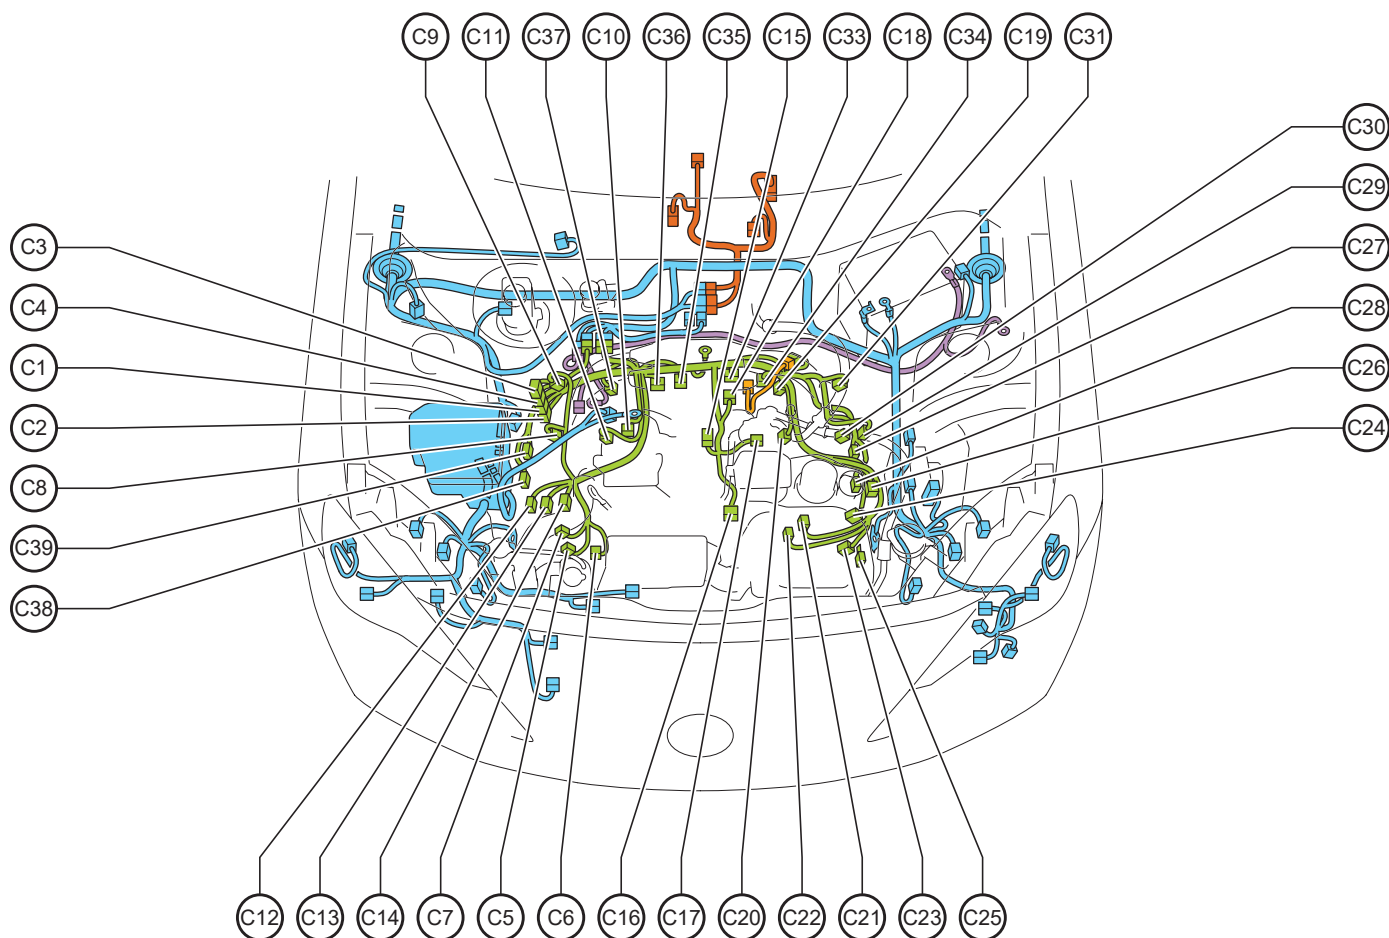


- C1 Injector Driver (EDU)
- C2 Injector Driver (EDU)
- C3 Injector Driver (EDU)
- C4 Injector Driver (EDU)
- C5 Camshaft Timing Oil Control Valve Assembly (Bank 1 Exhaust Side)
- C6 VVT Sensor (Camshaft Position Sensor) (Bank 1 Exhaust Side)
- C7 Camshaft Timing Oil Control Valve Assembly (Bank 1 Intake Side)
- C8 Fuel Injector Assembly (for Port Injection No. 1)
- C9 Fuel Injector Assembly (for Port Injection No. 3)
- C10 Fuel Pressure Sensor
- C11 Fuel Injector Assembly (for Direct Injection No. 1)
- C12 VVT Sensor (Camshaft Position Sensor) (Bank 1 Intake Side)
- C13 Heated Oxygen Sensor (Bank 1 Sensor 2)
- C14 Wide Range Air Fuel Ratio Sensor (Bank 1 Sensor 1)
- C15 Throttle Body with Motor Assembly
- C16 Intake Mass Air Flow Meter Sub-Assembly
- C17 Compressor with Magnet Clutch
- C18 VSV
- C19 Fuel Injector Assembly (for Direct Injection No. 4)

- C20 Fuel Injector Assembly (for Direct Injection No. 2)
- C21 Oil Temperature Sensor
- C22 Engine Oil Pressure Switch Assembly
- C23 Camshaft Timing Oil Control Valve Assembly (Bank 2 Exhaust Side)
- C24 Camshaft Timing Oil Control Valve Assembly (Bank 2 Intake Side)
- C25 VVT Sensor (Camshaft Position Sensor) (Bank 2 Exhaust Side)
- C26 VVT Sensor (Camshaft Position Sensor) (Bank 2 Intake Side)
- C27 Ignition Coil Assembly No. 4
- C28 Ignition Coil Assembly No. 2
- C29 Spill Control Valve (Fuel Pump Assembly)
- C30 Fuel Injector Assembly (for Port Injection No. 2)
- C31 Fuel Injector Assembly (for Port Injection No. 4)
- C33 Crankshaft Position Sensor
- C34 Knock Control Sensor (Bank 2)
- C35 E.F.I. Engine Coolant Temperature Sensor
- C36 Knock Control Sensor (Bank 1)
- C37 Fuel Injector Assembly (for Direct Injection No. 3)
- C38 Ignition Coil Assembly No. 1
- C39 Ignition Coil Assembly No. 3

Position of Parts in Engine Compartment

[RHD]

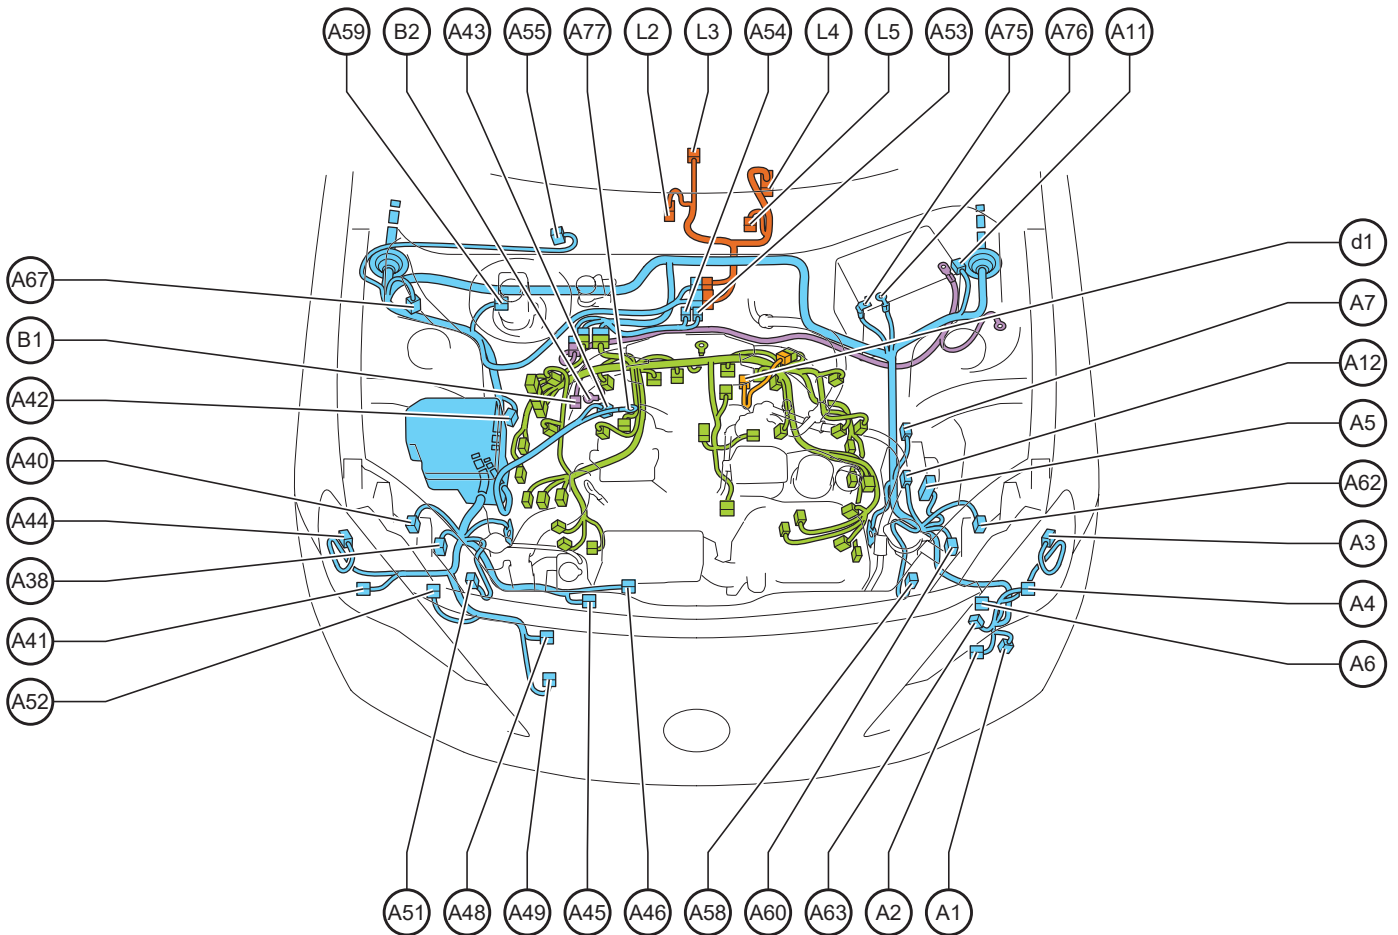


- | | | | |
|-----|--|-----|--|
| A1 | Windshield Washer Motor and Pump Assembly | A52 | Low Pitched Horn Assembly |
| A2 | Headlight Cleaner Washer Motor and Pump Assembly | A53 | Back-Up Light Switch Assembly |
| A3 | Side Turn Signal Light Assembly LH | A54 | Park/Neutral Position Switch Assembly |
| A4 | Headlight Assembly LH | A55 | Front Wiper Motor and Link Assembly |
| A5 | VSC (VDC) Control Module | A58 | Front Sub Sensor LH |
| A6 | Headlight Cleaner Control Relay | A59 | Brake Fluid Level Warning Switch
(Brake Master Cylinder Sub-Assembly) |
| A7 | Pressure Switch | A60 | Headlight Assembly LH |
| A11 | Battery Current Sensor Assembly | A62 | Headlight Assembly LH |
| A12 | Front Speed Sensor LH | A63 | Wireless Door Lock Buzzer |
| A38 | Headlight Assembly RH | A67 | Alarm Kit |
| A40 | Headlight Assembly RH | A75 | Fusible Link Block Assembly |
| A41 | Headlight Assembly RH | A76 | Fusible Link Block Assembly |
| A42 | Front Speed Sensor RH | A77 | Generator Assembly |
| A43 | Generator Assembly | | |
| A44 | Side Turn Signal Light Assembly RH | B1 | Starter Assembly |
| A45 | Cooling Fan Motor | B2 | Starter Assembly |
| A46 | No. 2 Cooling Fan Motor | | |
| A48 | Ambient Temperature Sensor (Thermistor Assembly) | L2 | Park/Neutral Position Switch Assembly |
| A49 | High Pitched Horn Assembly | L3 | Transmission Revolution Sensor (SP2) |
| A51 | Front Sub Sensor RH | L4 | Electronically Controlled Transmission Solenoid |
| | | L5 | Transmission Revolution Sensor (NT) |
| | | d1 | CPC Solenoid |

G ELECTRICAL WIRING ROUTING

Position of Parts in Instrument Panel


[RHD]

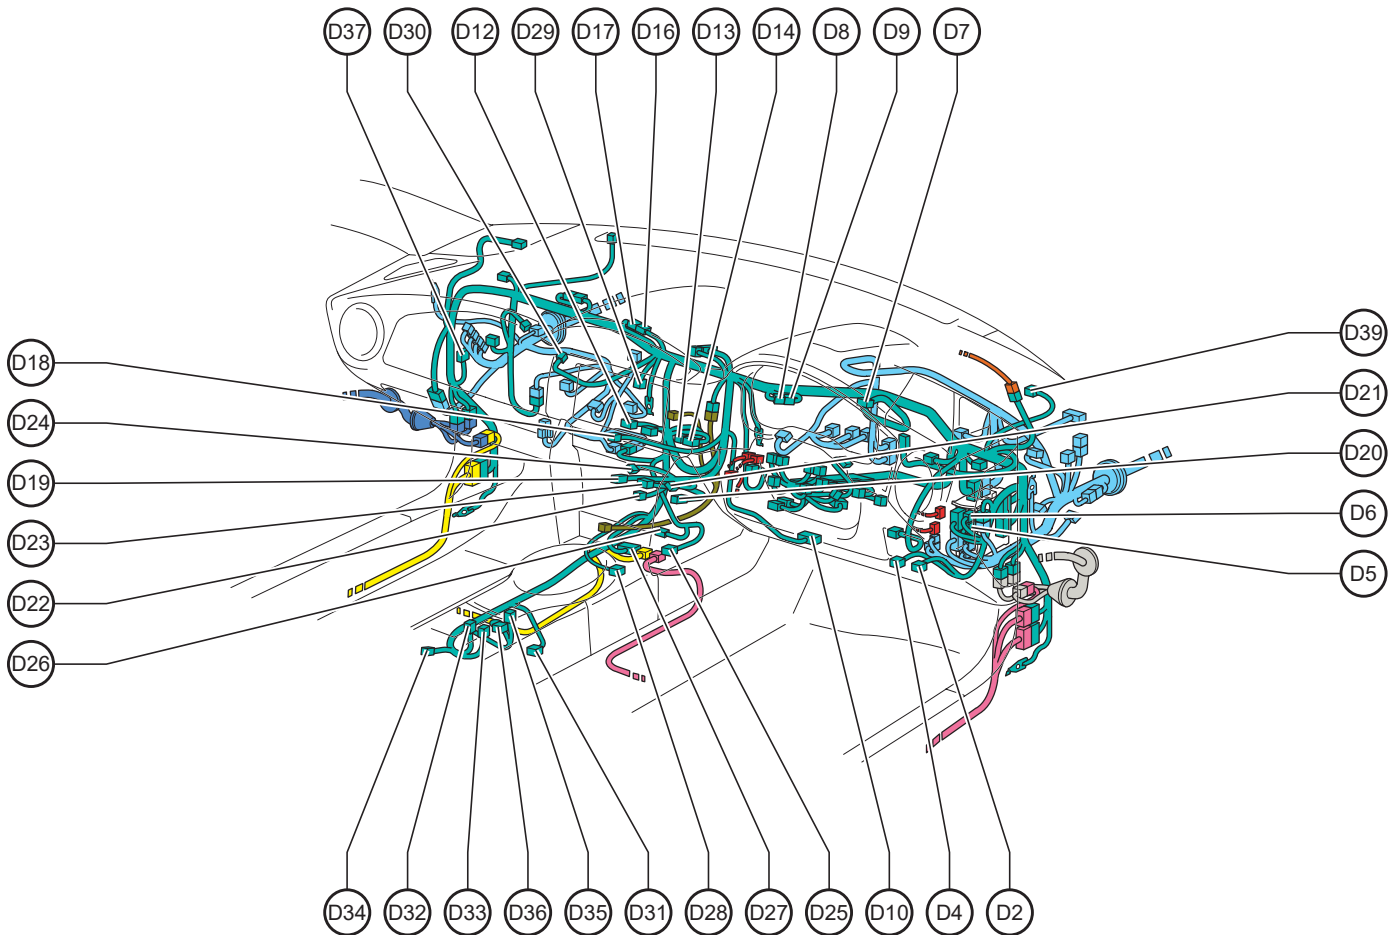

D2	Light Control Rheostat	D22	No. 3 Heater Control Sub-Assembly
D4	Luggage Door Opening Switch Assembly	D23	No. 3 Heater Control Sub-Assembly
D5	Main Body ECU	D24	Heater Control Sub-Assembly
D6	Main Body ECU	D25	Engine Switch
D7	Combination Meter Assembly	D26	Indoor Electrical Key Oscillator Assembly
D8	Junction Connector	D27	Airbag Control Module
D9	Junction Connector	D28	Shift Lever Position Sensor (Floor Shift Control Lever)
D10	DLC3	D29	Option Connector
D12	Radio Receiver Assembly	D30	Passenger's Airbag Module
D13	Radio Receiver Assembly	D31	Parking Brake Switch Assembly
D14	Radio Receiver Assembly	D32	Seat Heater Switch LH
D16	Junction Connector	D33	Seat Heater Switch RH
D17	Junction Connector	D34	No. 2 Power Outlet Socket Assembly
D18	Clock Assembly	D35	Pattern Select Switch Assembly
D19	A/C Amplifier Assembly	D36	Shift Position Indicator
D20	A/C Amplifier Assembly	D37	Airbag Cut Off Switch
D21	No. 1 Heater Control Sub-Assembly	D39	Front No. 2 Speaker Assembly RH

Position of Parts in Instrument Panel

[RHD]

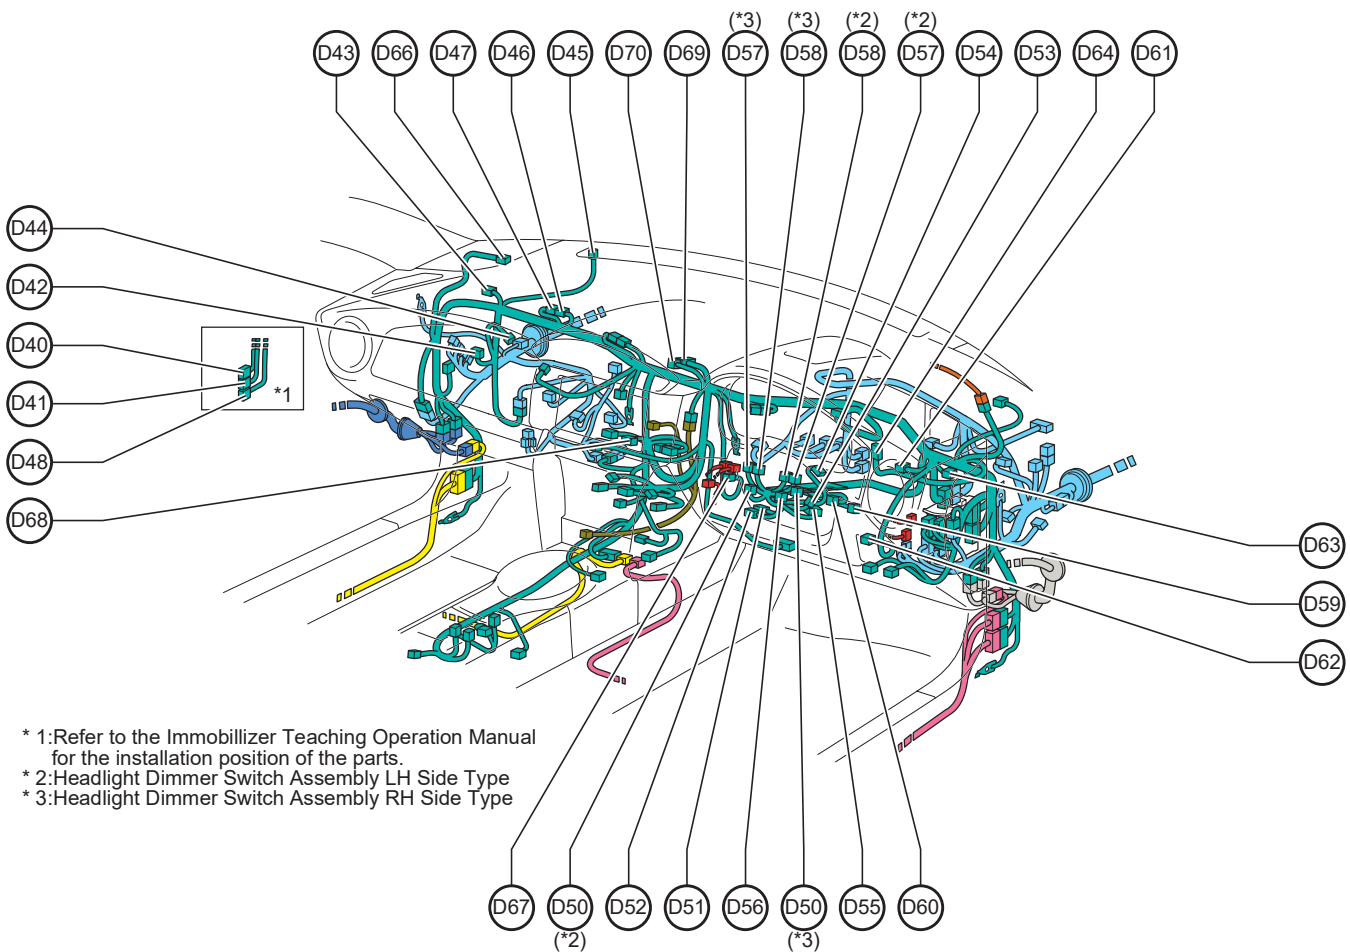


D40 Certification ECU Assembly
 D41 Certification ECU Assembly
 D42 Shift Lock Release Button Cover
 D43 Junction Connector
 D44 No. 1 Power Outlet Socket Assembly
 D45 Automatic Light Control Sensor
 D46 Junction Connector
 D47 Junction Connector
 D48 Certification ECU Assembly
 D50 Headlight Dimmer Switch Assembly
 D51 Roll Connector
 D52 Roll Connector
 D53 Un-Lock Warning Switch Assembly
 (Ignition Switch Lock Cylinder Assembly)
 D54 Transponder Key Amplifier
 D55 Ignition or Starter Switch Assembly

D56 Steering Sensor
 D57 Windshield Wiper Switch Assembly
 D58 Windshield Wiper Switch Assembly
 D59 Steering Lock Actuator Assembly
 D60 Key Inter Lock Solenoid
 (Ignition Switch Lock Cylinder Assembly)
 D61 Turn Signal Flasher Assembly
 D62 Driver's Knee Airbag Module
 D63 Option Connector
 D64 Trip Switch
 D66 Front No. 2 Speaker Assembly LH
 D67 No. 1 Cooler Thermistor
 D68 Option Connector
 D69 Alarm Control Unit
 D70 Alarm Control Unit

G ELECTRICAL WIRING ROUTING

Position of Parts in Instrument Panel

[RHD]

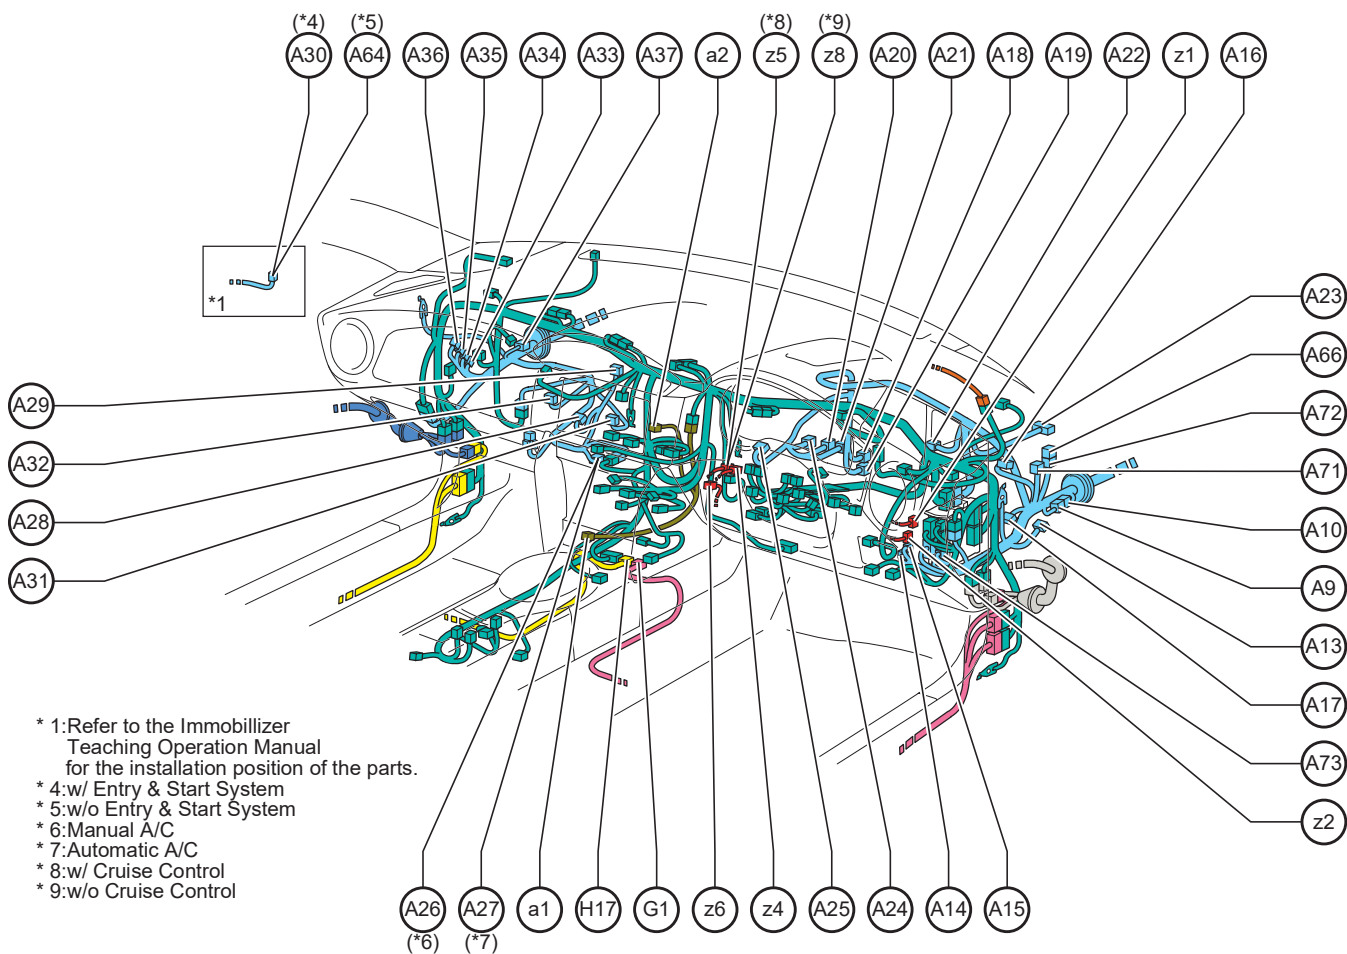


A9	Junction Connector	A64	Transponder Key ECU Assembly
A10	Junction Connector	A66	Short Connector
A13	Noise Filter	A71	Alarm Kit
A14	Power Steering ECU Assembly	A72	Short Connector
A15	Power Steering ECU Assembly	A73	Main Body ECU
A16	Headlight Leveling ECU		
A17	Junction Connector	G1	Airbag Control Module
A18	Transmission Control Module	H17	Airbag Control Module
A19	Transmission Control Module	a1	No. 1 Stereo Jack Adapter Assembly
A20	Clutch Start Switch Assembly	a2	Radio Receiver Assembly
A21	Clutch Switch Assembly	z1	Power Steering ECU Assembly
A22	Stop Light Switch Assembly	z2	Power Steering ECU Assembly
A23	Accelerator Pedal Sensor Assembly		Steering Column Assembly
A24	No. 1 A/C Radiator Damper Servo Sub-Assembly		Steering Column Assembly
A25	Cooler Thermistor (Room Temperature Sensor)	z4	Roll Connector
A26	Blower Resistor		Paddle Shift Switch
A27	Blower Assembly	z5	Roll Connector
A28	No. 3 A/C Radiator Damper Servo Sub-Assembly		Cruise Control Main Switch
A29	No. 4 A/C Radiator Damper Servo Sub-Assembly	z6	Roll Connector
A30	ID Code Box		Driver's Airbag Module
A31	Blower with Fan Motor Sub-Assembly	z8	Roll Connector
A32	No. 5 A/C Radiator Damper Servo Sub-Assembly		Horn Button Assembly
A33	ECM		
A34	ECM		
A35	ECM		
A36	ECM		
A37	Junction Connector		

G ELECTRICAL WIRING ROUTING

Position of Parts in Body

[RHD]

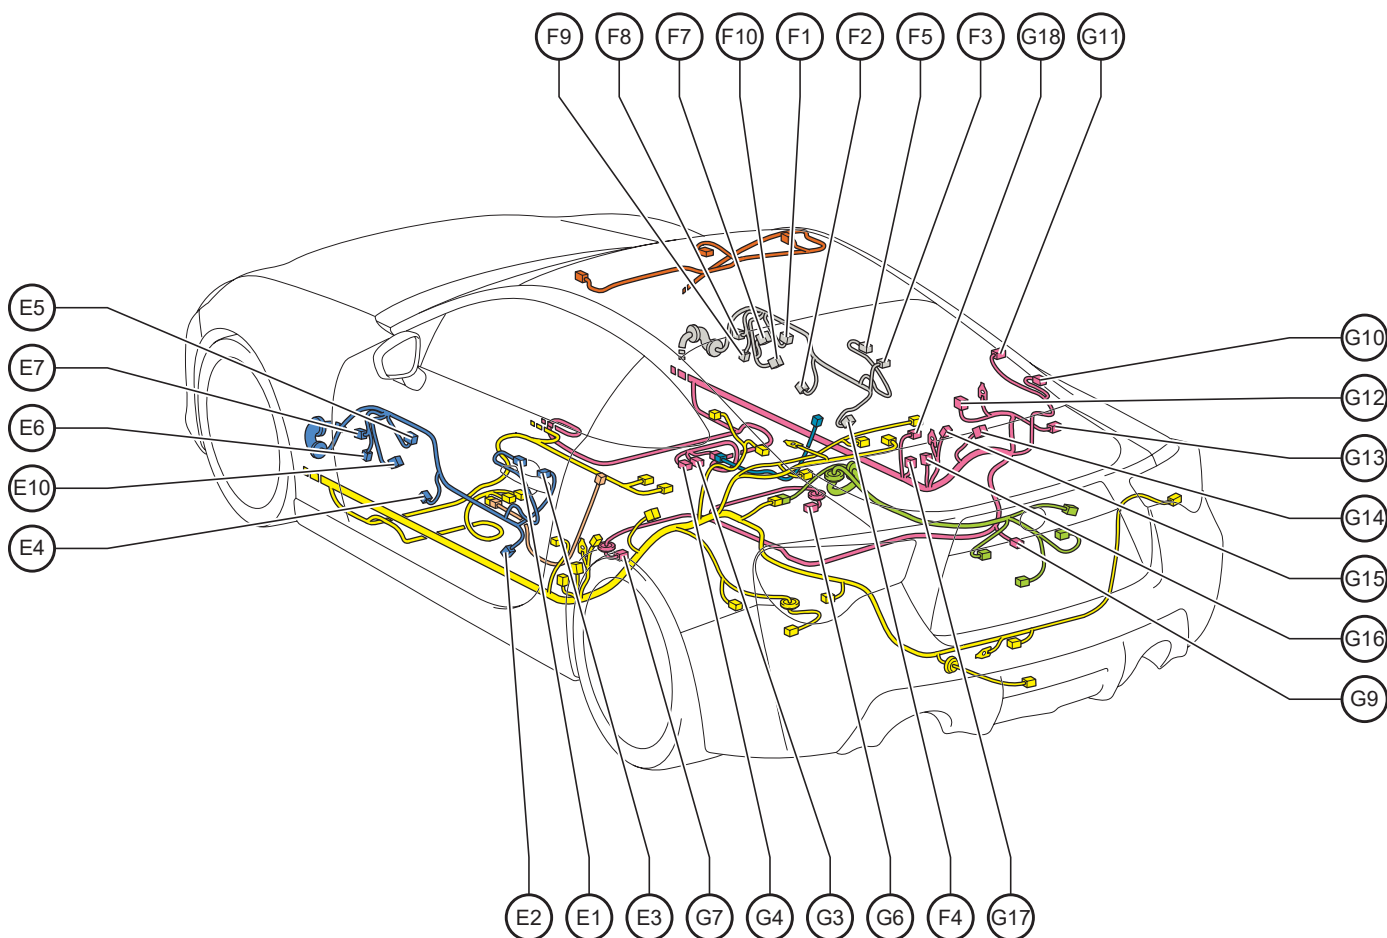


- E1 Electrical Key Antenna LH
(Front Door Outside Handle Assembly LH)
- E2 Front Courtesy Light Assembly LH
- E3 Door Lock with Motor Assembly LH
- E4 Front Door Impact Sensor LH
- E5 Power Window Regulator Motor Assembly LH
- E6 Front No. 1 Speaker Assembly LH
- E7 Outer Rear View Mirror Assembly LH
- E10 Power Window Regulator Switch Assembly

- F1 Power Window Regulator Motor Assembly RH
- F2 Front Door Impact Sensor RH
- F3 Door Lock with Motor Assembly RH
- F4 Front Courtesy Light Assembly RH
- F5 Electrical Key Antenna RH
(Front Door Outside Handle Assembly RH)
- F7 Outer Mirror Switch Assembly
- F8 Outer Rear View Mirror Assembly RH
- F9 Front No. 1 Speaker Assembly RH
- F10 Power Window Regulator Master Switch Assembly

- G3 Front Seat Inner Belt Assembly RH
- G4 Seat Heater RH
- G6 No. 2 Fuel Sender Gage Assembly
- G7 Fuel Sender Gage Assembly
- G9 Rear Speed Sensor RH
- G10 Rear Window Defogger (Back Window Glass)
- G11 Curtain Airbag Module RH
- G12 Fuel Pump Control ECU Assembly
- G13 Alarm Kit
- G14 Curtain Airbag Sensor RH
- G15 Rear Speaker Assembly RH
- G16 Side Airbag Sensor RH
- G17 Pretensioner RH
- G18 Front Door Courtesy Light Switch Assembly RH

Position of Parts in Body

[RHD]

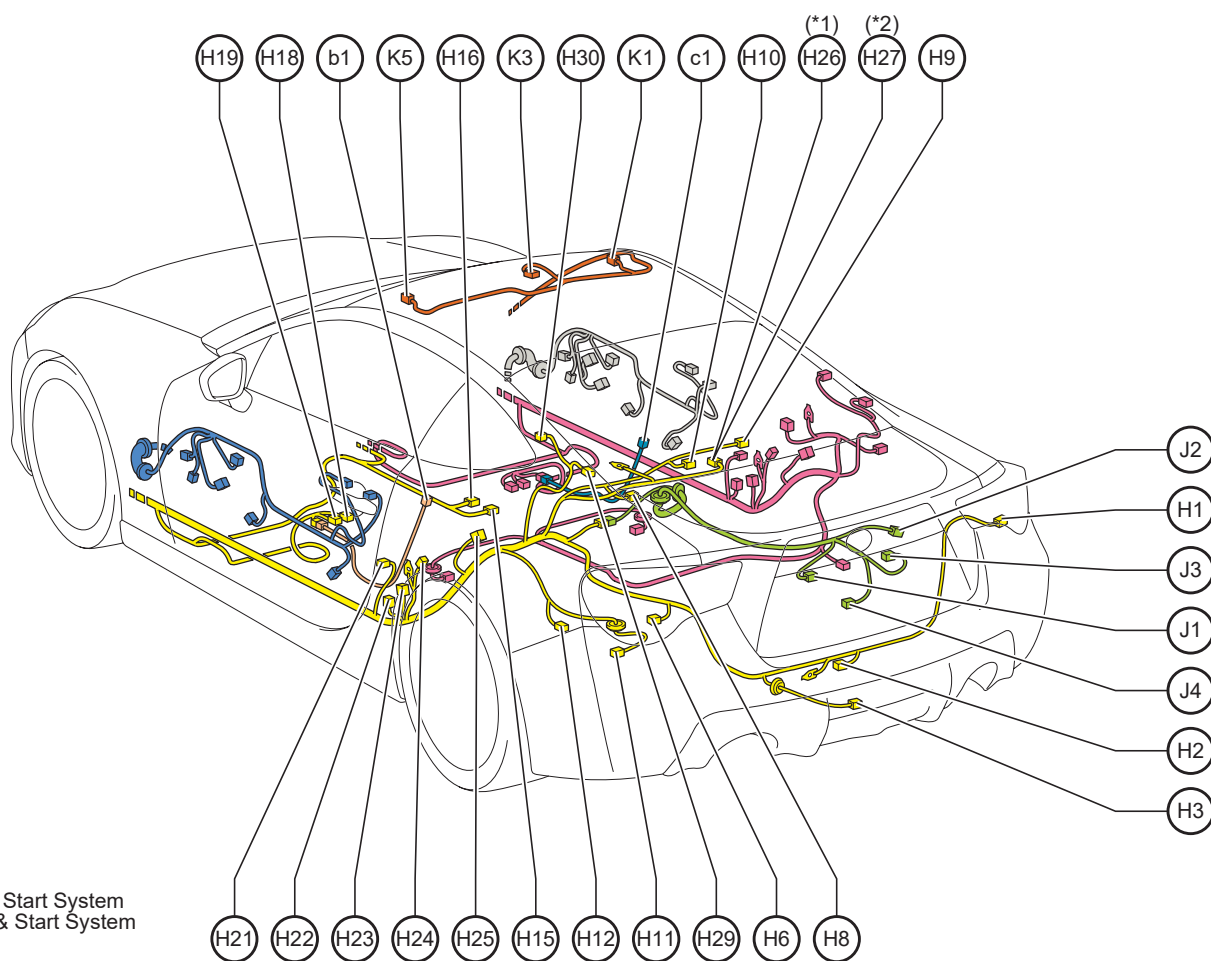

* 1:w/ Entry & Start System
* 2:w/o Entry & Start System


H1	Rear Combination Light Lens and Body RH	J1	License Plate Light Lens LH
H2	Rear Fog Light Assembly (Back-Up Light Lens and Body)	J2	Back Door Opener Switch Assembly
H3	Rear Electrical Key Antenna	J3	Luggage Compartment Door Striker Assembly
H6	Rear Combination Light Lens and Body LH	J4	License Plate Light Lens RH
H8	No. 1 Luggage Compartment Light Assembly	K1	Vanity Light Assembly RH (Visor Assembly RH)
H9	No. 2 Indoor Electrical Key Oscillator Assembly	K3	Map Light Assembly
H10	Center Stop Light Assembly	K5	Vanity Light Assembly LH (Visor Assembly LH)
H11	Rear Height Control Sensor Sub-Assembly LH	b1	Side Airbag Module LH
H12	Rear Speed Sensor LH	c1	Side Airbag Module RH
H15	No. 3 Indoor Electrical Key Oscillator Assembly		
H16	Satellite Safing Sensor		
H18	Seat Heater LH		
H19	Front Seat Inner Belt Assembly LH		
H21	Front Door Courtesy Light Switch Assembly LH		
H22	Pretensioner LH		
H23	Side Airbag Sensor LH		
H24	Rear Speaker Assembly LH		
H25	Curtain Airbag Sensor LH		
H26	Door Control Receiver		
H27	Door Control Receiver		
H29	Rear Window Defogger (Back Window Glass)		
H30	Curtain Airbag Module LH		

G ELECTRICAL WIRING ROUTING

□ : Location of Connector Joining Wire Harness and Wire Harness


▽ : Location of Ground Points

[LHD]

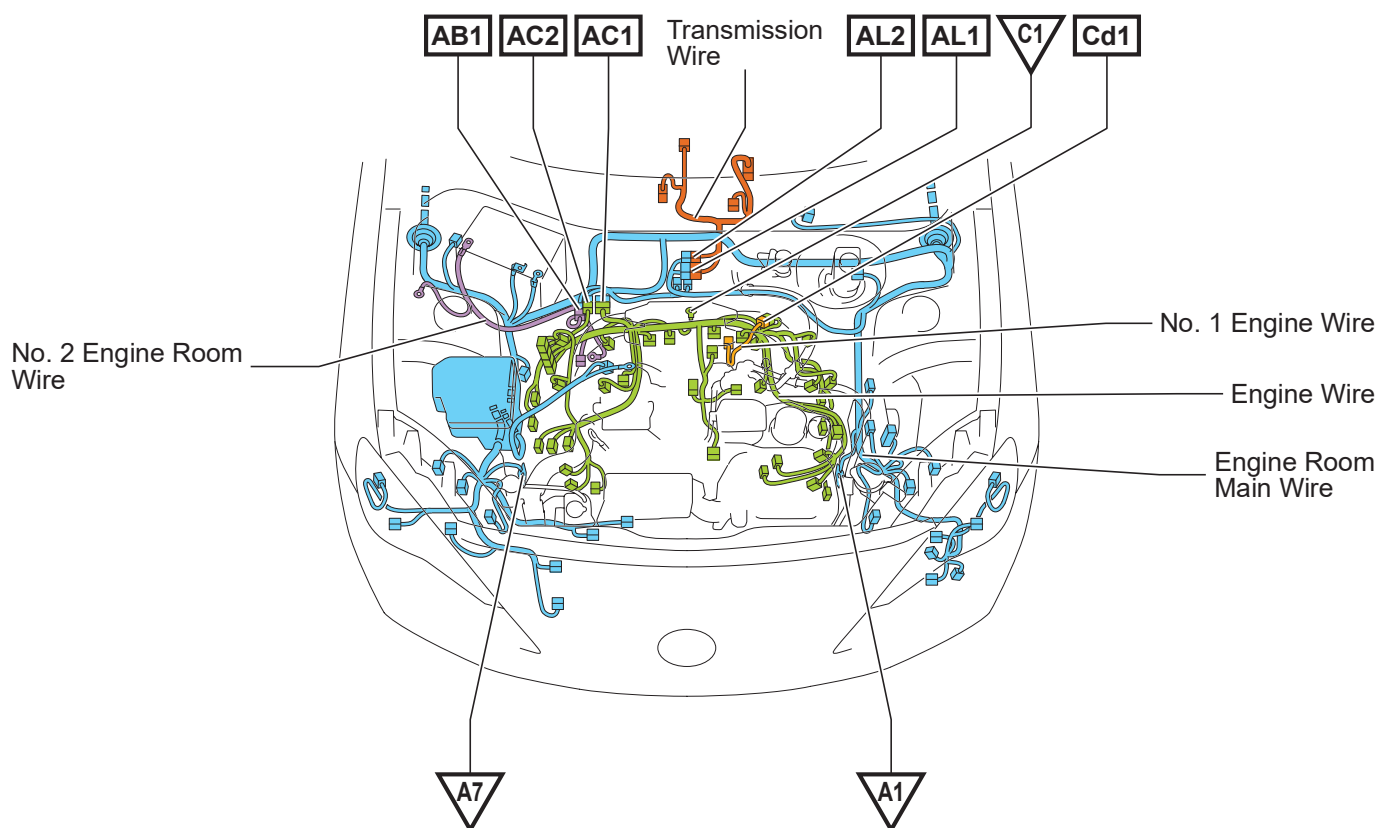


□ : Location of Connector Joining Wire Harness and Wire Harness

[LHD]

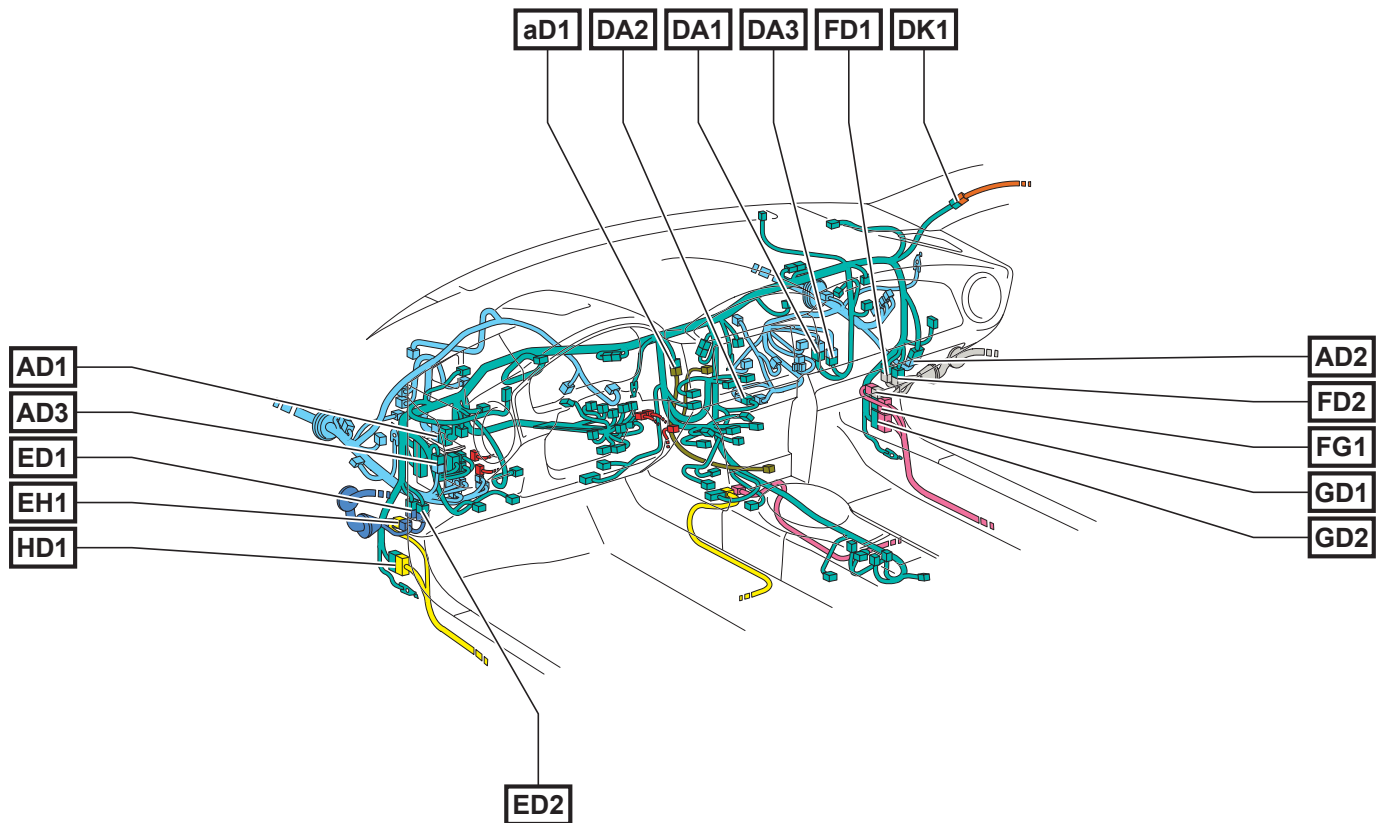

▽ : Location of Ground Points

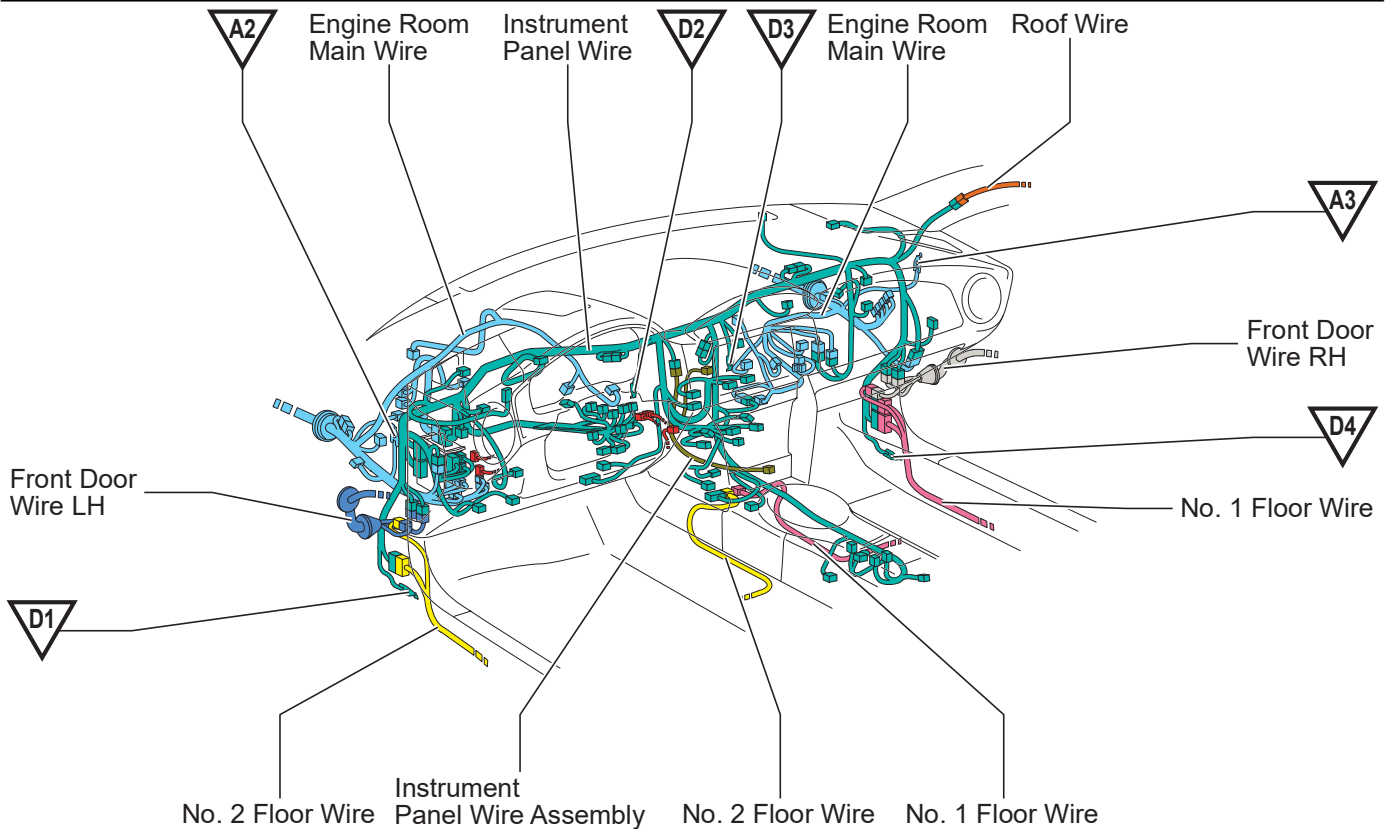


G ELECTRICAL WIRING ROUTING

□ : Location of Connector Joining Wire Harness and Wire Harness

▽ : Location of Ground Points

[LHD]

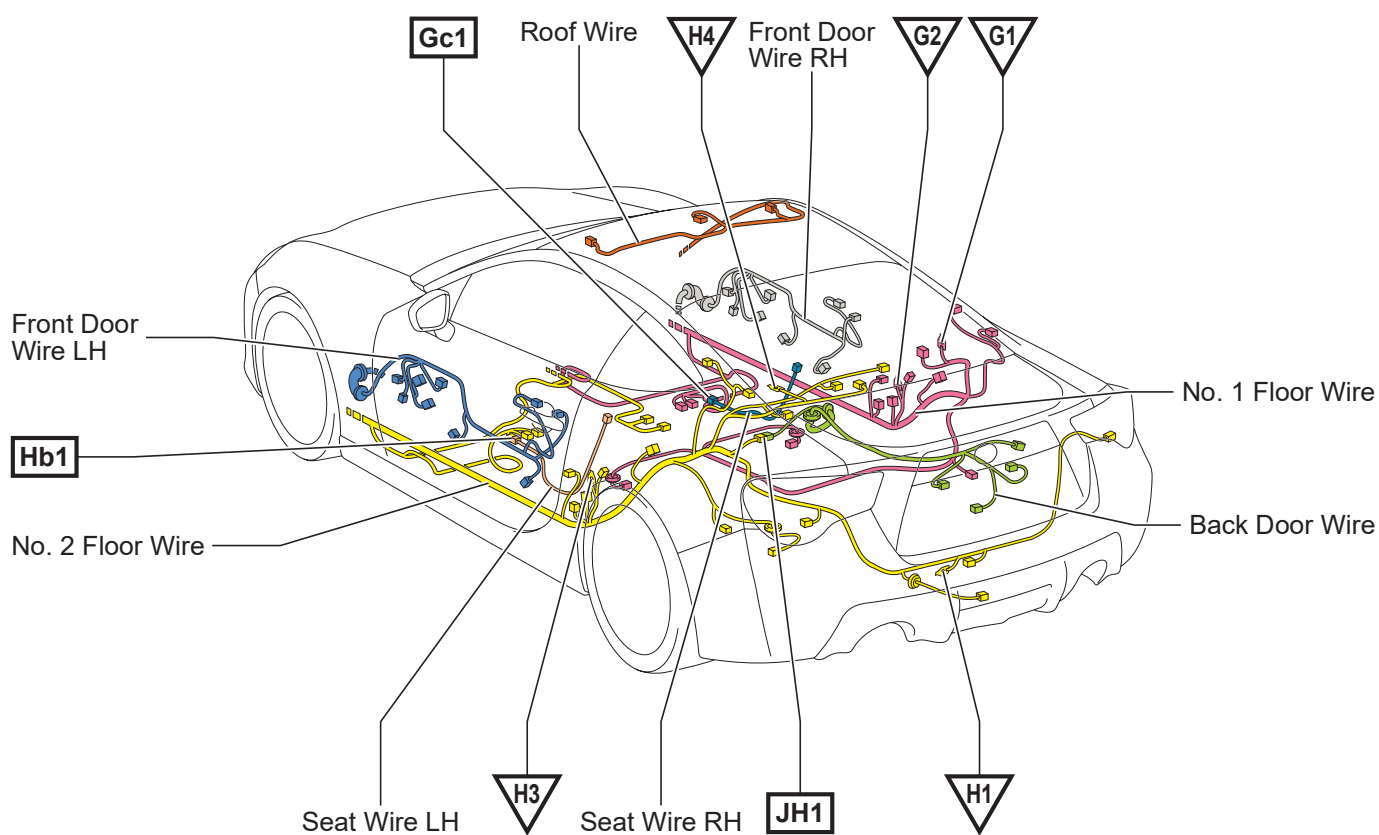


G ELECTRICAL WIRING ROUTING

□ : Location of Connector Joining Wire Harness and Wire Harness


▽ : Location of Ground Points

[RHD]

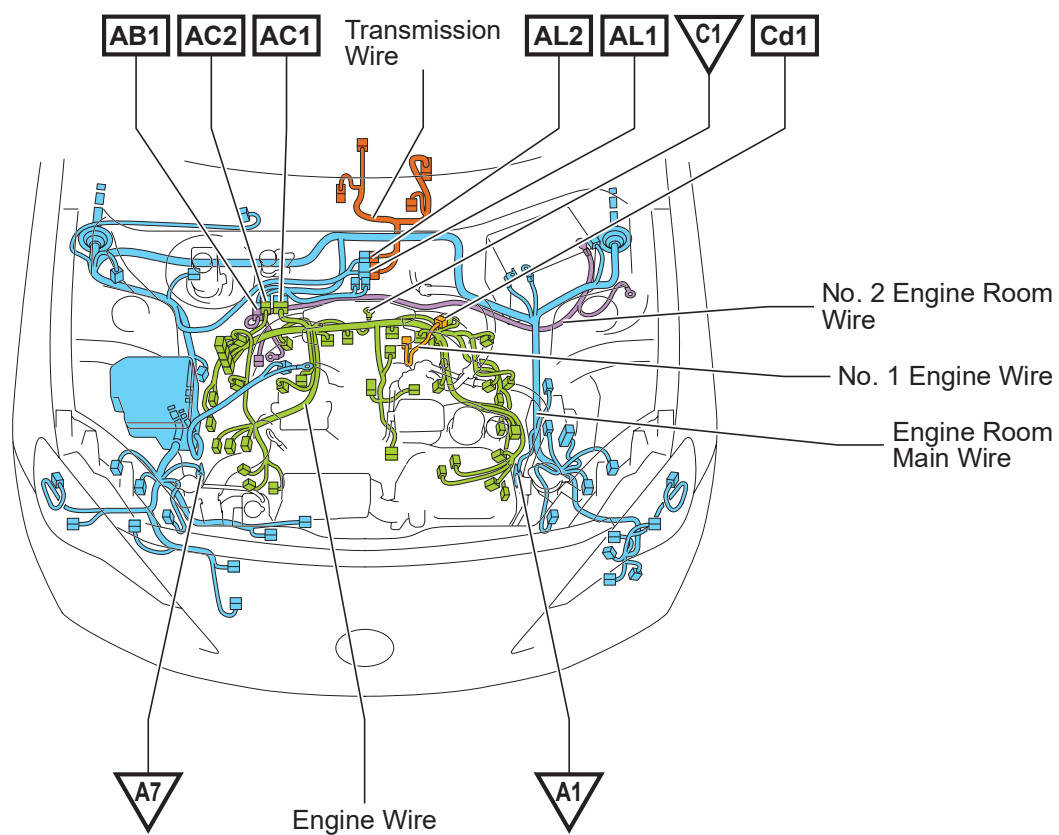


□ : Location of Connector Joining Wire Harness and Wire Harness

[RHD]

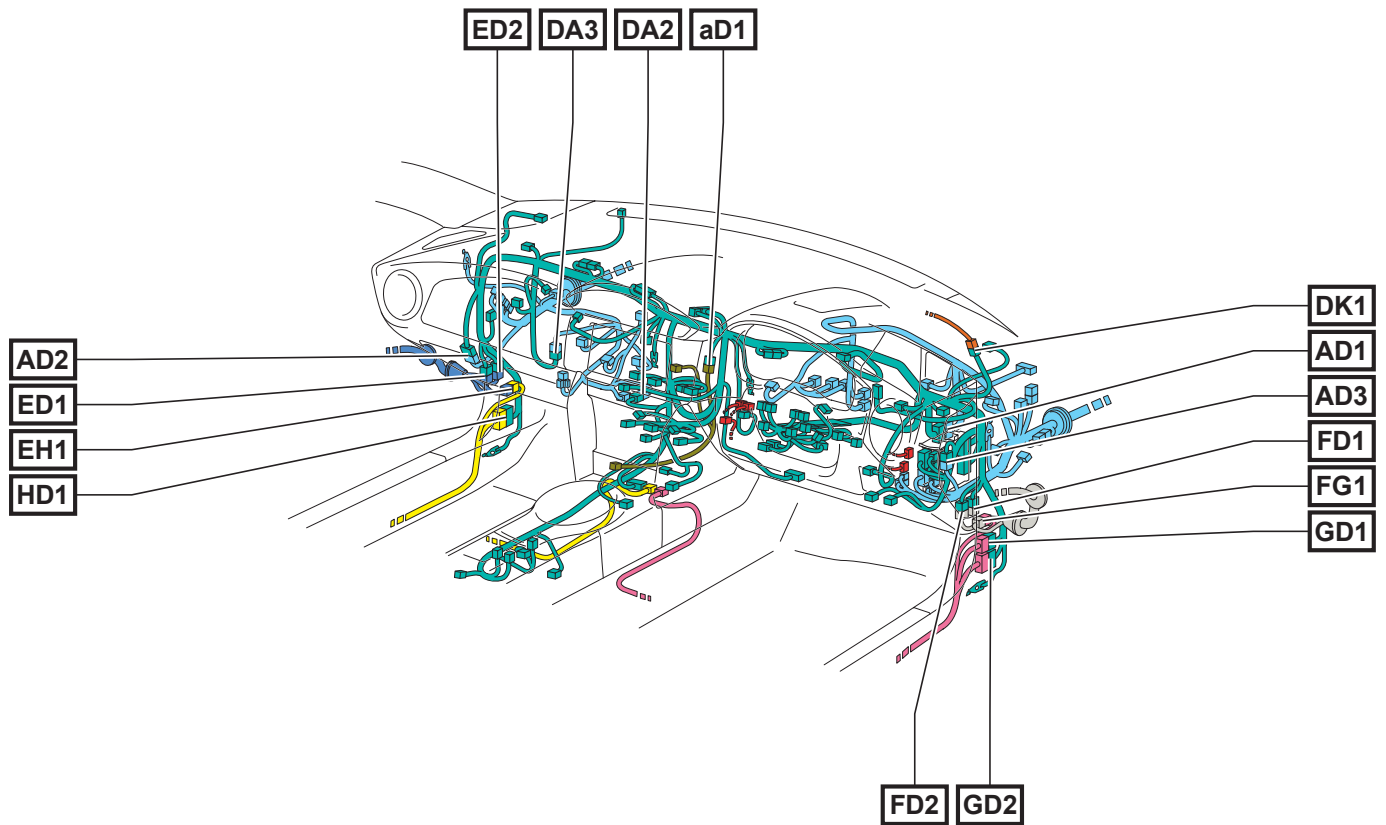

▽ : Location of Ground Points

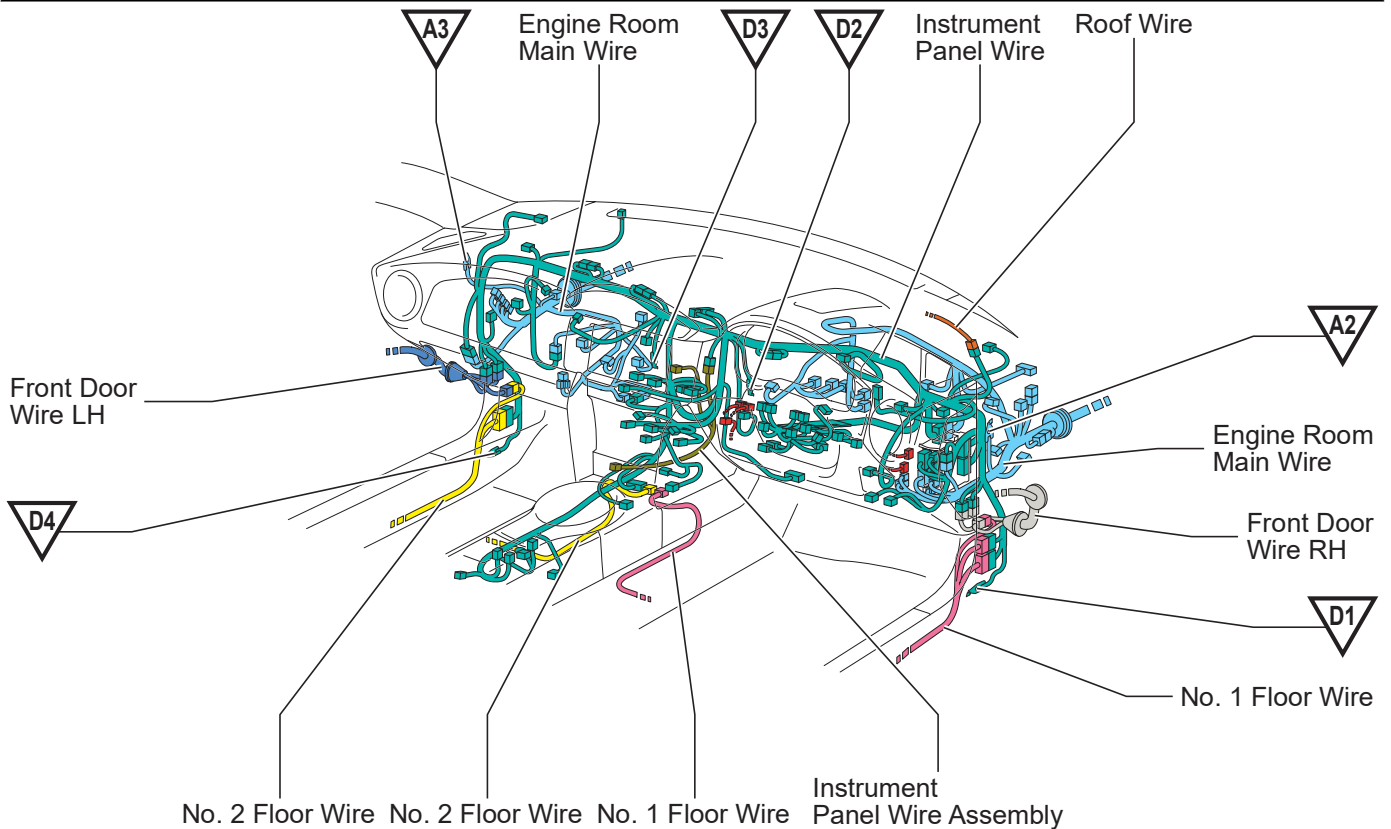


G ELECTRICAL WIRING ROUTING

□ : Location of Connector Joining Wire Harness and Wire Harness

▽ : Location of Ground Points

[RHD]

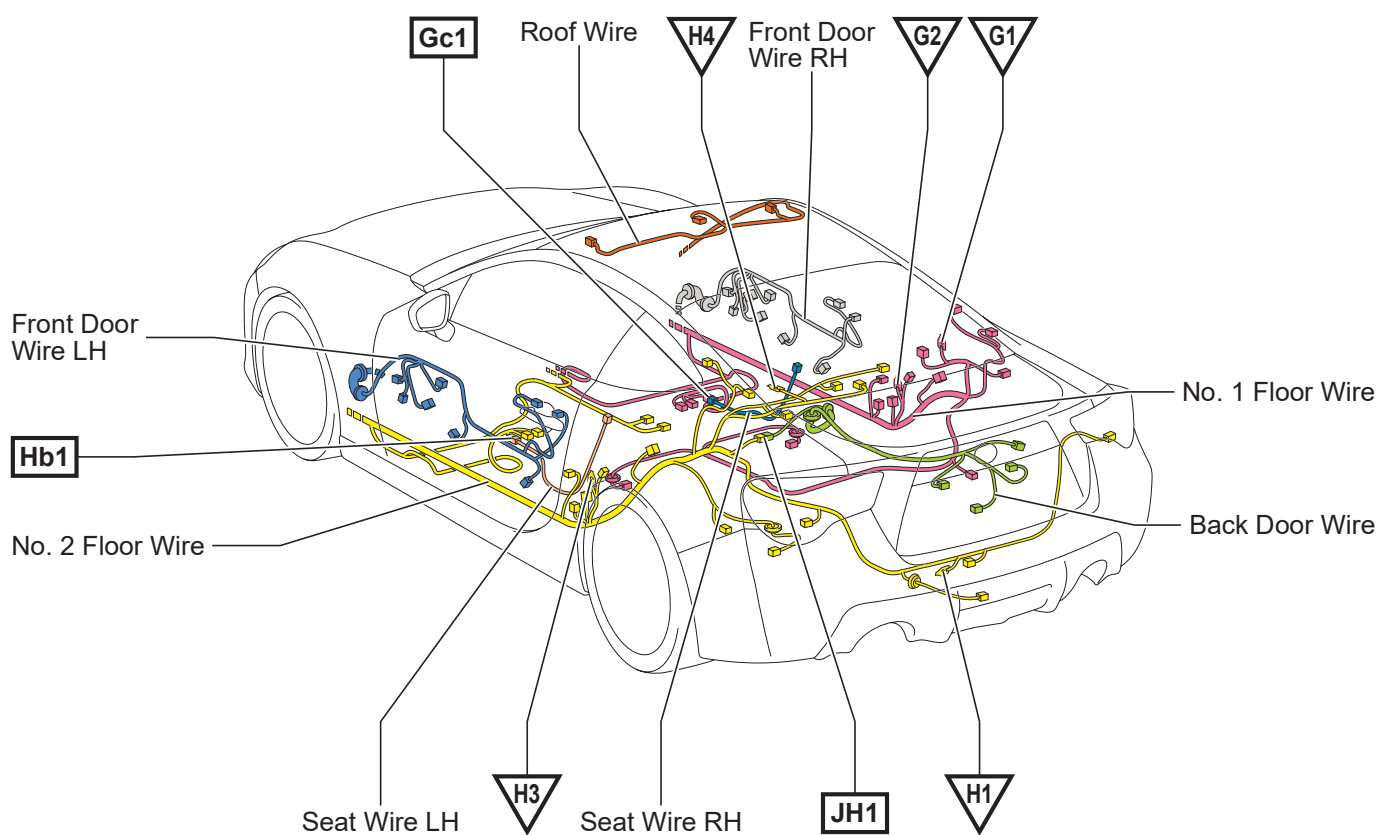

[Antenna]