

Toyota RAV4 (XA10; 1998-2000) fuses

*In this article, we consider the first-generation Toyota RAV4 (XA10) after a facelift, produced from 1998 to 2000. Here you will find fuse box diagrams of **Toyota RAV4 1998, 1999 and 2000**, get information about the location of the fuse panels inside the car, and learn about the assignment of each fuse (fuse layout).*

See other Toyota RAV4:

Fuse Layout Toyota RAV4 1998-2000



Cigar lighter (power outlet) fuses in the Toyota RAV4 are the fuses #15 "PWR OUTLET" (Power outlet) and #16 "CIG" (Cigarette lighter) in the Instrument panel fuse box.

Passenger Compartment Fuse Box

Fuse box location

It is located in the left side of the instrument panel, behind the cover.



Fuse box diagram

Advertisements


Assignment of the fuses in the Passenger Compartment

No	Name	Ampere rating [A]	Functions
15	PWR OUTLET	10	Power outlet
16	CIG	15	Cigarette lighter, clock, car audio system, power rear view mirrors, electronically controlled automatic transmission system
17	SRS- ACC	10	SRS airbag system, seat belt pretensioners
18	WIPER	20	Windshield wipers and washer, rear window wiper and washer
19	ECU- IG	10	Electronically controlled automatic transmission system, rear window defogger, center differential lock system, electric moon roof, multiport fuel injection system/sequential

No	Name	Ampere rating [A]	Functions
			multiport fuel injection system, electric cooling fan, anti- lock brake system, cruise control system
20	TURN & GAUGE	10	Turn signal lights, gauges and meters, back- up lights, service reminder indicators, air conditioning system, daytime running light system
21	STOP	10	Stoplights, high mounted stoplight, electronically controlled automatic transmission system, anti- lock brake system
22	TAIL	15	Gauges and meters, emergency flashers, cigarette lighter, center differential lock system, clock, rear window defogger, air conditioning system, electronically controlled automatic transmission system, car audio system, tail lights, license plate lights, parking lights, instrument panel light control, side marker lights
23	OBD	10	On- board diagnosis system
24	SRS-B	10	SRS airbag warning light
25	HORN	10	Horn
27	AM1	10	"CIG", "PWR OUTLET", "SRS- ACC", "WIPER", "ECU- IG" and TURN & GAUGE' fuses
28	A/C	10	Air conditioning system
32	PWR	30	Power door lock system, electric moon roof, power windows


Engine Compartment Fuse Box

Fuse box location

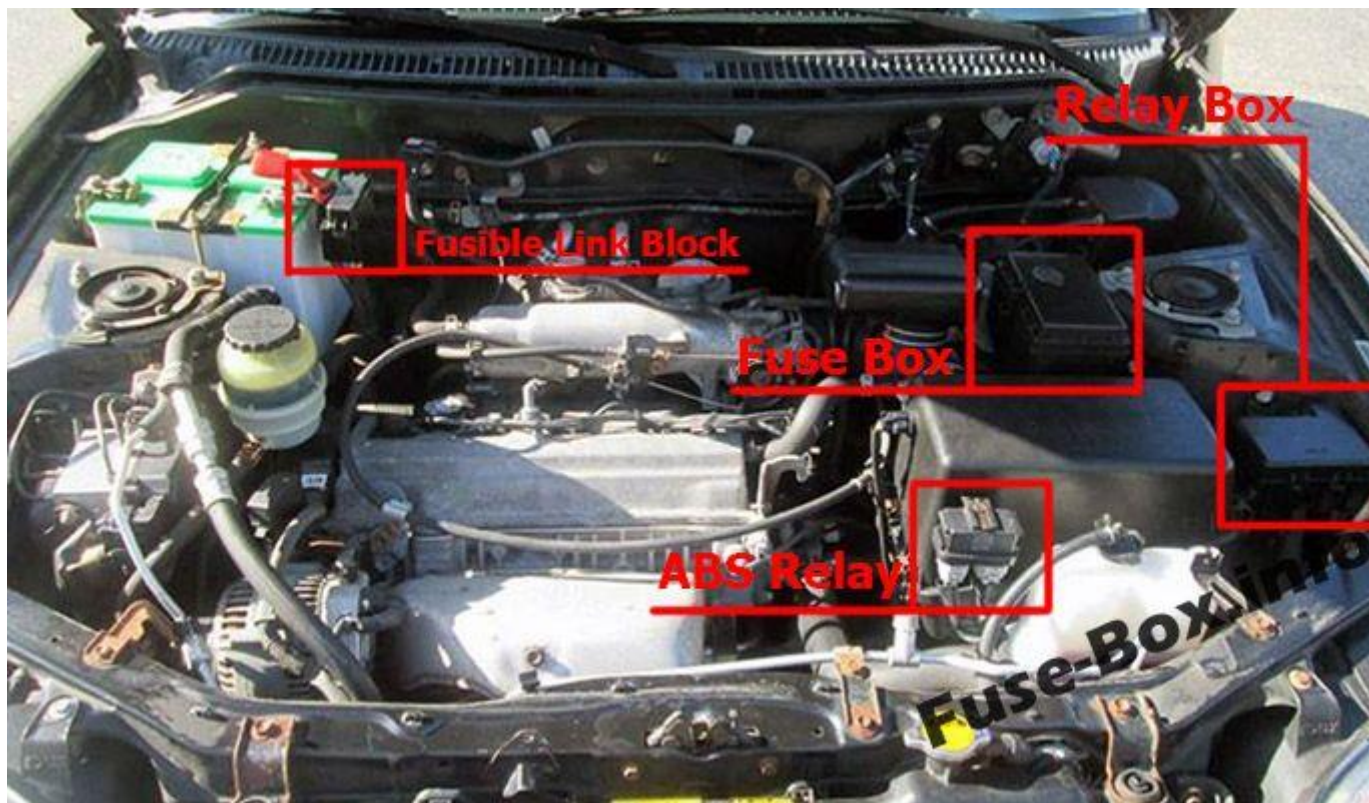


Fuse box diagram

Without Daytime Running Light System

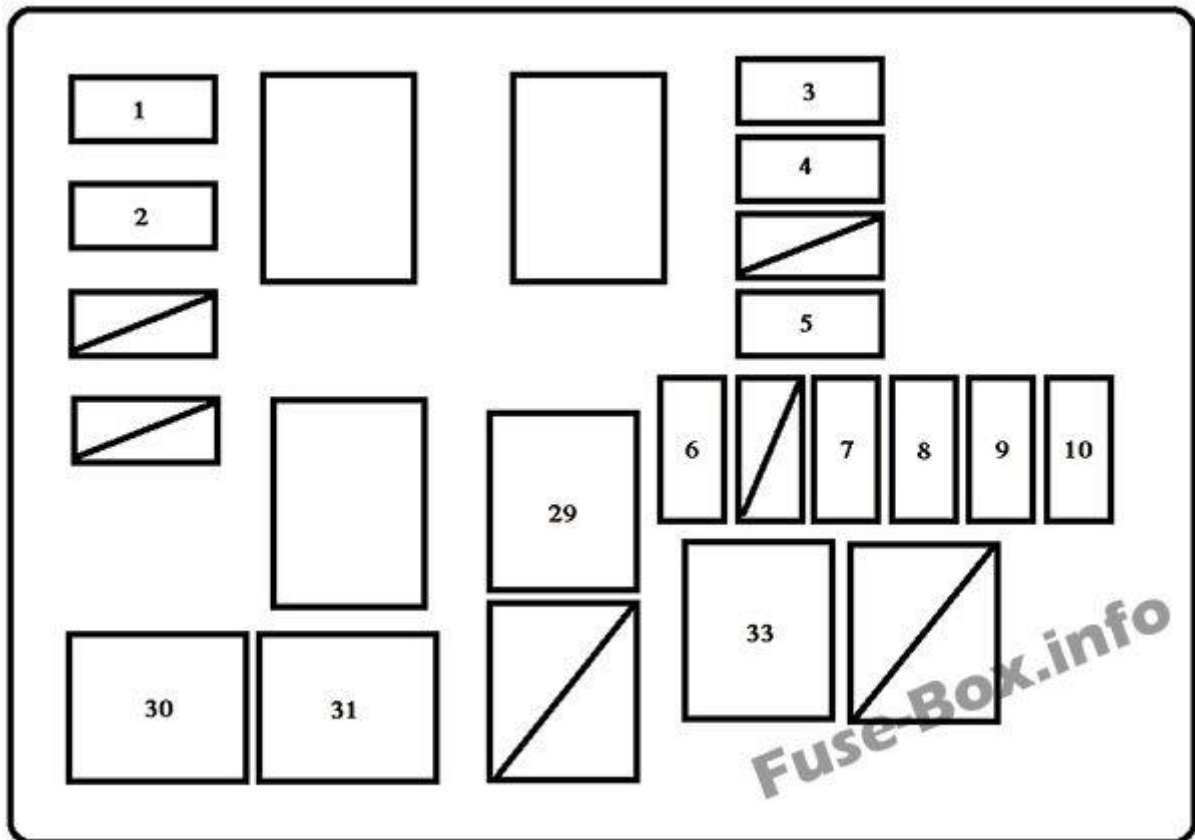

With Daytime Running Light System

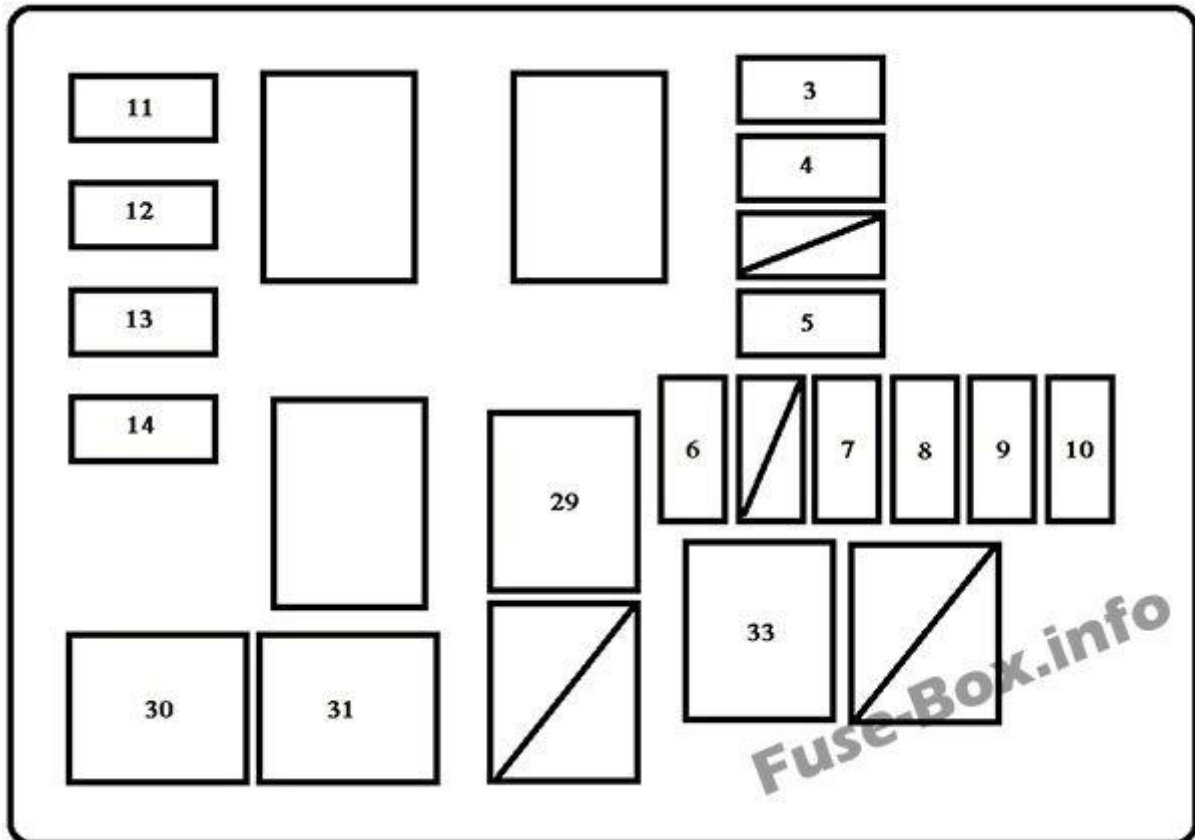


Advertisements

Assignment of the fuses in the Engine Compartment

No	Name	Ampere rating [A]	Functions
1	H- LP (RH)	15	Right- hand headlight
2	H- LP (LH)	15	Left- hand headlight
3	SPARE	10	Spare fuse
4	SPARE	15	Spare fuse
5	AM2	5	Multiport fuel injection system/sequential multiport fuel injection system, SRS airbag system, seat belt pretensioners, starting system, discharge warning light
6	ALT-S	5	Charging system

№	Name	Ampere rating [A]	Functions
7	HAZ	10	Emergency flashers
8	EFI	20	Multiport fuel injection system/sequential multiport fuel injection system
9	DOME	15	Interior light, personal lights, clock, daytime running light system, gauge and meters, car audio system
10	IGN	20	Charging system
11	H- LP RH-H	10	Right- hand headlight (high beam)
12	H- LP LH-H	10	Left- hand headlight (high beam)
13	H- LP RH-L	10	Right- hand headlight (low beam)
14	H- LP LH-L	10	Left- hand headlight (low beam)
29	MAIN No. 1	30	Starting system, "HLP (RH)", "H- LP (LH)", "H- LP RH- H", "H- LP LH- H", "H- LP RH- L" and D H- LP LH- L" fuses
30	CDS FAN	30	Electric cooling fan
31	RDI FAN	30	Electric cooling fan
33	ABS	50	Anti- lock brake system

Fusible Link Block

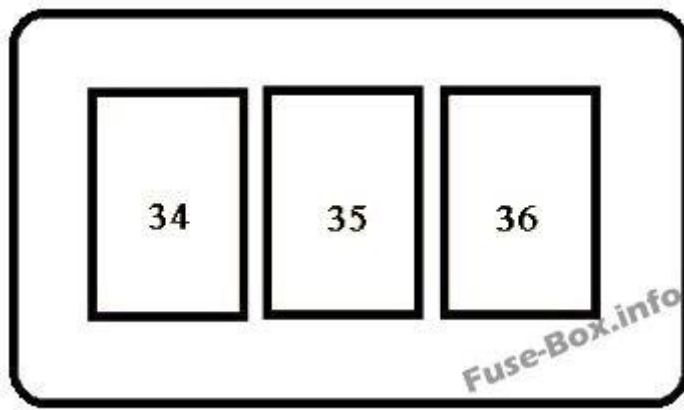

No	Name	Ampere rating [A]	Functions
34	MAIN	80	"IGN", "HAZ", "DOME", "ALT- S", "MAIN No.1", "AM2" and "EFI" fuses
35	ALT	100	"HTR", "ABS", "RDI FAN", "CDS FAN", "CIG", "SRS- ACC", "WIPER", "ECU- IG", "TURN & GAUGE", "DEFOG", "TAIL", "STOP", "HORN", "OBD", "SRS- B", "PWR OUTLET", "PWR" and "AM1" fuses
36	HTR	50	Air conditioning system, "A/C" fuse