

Vauxhall Corsa D 2007 – 2008 fuse box diagram

Fusebox in engine compartment



Vauxhall Corsa D – fuse box – engine compartment

Number	Circuit	Ampere rating [A]
1	Starter	30
2	Air conditioning system	7,5
3	Diesel fuel filter heater	30
		15*
4	Horn	15
5	Easytronic, automatic transmission	15
6	Engine control unit	7,5
7	Front fog lights	15

8	Engine cooling	30
		40*
9	Engine cooling	30
		40
		60*
10	Easytronic	30
		60*
11	Preheating for diesel engines, ignition system	7,5
		15*
12	Headlight range adjustment, Adaptive Forward Lighting	5
13	Air conditioning system	7,5
14	Easytronic	5
15	Main beam (right)	10
16	Main beam (left)	10
17	Main relay	10

18	Engine control unit	7,5
19	Airbags	10
20	Main relay	10
21	Main relay	15
		20*
22	Central control unit	70
23	Tyre repair kit	20
24	Fuel pump	15
25	Anti-lock Brake System	30
26	Heated rear window	30
27	Anti-lock Brake System	30
28	Interior fan	30
29	Cigarette lighter	20
30	Air conditioning system	7,5
31	Electric window (left)	20

32	Electric window (right)	20
33	Heated exterior mirrors	7,5
34	—	—
35	—	—

* Different ratings depending on engine and equipment level

Fusebox in passenger compartment



Vauxhall Corsa D – fuse box – passenger

compartment

Number	Circuit	Ampere rating [A]
1	—	—
2	Instruments, information display	10
3	Infotainment system	20
4	Starter switch	7,5
5	Windscreen wash system	20

6	Unlocking the luggage compartment	15
7	Central locking system	20
8	—	—
9	Courtesy light	10
10	Electric power steering	7,5
11	Light switch, brake light	7,5
12	ABS, brake light	7,5
13	Heated steering wheel	3
14	Parking distance sensors, rain sensor, interior mirror	7,5

Fusebox in luggage compartment



Vauxhall Corsa D – fuse box – luggage compartment

Number	Circuit	Ampere rating [A]
1	Adaptive Forward Lighting	15

2	—	—
3	Seat heater (left)	15
4	Seat heater (right)	15
5	—	—
6	—	—
7	—	—
8	Flex-Fix system, towing equipment	20
9	—	—
10	—	—
11	—	—
12	—	—
13	—	—
14	—	—
15	Flex-Fix system, towing equipment	20
16	—	—

17	Sunroof	20
----	---------	----