


# Oldsmobile Intrigue 1999 fuse box diagram

## Driver's Side Fuse Block

The left side fuse panel is located to the left of the steering wheel, under the instrument panel.

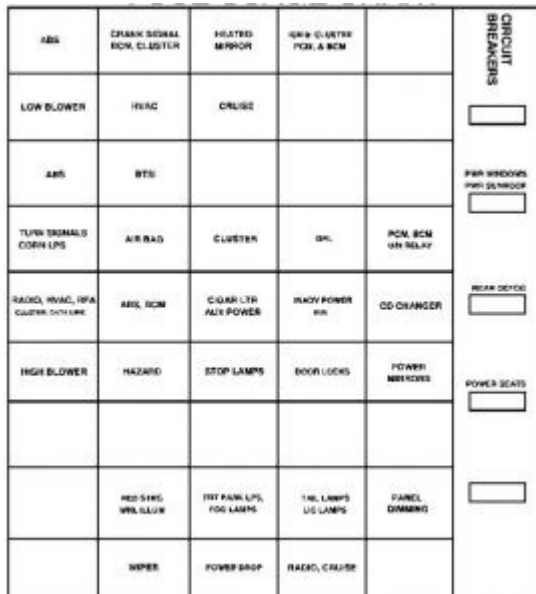

Oldsmobile Intrigue – fuse box – driver's side fuse block


| Fuse                      | Description                                                                               |
|---------------------------|-------------------------------------------------------------------------------------------|
| ABS                       | ABS Motor Assembly (3800 V6 Engine Only)                                                  |
| CRANK SIGNAL BCM, CLUSTER | CRANK — Instrument Panel Cluster, Body Control Module, Powertrain Control Module          |
| HEATED MIRROR             | Heated Outside Rearview Mirrors                                                           |
| IGN 0: CLUSTER PCM, & BCM | Instrument Panel Cluster, Powertrain Control Module, Body Control                         |
| LOW BLOWER                | HVAC Control Assembly, Blower Motor                                                       |
| HVAC                      | Air Temperature Valve Motor, HVAC Control Assembly, Solenoid Box, Compass Mirror          |
| CRUISE                    | Cruise Control Module                                                                     |
| ABS (3800 V6 Only)        | Electronic Brake Control Module (EBCM), ABS Relay, Traction Control System Disable Switch |
| BTSI                      | Brake-Transaxle Shift Interlock                                                           |
| TURN SIGNALS, CORN LPS    | Turn Signals, Cornering Lamps                                                             |

|                                      |                                                                                                                                                                          |
|--------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| AIR BAG                              | Air Bag System                                                                                                                                                           |
| CLUSTER                              | Instrument Panel Cluster                                                                                                                                                 |
| DRL                                  | Daytime Running Lamps                                                                                                                                                    |
| PCM, BCM, U/H RELAY                  | Powertrain Control Module, Body Control Module, Underhood IgnitiodRelay                                                                                                  |
| RADIO, WAC, RFA<br>CLUSTER DATA LINK | Radio, HVAC Control Assembly, Instrument Panel Cluster, Remote Keyless Entry Module, Data Link Connector, Bose Amplifier                                                 |
| ABS, BCM                             | ABS1 — Electronic Brake Control Module (EBCM) (3800 V6 Only), Body Control Module                                                                                        |
| CIGAR LTR,<br>AUX POWER              | Auxiliary Power, Cigarette Lighter, Power Drop                                                                                                                           |
| INADV POWER BUS                      | Vanity Mirrors, Instrument Panel Courtesy Lamps, Instrument Panel Compartment Lamps, Trunk Courtesy Lamp, Header Courtesy and Reading Lamps, I/S Lighted Rearview Mirror |
| CD CHANGER                           | Cartridge Disk Changer                                                                                                                                                   |
| HIGH BLOWER                          | High Blower Relay                                                                                                                                                        |
| HAZARD                               | Hazard Switch                                                                                                                                                            |
| STOP LAMPS                           | Stoplamps Switch                                                                                                                                                         |
| DOOR LOCKS                           | Door Lock Relays (Internal to Body Control Module) and External Driver Door Lock Relay                                                                                   |
| POWER MIRRORS                        | Left-hand and Right-hand Power Mirrors                                                                                                                                   |
| RED STRG WHL ILLUM                   | Steering Wheel Radio Switch Illumination                                                                                                                                 |
| FRT PRK LPS, FOG LAMPS               | PARK LPS — Front Parking Lamps, Sidemarker Lamps, Fog Lamps                                                                                                              |
| TAIL LAMPS, LIC LAMPS                | Taillamps, License Lamps, Rear Sidemarker Lamps, Rear Sidemarker Lamps                                                                                                   |
| PANEL DIMMING                        | Dimmable Instrument Panel Lamps                                                                                                                                          |
| WIPER                                | Wiper Switch                                                                                                                                                             |
| POWER DROP                           | Power Drop                                                                                                                                                               |
| RADIO, CRUISE                        | Radio, Steering Wheel Radio Controls, Cruise Control Switches                                                                                                            |

|                          |                              |
|--------------------------|------------------------------|
| Circuit Breaker          | Description                  |
| PWR WINDOWS, PWR SUNROOF | Power Windows, Power Sunroof |
| REAR DEFOG               | Rear Defog                   |
| POWER SEATS              | Power Seats, Fuel Door Relay |

## Underhood Electrical Center – Passenger’s Side

Some fuses are in the underhood electrical centers on the passenger’s side of the engine compartment.

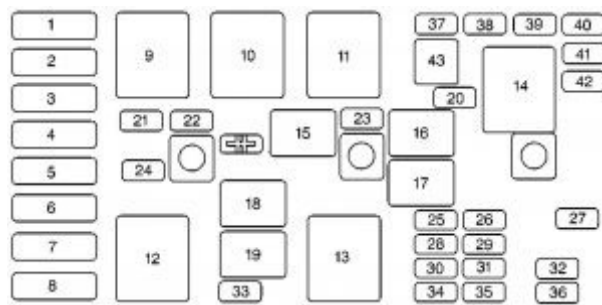

Oldsmobile Intrigue –  
fuse box – underhood electrical center passenger side

| Fuse | Usage                                                                                                                                                                 |
|------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1    | Cooling Fan                                                                                                                                                           |
| 2    | Starter Solenoid                                                                                                                                                      |
| 3    | Power Seats, Rear Defog, Heated Seats                                                                                                                                 |
| 4    | High Blower, Hazard Flasher, Stoplamps, Power Mirror, Door Locks                                                                                                      |
| 5    | Ignition Switch, Brake Transaxle Shift Interlock, Stoplamps, Anti-Lock Brake System, Turn Signals, Cluster, Air Bag, Daytime Running Lamps Module                     |
| 6    | Cooling Fan                                                                                                                                                           |
| 7    | Interior Lamps, Anti-Lock Brake System (3800 V6 Engine Only), Keyless Entry, Data Link, HVAC Head, Cluster, Radio, Auxiliary Power, Cigarette Lighter, Bose Amplifier |
| 8    | Ignition Switch, Wipers, Radio, Steering Wheel Controls, Body Control Module, Auxiliary Power, Power Windows, Sunroof, HVAC Controls, DRL, Rear Defog Relay           |

| Relay | Usage         |
|-------|---------------|
| 9     | Cooling Fan 2 |
| 10    | Cooling Fan 3 |

|    |                                                          |
|----|----------------------------------------------------------|
| 11 | Starter Solenoid                                         |
| 12 | Cooling Fan 1                                            |
| 13 | Ignition Main                                            |
| 14 | Air Pump (3.5L V6 if equipped with California Emissions) |
| 15 | Air Conditioning Clutch                                  |
| 16 | Horn                                                     |
| 17 | Fog Lamps                                                |
| 18 | Not Used                                                 |
| 19 | Fuel Pump                                                |

| Fuse | Usage                                                                                               |
|------|-----------------------------------------------------------------------------------------------------|
| 20   | Air Pump (3.5L V6))                                                                                 |
| 21   | Generator                                                                                           |
| 22   | Electronic Control Module                                                                           |
| 23   | Air Conditioning Compressor Clutch                                                                  |
| 24   | Not Used                                                                                            |
| 25   | Electronic Ignition (3800 V6 Engine Only), Fuel Injectors/Electronic Ignition (3.5L V6 Engine Only) |
| 26   | Transaxle Sensor                                                                                    |
| 27   | Horn                                                                                                |
| 28   | Fuel Injector (3800 V6 Engine Only) Fuel Injector, Electronic Ignition (3.5L V6 Engine Only)        |
| 29   | Oxygen Sensor                                                                                       |
| 30   | Engine Emissions                                                                                    |
| 31   | Not Used                                                                                            |
| 32   | Headlamp (Right)                                                                                    |
| 33   | Rear Compartment Release/Fuel Door Release                                                          |
| 34   | Parking Lamp                                                                                        |
| 35   | Fuel Pump                                                                                           |

|    |                 |
|----|-----------------|
| 36 | Headlamp (Left) |
| 37 | Spare           |
| 38 | Spare           |
| 39 | Spare           |
| 40 | Spare           |
| 41 | Spare           |
| 42 | Spare           |

| Diode                                                                             | Usage            |
|-----------------------------------------------------------------------------------|------------------|
|  | A/C Clutch Diode |
| 43                                                                                | Fuse Puller      |