

**Necessary preliminary tasks:**

- Remove [rear bumper trim](#)

**Removal:**


Unlock latch mechanisms (1).

Unfasten screws (2).

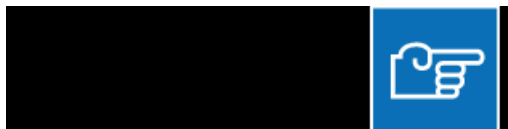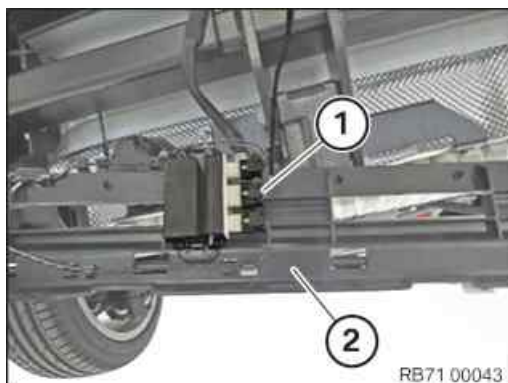

Unlock and disconnect the connector (1).


Remove support (2).

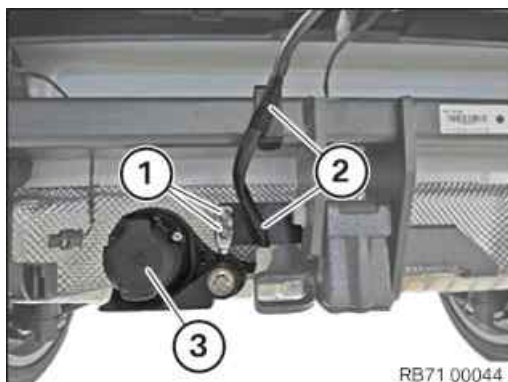


Unscrew nuts (1).

Unclip cable clip (2).


Remove power socket (3).

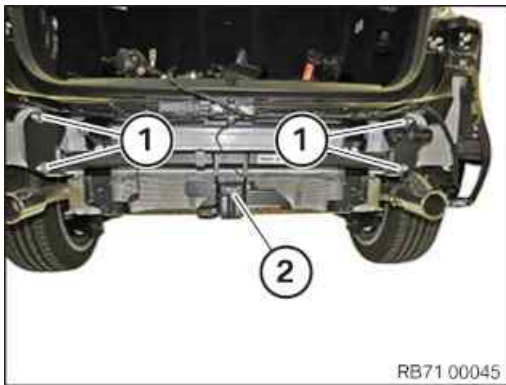


Unscrew nuts (1).
Remove trailer tow hitch (2) support member.

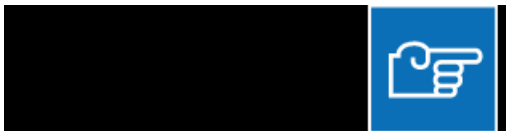


Installation:

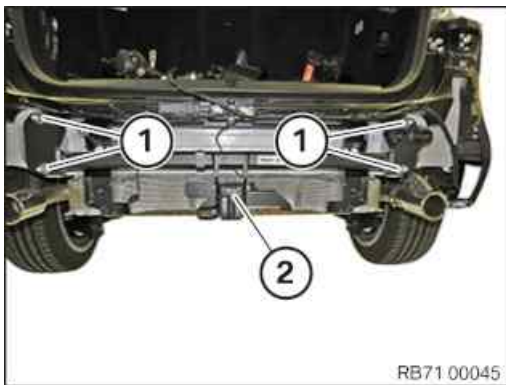


Position trailer tow hitch (2) support correctly with an assistant.
Tighten down nuts (1).
Tightening torque [71 60 1AZ](#).
Note:
Replace nuts (1).

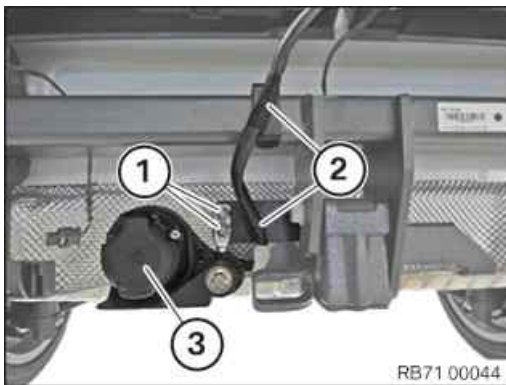

Position power socket (3) correctly.
Tighten down nuts (1).
Tightening torque [71 60 2AZ](#).
Clip in cable clip (2).

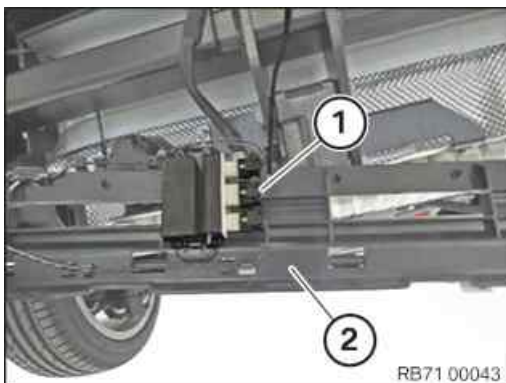

Position support (2).
Connect the connector (1).

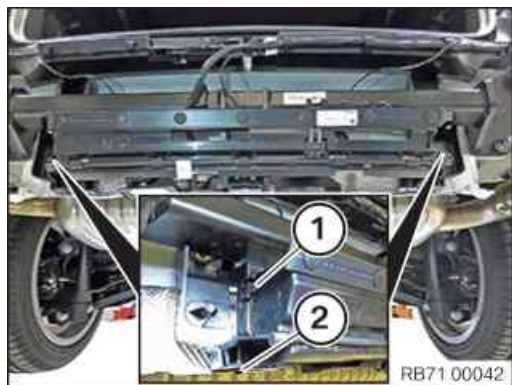

Tighten down screws (2).
Engage latch mechanisms (1).




Required reworking:



- Install [rear bumper panel](#)

**Important!**


Observe the [information on protection from electrostatic discharge](#).

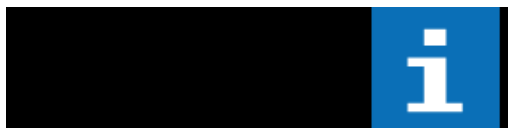**Necessary preliminary tasks:**


- Remove [right luggage compartment wheel arch panel](#)

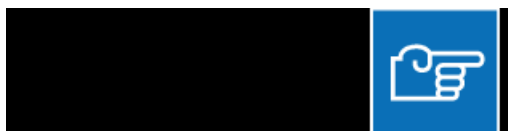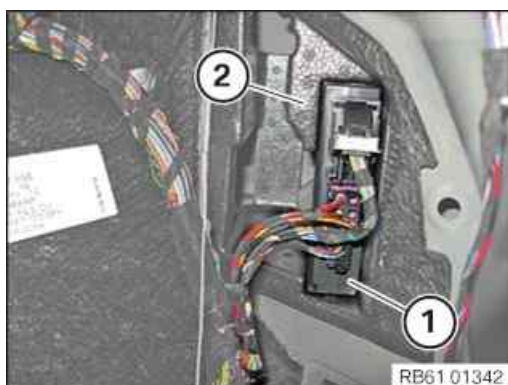**Removal:**

Remove trailer tow hitch control unit (1) from the holder (2).
Unlock and disconnect all connectors.

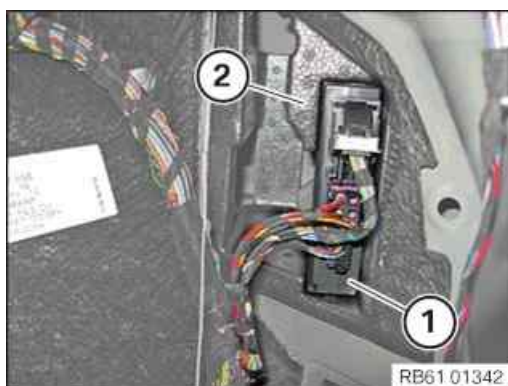**Installation:**

Connect all connectors.
Engage trailer tow hitch control unit (1) in holder (2).

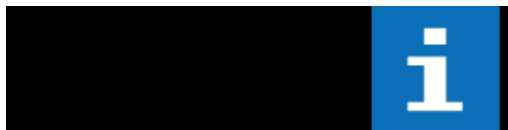**Required follow-up work:**

- Install [luggage compartment wheel arch panel, right](#)