


Toyota Verso 2014 fuse box diagrams

Fuse box in engine compartment

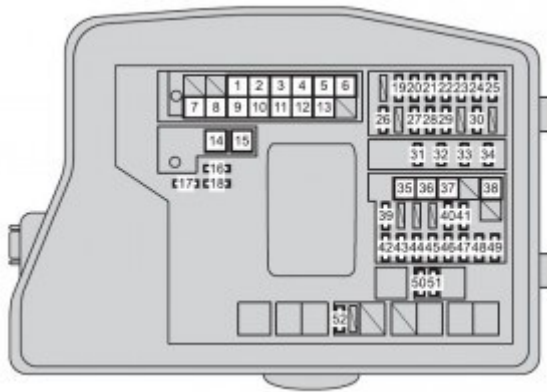

Toyota Verso – fuse box – engine compartment

Fuse	Ampere	Circuit
1 TO IP J/B*1	120	ECU-IG NO.2, HTR-IG, WIPER, RR WIPER, WASHER, ECU-IG NO.1, ECU-IG NO.3, SEAT HTR, AM1*4, DOOR, STOP, FR DOOR, POWER, RR DOOR, RL DOOR, OBD, ACC-B, RR FOG, FR FOG, DEF, TAIL, SUNROOF, DRL
2 H-LP CLN	30	Headlight cleaner
3 RDI FAN	40	Electric cooling fan(s)
4 CDS FAN*1*2	30	Electric cooling fan(s)
5 ABS NO.1	50	Anti-lock brake system, VSC+
6 HTR*2,*3	50	Air conditioning system
7 ALT	120*3 140*2	Charging system, RDI FAN, CDS FAN, H-LP CLN, ABS NO.1, ABS NO.2, HTR, STV HTR*2, PWR OUTLET, HTR SUB NO.1, HTR SUB NO.2, HTR SUB NO.3, ECUIG NO.2, HTR-IG, WIPER, RR WIPER, WASHER, ECU-IG NO.1, ECU-IG NO.3, SEAT HTR, AM1*4, DOOR, STOP, FR DOOR, POWER, RR DOOR, RL DOOR, OBD, ACC-B, RR FOG, FR FOG, DEF, TAIL, SUNROOF, DRL
8 EPS*2,*3	80	Electric power steering
GLOW*1	80	Engine glow system
9 GLOW*1	80	Engine glow system
EPS*1	80	Electric power steering
10 P-SYSTEM*3	30	VALVEMATIC system
11 EFI MAIN*2	50	EFI NO.1, EFI NO.2, EFI NO.3*7, EFI NO.4


	FUEL HTR*1		Fuel heater
12	P/I*2,*3	50	EDU*2, EFI MAIN*3, IGT/INJ*3, HORN, IG2
	H-LP MAIN*1		H-LP LH LO, H-LP RH LO, H-LP LH HI, H-LP RH HI
13	H-LP MAIN*2,*3	50	H-LP LH LO, H-LP RH LO, H-LP LH HI, H-LP RH HI
	P/I*1	50	HORN, IG2, ELEC FUEL PMP
14	BBC*1	40	Stop & Start system
15	EFI MAIN*1	50	EFI NO.1, EFI NO.2, EFI NO.4
16	SPARE	10	Spare fuse
17	SPARE	30	Spare fuse
18	SPARE	20	Spare fuse
19	DOOR NO.2	25	Main body ECU
20	EFI MAIN NO.2*1,*2	7,5	Multiport fuel injection system/sequential multiport fuel injection system
21	ECU-B2	10	Smart entry & start system, air conditioning system, power windows
22	D.C.C	SHORT	No circuit
23	ECU-B	10	Gauges and meters, main body ECU, steering sensor, double locking system, wireless remote control, smart entry & start system
24	RAD NO.1*2,*3	15	Audio system
25	DOME	10	Luggage compartment light, vanity lights, engine switch light, front door courtesy lights, personal/interior lights, personal lights, foot lights
26	AM2 NO.2	7,5	Starting system
27	TURN-HAZ	10	Turn signal lights, emergency flashers
28	ETCS*3	10	Electronic throttle control system
29	AM2	30	Starting system
30	STRG LOCK	20	Steering lock system
31	IGT/INJ*3	15	Multiport fuel injection system/ sequential multiport fuel injection system, ignition system
	EDU*2	20	

32	FUEL PUMP*1	30	Fuel pump
	EFI MAIN*3	20	Multiport fuel injection system/sequential multiport fuel injection system, EFI NO.1, EFI NO.2
33	HORN	15	Horn
34	IG2	15	IGN, METER
35	HTR SUB NO.1	30*5 50*1,*6	Air conditioning system
36	HTR*1	50	Air conditioning system
37	HTR SUB NO.2	30	Air conditioning system
38	HTR SUB NO.3	30	Air conditioning system
39	PWR OUTLET	15	Power outlet
40	ABS NO.2	30	Anti-lock brake system, VSC+
41	STV HTR*1,*2	25	Power heater
42	EFI NO.4	30*2 20*1	Multiport fuel injection system/sequential multiport fuel injection system, Automatic transmission*7
43	IG2 NO.2*2,*3	7,5	Starting system
44	EFI NO.2*2,*3	10	Multiport fuel injection system/sequential multiport fuel injection system
	EFI NO.2*1	10	Multiport fuel injection system/sequential multiport fuel injection system, Stop & Start system
45	EFI NO.1*2,*3	10	Multiport fuel injection system/sequential multiport fuel injection system
	EFI NO.1*1	7,5	
46	H-LP RH HI	10	Right-hand headlight (high beam)*8, right-hand headlight solenoid*9
47	H-LP LH HI	10	Left-hand headlight (high beam)*8, left-hand headlight solenoid*9
48	H-LP RH LO	15*9 10*8	Right-hand discharge headlight (low and high beam) Right-hand headlight (low beam)
49	H-LP LH LO	15*9 10*8	Left-hand discharge headlight (low and high beam) Left-hand headlight (low beam)

50	RDI EFI*1	5	RDI FAN MTR, FAN NO.1, FAN NO.2
51	CDS EFI*1	5	CDS FAN MTR, FAN NO.1, FAN NO.2
52	EFI NO.3*2	7,5	Automatic transmission*7

*1: Vehicles with diesel engine (1WW-FHV engine)
 *2: Vehicles with diesel engine (1AD-FTV and 2AD-FHV engines)
 *3: Vehicles with gasoline engine (1ZR-FAE and 2ZR-FAE engines)
 *4: Vehicles without smart entry & start system
 *5: Vehicles without 1AD-FTV engine and DPF catalytic converter
 *6: Vehicles with 1AD-FTV engine and DPF catalytic converter
 *7: Vehicles with automatic transmission
 *8: Vehicles with halogen headlights
 *9: Vehicles with discharge headlights

Fuse box under the instrument panel (type A)

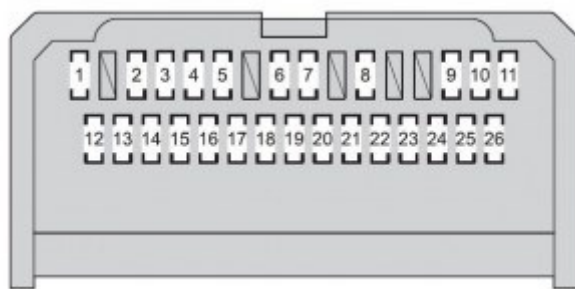


Toyota Verso – fuse box – instrument panel type A

Fuse	Ampere	Circuit
1 TAIL	10	Front position lights, tail lights, license plate lights, rear fog light, front fog lights, manual headlight leveling system, instrument cluster lights, glove box light, switch illumination, Toyota parking assist-sensor ECU
2 ECU-IG NO.3	10	Panoramic roof shade, auto antiglare inside rear view mirror, smart entry & start system, audio system, Stop & Start system*3
3 FR DOOR	20	Power windows (front passenger side)
4 RL DOOR	20	Power windows (rear left)
5 RR DOOR	20	Power windows (rear right)
6 CIG	15	Power outlets
7 ACC	7,5	Shift lock system, audio system, main body ECU, power outlet, outside rear view mirrors, Stop & Start system*3
8 MIR HTR	10	Outside rear view mirror defoggers
9 RR FOG	7,5	Rear fog light

10	IGN	7,5	Steering lock system, SRS airbag system, multiport fuel injection system/sequential multiport fuel injection system, automatic transmission*1, starting system
11	METER	7,5	Gauges and meters, Stop & Start system*3
12	SEAT HTR	15	Seat heaters
13	HTR-IG	10	Air conditioning system, power heater
14	WIPER	25	Windshield wipers, rain-sensing windshield wipers
15	RR WIPER	15	Rear window wiper
16	WASHER	15	Windshield washers, rear window washer
17	ECU-IG NO.1	10	Main body ECU*4, electric cooling fan(s), shift lock system, anti-lock brake system, steering sensor, yaw rate sensor, VSC+, headlight cleaners, SEQUENTIAL switch, automatic headlight leveling system, electric power steering, tire pressure warning system
18	ECU-IG NO.2	10	Back-up light, charging system*4, emergency flashers, rear window defogger, "PASSENGER AIRBAG" indicator, air conditioning system, Toyota parking assist-sensor indicator, Toyota parking assist-sensor switch
19	OBD	7,5	On-board diagnosis system
20	STOP	10	Stop lights, high mounted stoplight, anti-lock brake system, VSC+, shift lock system, starting system
21	SUNROOF	20	Panoramic roof shade
22	DOOR	25	Power door lock system
23	ACC-B	25	CIG, ACC
24	DRL	7,5	Daytime running lights
25	FR FOG	15	Front fog lights
26	AM1*2	7,5	Starting system
*1: Vehicles with diesel engine and automatic transmission *2: Vehicles without smart entry & start system *3: Vehicles with 1WW-FHV engine *4: Vehicles without 1WW-FHV engine			

Fuse box under the instrument panel (type B)

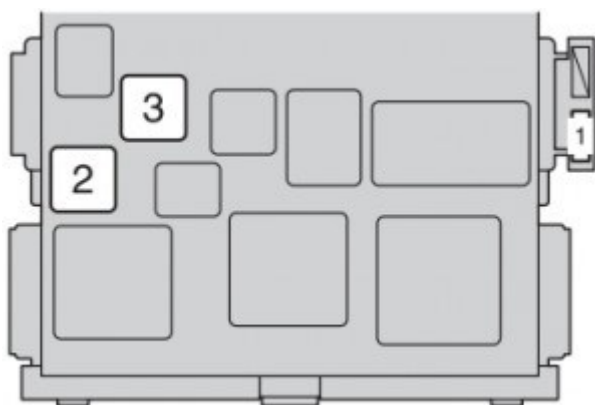

Toyota Verso – fuse box – instrument panel type B

Fuse	Ampere	Circuit
1 WIPER NO.2	7,5	Charging system
2 POWER	30	Power windows (driver side)
3 DEF	30	Rear window defogger, MIR HTR

WARNING: Terminal and harness assignments for individual connectors will vary depending on vehicle equipment level, model, and market.