

Fiat 500X (from 2014) fuse box diagrams

Fuse box in engine compartment

The fuse box is located by the side of battery.



Fiat 500X – fuse box – engine compartment

Users	Fuse	Ampere rating [A]
Horn	F10	10
Power supply for cigar lighter/power socke	F84	20

Fuse box in dashboard

The fuse box is located near the left side of steering column.



Fiat 500X – fuse box – dashboard

Users	Fuse	Ampere fating [A]
Front electric window (passenger side)	F33	20
Front electric window (driver side)	F34	20

Supply for Uconnect™ system, Climate Control system, Electric door mirror folding, EOBD system, USB port/AUX socket, rear side roof lights (versions with sun roof)	F36	15
Dead Lock device (Driver side door unlocking for versions/ markets, where provided)/Door unlocking/Central locking/Electric tailgate unlocking	F38	20
Rear left electric window	F47	20
Rear right electric window	F48	20

Boot fuse box

The configuration of the boot may vary in accordance with the equipment on the vehicle..



Fiat 500X – fuse box – boot

Users	Fuse	Ampere rating [A]
HI-FI system	F2	20
Electric sun roof	F3	20
Front seat electric lumbar adjustment (driver guide)	F4	7,5
Electric front seat adjustment (driver side)	F5	30
Electric front seat adjustment (driver side and passenger side)	F6	7,5
Electric front seat lumbar adjustment (driver side and passenger side)	F7	30