


Chevrolet S-10 1999 – 2000 fuse box diagram

Instrument panel

The fuse block is in the instrument panel on the driver's side.

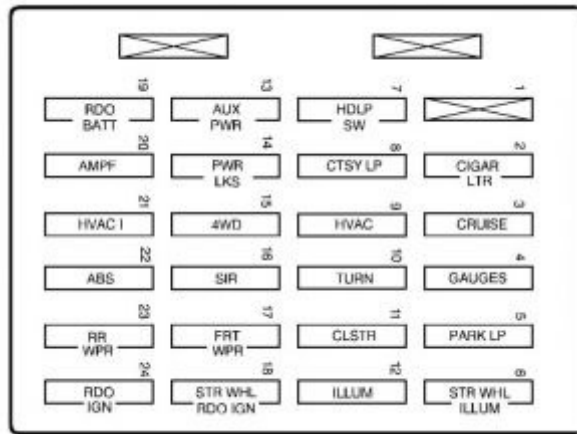


Chevrolet S-10 – fuse box – instrument panel

Fuses/Circuit Breaker	Circuit protected
A	Not Used
B	Not Used
1	Not Used
2	Cigarette Lighter, Data Link Connector
3	Cruise Control, Body Controls TBC, Cruise Module, Cruise Switch
4	Gages, Body Controls TBC, Instrument Panel Cluster, B+ Power
5	Parking Lamps, Power Window Switch, TBC, Ashtray Lamp
6	Not Used
7	Headlamp Switch, Body Controls TBC, Headlamp Relay
8	Courtesy Lamps, Inadvertent Power Relay
9	HVAC Control Head
10	Turn Signal
11	Instrument Panel Cluster, Engine Controls
12	Interior Illumination
13	Auxiliary Power
14	Power Locks
15	4WD Switch, Engine Control (VCM, PCM, Transmission)
16	Supplemental Inflatable Restraint
17	Front Wiper
18	Not Used
19	Radio Battery
20	Not Used
21	HVAC I, HVAC Control Head, HVAC Devices
22	Air-Bag Brakes
23	Rear Wiper
24	Radio, Ignition

Engine Compartment Fuse Block

The fuse block under the hood at the driver's de of the engine compartment.

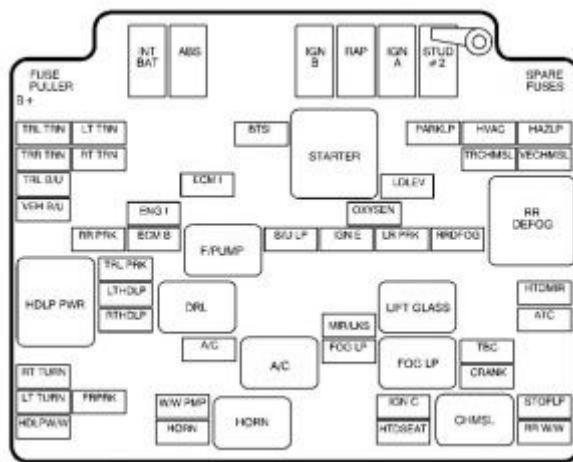

Chevrolet S-10 – fuse box – engine compartment

Name	Usage
TRL TRN	Not Used
TRR TRN	Not Used
TRL B/U	Not Used
VEH B/U	Vehicle Back-Up Lamps
RT TURN	Right Turn Signal Rear
LT TURN	Left Turn Signal Front
LT TRN	Left Turn Signal Rear
RT TRN	Right Turn Signal Rear
RR PRK	Right Rear Parking Lamps
TRL PRK	Not Used
LT HDLP	Left Headlamp
RT HDLP	Right Headlamp
FR PRK	Front Parking Lamp
INT BAT	I/P Fuse Block Feed
ENG 1	Engine Sensor/Solenoid, MAP, CAM, PURGE, VENT
ECM B	Engine Control Module Fuel Pump, Module, Oil Pressure
ABS	Anti-Lock Brake System
ECM I	Engine Control Module Injector
BTST	Brake-Transmission Shift Interlock
B/U LP	Back-up Lamps
A/C	Air Conditioning
W/W PMP	Not Used
HORN	Horn
IGN B	Column Feed, IGN 2, 3, 4
RAP	Retained Accessory Power
LD LEV	Not Used
OXYGEN	Oxygen Sensor
IGN E	Engine
MIR/LKS	Mirrors, Door Locks
FOG LP	Fog Lamps
IGN A	Starting and Charging IGN 1

STUD #2	Accessory Feeds, Electric Brake
PARKLP	Parking Lamps
LR PRK	Left Rear Parking Lamps
IGN C	Starter Solenoid, Fuel Pump, PRNDL
HTDSEAT	Not Used
HVAC	HVAC System
TRCHMSL	Not Used
RRDFOG	Not Used
TBC	Truck Body Computer
CRANK	Clutch Switch, NSBU Switch
HAZLP	Hazard Lamps
VECHMSL	Vehicle Center High-Mounted Stoplamp
HTDMIR	Heated Outside Mirrors
ATC	Transfer Case (Four-Wheel Drive)
STOPLP	Stoplamps
RR W/W	Not Used