

Cadillac Catera 1997 – 2001 fuse box diagram

Instrument Panel Fuse Block (Driver's Side)

The fuse block is located below the steering wheel on the driver's side.



Cadillac Catera – fuse box diagram – instrument panel (driver's side)

Nº	Usage
1	RH and LH Front Side Door Window Regulator Motor, LH Front Side Door Window Switch
2	Stoptlamp Switch, Cruise Control Release Switch
3	Automatic Transmission Range Switch, Automatic Transmission Control Indicator, Power Steering Control Module, Hazard Warning Switch, Automatic Transmission Winter Mode Switch, Transmission Control Module (TCM)
4	RH and LH Rear Seat Cushion Heater Relay, Rear Sunshade Motor, Accessory Power Outlet
5	Transmission Control Module
6	Radio Speaker Amplifier
7	RH and LH Rear Side Door Window Regulator Motor
8	Headlamp Switch, Turn Signal Switch, Horn Relay, CD Changer, Multifunction Relay
9	Windshield Wiper Motor and Relay, Windshield Wiper and Windshield Washer Switch

10	Body Control Module (BCM), Heater Water Auxiliary Pump, Fan Control Relays, Auxiliary Water Pump Relay
11	Heater and A/C Control, RH and LH Outside Rearview Mirrors
12	Hazard Warning Switch, Instrument Cluster, Data Link Connector (DLC), Stoplamp Switch, Gage Cluster, Heater and A/C Control.
13	Remote Control Outside Rearview Mirror Switch, A/C Compressor Relay, Coolant Fan Test Connector, A/C Load Switch
14	Cellular Telephone, RH and LH Windshield Washer Nozzles, Driver and Passenger Heated Seat Switch, Heater and A/C Control, Heated Outside Rearview Mirror and Rear Window Defogger Relay
15	Rear Suspension Leveling Air Compressor Relay, Instrument Cluster, Gage Cluster, Cruise Control Switch, Headlamp Switch, Multifunction Relay, Passenger and Driver Heated Seat Relay, BCM, Sunroof Actuator, Automatic Level Control Sensor, RH and LH Heated Rear Seat Switch, RH and LH Heated Rear Seat Cushion Relay, Driver Seat Adjuster Memory Module, LH Front Side Door Window Switch, Inside Rearview Mirror
16	Cigarette Lighter (Front and Console)
17	Horn #1 and #2
18	Fuel Pump

19	Electronic Brake/Traction Control Module
20	Passenger and Driver Heated Seat Relay
21	Daytime Running Lamp (DRL) Relay, LH High – Beam Headlamp Relay
22	Headlamp Switch, LH Low – Beam Headlamp
23	LH Parking Lamp and Turn Signal Lamps, LH Rear Sidemarker Lamp, Multifunction Relay, LH Stoplamp and Taillamp
24	Lifting Magnet, BCM, Gage Cluster
25	Sunroof Actuator
26	Headlamp Switch, RH and LH Front Sidemarker Lamp, Middle Taillamp, RH and LH Rear License Plate Lamp, Radio, Automatic Transmission Control Indicator, Heater and A/C Control
27	Automatic Level Control Sensor, Rear Suspension Leveling Air Compressor and Relay
28	Door Lock Relay
29	Multifunction Relay, OnStar System
30	RH Parking Lamp and Turn Signal Lamp, RH Rear Sidemarker Lamp, RH Stoplamp and Taillamp
31	RH Low – Beam Headlamp Turn Signal Switch
32	RH High – Beam Headlamp Relay
33	Blower Controller, A/C Compressor Relay
34	Heated Rear Window Defogger Relay

35	Passenger Seat Adjuster Switch, Driver Seat Adjuster Memory Module
----	---

Relay Box

The relay box is located on the lower part of the instrument panel, to the right of the steering column.

I DRL	II ALC	VII PRK LP
III RR WDO DEFOG HTD MIRROR	IV FLASHER	VIII LO BEAM
V HI BEAM RH	VI HORN	IX
		X
		XI HI BEAM LH


Cadillac Catera – fuse box diagram – relay box

Nº	Usage
I	Daytime Running Lamps
II	Automatic Level Control
III	Rear Window Defogger, Heated Mirrors
IV	Hazard Warning Flashers
V	High – Beam Headlamps II (RH)
VI	Horn
VII	Parking Lamps and Turn Signal Lamps
VIII	Low – Beam Headlamps
IX	Not Used
X	Not Used
XI	High – Beam Headlamps I (LH)

Engine Compartment Relay Center

The relay center is located next to the battery on the driver's side of the engine. Lift the cover to access.

Version 1

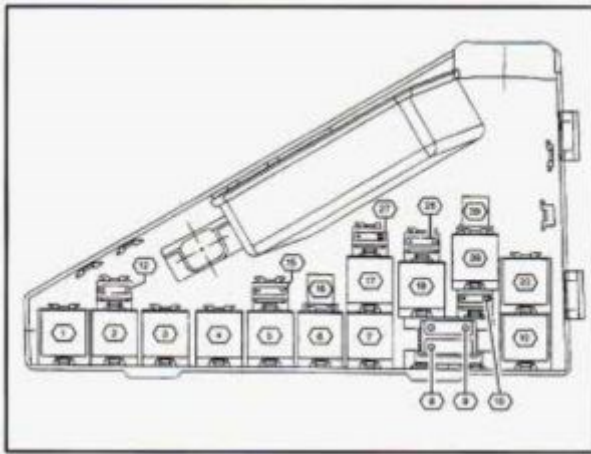


Cadillac Catera – fuse box diagram – engine

compartment

Nº	Usage
1	Secondary Air Injection Pump (Relay K12)
2	Fan Control (Relay K67)
3	Auxiliary Water Pump (Relay K22)
4	Windshield Wiper Motor (Relay K8)
5	A/C Compressor Relay (K60)
6	Fan Control Relay (K87)
7	Fan Control Relay (K26)
8	Fan Control (Fuse 42)
9	Secondary Air Injection Pump (Fuse 49)
10	Engine Controls Power Relay (K43)
12	Fan Control (Fuse 40)
15	Fan Control (Fuse 52)
16	Connector C110
17	Fan Control (Relay K52)
18	Fan Control (Relay K28)
19	Fan Control Relay, Engine Control Module (ECM) Relay (Fuse 50)
20	Fuel Pump (Relay K44)
27	Heated Oxygen Sensors (Fuse 43)

28	Engine Control Module (ECM) (Fuse 60)
29	Engine Control Module (ECM) (Relay K48)
39	Coolant Fan Test Connect

Version 2

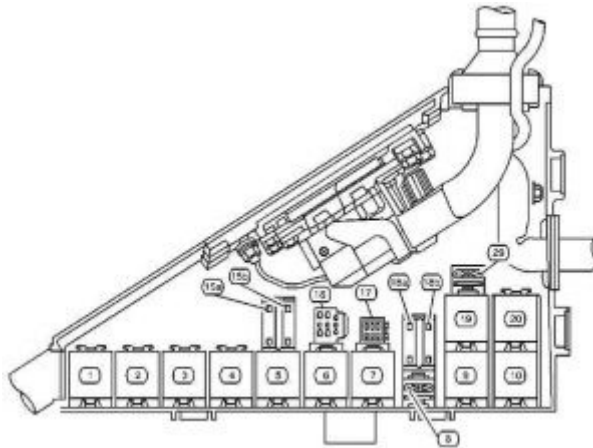

Cadillac Catera – fuse box diagram – engine

compartment (version 2)

Nº	Usage
1	Secondary Air Injection Pump (Relay K12)
2	Fan Control (Relay K67)
3	Auxiliary Water Pump (Relay K22)
4	Windshield Wiper Motor (Relay K8)
5	A/C Compressor Relay (K60)
6	Fan Control Relay (K87)
7	Fan Control Relay (K26)
8	Fuse 50
9	Fan Control Relay (K28)
10	Engine Controls Power Relay (K43)
15	Fuse 40 (A) Fuse 52 (B)
16	Connector C110
17	Coolant Fan Test Connector Fan Control

18	Fuse 42 (A), Fuse 49 (B)
19	Fan Control Relay (K52)
20	Fuel Pump Relay (K44)
25	Fuse 43