


Chevrolet Cavalier 1990 – 1994 fuse box diagram

Fuse box diagram

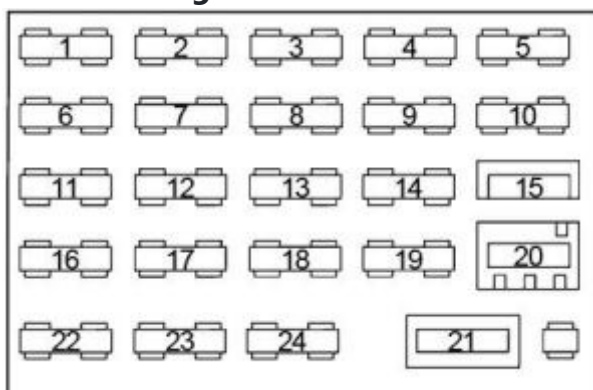

Chevrolet Cavalier – fuse box diagram

No.	A	Circuit Protected
1	5	Instrument Lights
2	10	ECM, Multiport Fuel Injection ('93-'94)
3	–	'90-'93: –
	10	'94: Automatic Door Unlock
4	15	Cigarette Lighter, Glove Box Light ('93), Interior Lights ('94)
5	–	–
6	10	Radio/Audio Systems
7	10	Gauges, Audio Warning, Cluster Telltales ('90-'93), TCC ('90-'93), Rear Defogger Relay, Brake/Transaxle Shift Interlock ('93-'94), Multi-Port Fuel Injection ('93-'94), Instrument Panel ('94)
8	–	–
9	15	Parking Lights, Turn Lights
10	25	'90-'93: HVAC, Heater & A/C Power, ABS, Daytime Running Lights ('93)
	25	'94: ABS, Coolant Fan, HVAC, Daytime Running Lights, Starter & Charging System
11	25	Wiper/Washer
12	10	Fuel Pump, Injectors
13	10	Radio/Audio Systems, Clock
14	20	'90-'93: Interior Lights, Glove Box Light, Horn, Power Locks, Audible Warning ('93), Remote Liftgate Release ('93), Check Oil Light ('93)

	15	'94: Audible Warning, Automatic Door Locks, Convertible Top, Horn, Instrument Panel, Interior Lights, Tailgate Release
15	30	Circuit breaker: Power Window, Convertible Top
16	10	Cruise Control
17	15	Back-Up Lights, Turn Signal (Exterior Lights)
18	20	Stoplights, Hazard Flashers, Brake Transaxle Shift Interlock (BTSI ('94))
19	20	Flash-To-Pass (Headlights)
20	30	Circuit breaker: Automatic Door Locks, Rear Defogger
21	20	Circuit breaker: Headlight, Daytime Running Lights ('94)
22	–	–
23	–	–
24	–	–