

Toyota Duet (Daihatsu Terios) fuse and relay

Toyota Duet was produced in 1998, 1999, 2000, 2001, 2002 with body markings 100/110. In some countries, it is also known as **Daihatsu Sirion** (left-hand drive) and **Daihatsu Storia** (right-hand drive). This material is also suitable for owners of **Daihatsu Terios** 1997-2009, because these cars have similar wiring diagrams. In this publication, we will show a description of fuses and relays Toyota Duet (Daihatsu Terios) with box diagrams and photo examples of their execution. Highlight the cigarette lighter fuse.




Check the purpose of the elements with your diagrams on the box cover

Passenger compartment fuse box


It is located under the dashboard.



Example of a diagram from the block cover

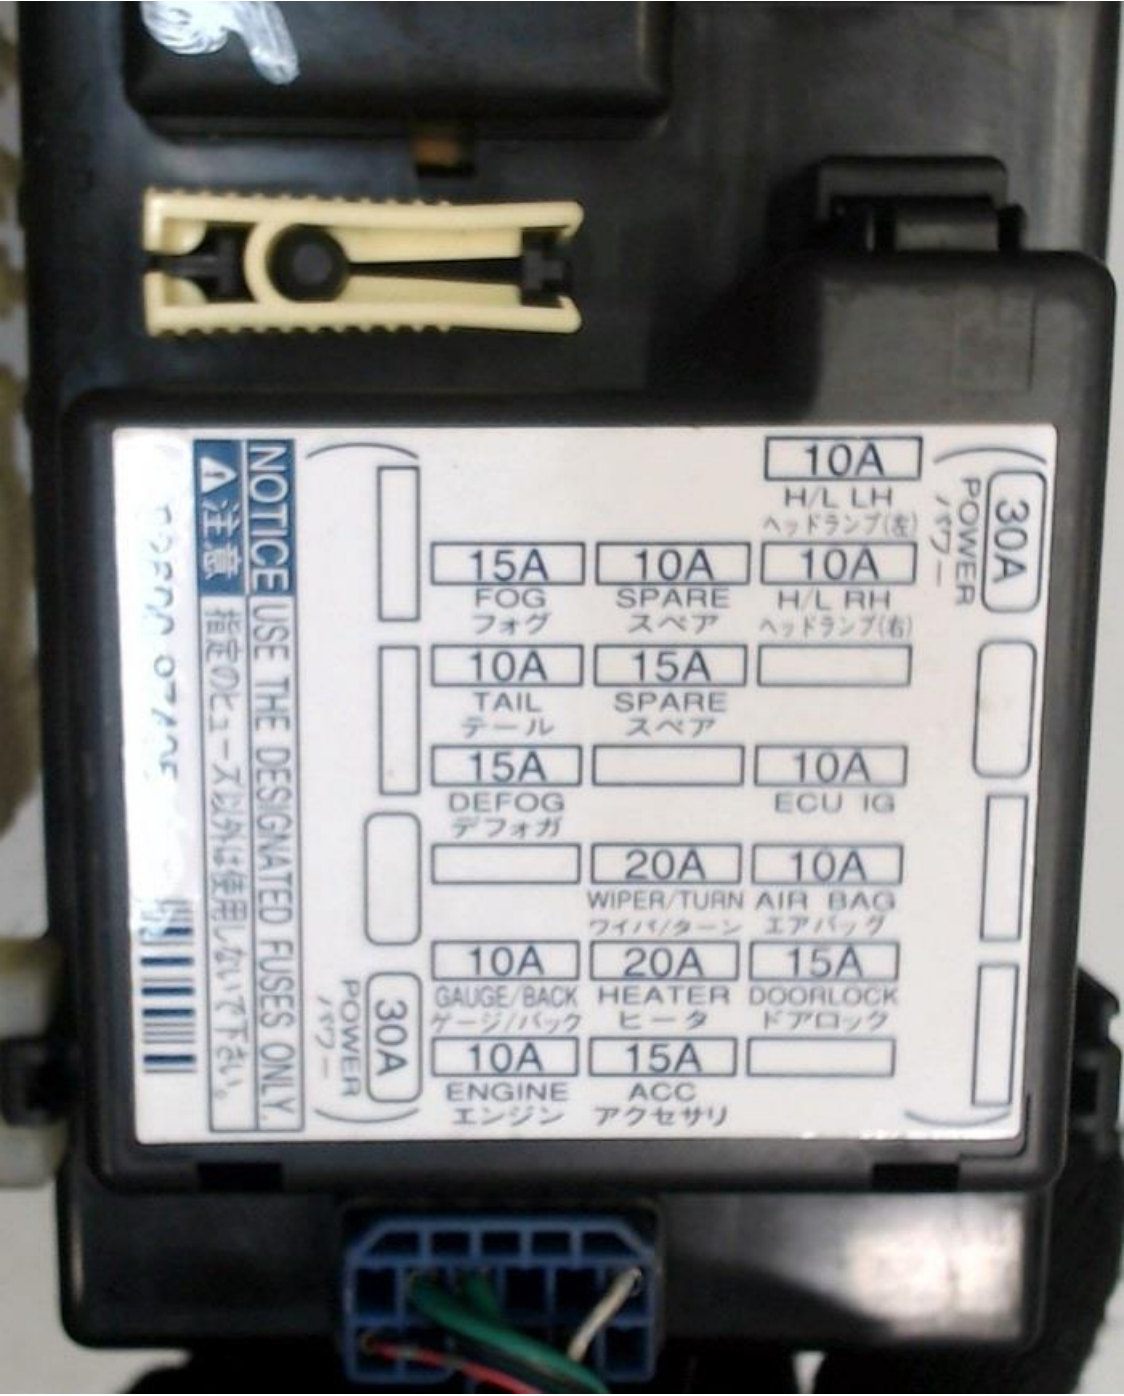

Diagram

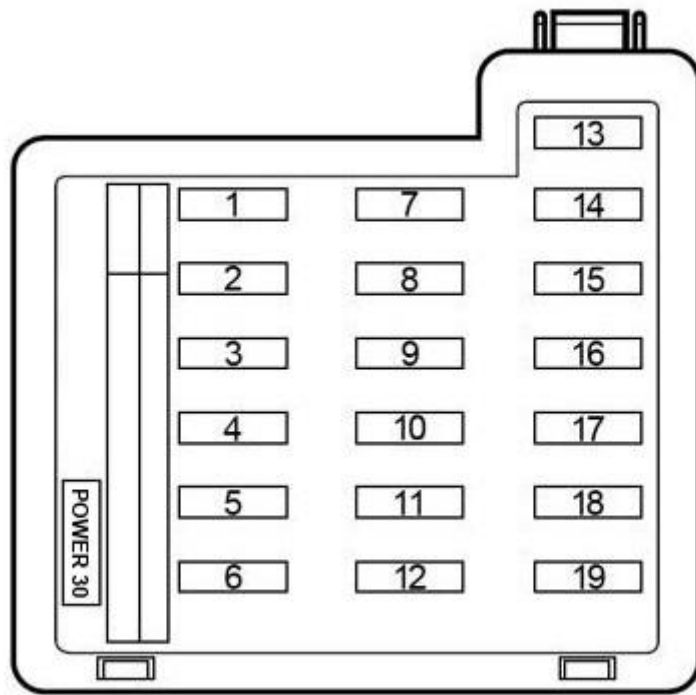

Assignment

1	10A FOG – Fog light
2	10A TAIL – Side light, instrument cluster illumination, heater block illumination, warning buzzer, alarm relay (direction indicators)
3	15A DEFOG – Heated rear window, power windows
4	30A POWER – Power windows
5	10A GAUGE / BACK – Instrument cluster, reversing lamps, warning buzzer, alarm relay (turn signals)
6	10A ENGINE – Ignition Coil, Diagnostic Connector, Airbags
7	10A SPARE – Spare fuse
8	15A SPARE – Spare fuse
9	–
10	20A WIPER / TURN – Windshield wiper, hazard warning switch, rear wiper switch, rear wiper
11	25A HEATER – Heater

12	15A ACC – Cigarette lighter, radio, power mirrors, accessories
13	10A H / L LH – Left headlight
14	10A H / L RH – Right headlight
15	10A STOP – Brake lights, interior lighting
16	10A ECU IG – Main relay, EPS control unit
17	10A AIR BAG – Airbags, Ignition Switch (IG2)
18	15A DOORLOCK – Central locking relay
19	–

The fuse number 12 at 15A is responsible for the cigarette lighter.

Engine compartment fuses and relay box


Under the hood, the fuse and relay box is next to the battery.



Scheme from the cover



Diagram

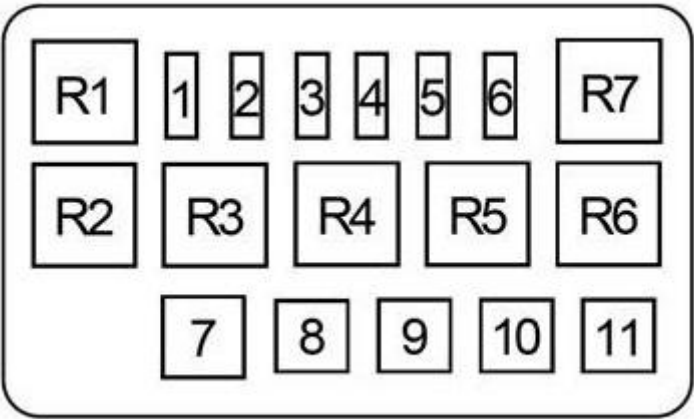

Appointment

1	20A HTR – Heater relay
2	10A BACK UP – Engine control unit, reversing lamps
3	–
4	15A EFI – Main relay, fuel pump relay

5	15A HORN-HAZ – Horn, alarm
6	10A MGC – A / C compressor clutch relay
7	60A AM – Ignition switch, starter relay
8	50A ABS – ABS Relay
9	40A TAIL – Side light
10	30A HEAD – Light Switch
11	–
Relay	
R1	Fuel pump
R2	Starter (automatic transmission)
R3	The engine control unit
R4	Heater
R5	–
R6	A / C Compressor Clutch
R7	Cooling fan