



PEUGEOT

Model: 106 1,1/1,6 • 107 1,0 • 206/CC 1,1/1,4 16V/1,6/1,6 16V/2,0 • 306 1,6 307 1,4 16V/1,6/2,0 • 406 2,0/2,2/3,0 • 406 Coupe 2,0/2,2/3,0 407 1,8/2,0/2,2/3,0 • 607 2,0/2,2/3,0 • 806 2,0 • 807 2,0/2,2/3,0 Partner 1,1/1,4/1,6 • Boxer II 2,0 • Expert 2,0

Engine management

EOBD type	Fault location	Probable cause
P1327	Ignition coil, camshaft position (CMP) sensor - control circuit	Wiring, ignition coil, CMP sensor, ECM
P1329	Knock sensor (KS) 1 - signal	Wiring, knock sensor (KS)
P1330	Knock sensor (KS) 2 - signal	Wiring, knock sensor (KS)
P1331	Knock sensor (KS) 3 - signal	Wiring, knock sensor (KS)
P1332	Knock sensor (KS) 4 - signal	Wiring, knock sensor(KS)
P1336	Ignition system - misfire detected	Wiring, ignition/fuel system
P1337	Ignition system, cylinder 1 - misfire detected	Wiring, ignition/fuel system
P1338	Ignition system, cylinder 2 - misfire detected	Wiring, ignition/fuel system
P1339	Ignition system, cylinder 3 - misfire detected	Wiring, ignition/fuel system
P1340	Ignition system, cylinder 4 - misfire detected	Wiring, ignition/fuel system
P1358	Ignition coil A - malfunction	Wiring, ignition coil, ECM
P1359	Ignition coil B — malfunction	Wiring, ignition coil, ECM
P1454	Exhaust gas recirculation (EGR) system - range/performance problem	Wiring, hose leak/blockage, EGR valve/solenoid
P1455	Exhaust gas recirculation (EGR) system - range/performance problem	Wiring, liose leak/blockage, EGR valve/solenoid
P1461	Engine control module (ECM) - adaptation to EGR valve	Adaptation to EGR valve incomplete/not carried out, EGR valve tight/sticking
P1462	Engine control module (ECM) - adaptation to EGR valve	Adaptation to EGR valve incomplete/not carried out, EGR valve tight/sticking
P1507	Engine coolant blower motor, rationality check - malfunction	Wiring, engine coolant blower motor, ECM
P1517	Immobilizer - programming	Incorrect programming, transponder, multifunction control module, combination switch
P1518	Brake pedal position (BPP) switch - signal	Wiring, BPP switch
P1519	Engine coolant blower motor - supply circuit/earth circuit malfunction	Wiring, engine coolant blower motor, ECM
P1520	Fuel gauge tank sensor - signal	Wiring, fuel gauge tank sensor
P1523	Idle speed control (ISC) actuator - circuit malfunction	Wiring, no/incorrect signal
P1524	Idle speed control (ISC) actuator - circuit malfunction	Wiring, no/incorrect signal
P1525	Idle speed control (ISC) actuator - circuit malfunction	Wiring, no/incorrect signal
P1526	Alternator - circuit	Wiring, alternator, battery discharged, multifunction control module
P1527	Alternator - circuit	Wiring, alternator, battery discharged, multifunction control module
P1528	Alternator - circuit	Wiring, alternator, battery discharged, multifunction control module
P1529	Alternator - circuit	Wiring, alternator, battery discharged, multifunction control module
P1543	Air conditioning (AC) - request signal	Wiring, multifunction control module, AC refrigerant pressure sensor
P1555	Exhaust gas recirculation (EGR) system - range/performance problem	Wiring, hose leak/blockage, EGR valve/solenoid
P1603	Engine coolant temperature (ECT) sensor - range/performance problem	Wiring, ECT sensor, multifunction control module