

Dodge Neon 1999 – 2005 fuse box diagram

Passenger Compartment Fuse Box



Dodge Neon – fuse box diagram – passenger compartment


No	A	Circuit Protected
1	10	Power Mirror Switch, Multi-Function Switch (Combination Flasher)
2	10	'99-'04: Radio
	20	'04-'05: Wiper Motor, Wiper/Washer Switch
3	20	Sunroof, Map/Reading Lamps ('04-'05), Radio ('04-'05)
4	10	'99-'00: Wiper Motor, Wiper/Washer Switch
	20	'01-'04: Wiper Motor, Wiper/Washer Switch

	1 5	'04-'05: Radio, Dome Lamp, Visor/Vanity Lamp, Intrusion Sensor, Underhood Lamp, Siren (Export), Cargo Lamp, Compass/Temperature Mirror, Remote Keyless Entry Module (Export), Instrument Cluster, Sentry Key Immobilizer Module
5	1 0	LHD: Airbag Control Module
	1 0	RHD ('04-'05): Left Headlamp, Right Headlamp, Instrument Cluster
6	2 0	LHD: A/C Heater Blower Motor
	1 0	RHD: Back-Up Lamp Switch (Manual Transmission), Park/Neutral Position Switch (Automatic Transmission ('99-'04)), Brake Shift Interlock Solenoid ('99-'04), Rear Window Defogger Switch, A/C Cycling Switch, Driver/Passenger Power Window Switch, Power Mirror Switch ('99-'04), Driver/Passenger Door Lock Switch ('99-'04), Compass/Temperature Mirror ('04-'05), Transmission Range Sensor ('04-'05)
7	1 0	LHD: Back-Up Lamp Switch (Manual Transmission), Park/Neutral Position Switch (Automatic Transmission ('99-'04)), Brake Shift Interlock Solenoid ('99-'04), Rear Window Defogger Switch, A/C Cycling Switch, Driver/Passenger Power Window Switch, Power Mirror Switch ('99-'04), Driver/Passenger Door Lock Switch ('99-'04), Compass/Temperature Mirror ('04-'05), Transmission Range Sensor ('04-'05), Daytime Running Lights (Low) Relay ('04-'05)
	2 0	RHD: A/C Heater Blower Motor
8	1 0	RHD: Airbag Control Module
	1 5	LHD ('04-'05): Left Headlamp, Right Headlamp, Instrument Cluster
9	1 0	LHD: Airbag Control Module, Left/Right Side Impact Airbag Control Module ('04-'05)
	1 0	RHD ('04-'05): Instrument Cluster, Powertrain Control Module (2.0L), Autostick Switch

10	1 5	LHD: Leak Detection Pump (except Export ('99-'04)), Powertrain Control Module, Torque Converter Clutch Solenoid (Automatic Transmission ('99-'04)), Fuel Pump Relay, Air Conditioner Compressor Clutch Relay, ABS, Radiator Fan Relay, Brake Shift Interlock Solenoid ('04-'05), Radiator Fan Low Relay (2.4L Turbo ('04-'05)), Radiator Fan High Relay (2.4L Turbo ('04-'05)), Throttle Inlet Pressure Solenoid (2.4L Turbo ('04-'05))
	1 0	RHD: Instrument Cluster, Remote Keyless Entry Module, Sentry Key Immobilizer Module
11	1 0	LHD: Instrument Cluster, Remote Keyless Entry Module, Sentry Key Immobilizer Module
	1 5	RHD: Powertrain Control Module, Torque Converter Clutch Solenoid (Automatic Transmission ('99-'04)), Fuel Pump Relay, Air Conditioner Compressor Clutch Relay, ABS, Radiator Fan Relay, Brake Shift Interlock Solenoid ('04-'05)
12	1 0	RHD: Airbag Control Module, Left/Right Side Impact Airbag Control Module ('04-'05)
	1 0	LHD ('04-'05): Instrument Cluster, Powertrain Control Module (2.0L), Autostick Switch
13	2 0	'01-'05: Power Seat Switch
14	2 0	Remote Keyless Entry Module
15	1 5	Headlamp Switch (Radio, Tail/Stop/Turn Signal Lamp (except Export), Park/Turn Signal Lamp (except Export), Front Side Marker Lamp (except Export), License Lamp, Tail/Stop Lamp (Export), License Lamp, Instrument Cluster, Remote Keyless Entry Module, City Lamp (Export)), Left/Right Lavalier Module (Export ('04-'05))
16	5	'99-'04: Remote Keyless Entry Module
	2 5	'04-'05: Daytime Running Lights (High) Relay, Headlamp Switch, Headlamp Beam Select
17	1 0	Left Headlamp, Headlamp Leveling Switch (Export)

18	1 0	Right Headlamp, Left/Right Lavalier Module (Export ('04-'05))
19	1 0	LHD: Instrument Cluster, Front Fog Lamp
20	1 0	'99-'04: Power Mirror
	1 0	RHD ('04-'05): Power Mirror
CB 1	3 0	'99-'04: Power Window
	2 0	'04-'05: Power Window
CB 2	2 5	'99-'04: Headlamp Switch, Headlamp Beam Select
Relay		
R1	–	
R2		'04-'05: Daytime Running Lights (Low)
R3		'04-'05: Daytime Running Lights (High)

Engine Compartment Fuse Box

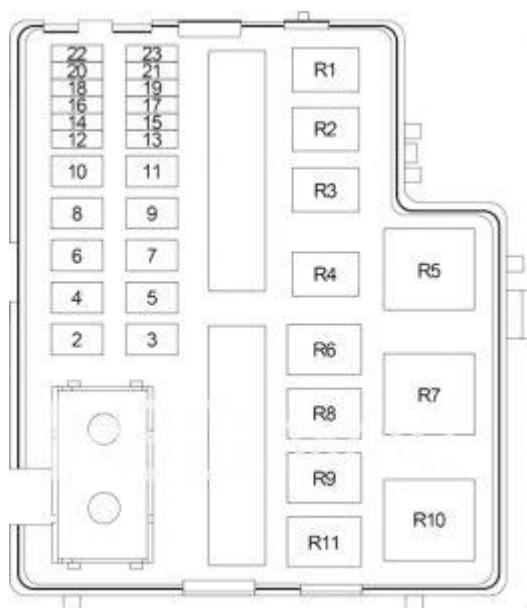

Dodge Neon – fuse box diagram – engine

compartment

No	A	Circuit Protected
2	–	–
3	40	Fuse (Passenger Compartment): “13”, “14”, “15”, “16”, “CB2”
4	40	Ignition Switch (Fuse (Passenger Compartment): “5”, “6”, “7”, “8”, “CB1”)
5	30	ABS
6	30	Radiator Fan Relay, Radiator Fan Relay No.2 (2.0L EATX)
	30	2.0L Turbo ('04-'05): Radiator Fan Low Relay, Radiator Fan High Relay
7	–	–
8	40	ABS

9	3 0	Starter Relay, Ignition Switch (Fuse (Passenger Compartment): "1", "2", "3", "4", "9", "10", "11", "12")
10	4 0	Rear Window Defogger Switch, (Fuse (Passenger Compartment): "20")
11	–	–
12	–	–
13	1 5	'99-'04: Dome Lamp, Map/Reading Lamps, Visor/Vanity Lamp, Intrusion Sensor, Underhood Lamp, Siren (Export), Cargo Lamp, Radio, Glove Box Lamp and Switch, Remote Keyless Entry Module (Export), Instrument Cluster, Sentry Key Immobilizer Module
	2 0	'04-'05: Radio, (Fuse (Passenger Compartment): "4")
14	2 0	Cigar Lighter/Power Outlet
15	1 5	Multi-Function Switch (Combination Flasher)
16	1 5	2.0L RT ('01-'05): Manifold Tuning Valve Relay
17	2 0	'01-'05: Transmission Control Relay
	1 5	2.0L Turbo ('04-'05): Subwoofer
18	1 5	'99-'04: Horn Relay
	1 0	2.0L ('04-'05): Horn Relay
	1 5	2.0L Turbo ('04-'05): Horn Relay

19	–	–
20	2 5	Multi-Function Switch (Headlamp Switch (Fog Lamp))
21	2 0	Fuel Pump Relay, Automatic Shut Down Relay (Fuel Injector, Ignition Coil, Oxygen Sensor, Generator, Noise Suppressor), Data Link Connector, Powertrain Control Module, Surge Solenoid (2.4 Turbo ('04-'05))
22	2 0	'99-'00: Air Conditioner Compressor Clutch Relay
	1 0	'01-'05: Air Conditioner Compressor Clutch Relay
23	1 5	Stop Lamp Switch (ABS, Tail/Stop Lamps (Export), Tail/Stop/Turn Signal Lamps (except Export), Center High Mounted Stop Lamp)
Relay		
R1	Fuel Pump	
R2	2.0 L RT ('04-'05): Manifold Tuning Valve	
R3	–	
R4	'04-'05: Transmission Control	
R5	2.4 Turbo ('04-'05): Radiator Fan Control	
R6	Horn	
R7	Radiator Fan	

	2.4 Turbo ('04-'05): Radiator Fan High
R8	Automatic Shut Down
R9	Air Conditioner Compressor Clutch
R10	2.4 Turbo ('04-'05): Radiator Fan Low
	2.0L (EATX): Radiator Fan (No.2)
R11	Starter